


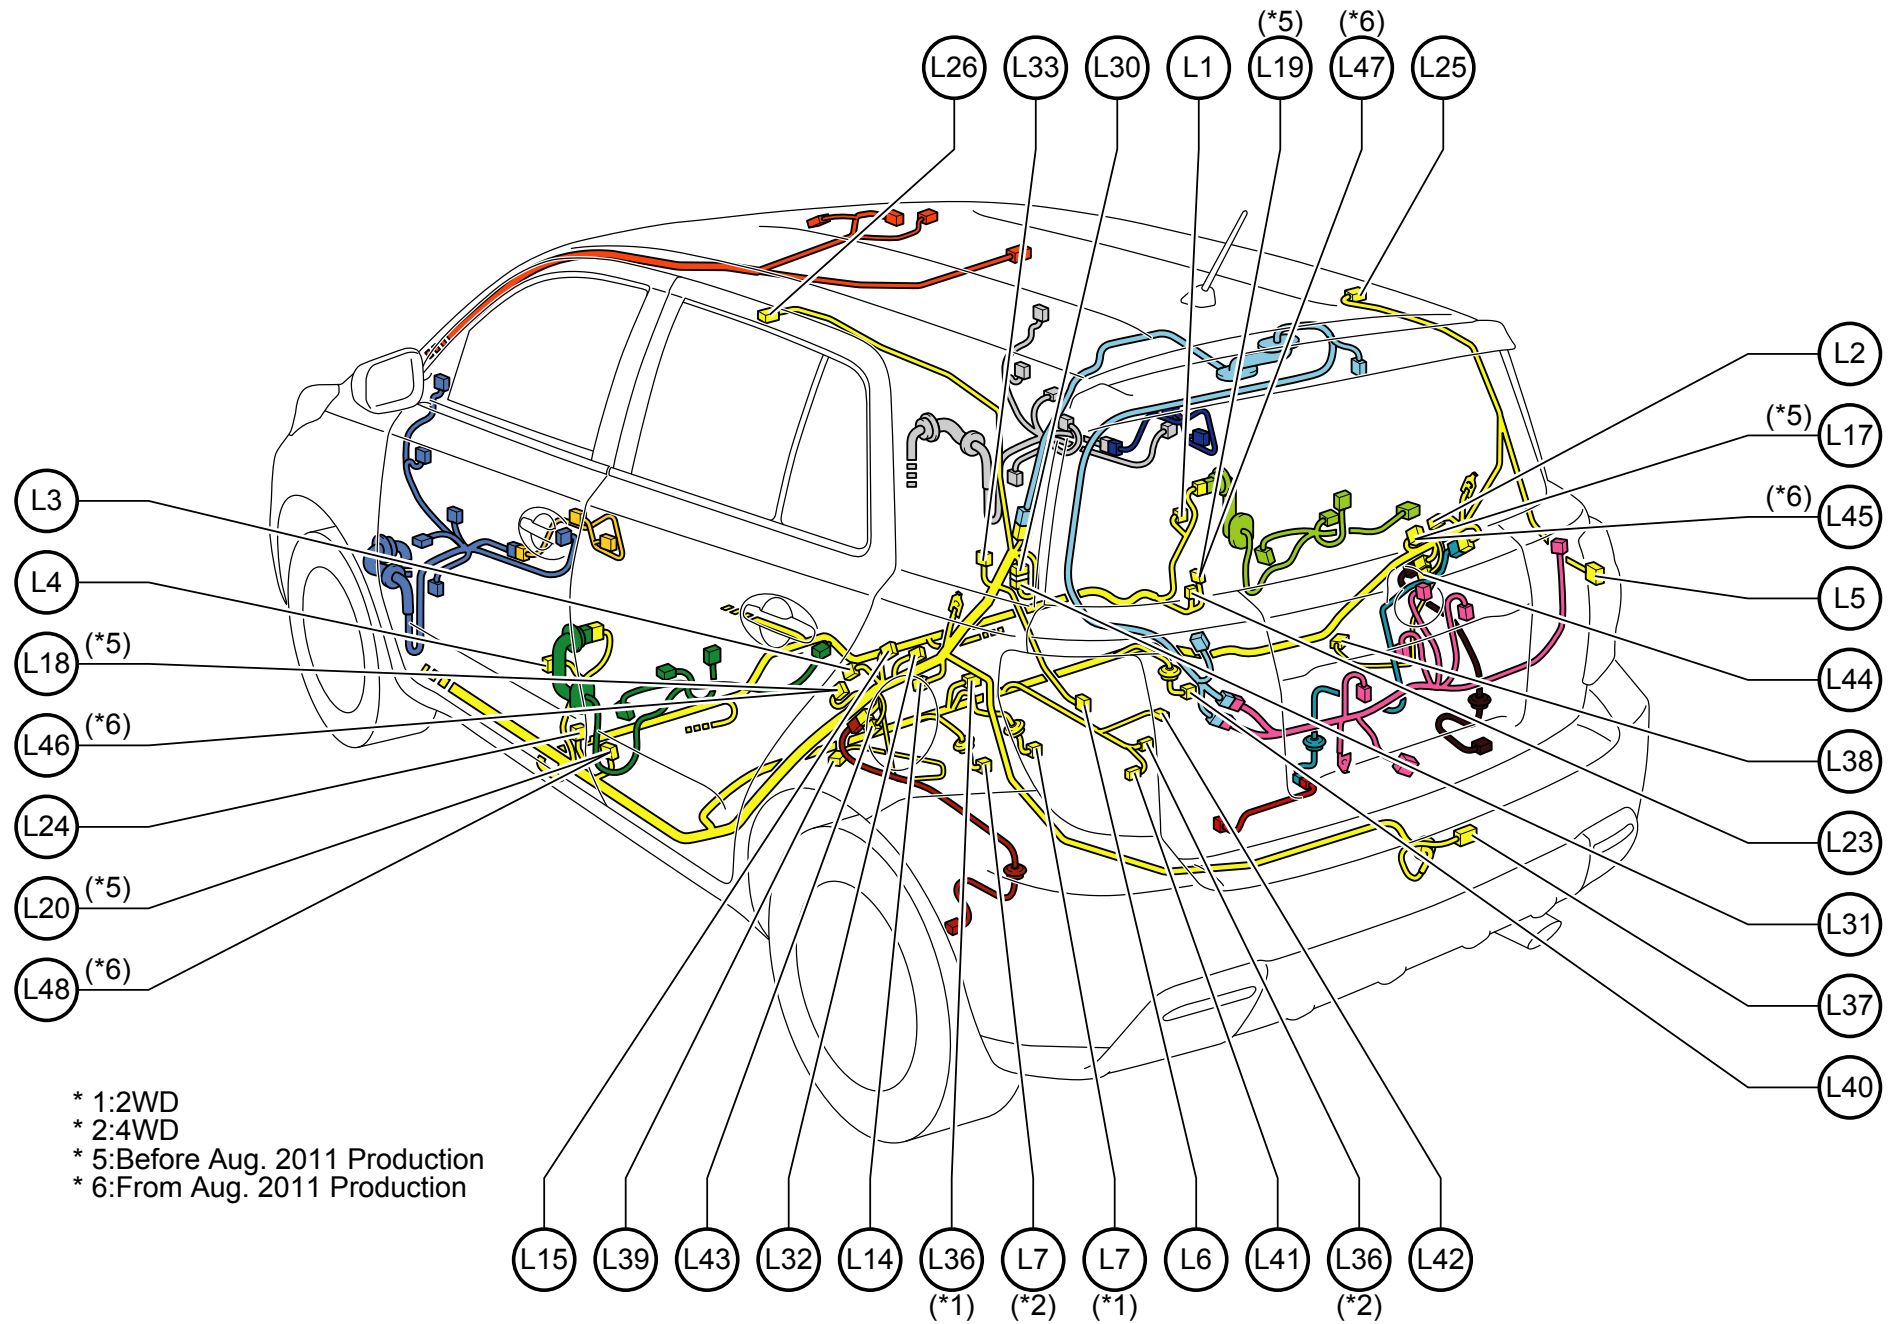

- L 1 Front Door Courtesy Light Switch Assembly RH
- L 2 Rear Door Courtesy Light Switch Assembly RH
- L 3 Rear Door Courtesy Light Switch Assembly LH
- L 4 Front Door Courtesy Light Switch Assembly LH
- L 5 Rear Combination Light Assembly RH
- L 6 Rear Combination Light Assembly LH
- L 7 Fuel Sender Gauge Assembly
- L 14 No. 2 Room Light Assembly
- L 15 Door Control Receiver
- L 17 Rear Side Airbag Sensor Assembly RH
- L 18 Rear Side Airbag Sensor Assembly LH
- L 19 Front Side Airbag Sensor Assembly RH
- L 20 Front Side Airbag Sensor Assembly LH
- L 23 Front Pretensioner RH
- L 24 Front Pretensioner LH
- L 25 Curtain Shield Airbag Assembly RH
- L 26 Curtain Shield Airbag Assembly LH
- L 30 Junction Connector
- L 31 Junction Connector
- L 32 Diode (Rear Room Light)
- L 33 Noise Filter (Rear Window Defogger)
- L 36 Rear Indoor Electrical Key Oscillator
- L 37 Outside Luggage Electrical Key Antenna
- L 38 Rear Seat Inner Belt Assembly RH
- L 39 Rear Seat Inner Belt Assembly LH
- L 40 Fuel Sender Gauge Assembly
- L 41 Rear Seat Inner Belt Assembly LH
- L 42 Rear Seat Inner Belt Assembly RH
- L 43 Rear Speed Sensor LH
- L 44 Rear Speed Sensor RH
- L 45 Rear Side Airbag Sensor Assembly RH
- L 46 Rear Side Airbag Sensor Assembly LH
- L 47 Front Side Airbag Sensor Assembly RH
- L 48 Front Side Airbag Sensor Assembly LH

Position of Parts in Body <RHD>

