 
 
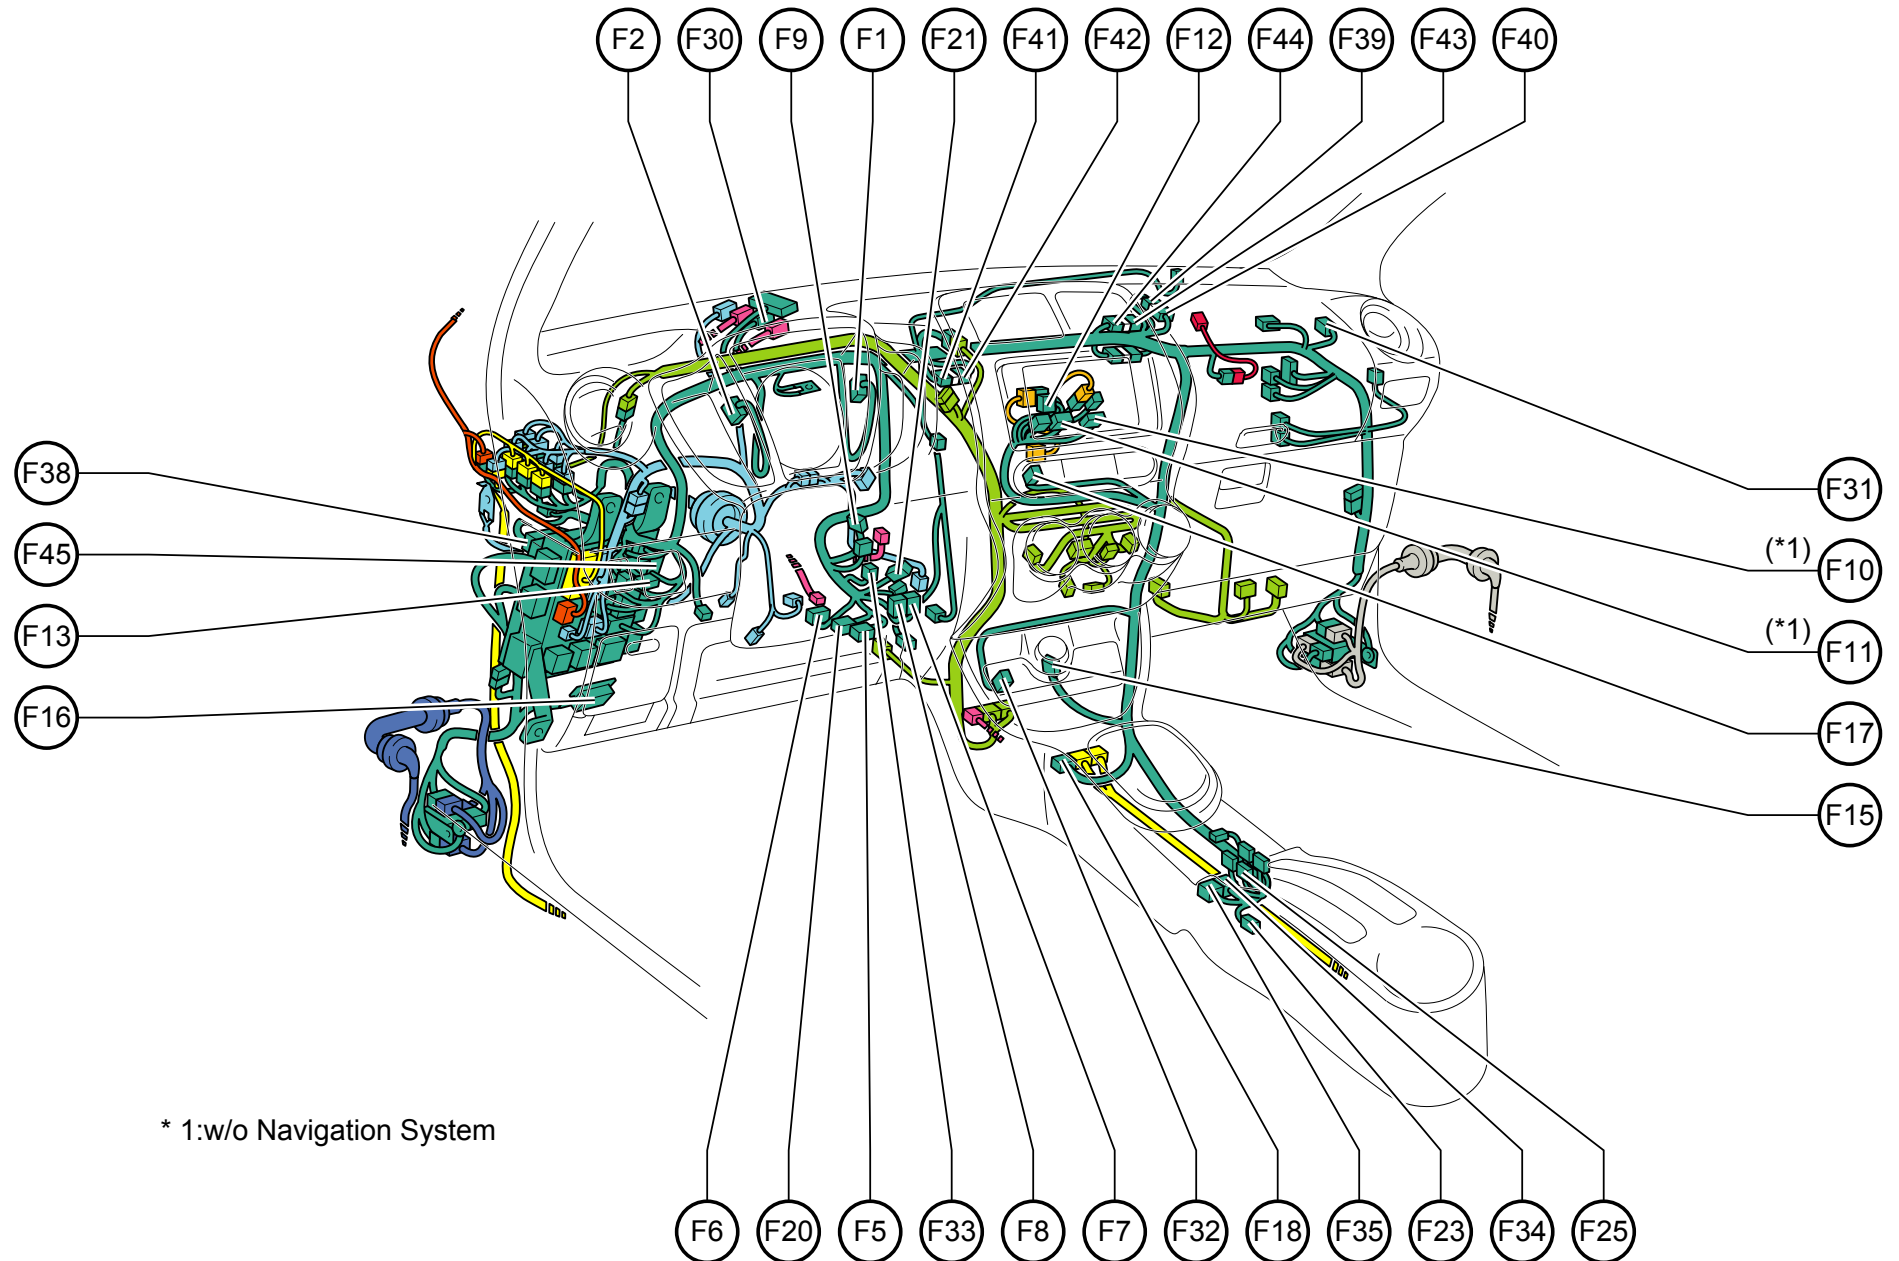 
 
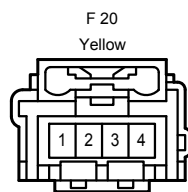 
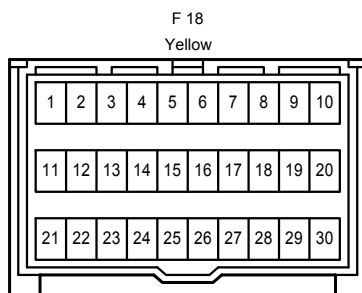 
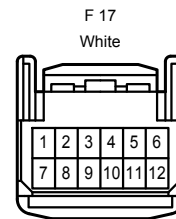 
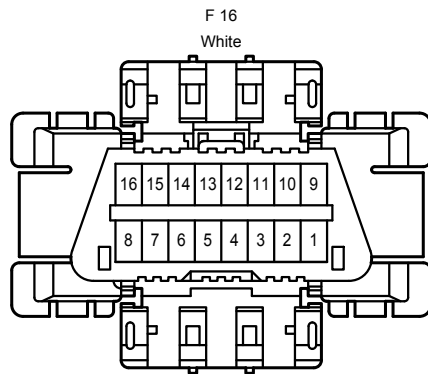 
 
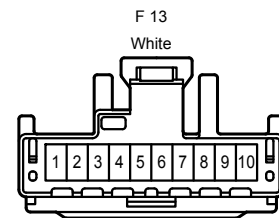 
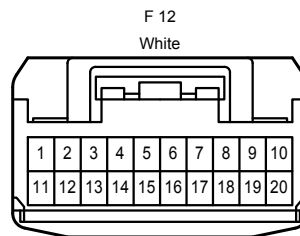 
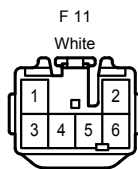 
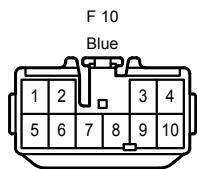 
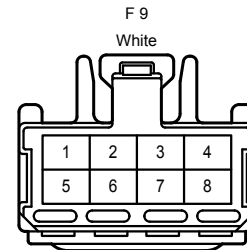 
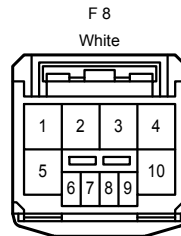 
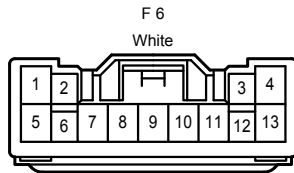 
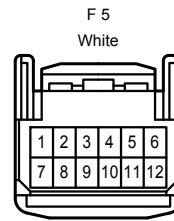 


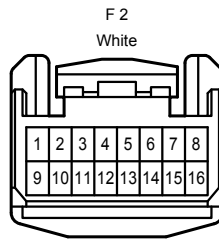


- F 1 Combination Meter Assembly
- F 2 Combination Meter Assembly
- F 5 Spiral Cable Sub-Assembly
- F 6 Headlight Dimmer Switch Assembly
- F 7 Windshield Wiper Switch Assembly
- F 8 Windshield Wiper Switch Assembly
- F 9 Ignition or Starter Switch Assembly
- F 10 Radio Receiver Assembly
- F 11 Radio Receiver Assembly
- F 12 Radio Receiver Assembly
- F 13 Outer Mirror Switch Assembly
- F 15 Cigarette Lighter Assembly
- F 16 DLC3
- F 17 Passenger Seat Belt Warning Light Assembly
- F 18 Center Airbag Sensor Assembly
- F 20 Spiral Cable Sub-Assembly
- F 21 Un-Lock Warning Switch Assembly
- F 23 Parking Brake Switch Assembly
- F 25 VSC Switch
- F 30 Power Steering ECU Assembly
- F 31 Amplifier Antenna Assembly
- F 32 No. 1 Stereo Jack Adapter Assembly
- F 33 Steering Sensor
- F 34 Yaw Rate Sensor
- F 35 Deceleration Sensor
- F 38 Main Body ECU
- F 39 Junction Connector
- F 40 Junction Connector
- F 41 Junction Connector
- F 42 Junction Connector
- F 43 Junction Connector
- F 44 Junction Connector
- F 45 Junction Connector

Position of Parts in Instrument Panel <LHD>

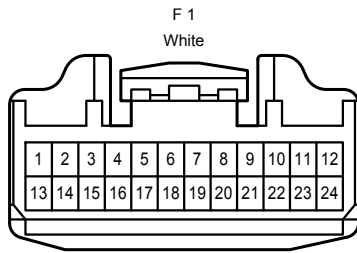


Position of Parts in Instrument Panel <LHD>

 F 25
White

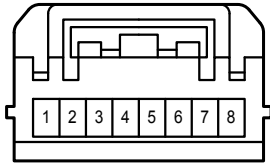


F 30
White

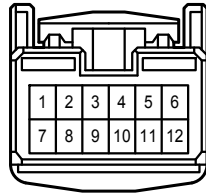 


F 31
White



 
F 32
Gray

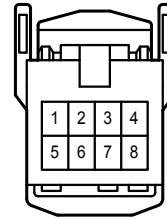


F 33
Black

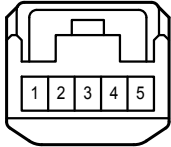 


F 34
Black

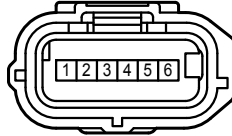 


F 35
Black

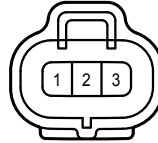 


F 38
White

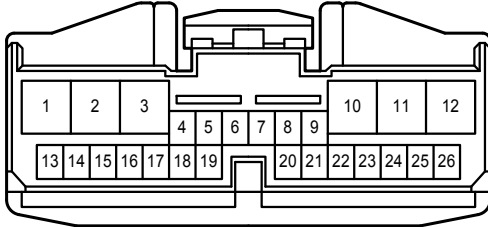 


F 39
White

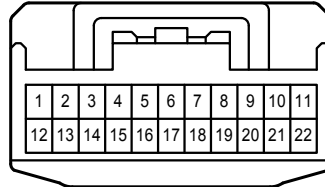 


F 40
White

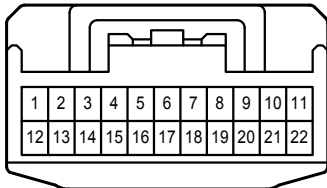 


F 41
White

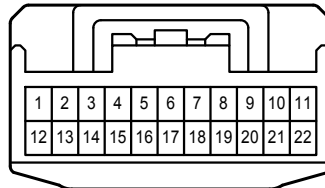 


F 42
White

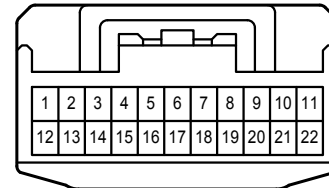 

F 43
White

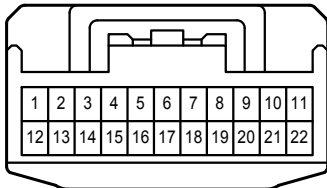 

F 44
White

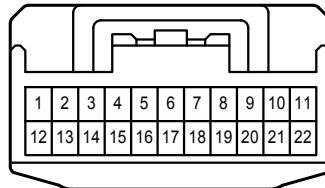 

F 45
White

