


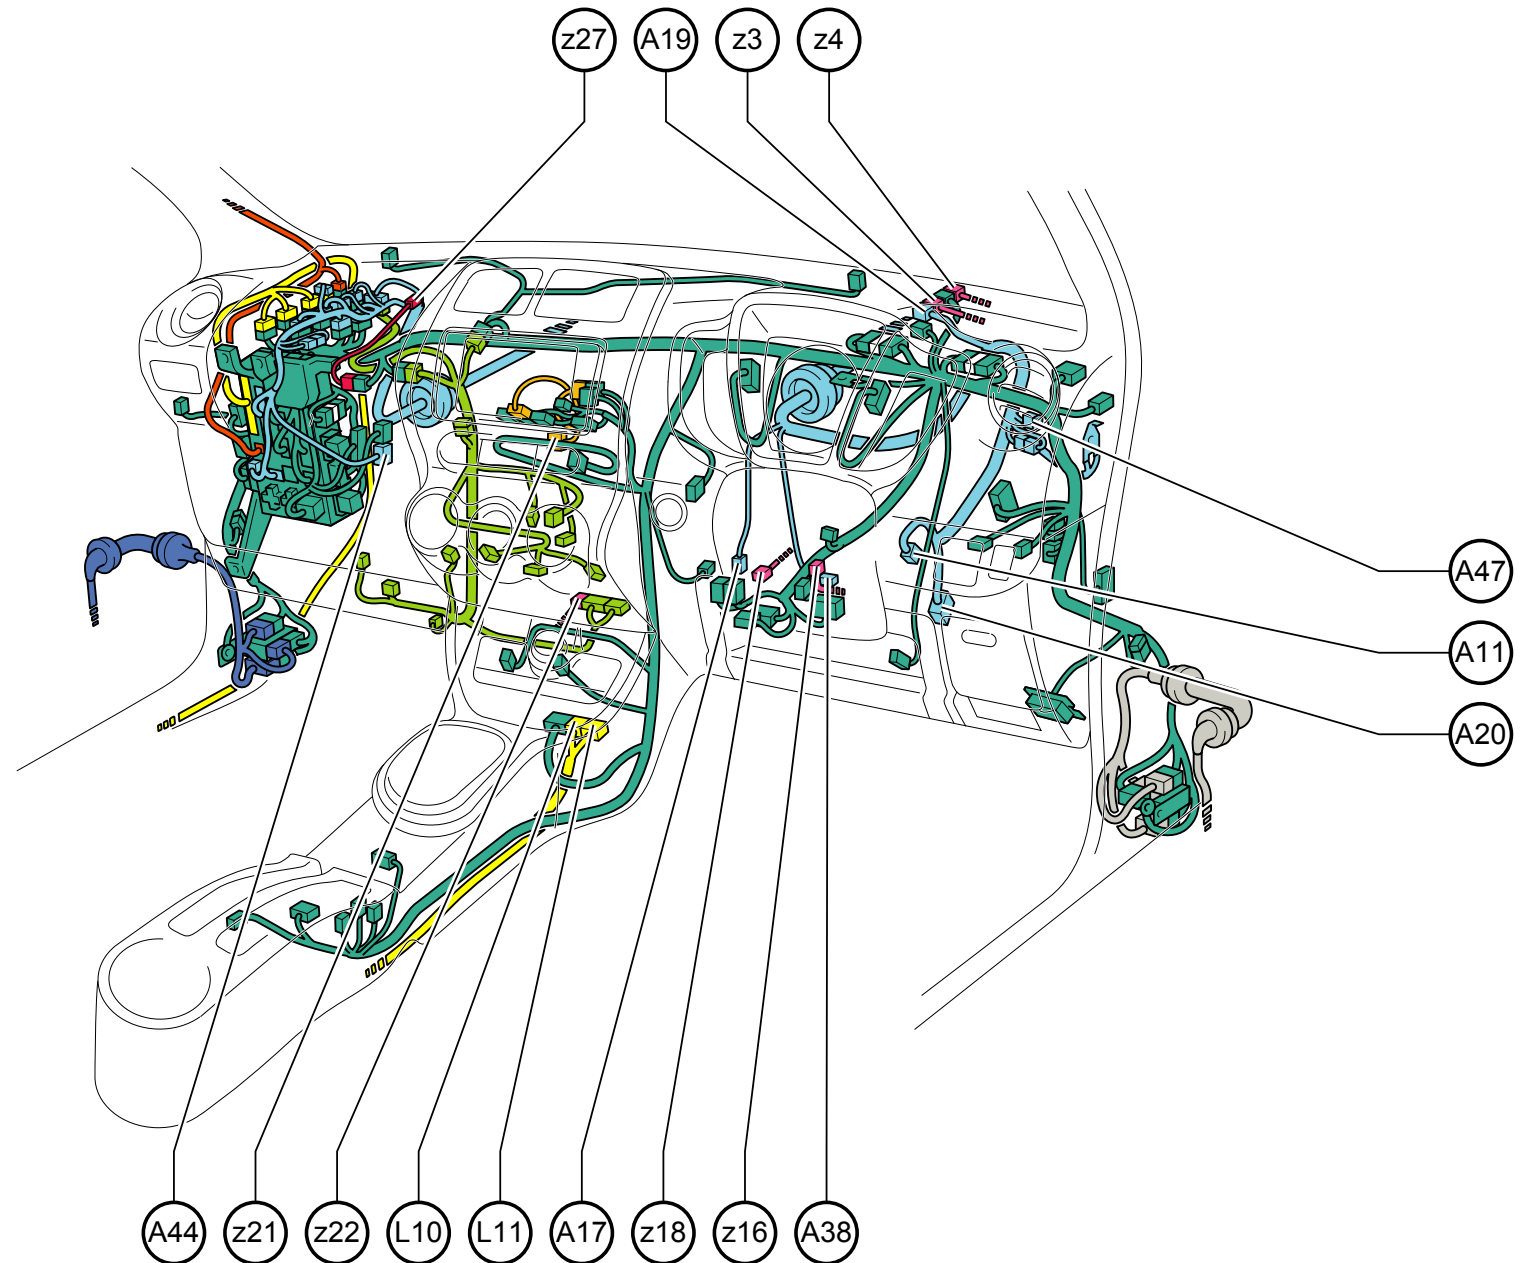

- A 11 Stop Light Switch Assembly
- A 17 Clutch Start Switch Assembly
- A 19 Power Steering ECU Assembly
- A 20 Accelerator Pedal Sensor Assembly
- A 38 Clutch Switch Assembly
- A 44 Engine Stop and Start ECU
- A 47 Junction Connector

- L 10 Center Airbag Sensor Assembly
- L 11 Center Airbag Sensor Assembly

- z 3 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 4 Power Steering ECU Assembly , Power Steering Torque Sensor Assembly
- z 16 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 18 Steering Pad Switch , Spiral Cable Sub-Assembly
- z 21 Navigation Receiver Assembly
- z 22 A/C Amplifier Assembly , A/C Blower Assembly
- z 27 Front Passenger Side Squib Circuit

Position of Parts in Instrument Panel <RHD>

