


Position of Parts in Body

- * 1:w/ Power Back Door
- * 2:w/o Power Back Door

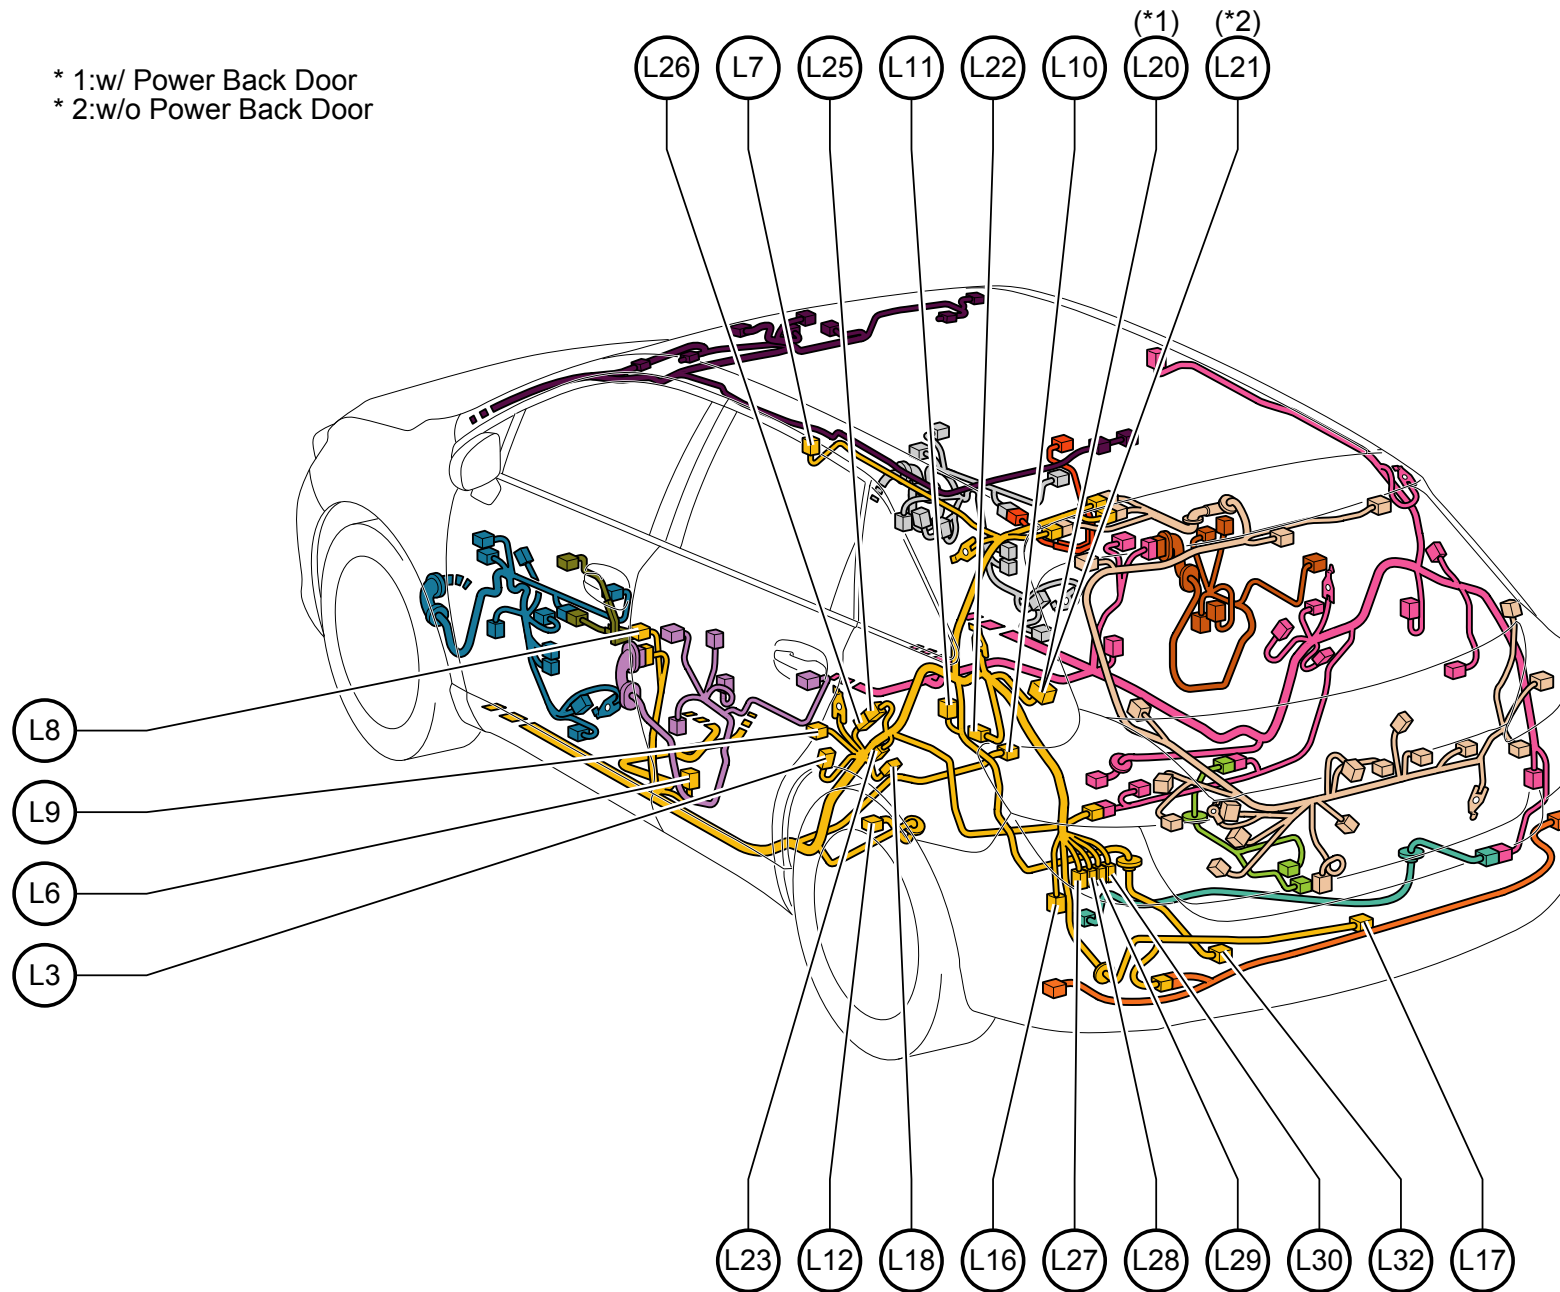

- L 3 No. 2 Side Airbag Sensor Assembly LH
- L 6 Front Pretensioner LH (Front Seat Outer Belt Assembly LH)
- L 7 Curtain Shield Airbag Assembly LH
- L 8 Front Door Courtesy Light Switch LH
- L 9 Rear Door Courtesy Light Switch LH
- L 10 Rear Indoor Electrical Key Oscillator
- L 11 Rear No. 3 Speaker Assembly LH
- L 12 Fuel Sender Gage Assembly
- L 16 Rear Combination Light Assembly LH
- L 17 Outside Luggage Electrical Key Antenna
- L 18 Rear Speed Sensor LH
- L 20 Power Back Door Unit Assembly
- L 21 Front Multiplex Network Door ECU
- L 22 No. 2 Room Light Assembly
- L 23 Diode (Back Door Courtesy Switch)
- L 25 Junction Connector
- L 26 Junction Connector
- L 27 Junction Connector
- L 28 Junction Connector
- L 29 Junction Connector
- L 30 Junction Connector
- L 32 Canister Pump Module

Position of Parts in Body

