



Position of Parts in Engine Compartment

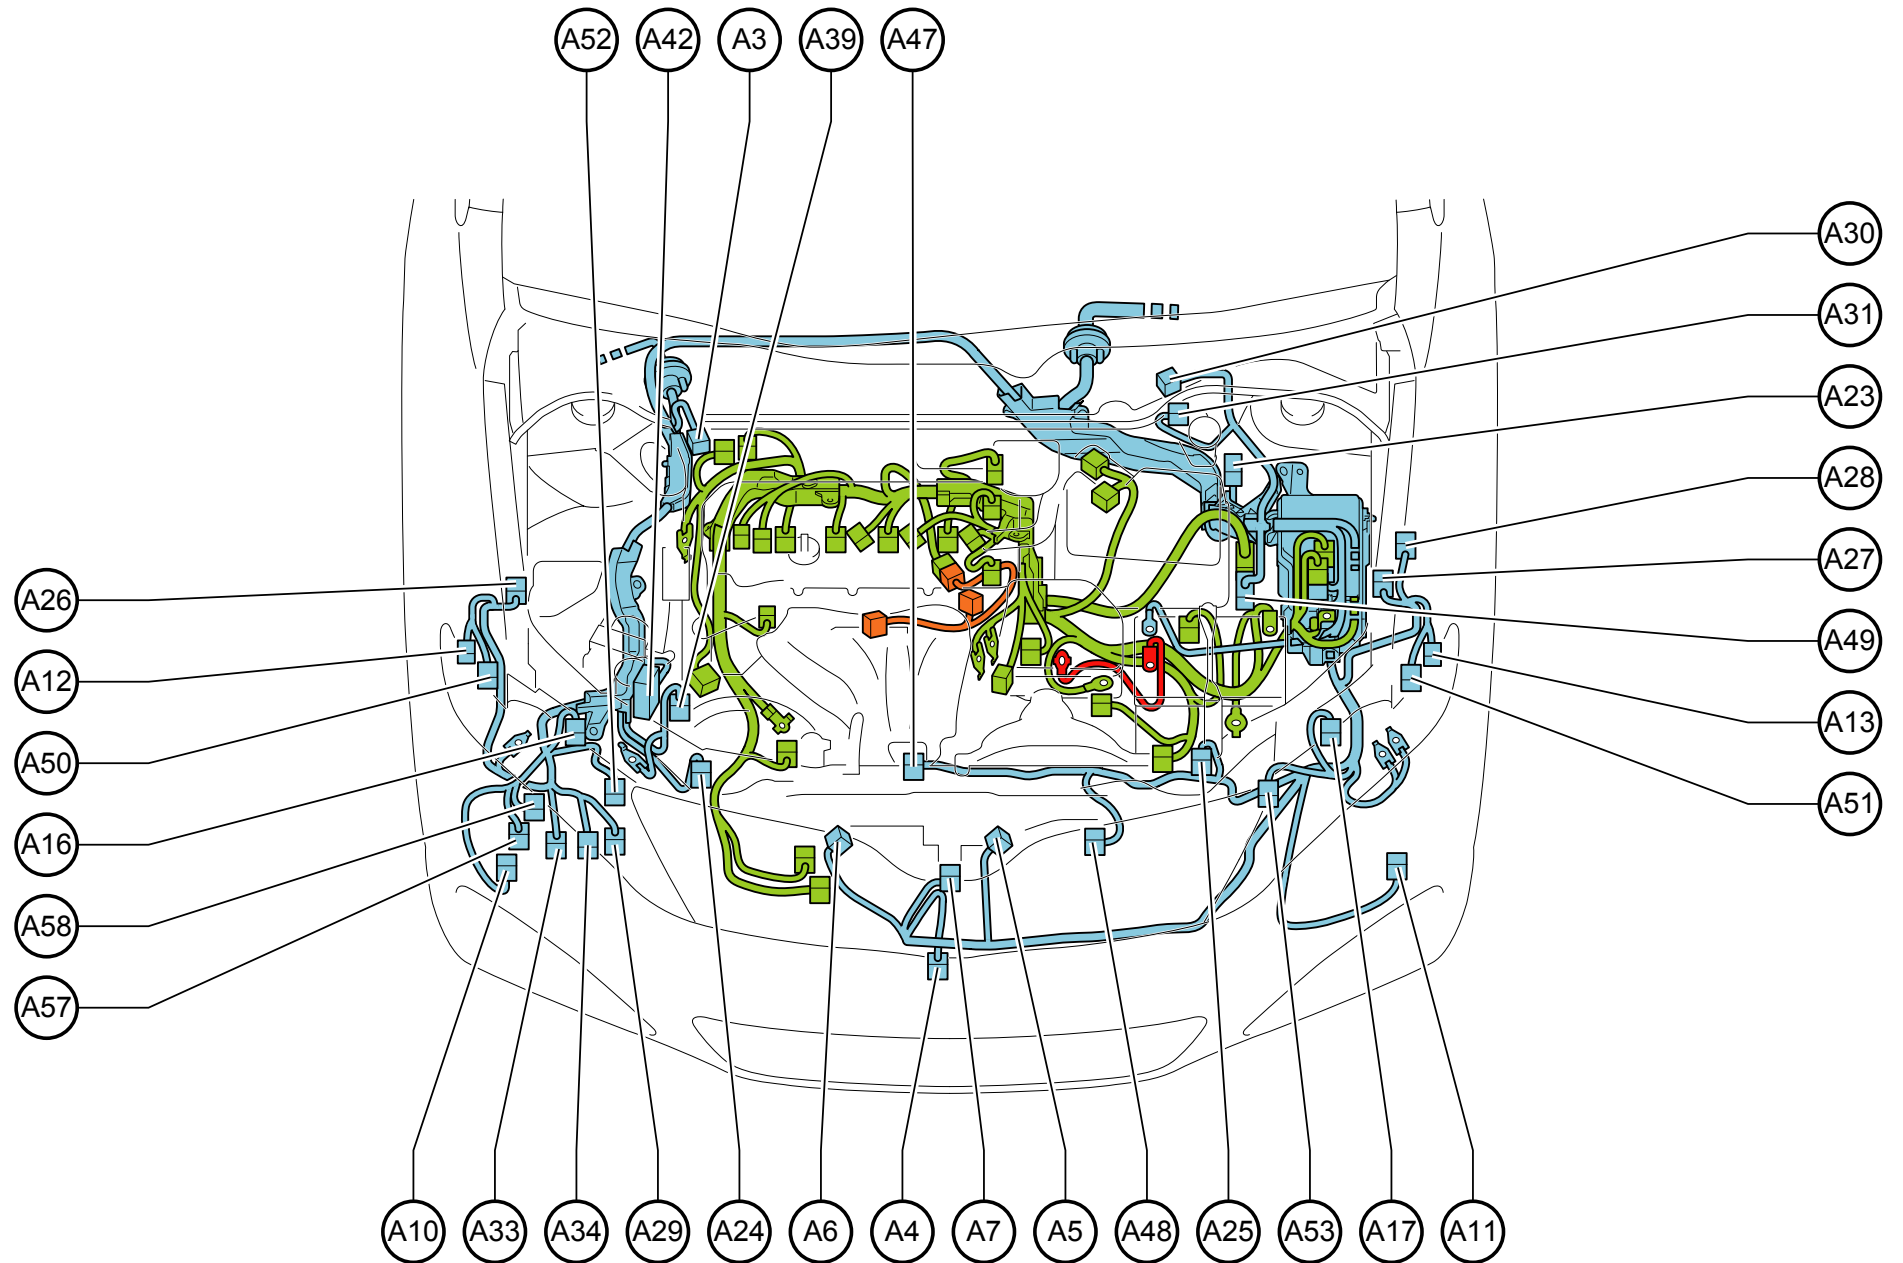

- A 3 Front Wiper Deicer (Windshield Glass)
- A 4 Ambient Temperature Sensor
- A 5 Low Pitched Horn Assembly
- A 6 High Pitched Horn Assembly
- A 7 Engine Hood Courtesy Switch
- A 10 Fog Light Assembly RH
- A 11 Fog Light Assembly LH
- A 12 Headlight Assembly RH
- A 13 Headlight Assembly LH
- A 16 Headlight Assembly RH
- A 17 Headlight Assembly LH
- A 23 Security Horn Assembly
- A 24 Front Airbag Sensor RH
- A 25 Front Airbag Sensor LH
- A 26 Front Speed Sensor RH
- A 27 Front Speed Sensor LH
- A 28 Wireless Door Lock Buzzer
- A 29 Rear Washer Motor and Pump Assembly
- A 30 Windshield Wiper Motor Assembly
- A 31 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 33 Windshield Washer Motor and Pump Assembly
- A 34 Level Warning Switch Assembly
- A 39 A/C Pressure Sensor
- A 42 Brake Actuator Assembly
- A 47 Cooling Fan Motor
- A 48 No. 2 Cooling Fan Motor
- A 49 ECM
- A 50 Headlight Assembly RH
- A 51 Headlight Assembly LH
- A 52 Headlight Assembly RH
- A 53 Headlight Assembly LH
- A 57 Headlight Cleaner Motor and Pump Assembly
- A 58 Headlight Cleaner Control Relay

Position of Parts in Engine Compartment

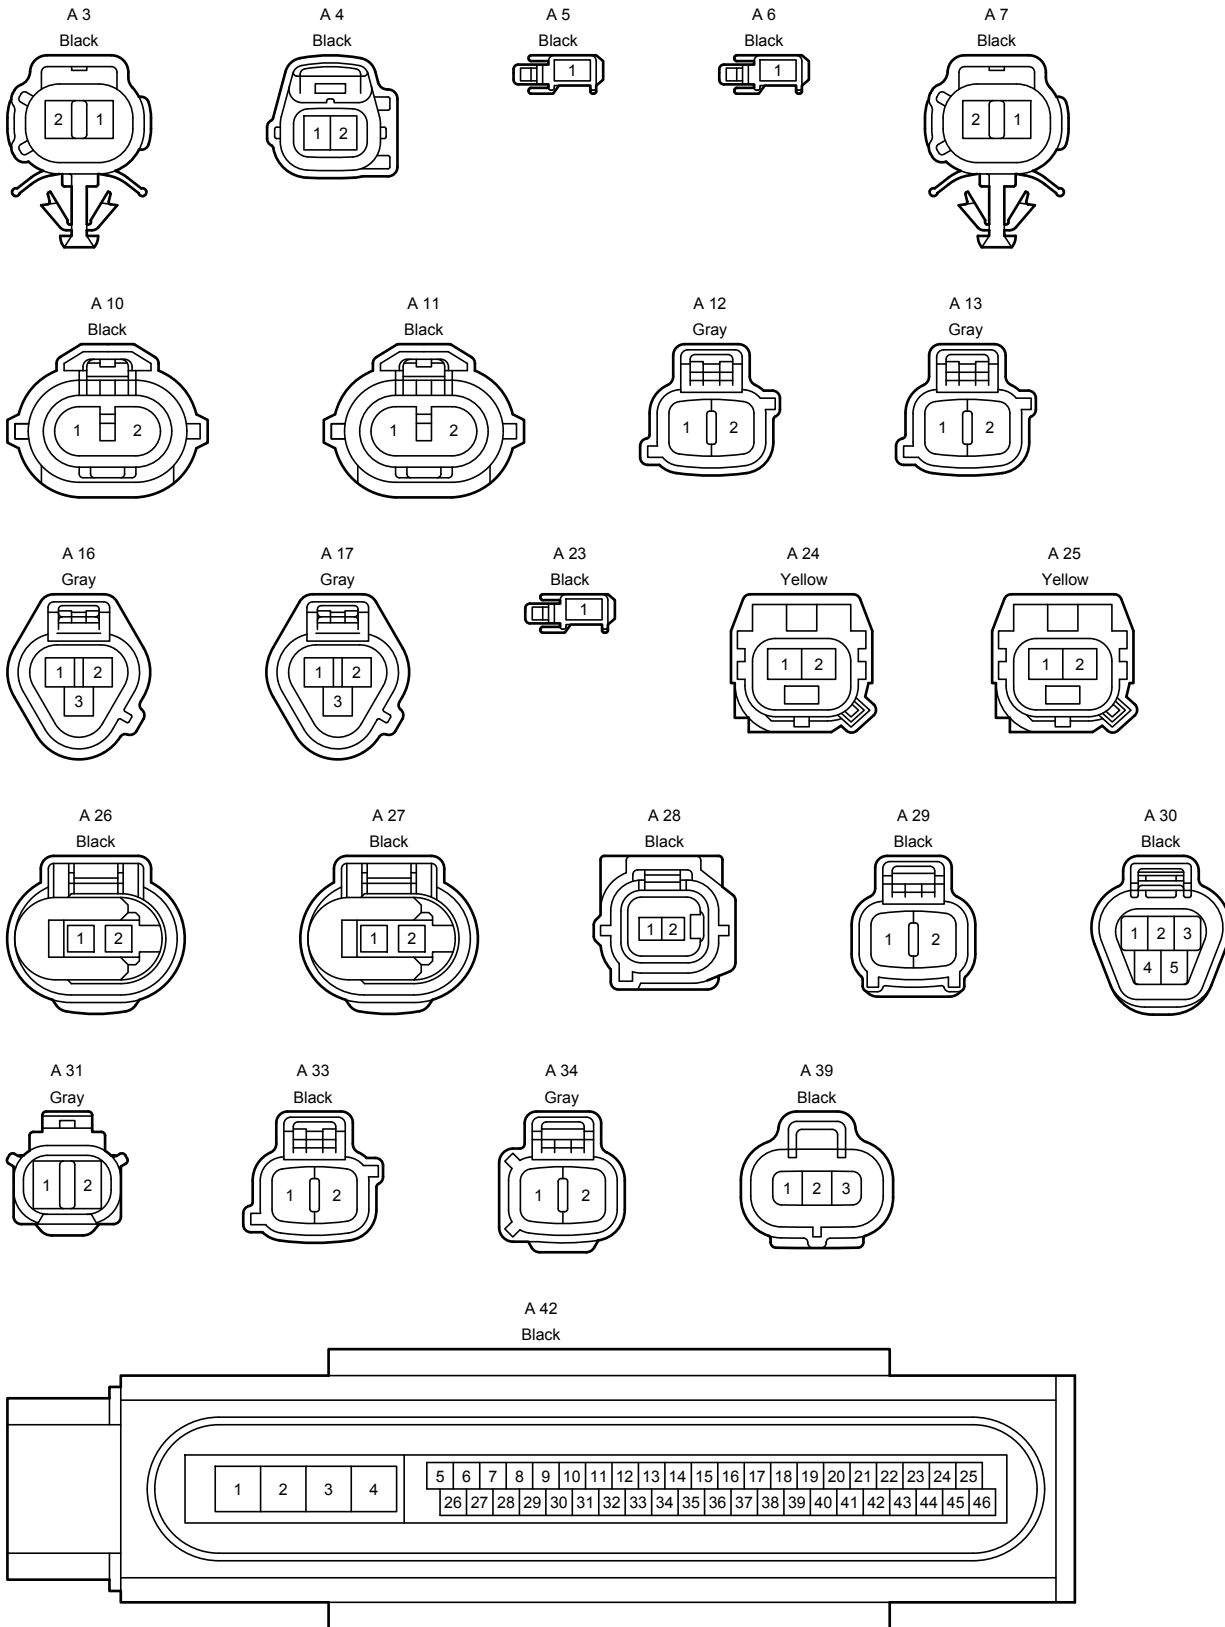

Position of Parts in Engine Compartment

