


Position of Parts in Engine Compartment




















 


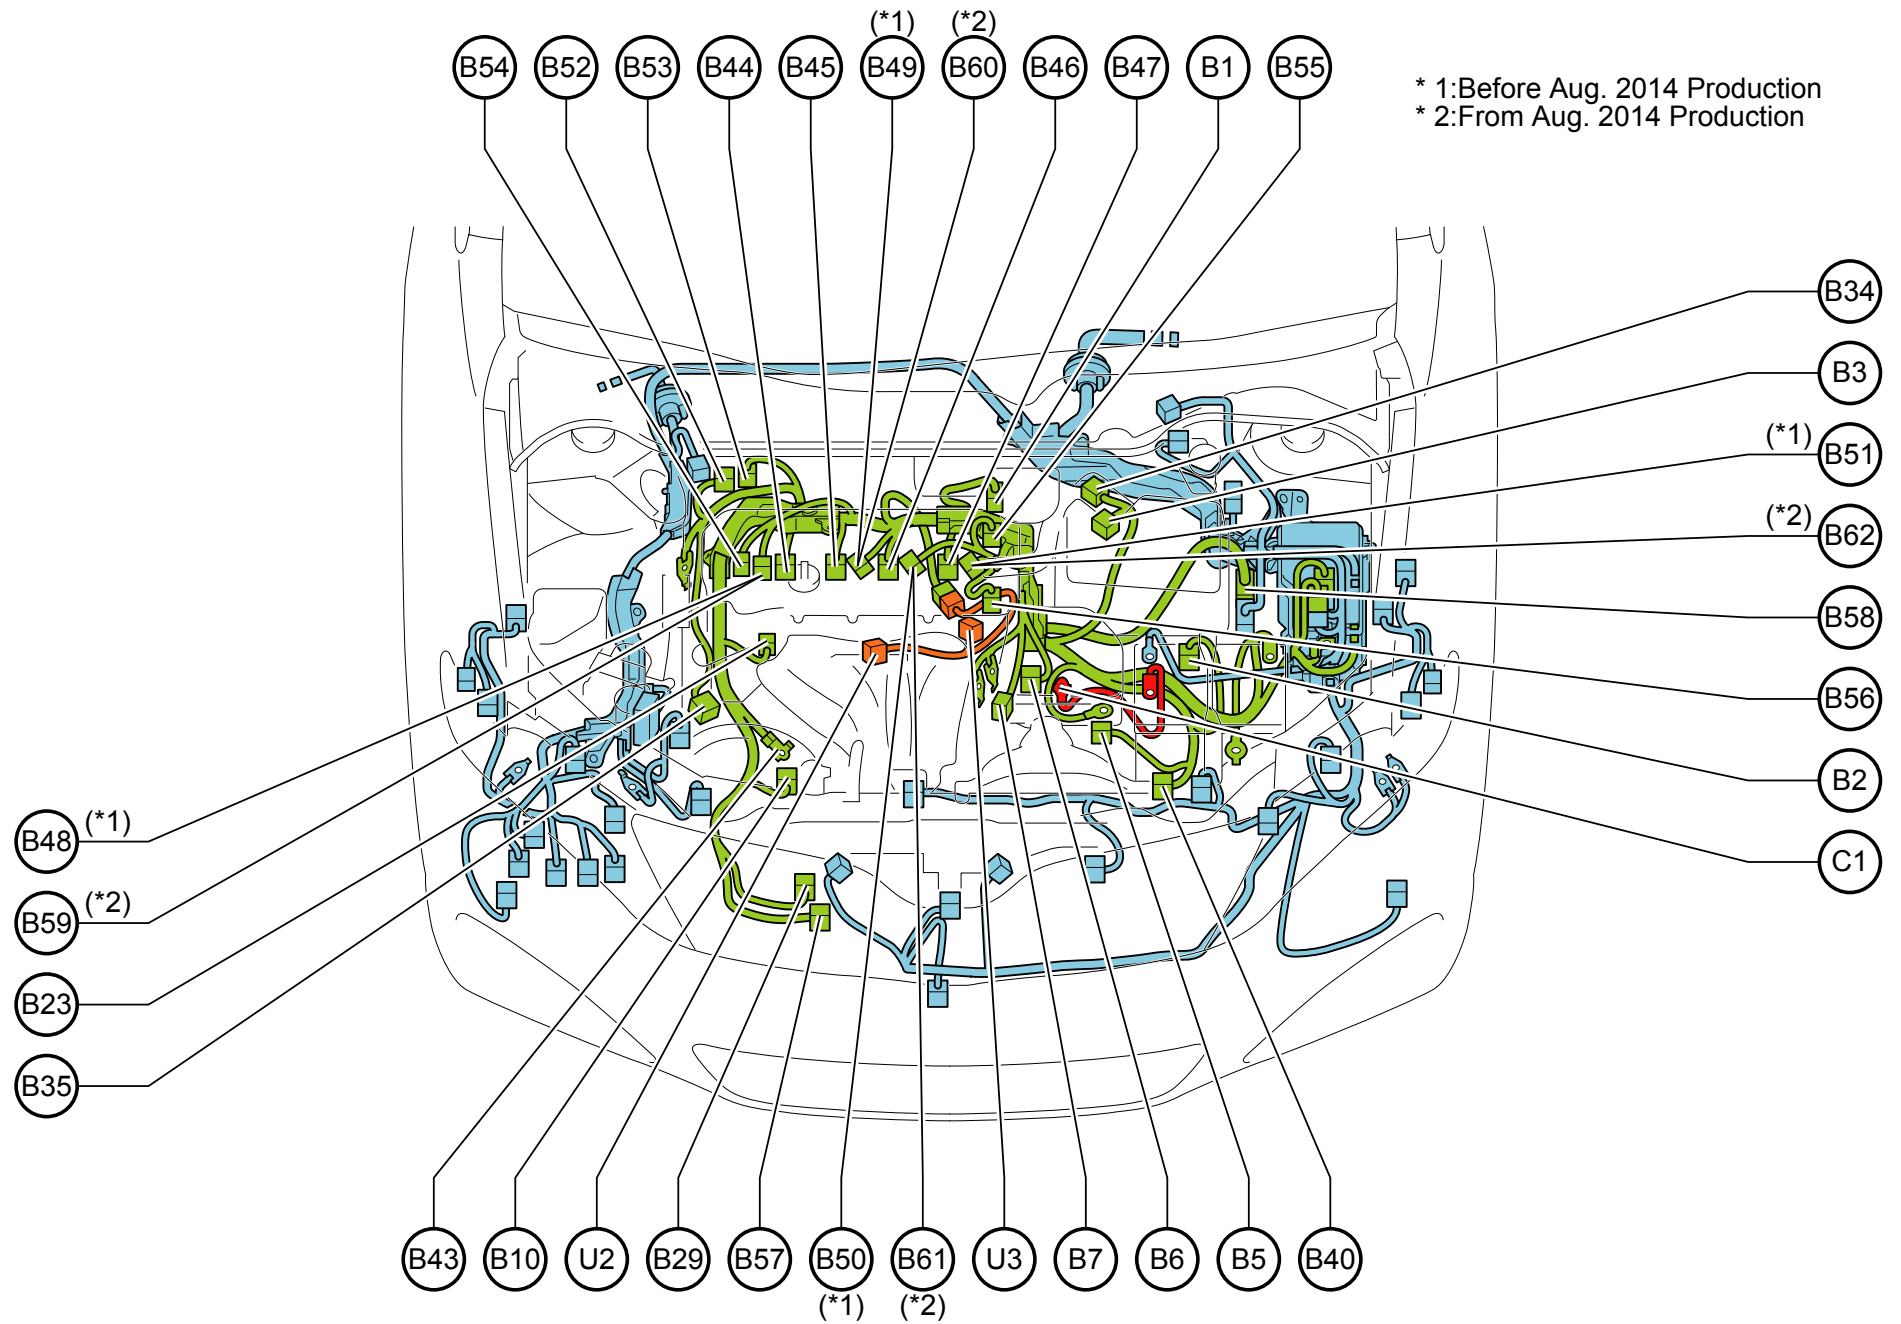


- B 1 Throttle with Motor Body Assembly
- B 2 Park/Neutral Position Switch Assembly
- B 3 Intake Mass Air Flow Meter Sub-Assembly
- B 5 Starter Assembly
- B 6 E.F.I. Engine Coolant Temperature Sensor
- B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 10 Generator Assembly
- B 23 Engine Oil Pressure Switch Assembly
- B 29 Cooler Compressor Assembly
- B 34 Purge VSV
- B 35 Crank Position Sensor
- B 40 Transmission Control ECU Assembly
- B 43 Generator Assembly
- B 44 Fuel Injector Assembly No. 1
- B 45 Fuel Injector Assembly No. 2
- B 46 Fuel Injector Assembly No. 3
- B 47 Fuel Injector Assembly No. 4
- B 48 Ignition Coil Assembly No. 1
- B 49 Ignition Coil Assembly No. 2
- B 50 Ignition Coil Assembly No. 3
- B 51 Ignition Coil Assembly No. 4
- B 52 VSV (ACIS)
- B 53 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- B 54 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- B 55 VVT Sensor (Bank 1 Intake Side)
- B 56 VVT Sensor (Bank 1 Exhaust Side)
- B 57 Oxygen Sensor (Bank 1 Sensor 2)
- B 58 ECM
- B 59 Ignition Coil Assembly No. 1
- B 60 Ignition Coil Assembly No. 2
- B 61 Ignition Coil Assembly No. 3
- B 62 Ignition Coil Assembly No. 4

- C 1 Starter Assembly


- U 2 Knock Control Sensor (Bank 1)
- U 3 Intake Air Control Valve Actuator

Position of Parts in Engine Compartment

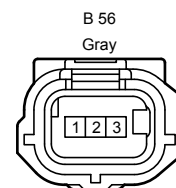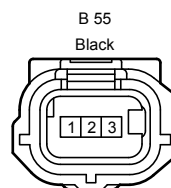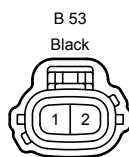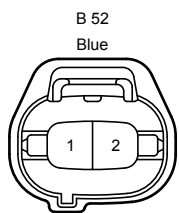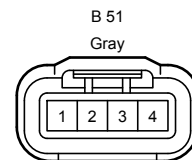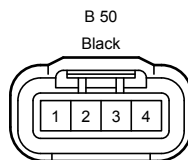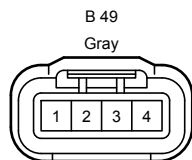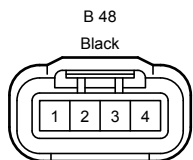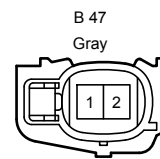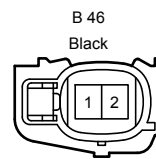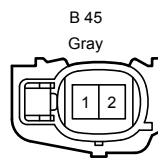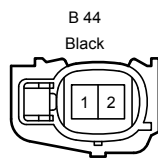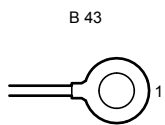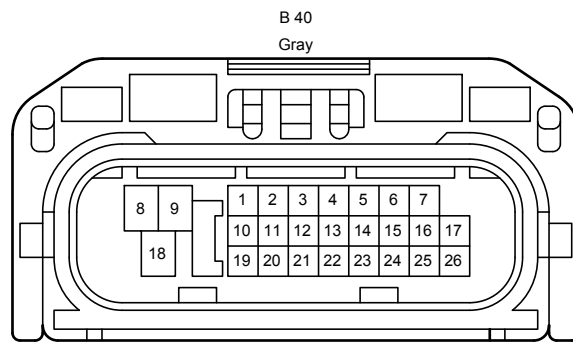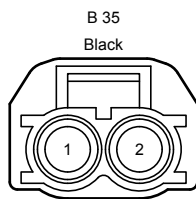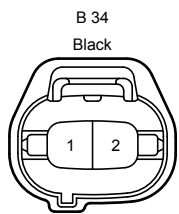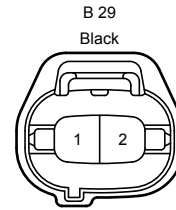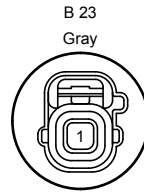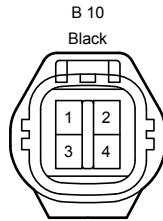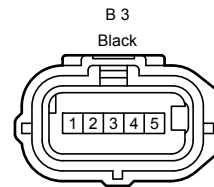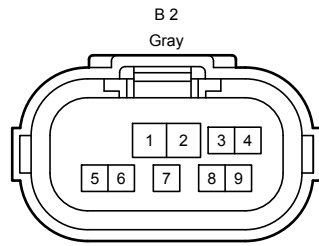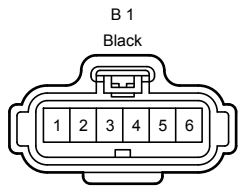


Position of Parts in Engine Compartment


B 58
Black

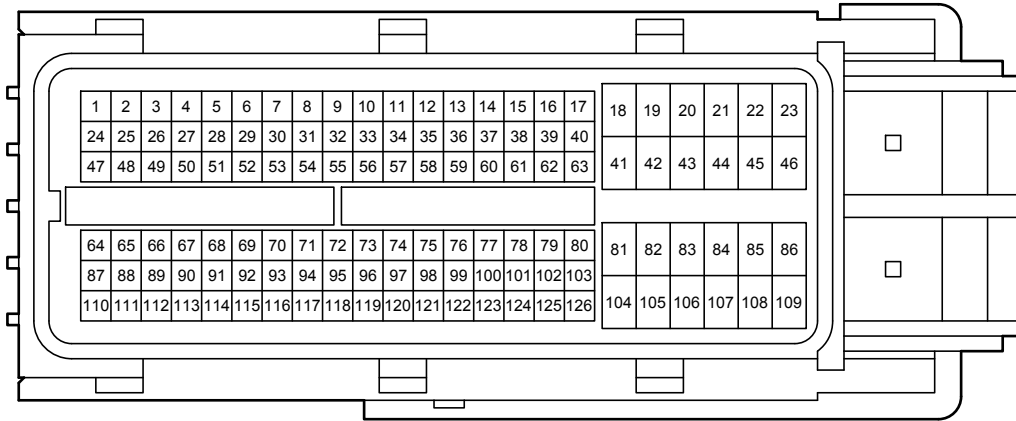


B 59
Black

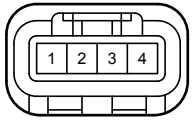


B 60
Gray

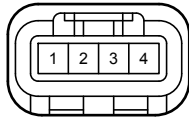


B 61
Black

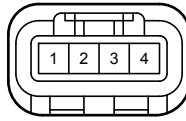


B 62
Gray

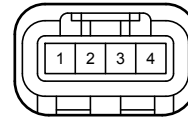

C 1

 

U 2
Black

 

U 3
Black

