

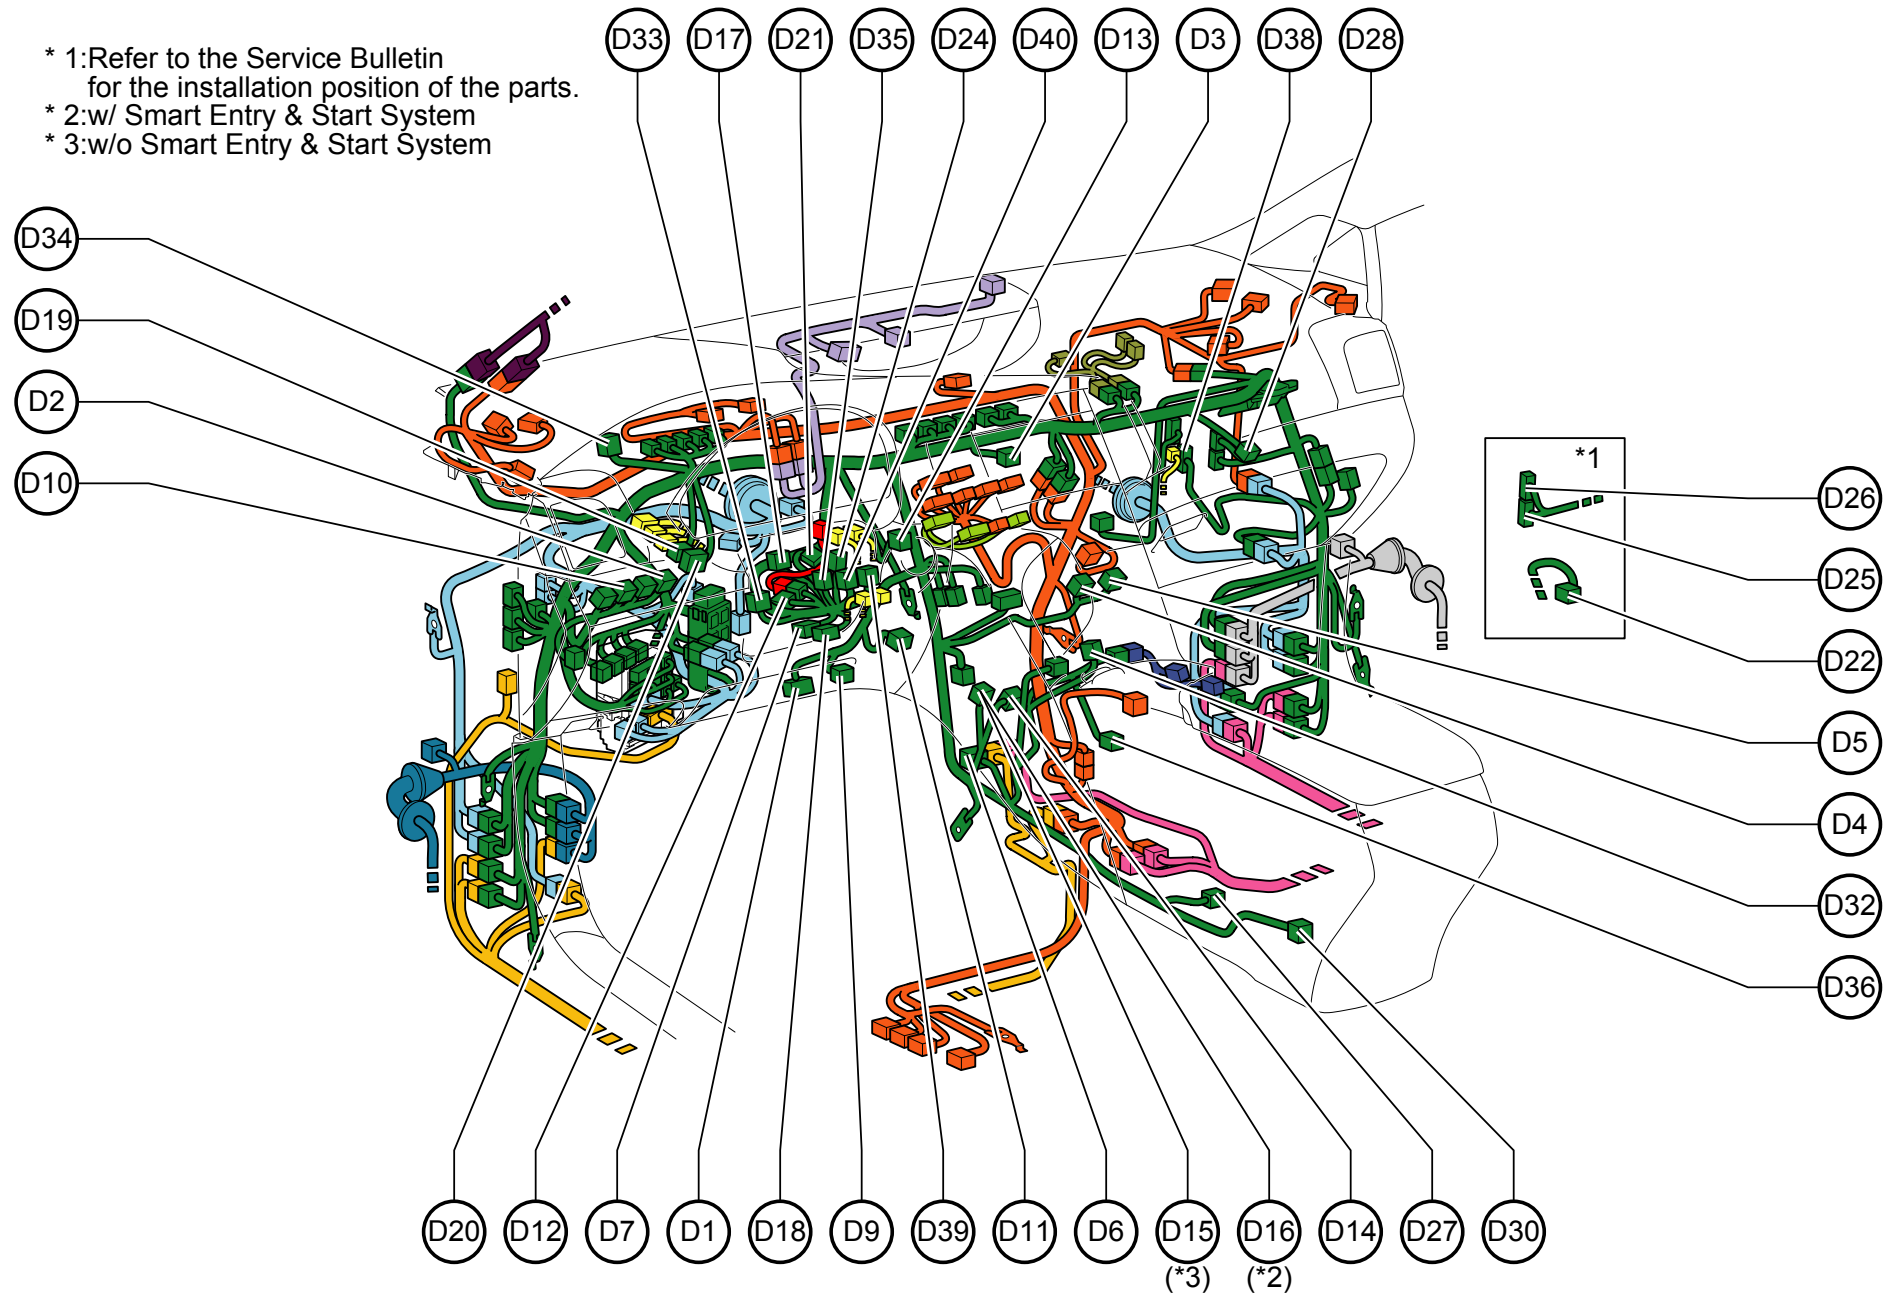
 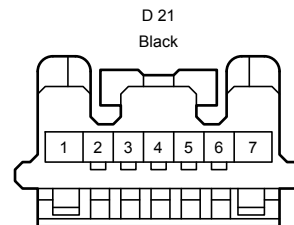
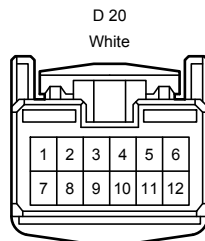

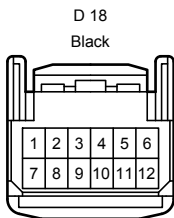
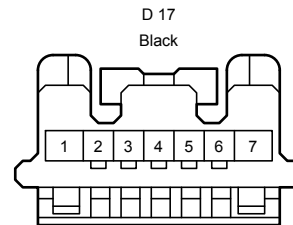
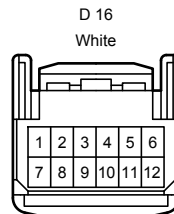
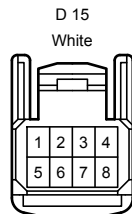
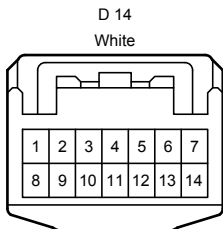
 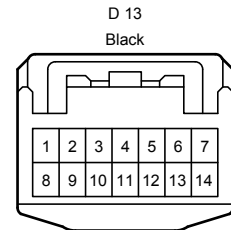
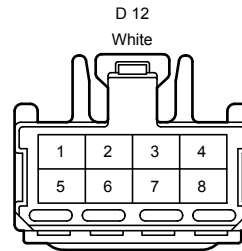

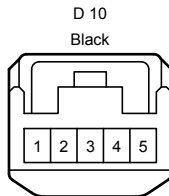
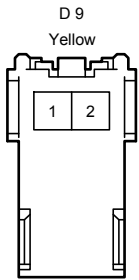
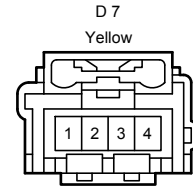
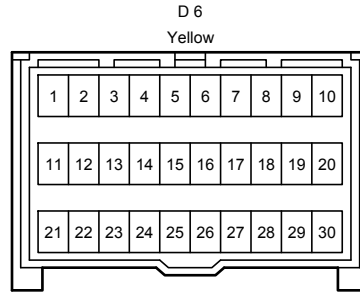
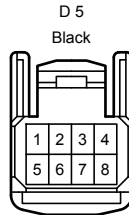
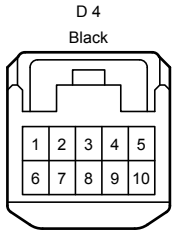
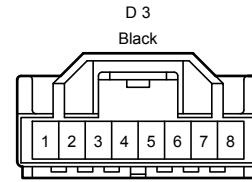


# Position of Parts in Instrument Panel

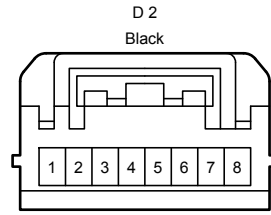

- D 1 DLC3
- D 2 VSC Off Switch
- D 3 Drive Monitor Switch
- D 4 Seat Heater Switch LH
- D 5 Seat Heater Switch RH
- D 6 Center Airbag Sensor Assembly
- D 7 Spiral Cable Sub-Assembly
- D 9 Lower No. 1 Instrument Panel Airbag Assembly
- D 10 Back Door Control Switch
- D 11 Room Temperature Sensor
- D 12 Ignition or Starter Switch Assembly
- D 13 Engine Switch
- D 14 Transmission Control Switch
- D 15 Shift Lock Control ECU Sub-Assembly
- D 16 Shift Lock Control ECU Sub-Assembly
- D 17 Steering Lock Actuator Assembly
- D 18 Spiral Cable Sub-Assembly
- D 19 Power Steering ECU Assembly
- D 20 Power Steering ECU Assembly
- D 21 Transponder Key Amplifier
- D 22 Transponder Key ECU Assembly
- D 24 Un-Lock Warning Switch Assembly
- D 25 Certification ECU Assembly
- D 26 Certification ECU Assembly
- D 27 Front Indoor Electrical Key Oscillator
- D 28 Glove Box Light Assembly
- D 30 Yaw Rate Sensor
- D 32 Indicator Light Wire Sub-Assembly
- D 33 Headlight Dimmer Switch Assembly
- D 34 Turn Signal Flasher Assembly
- D 35 Steering Sensor
- D 36 Front Power Point Socket Assembly
- D 38 AWD ECU Assembly
- D 39 Windshield Wiper Switch Assembly
- D 40 Windshield Wiper Switch Assembly

## Position of Parts in Instrument Panel

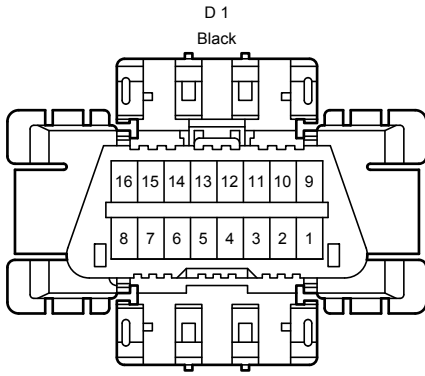

# Position of Parts in Instrument Panel

