

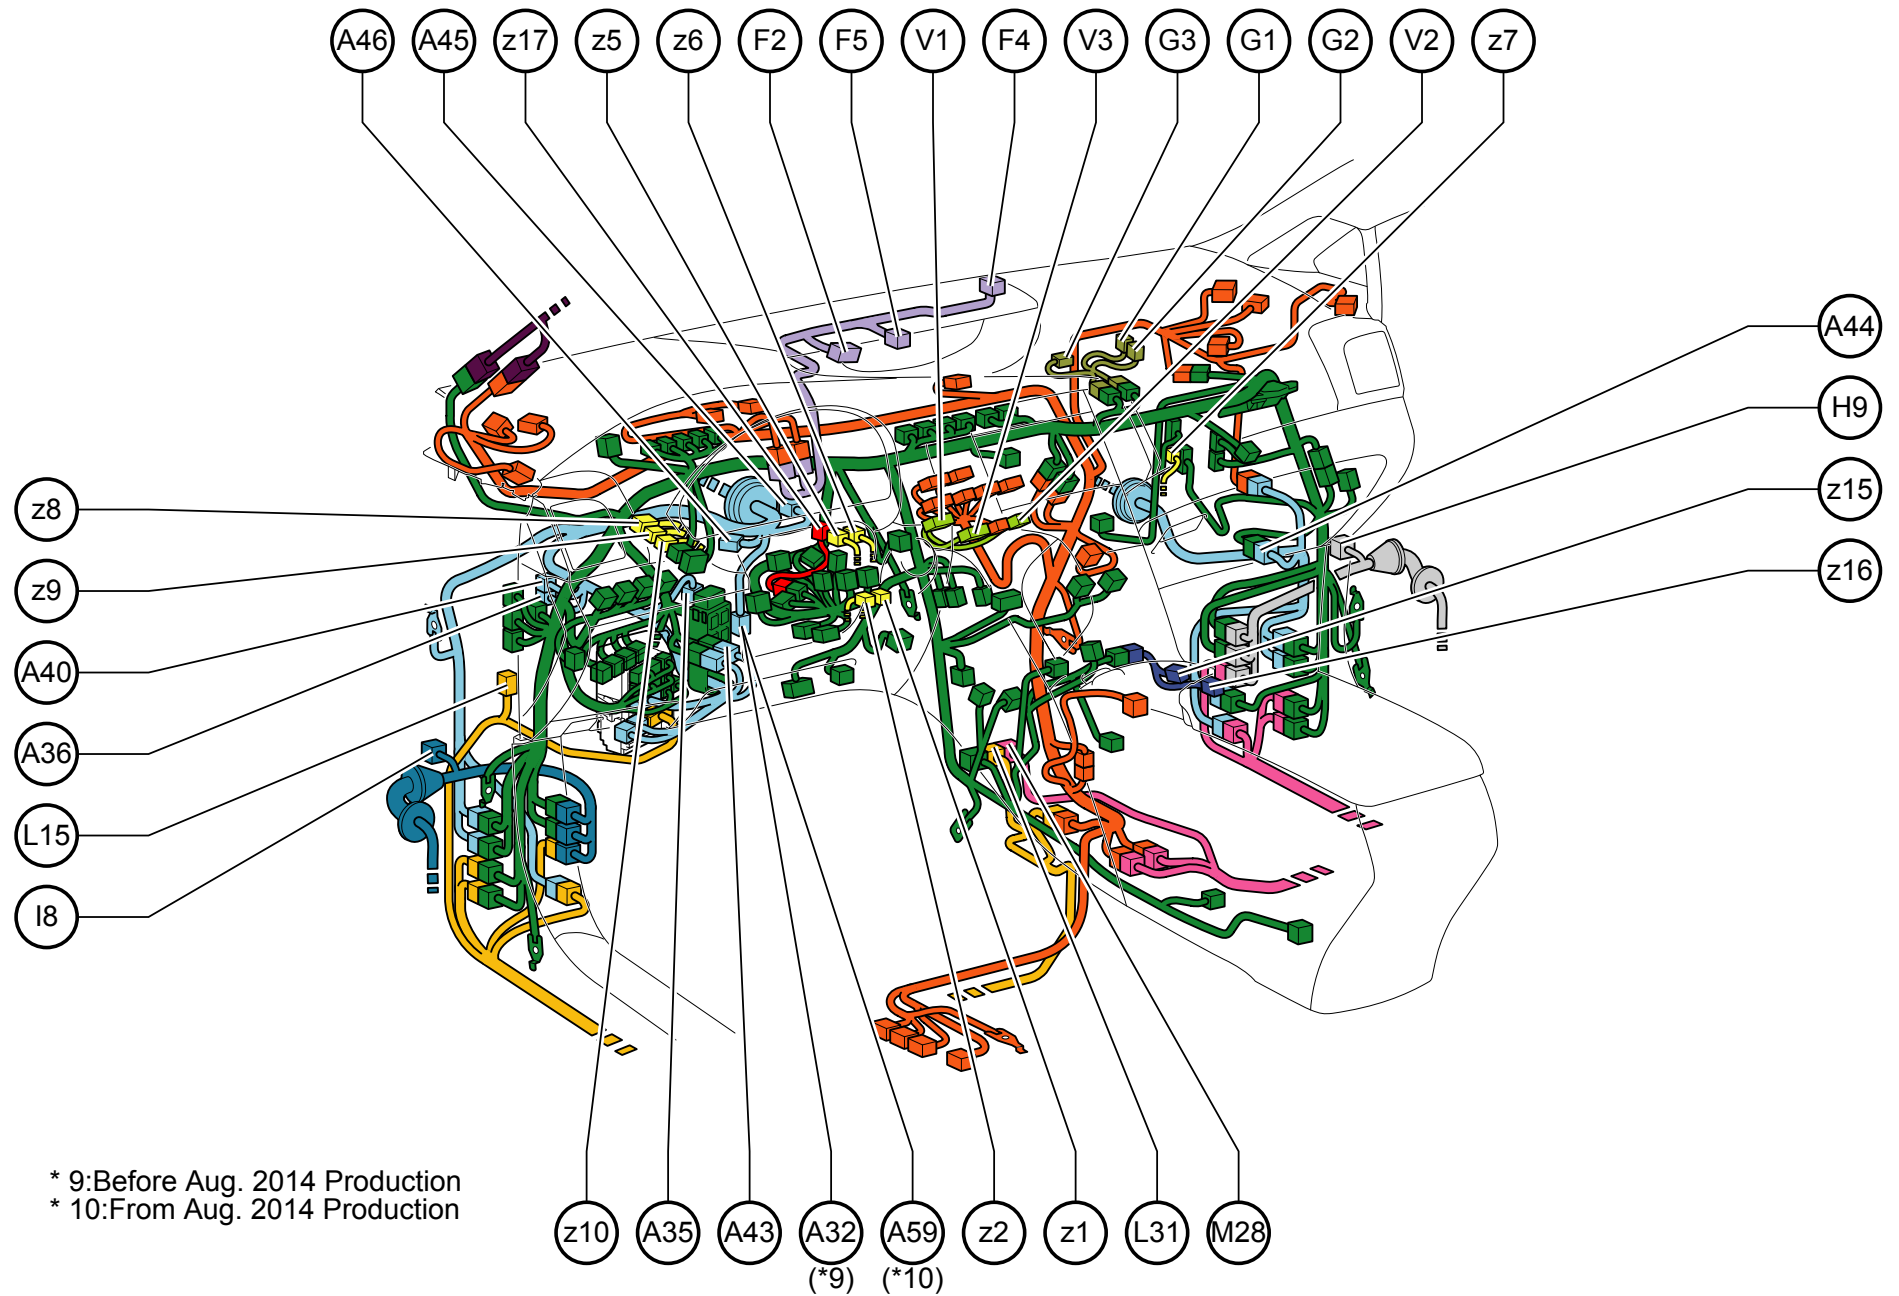
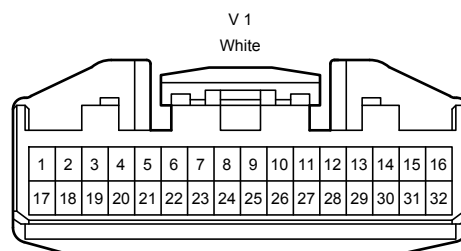
 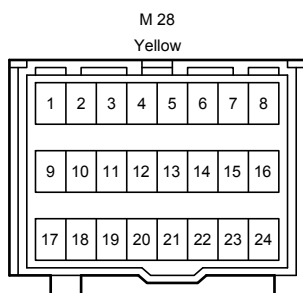
 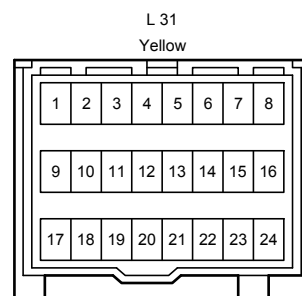


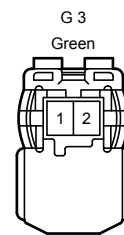
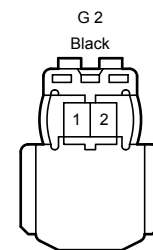
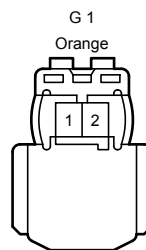
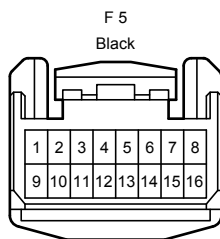
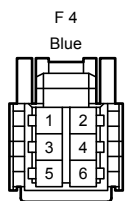
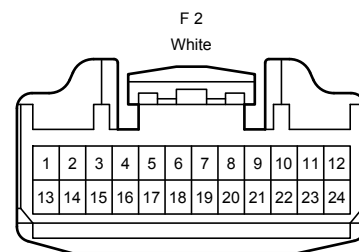
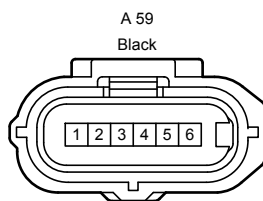
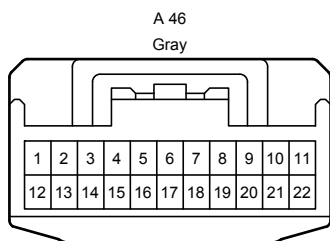
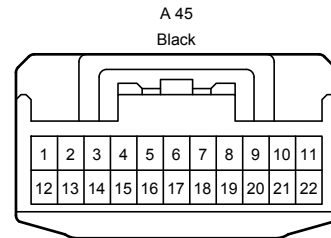
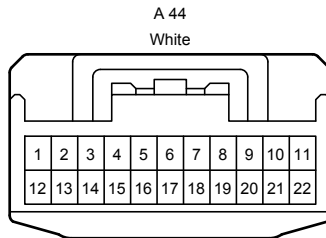
 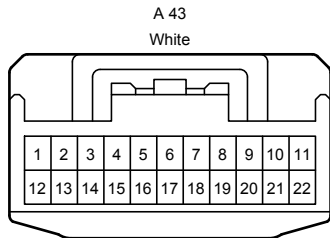
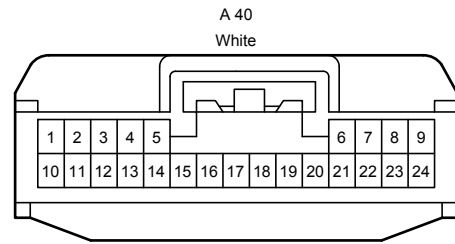



# Position of Parts in Instrument Panel

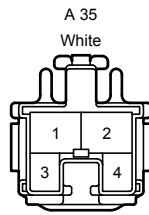

- A 32 Accelerator Position Sensor (Accelerator Pedal Assembly)
- A 35 Stop Light Switch Assembly
- A 36 Brake Pedal Load Sensing Switch
- A 40 Headlight Leveling ECU Assembly
- A 43 Junction Connector
- A 44 Junction Connector
- A 45 Junction Connector
- A 46 Junction Connector
- A 59 Accelerator Position Sensor (Accelerator Pedal Assembly)
  
- F 2 Accessory Meter Assembly
- F 4 Automatic Light Control Sensor
- F 5 Accessory Meter Assembly
  
- G 1 Front Passenger Side Squib Circuit
- G 2 Front Passenger Side Squib Circuit
- G 3 Front Passenger Side Squib Circuit
  
- H 9 Diode (Front Door Courtesy Light RH)
  
- I 8 Diode (Front Door Courtesy Light LH)
  
- L 15 Parking Brake Switch Assembly
- L 31 Center Airbag Sensor Assembly
  
- M 28 Center Airbag Sensor Assembly
  
- V 1 Extension Module
- V 2 Radio & Display Receiver Assembly
- V 3 Radio & Display Receiver Assembly
  
- z 1 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 2 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 5 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 6 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 7 A/C Amplifier Assembly , A/C Blower Assembly
- z 8 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 9 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 10 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 15 Front Console Box Illumination Light Assembly
- z 16 Rear Console Box Illumination Light Assembly
- z 17 Key Inter Lock Solenoid

## Position of Parts in Instrument Panel

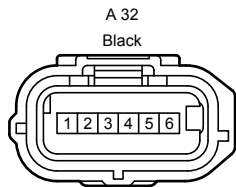

## Position of Parts in Instrument Panel

