


Position of Parts in Seat

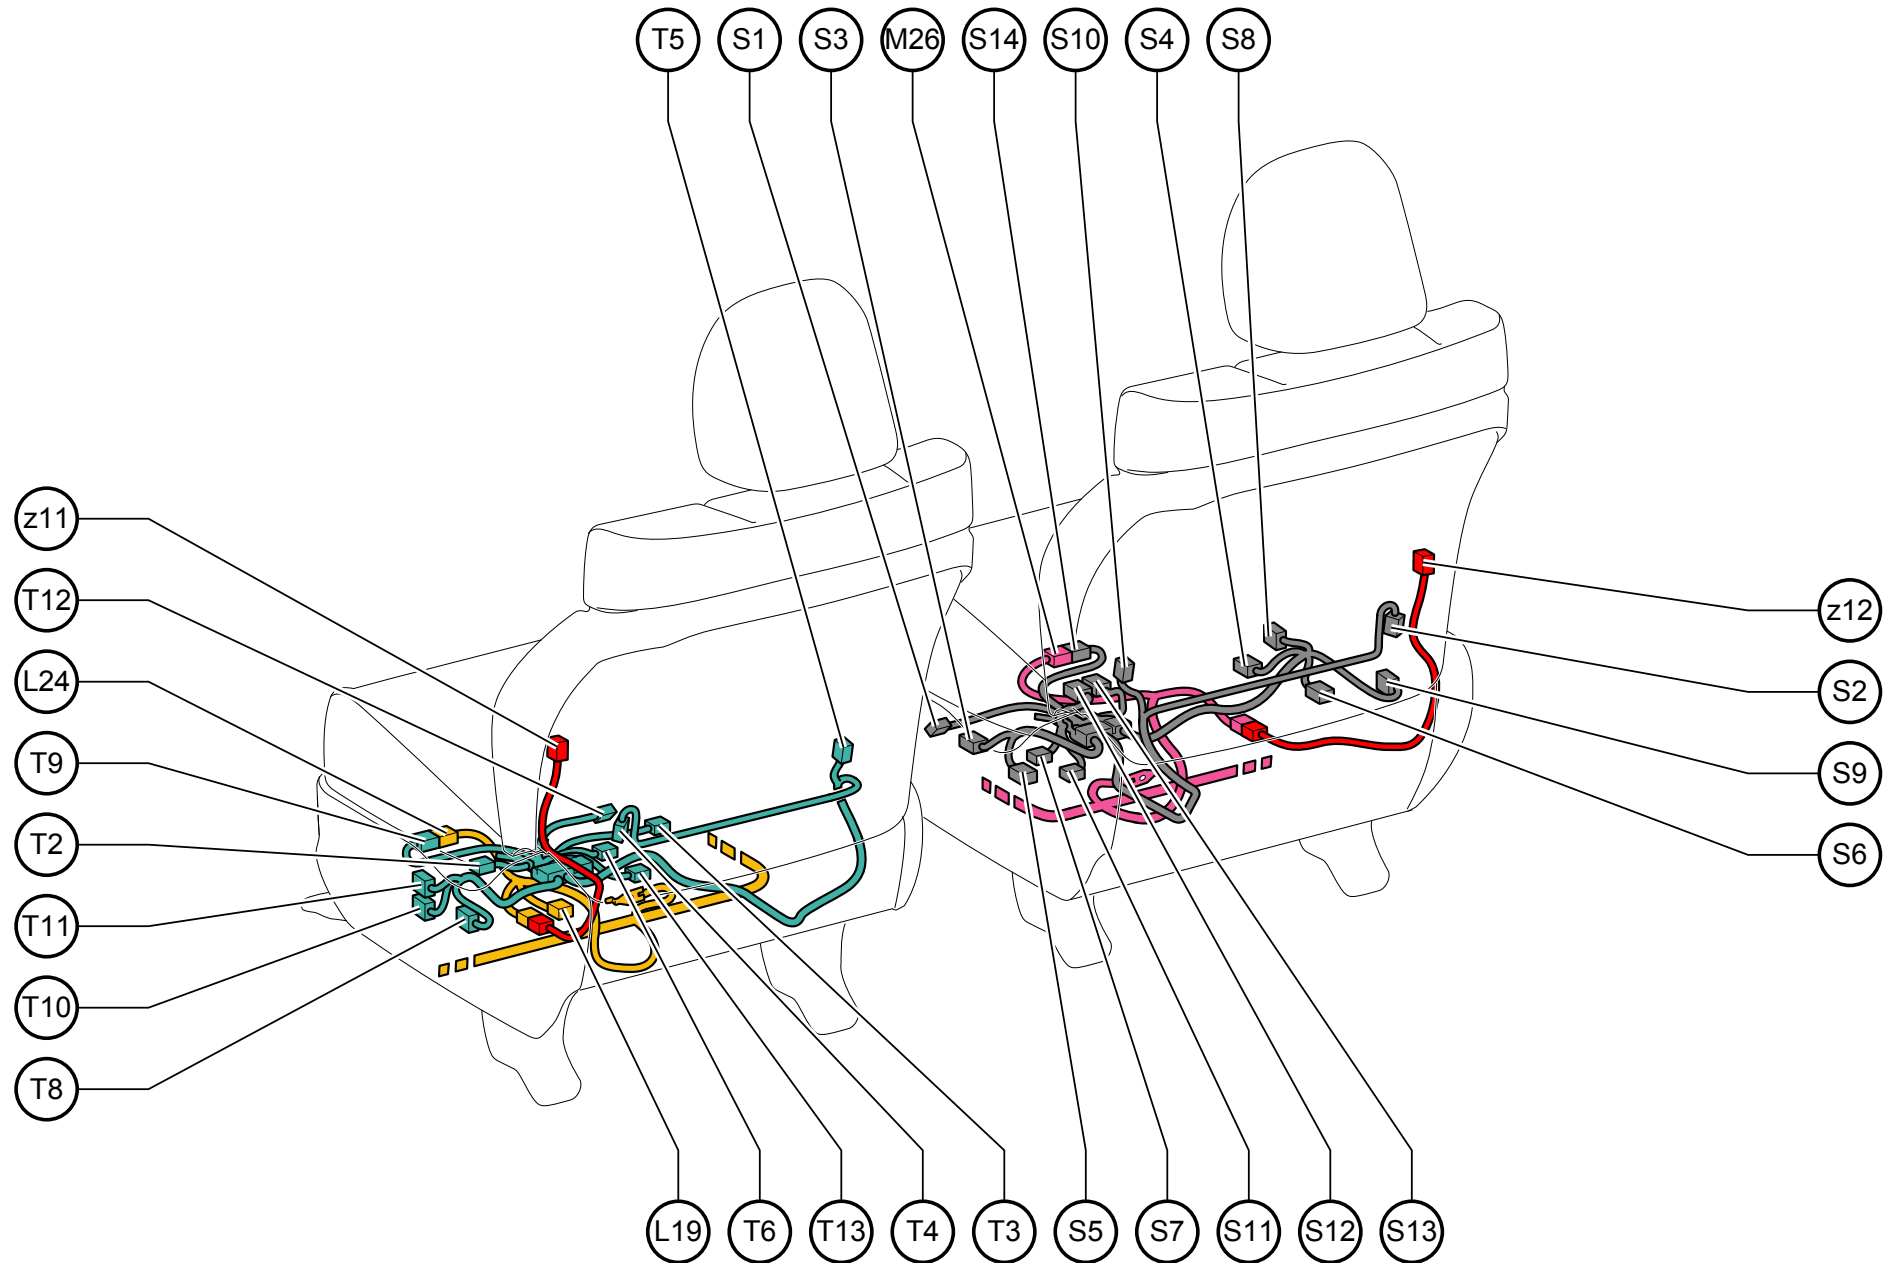

- L 19 Front Seat Inner Belt Assembly LH
- L 24 Junction Connector


- M 26 Junction Connector

- S 1 Front Power Seat Slide Position Motor Assembly RH
- S 2 Front Power Seat Reclining Position Motor Assembly RH
- S 3 Front In Weight Detection Sensor Sub Assembly
- S 4 Front Out Weight Detection Sensor Sub Assembly
- S 5 Rear In Weight Detection Sensor Sub Assembly
- S 6 Rear Out Weight Detection Sensor Sub Assembly
- S 7 Seat Heater Control Sub-Assembly RH
- S 8 Front Power Seat Switch RH
- S 9 Front Lumbar Power Seat Switch RH
- S 10 Front Lumbar Support Forward and Back Motor Assembly RH
- S 11 Front Seat Inner Belt Assembly RH
- S 12 Occupant Detection ECU
- S 13 Occupant Detection ECU
- S 14 Junction Connector

- T 2 Front Power Seat Vertical Position Motor Assembly LH
- T 3 Front Power Seat Lift Position Motor Assembly LH
- T 4 Front Power Seat Reclining Position Motor Assembly LH
- T 5 Front Lumbar Support Forward and Back Motor Assembly LH
- T 6 Seat Heater Control Sub-Assembly LH
- T 8 Front Lumbar Power Seat Switch LH
- T 9 Junction Connector
- T 10 Position Control ECU & Switch Assembly
- T 11 Position Control ECU & Switch Assembly
- T 12 Front Power Seat Slide Position Motor Assembly LH
- T 13 Front Seat Inner Belt Assembly LH

- z 11 Side Airbag Squib Circuit LH
- z 12 Side Airbag Squib Circuit RH

Position of Parts in Seat

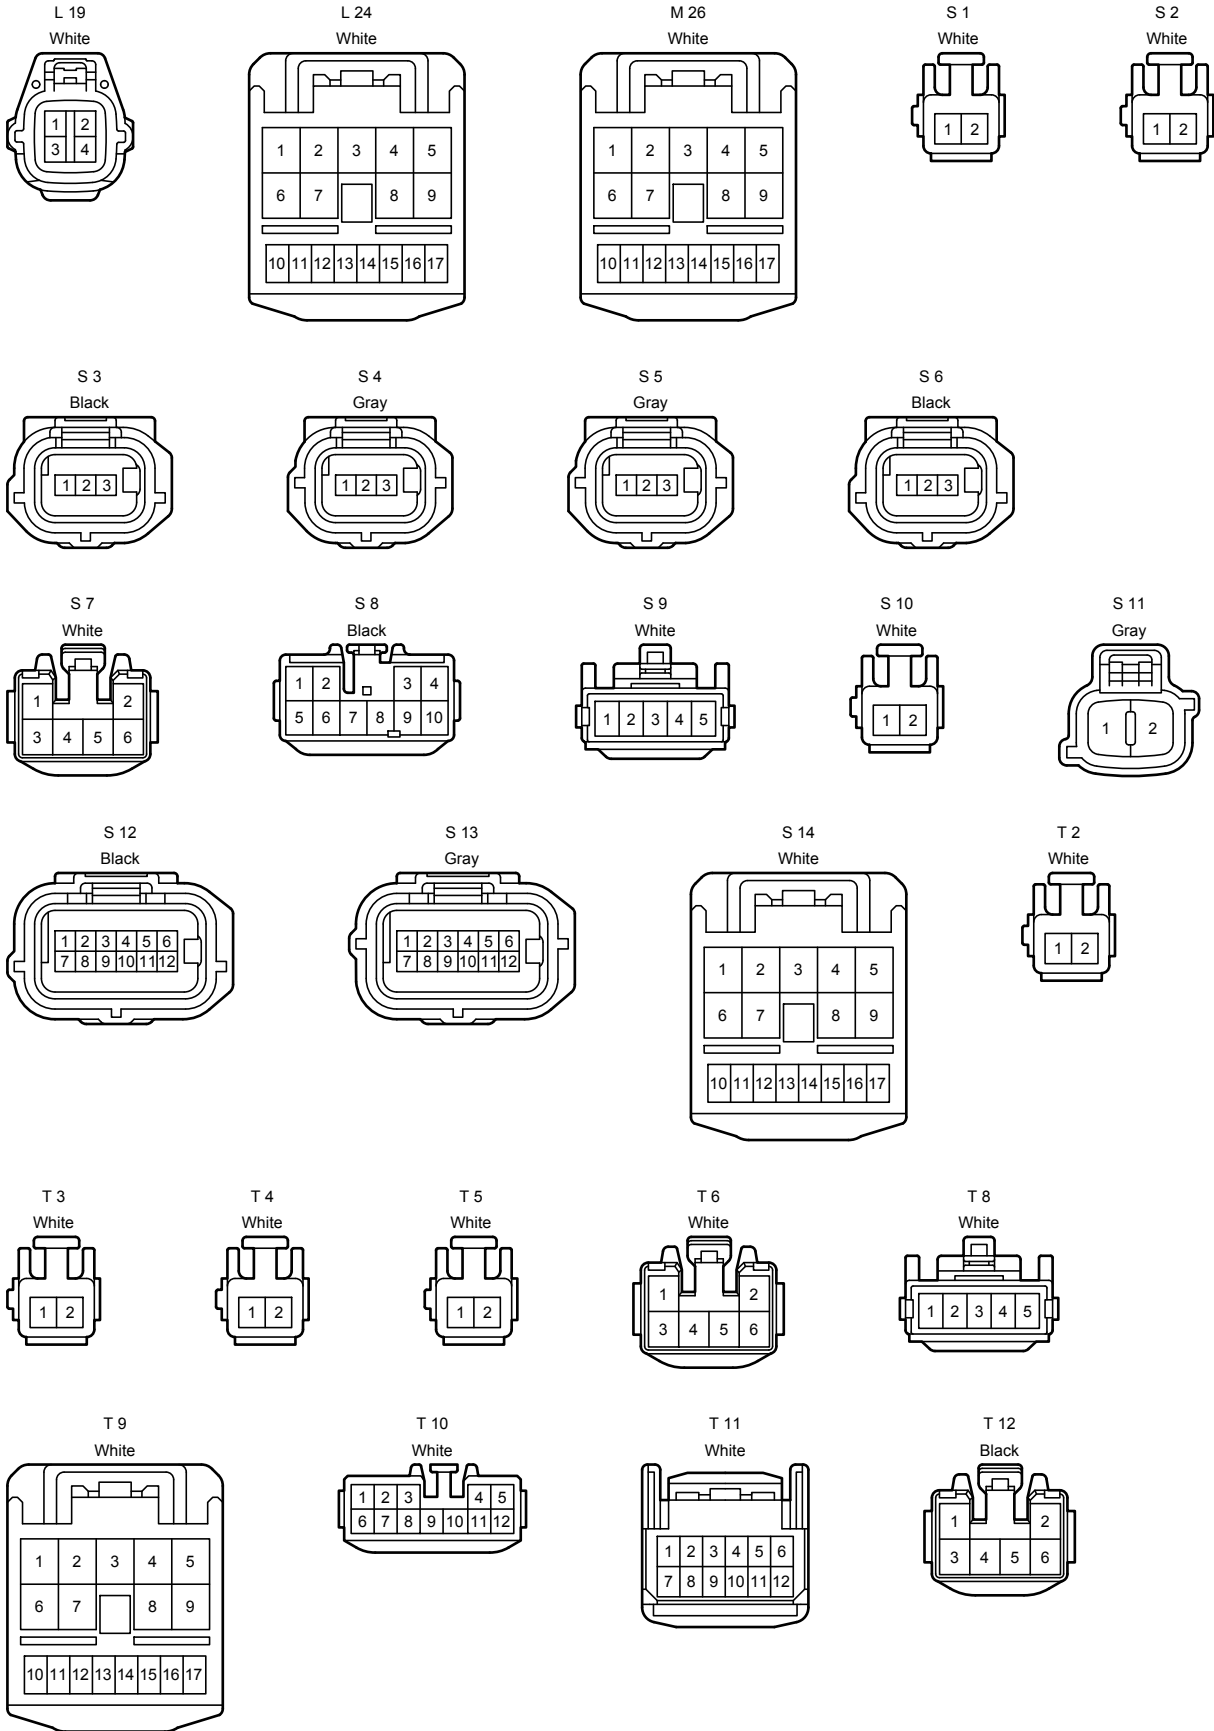

Position of Parts in Seat

