


* 3: Before Mar. 2015 Production

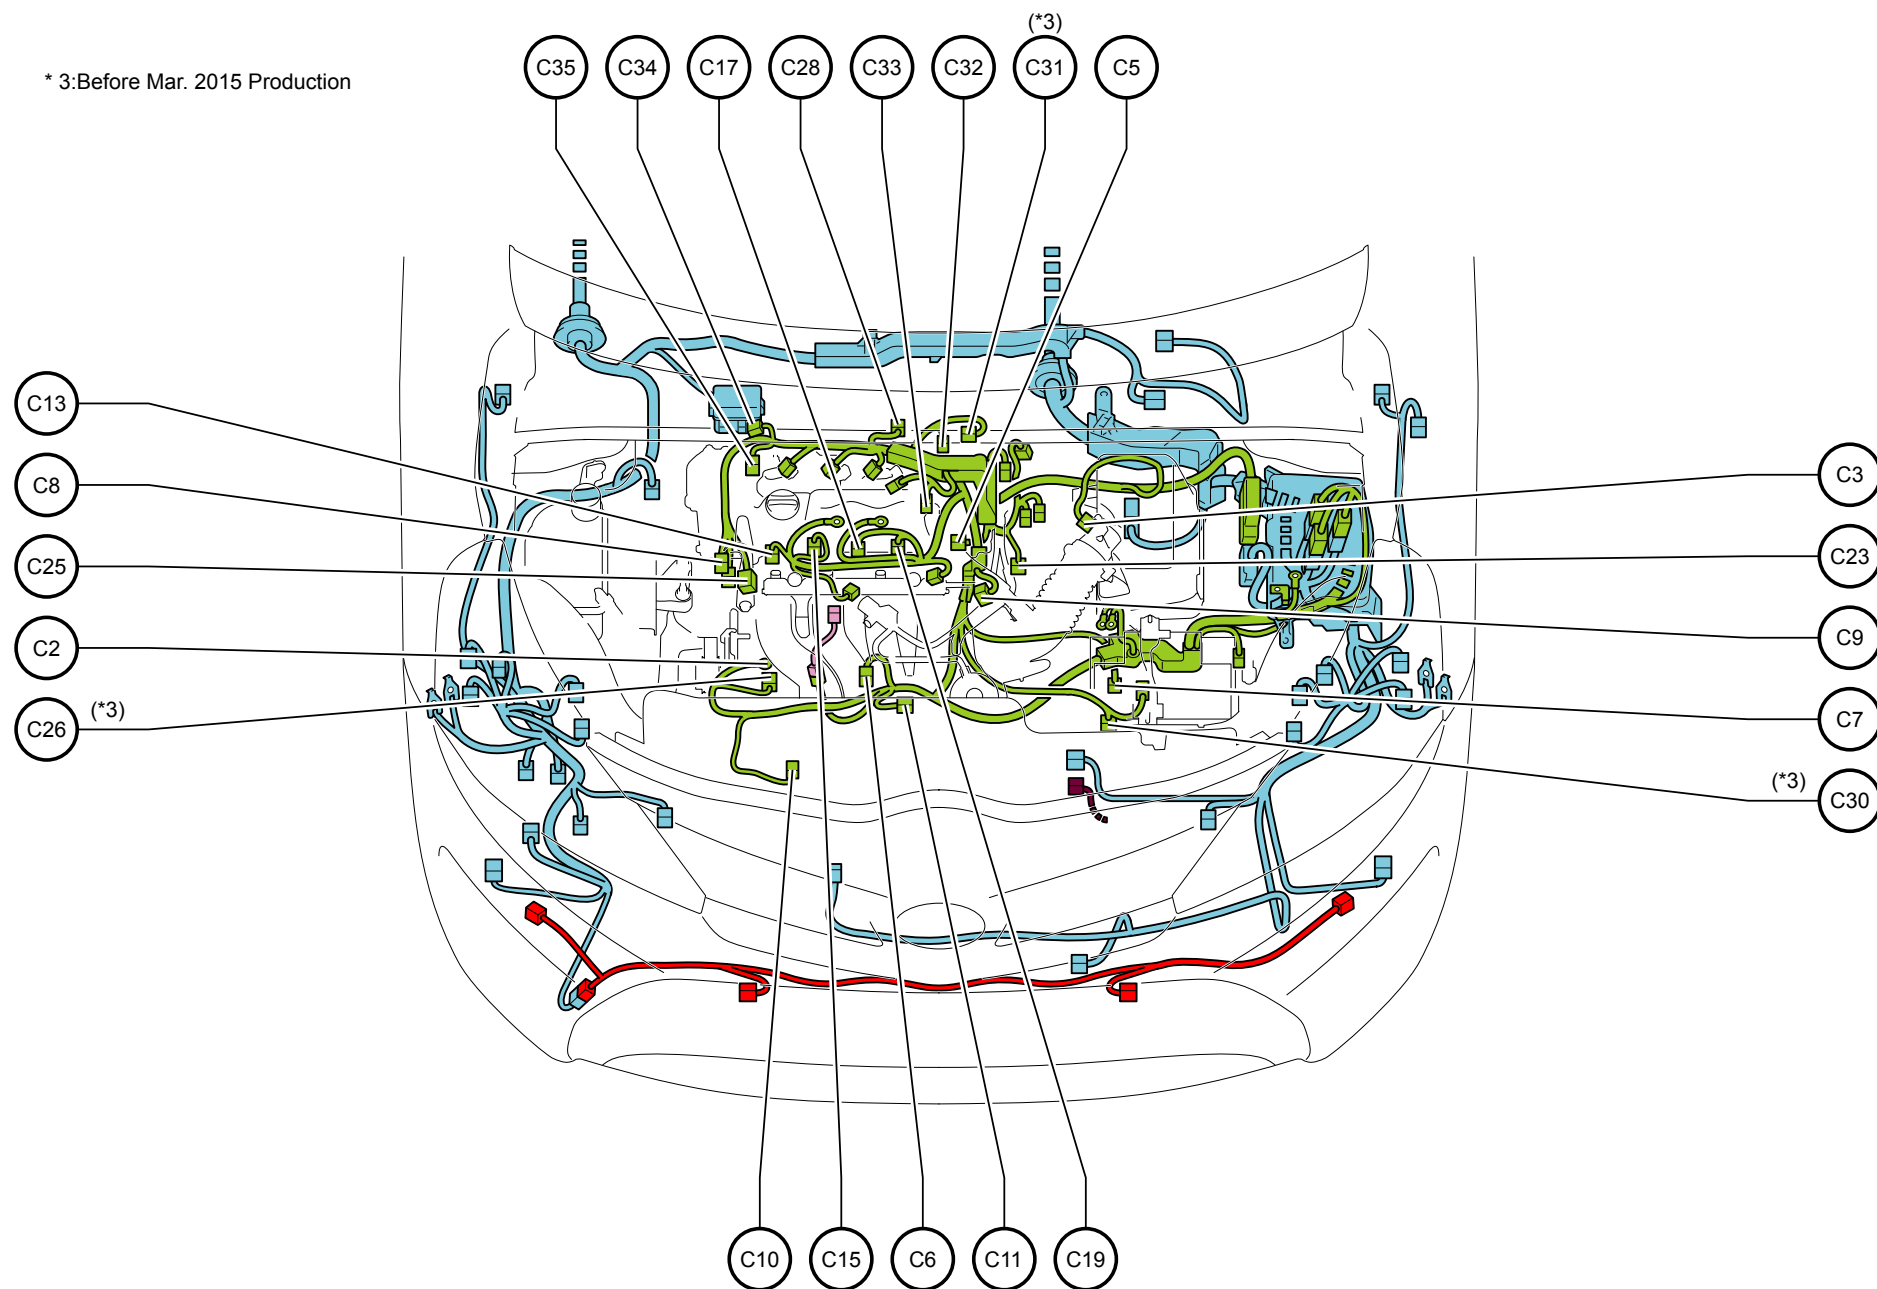

- C 2 Generator Assembly
- C 3 Mass Air Flow Meter
- C 5 E.F.I. Engine Coolant Temperature Sensor
- C 6 Starter Assembly
- C 7 Back-Up Light Switch Assembly
- C 8 Engine Oil Pressure Switch Assembly
- C 9 Throttle Body Assembly
- C 10 Cooler Compressor Assembly
- C 11 Starter Assembly
- C 13 Fuel Injector Assembly No. 1
- C 15 Fuel Injector Assembly No. 2
- C 17 Fuel Injector Assembly No. 3
- C 19 Fuel Injector Assembly No. 4
- C 23 Park/Neutral Position Switch
- C 25 Crank Position Sensor
- C 26 Generator Assembly
- C 28 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Purge VSV
- C 32 VVT Sensor (Exhaust Side)
- C 33 VVT Sensor (Intake Side)
- C 34 Camshaft Timing Oil Control Valve (Exhaust Side)
- C 35 Camshaft Timing Oil Control Valve (Intake Side)

