


Position of Parts in Engine Compartment <LHD 1ZR-FAE, 2ZR-FAE From Nov. 2012 Production>



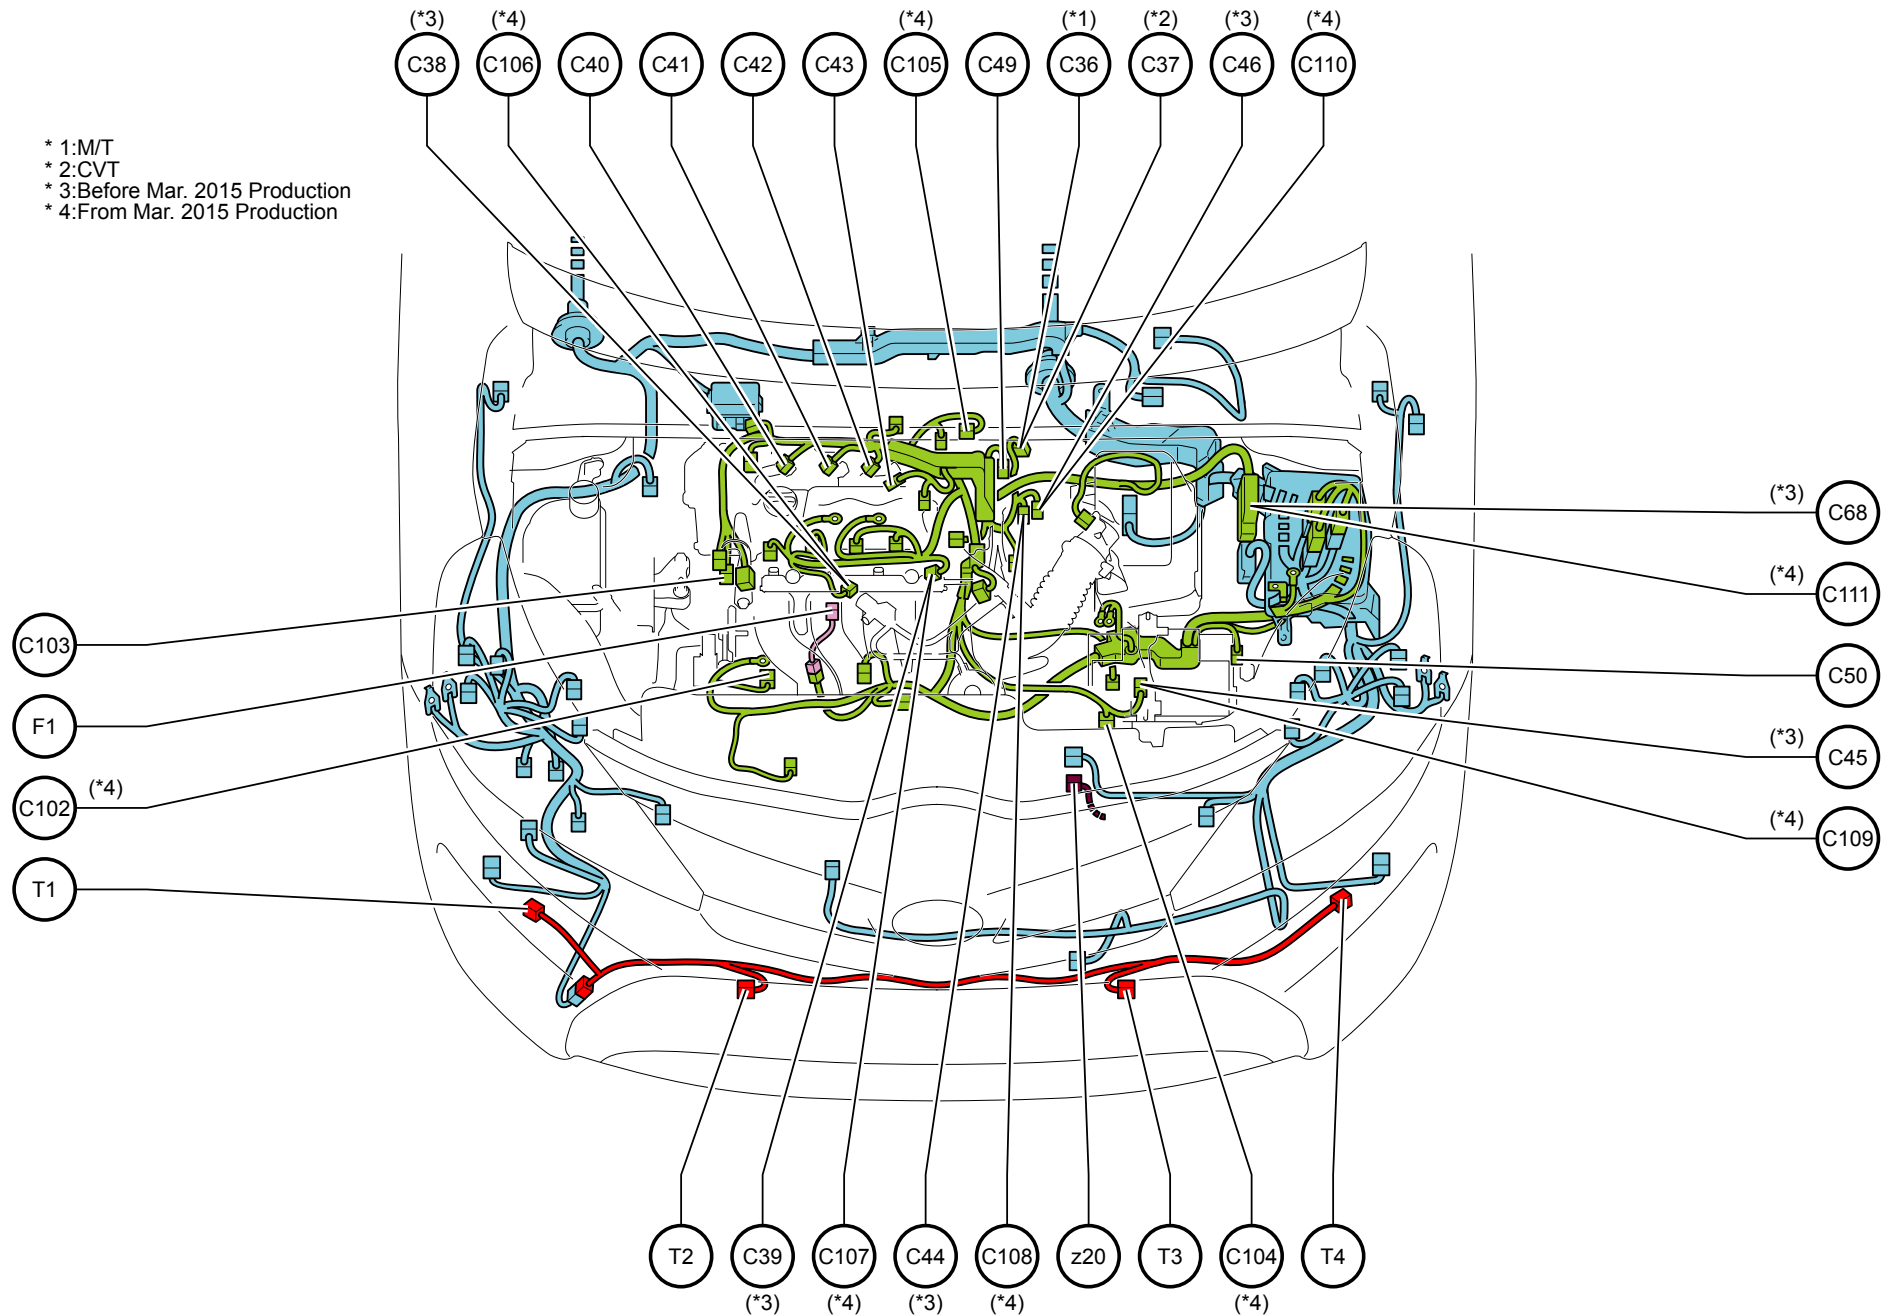


- C 36 Oxygen Sensor (Bank 1 Sensor 2)
- C 37 Oxygen Sensor (Bank 1 Sensor 2)
- C 38 VSV (ACIS)
- C 39 E.F.I. Vacuum Sensor Assembly
- C 40 Ignition Coil Assembly No. 1
- C 41 Ignition Coil Assembly No. 2
- C 42 Ignition Coil Assembly No. 3
- C 43 Ignition Coil Assembly No. 4
- C 44 Oil Pressure Sensor
- C 45 Transmission Revolution Sensor (NIN)
- C 46 Transmission Revolution Sensor (NOUT)
- C 49 Valve Lift Control Driver
- C 50 Battery Current Sensor Assembly
- C 68 ECM
- C 102 Generator Assembly
- C 103 Engine Oil Temperature Sensor
- C 104 Electronically Controlled Transmission Solenoid
- C 105 Purge VSV
- C 106 VSV (ACIS)
- C 107 E.F.I. Vacuum Sensor Assembly
- C 108 Oil Pressure Sensor
- C 109 Transmission Revolution Sensor (NIN)
- C 110 Transmission Revolution Sensor (NOUT)
- C 111 ECM

- F 1 Knock Control Sensor (Bank 1)

- T 1 Front No. 1 Ultrasonic Sensor RH
- T 2 Front No. 1 Ultrasonic Sensor Center RH
- T 3 Front No. 1 Ultrasonic Sensor Center LH
- T 4 Front No. 1 Ultrasonic Sensor LH

- z 20 Cooling Fan ECU , Cooling Fan Motor

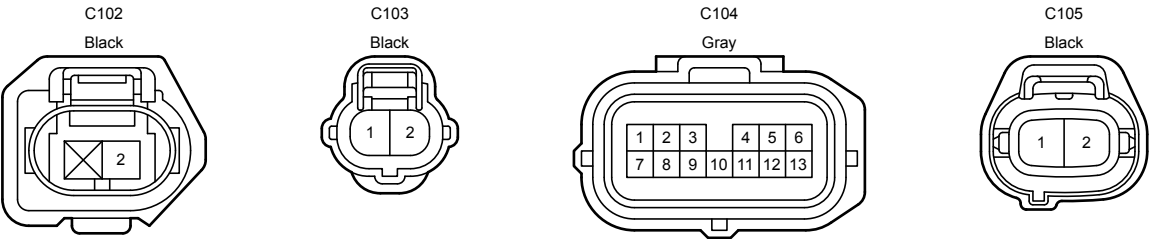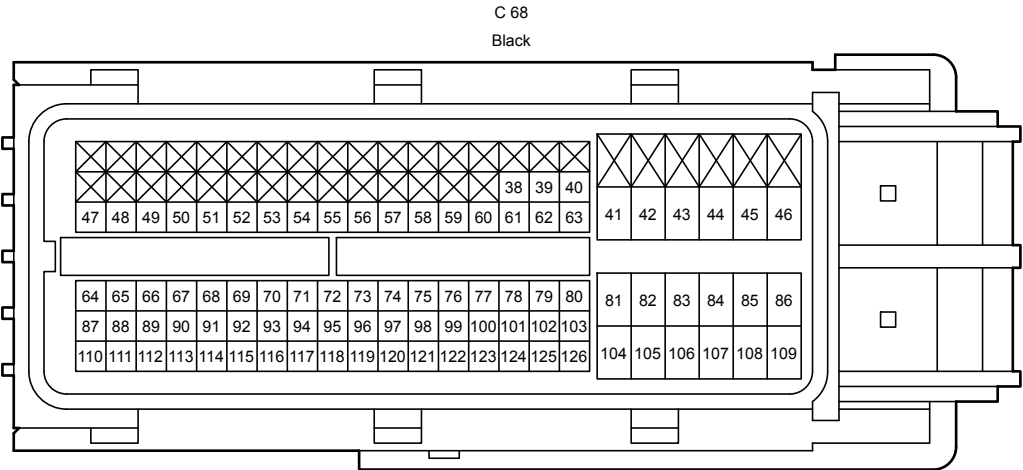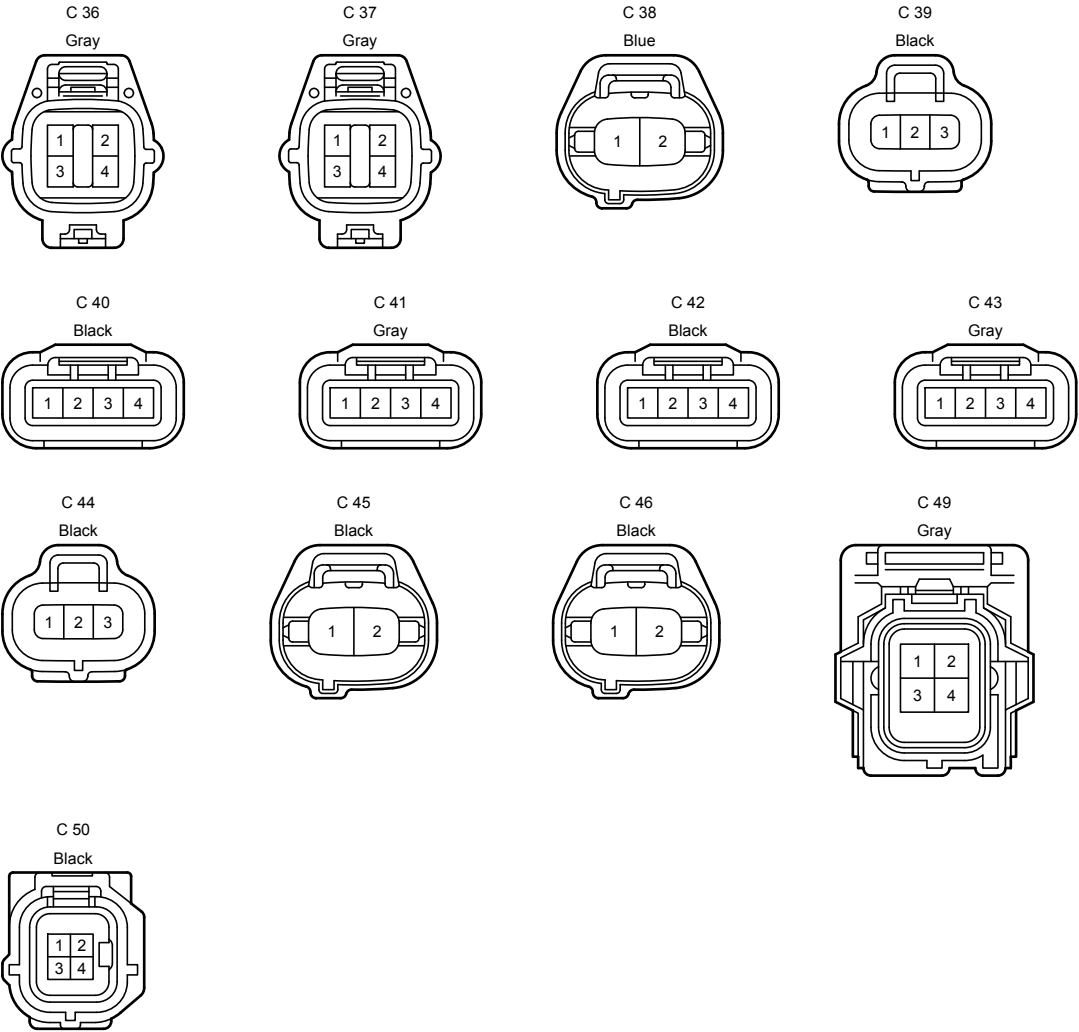

Position of Parts in Engine Compartment <LHD 1ZR-FAE, 2ZR-FAE From Nov. 2012 Production>

