


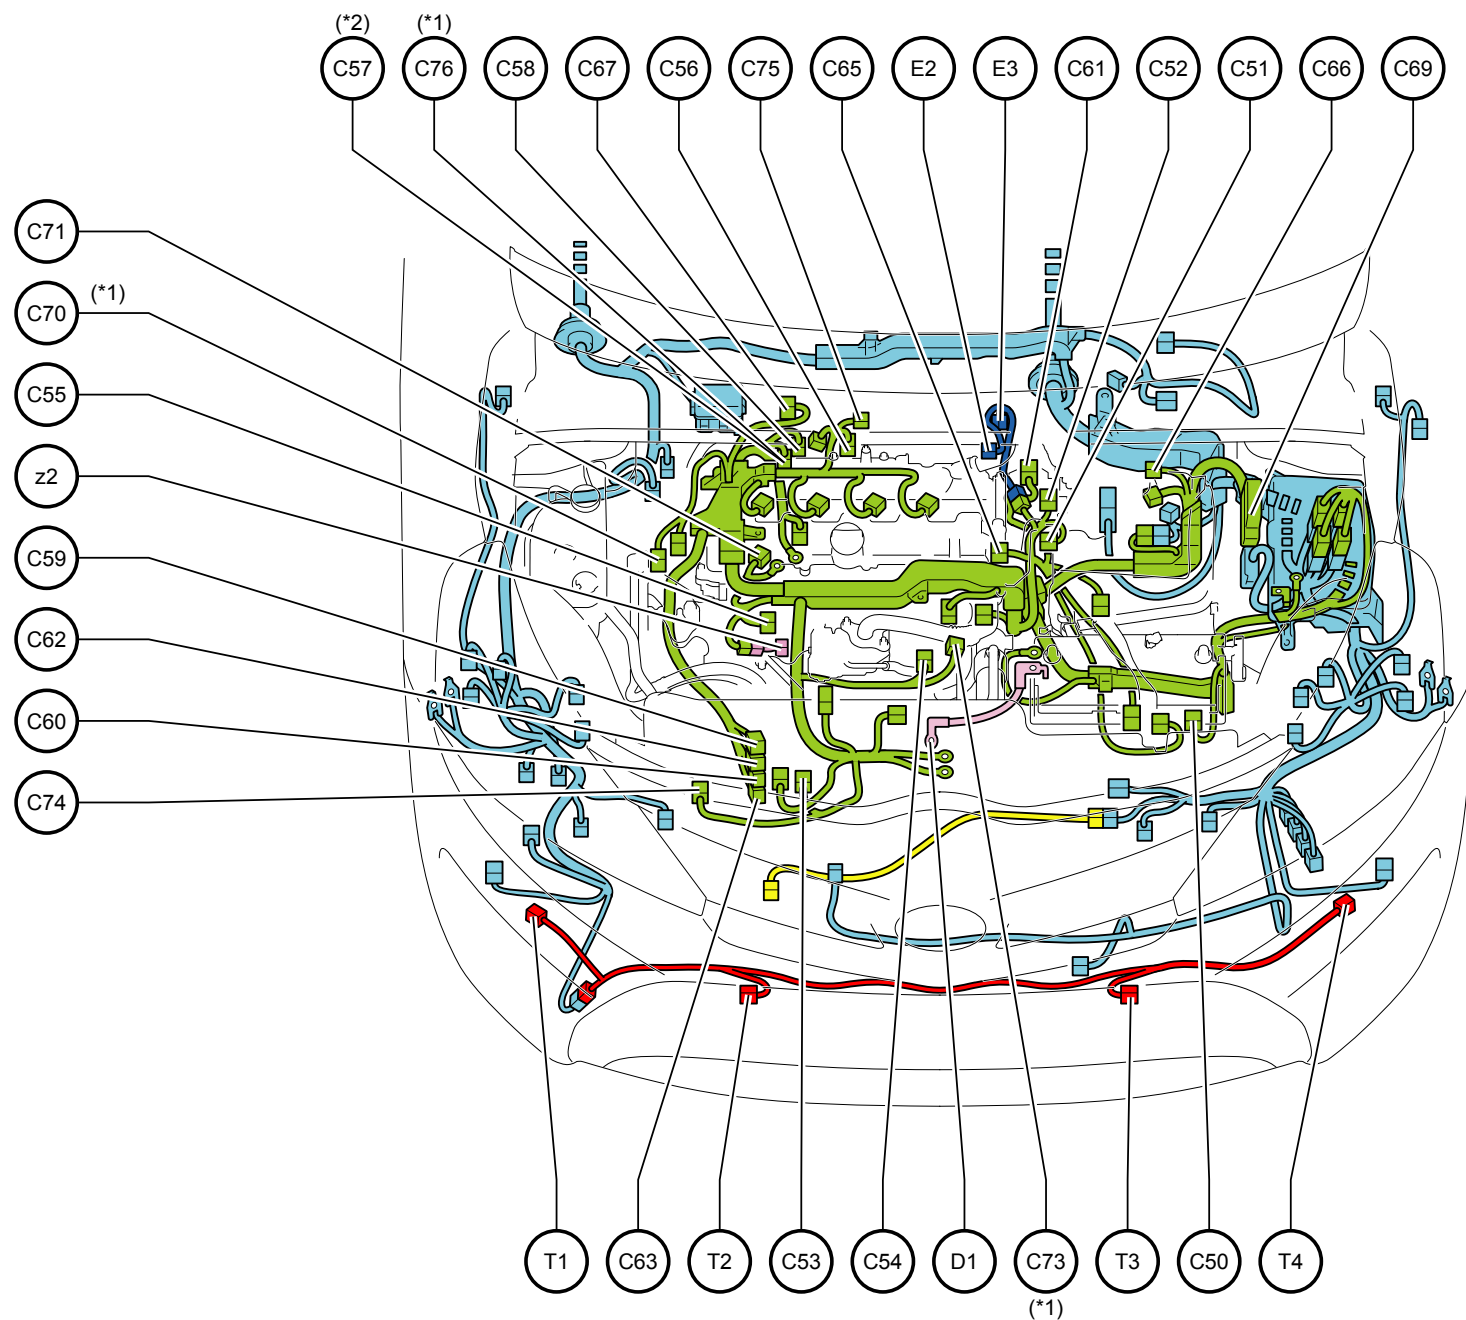

- C 50 Battery Current Sensor Assembly
- C 51 Fuel Temperature Sensor
- C 52 Suction Control Valve
- C 53 Engine Oil Level Sensor
- C 54 Turbo Pressure Sensor
- C 55 Fuel Pressure Sensor
- C 56 VRV (EGR)
- C 57 No. 2 Exhaust Gas Temperature Sensor
- C 58 Exhaust Gas Temperature Sensor
- C 59 Injector Driver
- C 60 Injector Driver
- C 61 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 62 Injector Driver
- C 63 Injector Driver
- C 65 Exhaust Fuel Addition Injector Assembly
- C 66 Fuel Sedimentary Level Warning Switch
- C 67 Differential Pressure Sensor
- C 69 ECM
- C 70 Cam Position Sensor
- C 71 No. 1 Glow Plug Connector
- C 73 Oil Pressure Sensor (Differential Pressure Sensor Assembly)
- C 74 Oil Switch Valve (No. 1 Vacuum Switching Valve Assembly)
- C 75 No. 3 Exhaust Gas Temperature Sensor
- C 76 No. 2 Exhaust Gas Temperature Sensor

- D 1 Starter Assembly

- E 2 Turbocharger Sub-Assembly
- E 3 Turbocharger Sub-Assembly

- T 1 Front No. 1 Ultrasonic Sensor RH
- T 2 Front No. 1 Ultrasonic Sensor Center RH
- T 3 Front No. 1 Ultrasonic Sensor Center LH
- T 4 Front No. 1 Ultrasonic Sensor LH

- z 2 Electric EGR Control Valve Assembly

