


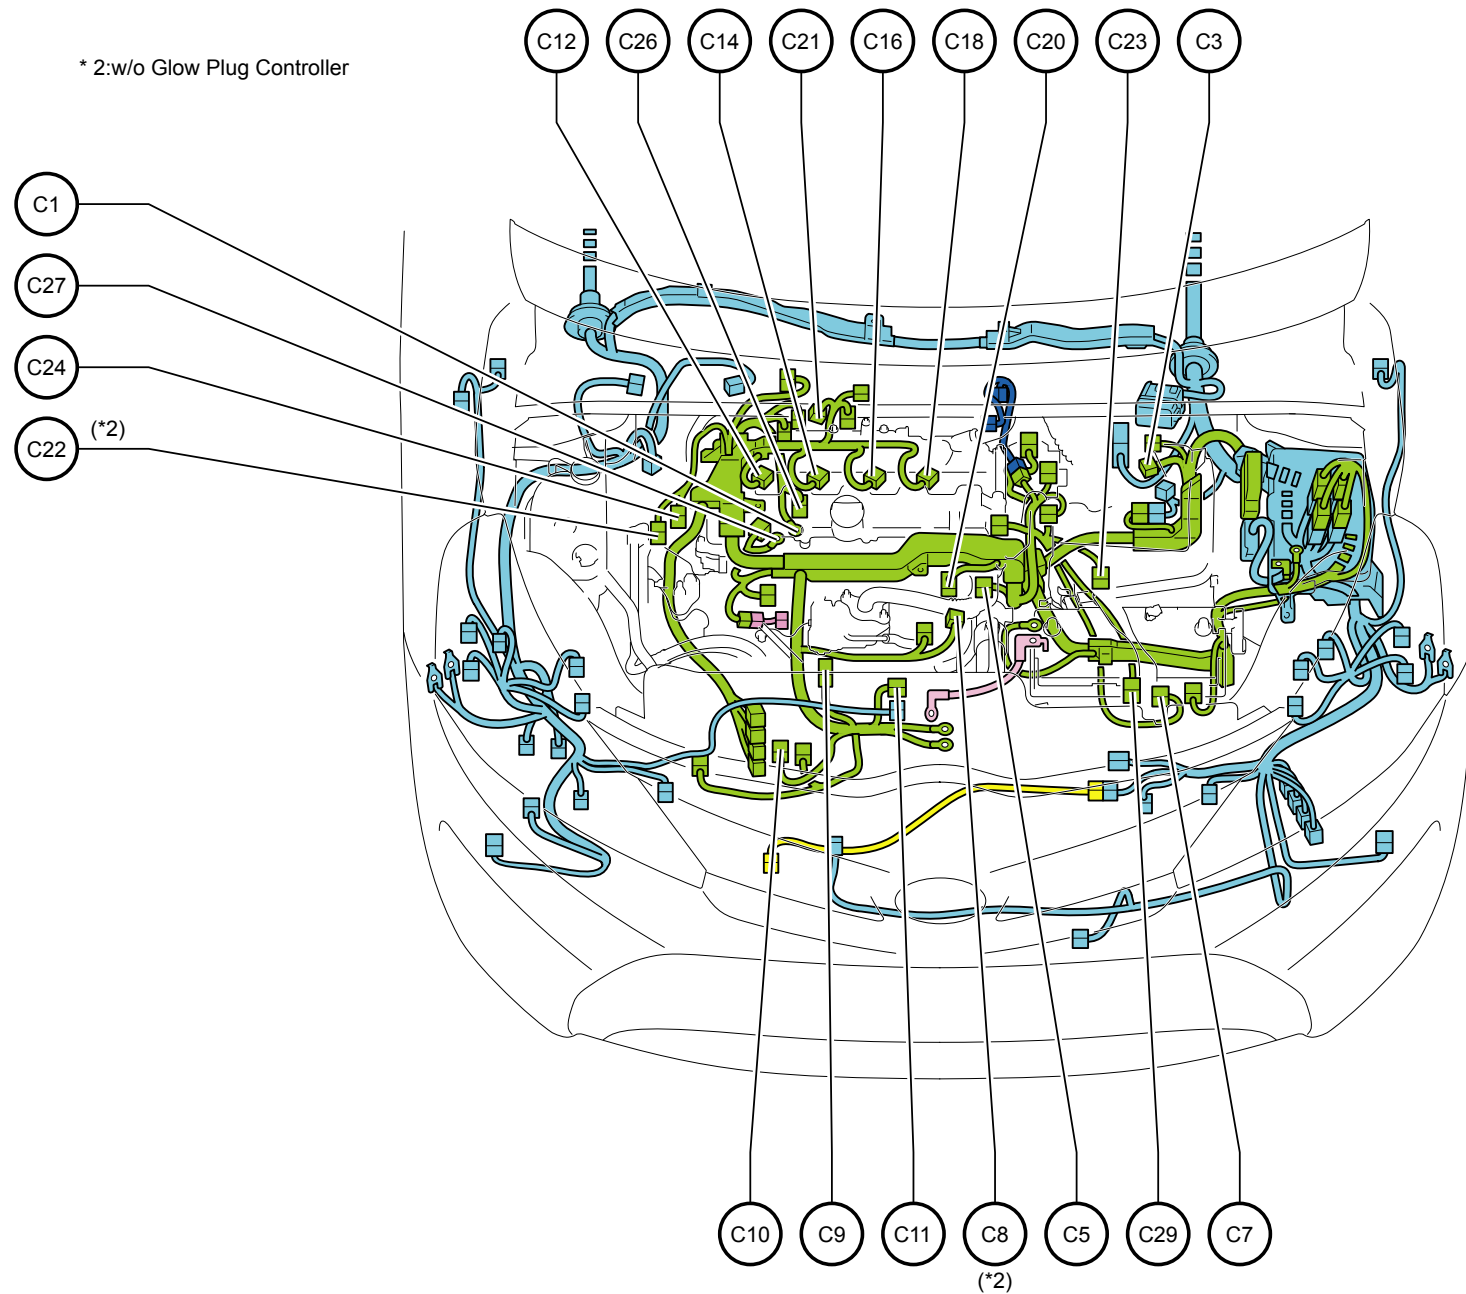

- C 1 Generator Assembly
- C 3 Mass Air Flow Meter
- C 5 E.F.I. Engine Coolant Temperature Sensor
- C 7 Back-Up Light Switch Assembly
- C 8 Engine Oil Pressure Switch Assembly
- C 9 Throttle Body Assembly
- C 10 Cooler Compressor Assembly
- C 11 Starter Assembly
- C 12 Fuel Injector Assembly No. 1
- C 14 Fuel Injector Assembly No. 2
- C 16 Fuel Injector Assembly No. 3
- C 18 Fuel Injector Assembly No. 4
- C 20 Pressure Discharge Valve Assembly
- C 21 VSV (EGR)
- C 22 Cam Position Sensor
- C 23 Park/Neutral Position Switch
- C 24 Crank Position Sensor
- C 26 Generator Assembly
- C 27 Glow Plug Assembly
- C 29 Transmission Control ECU Assembly

