


Position of Parts in Engine Compartment <LHD 1WW>

- * 1: Before Mar. 2015 Production
- * 2: From Mar. 2015 Production
- * 3: Before Nov. 2016 Production
- * 4: From Nov. 2016 Production













 




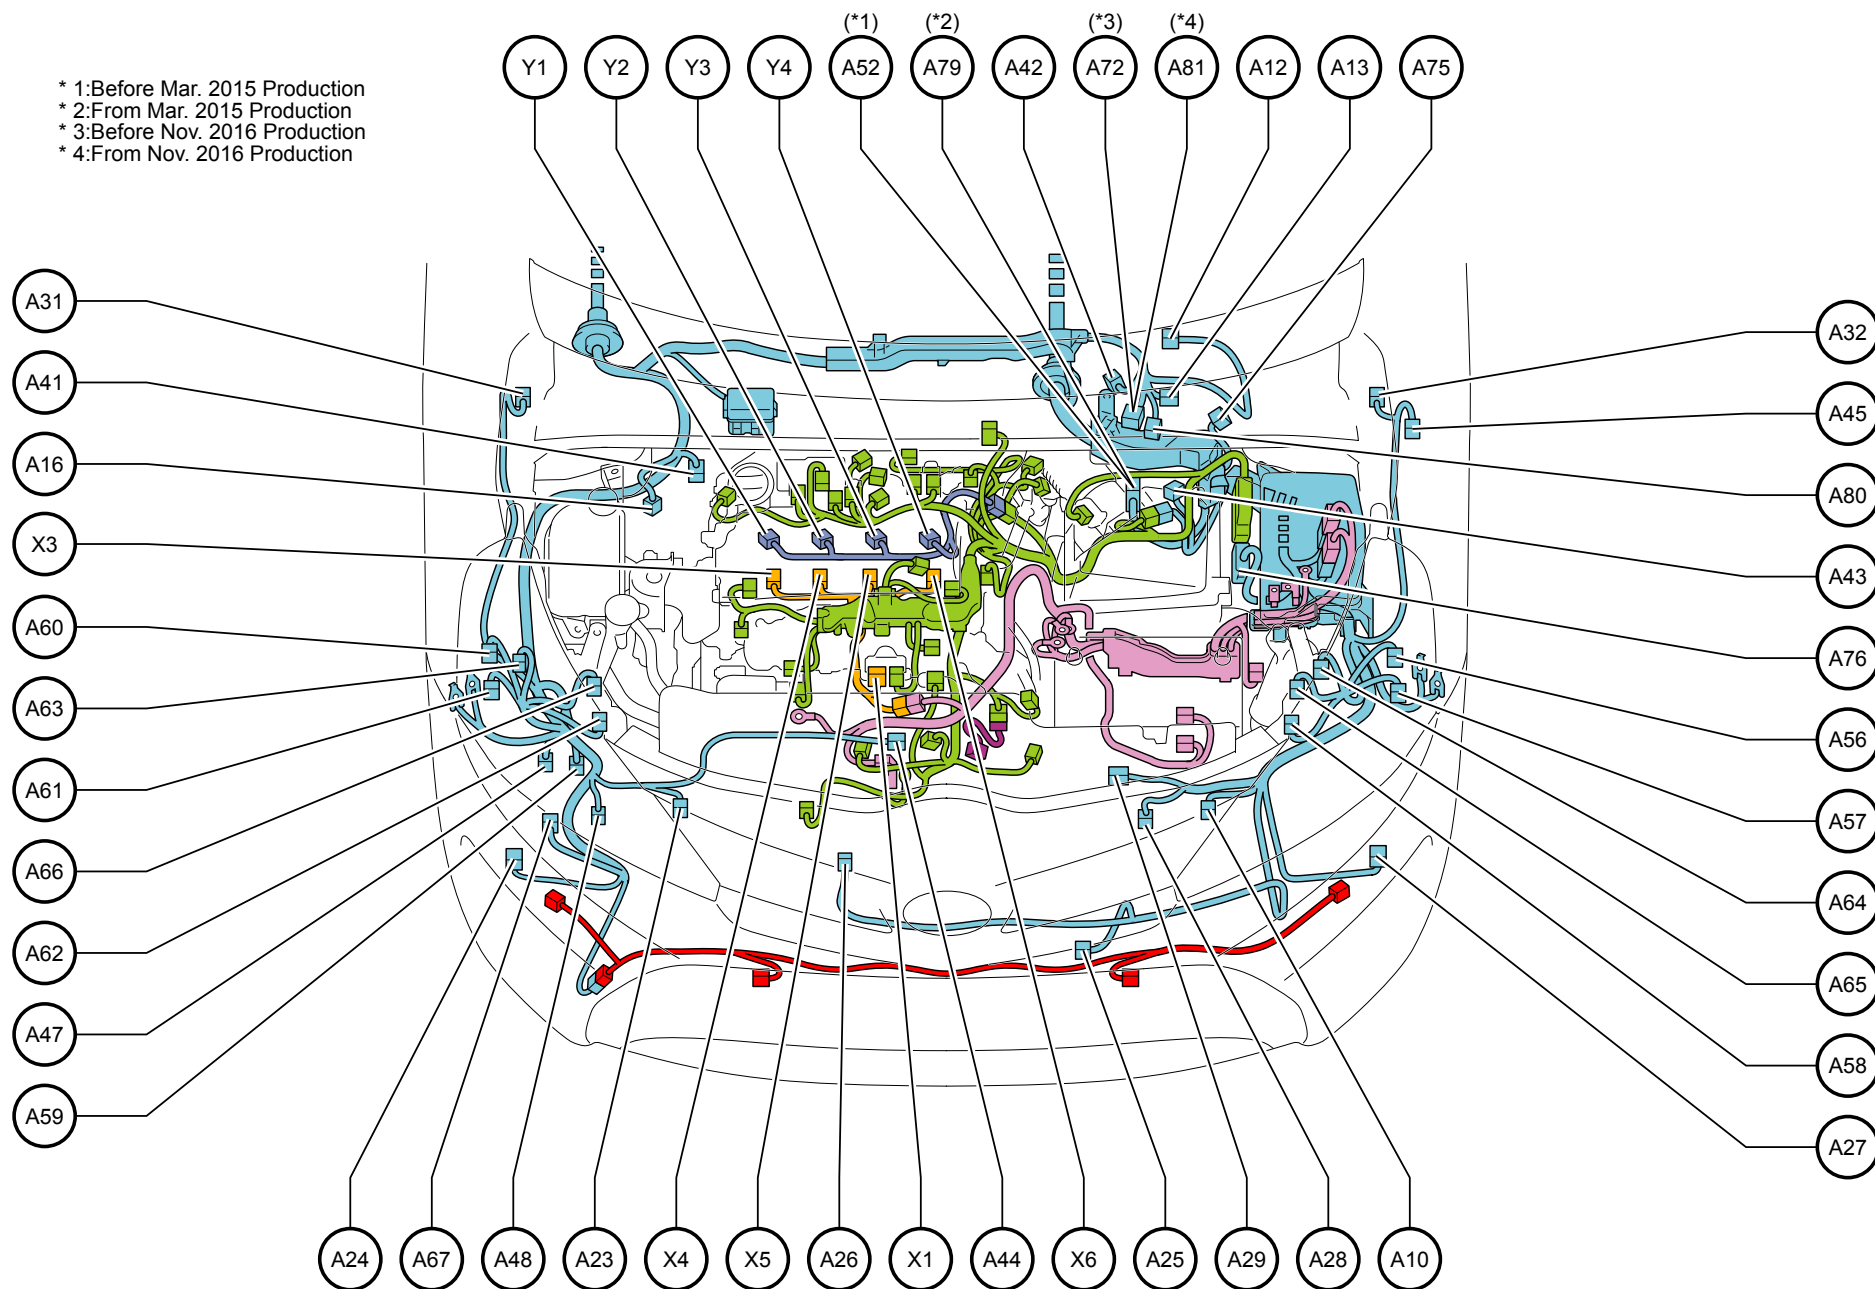


A 10 Front Airbag Sensor LH
A 12 Windshield Wiper Motor Assembly
A 13 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 16 A/C Pressure Sensor
A 23 Front Airbag Sensor RH
A 24 Fog Light Assembly RH
A 25 Ambient Temperature Sensor
A 26 Low Pitched Horn Assembly
A 27 Fog Light Assembly LH
A 28 Cooling Fan Motor
A 29 No. 2 Cooling Fan Motor
A 31 Front Speed Sensor RH
A 32 Front Speed Sensor LH
A 41 Heater Assembly
A 42 Heater Pump Assembly
A 43 Glow Plug Relay Assembly
A 44 Engine Hood Courtesy Switch
A 45 Wireless Door Lock Buzzer
A 47 Rear Washer Motor Assembly
A 48 Headlight Cleaner Motor and Pump Assembly
A 52 Skid Control ECU with Actuator Assembly
A 56 Headlight Unit LH
A 57 Headlight Unit LH
A 58 Headlight Unit LH
A 59 Windshield Washer Motor and Pump Assembly
A 60 Headlight Unit RH
A 61 Headlight Unit RH
A 62 Headlight Unit RH
A 63 Headlight Unit RH
A 64 Headlight Unit LH
A 65 Headlight Unit LH
A 66 Headlight Unit RH
A 67 Headlight Cleaner Control Relay
A 72 Heater Assembly
A 75 Vacuum Sensor Assembly
A 76 ECM
A 79 Skid Control ECU with Actuator Assembly
A 80 Fuel Filter Assembly
A 81 Fuel Filter Assembly
















X 1 Glow Plug Controller
X 3 No. 1 Glow Plug Connector
X 4 No. 2 Glow Plug Connector
X 5 No. 3 Glow Plug Connector
X 6 No. 4 Glow Plug Connector

Y 1 Fuel Injector Assembly No. 1
Y 2 Fuel Injector Assembly No. 2
Y 3 Fuel Injector Assembly No. 3
Y 4 Fuel Injector Assembly No. 4

Position of Parts in Engine Compartment <LHD 1WW>

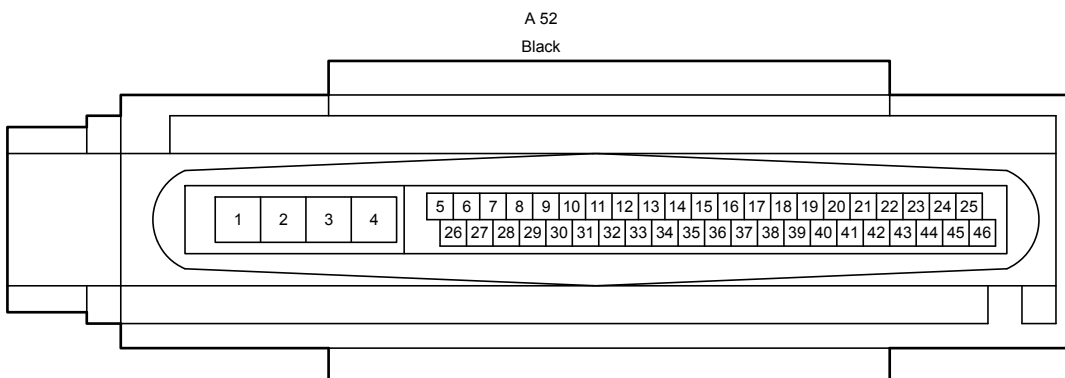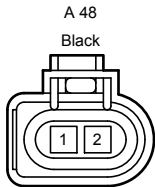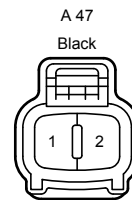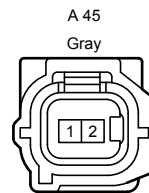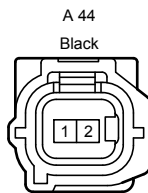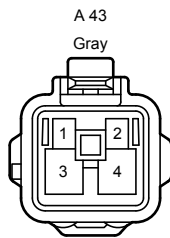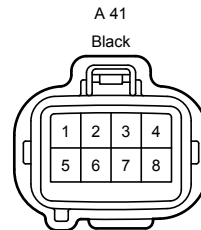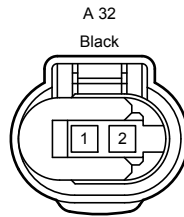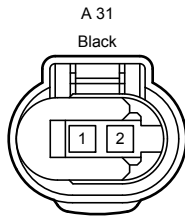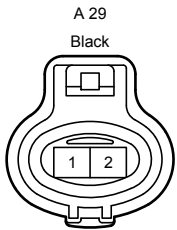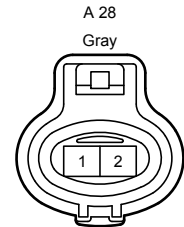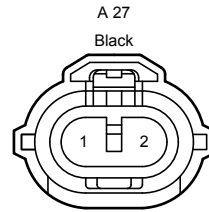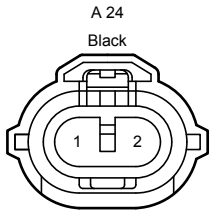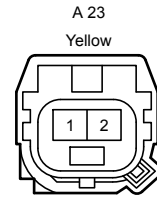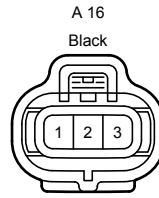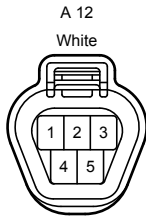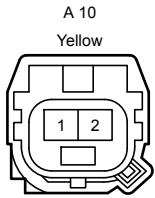

Position of Parts in Engine Compartment <LHD 1WW>

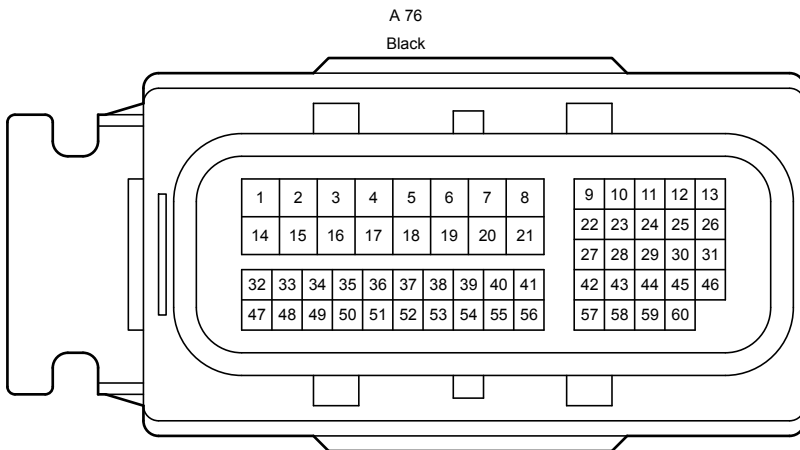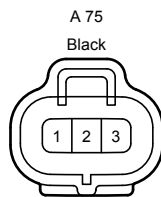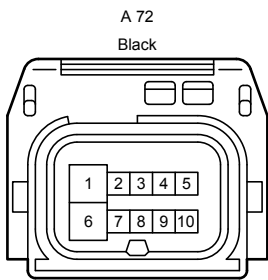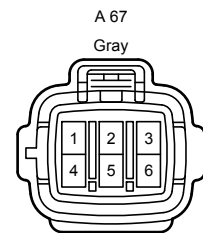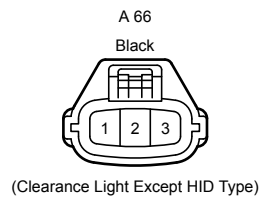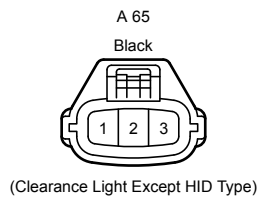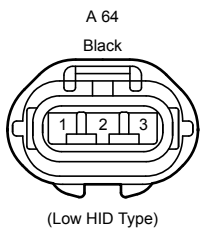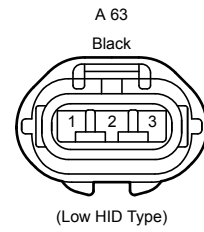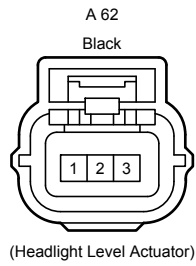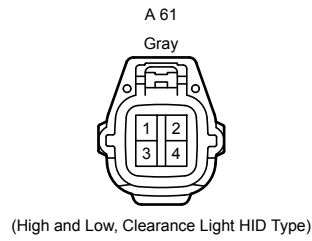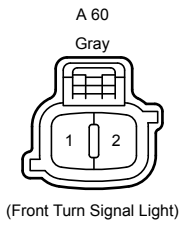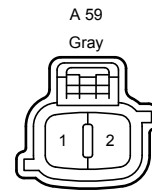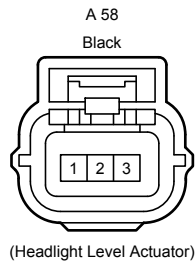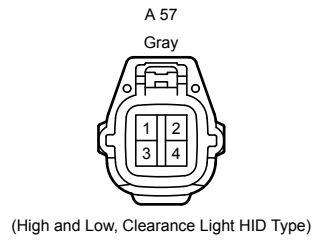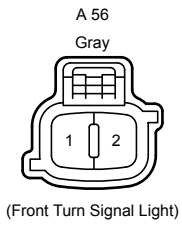

Position of Parts in Engine Compartment <LHD 1WW>

