

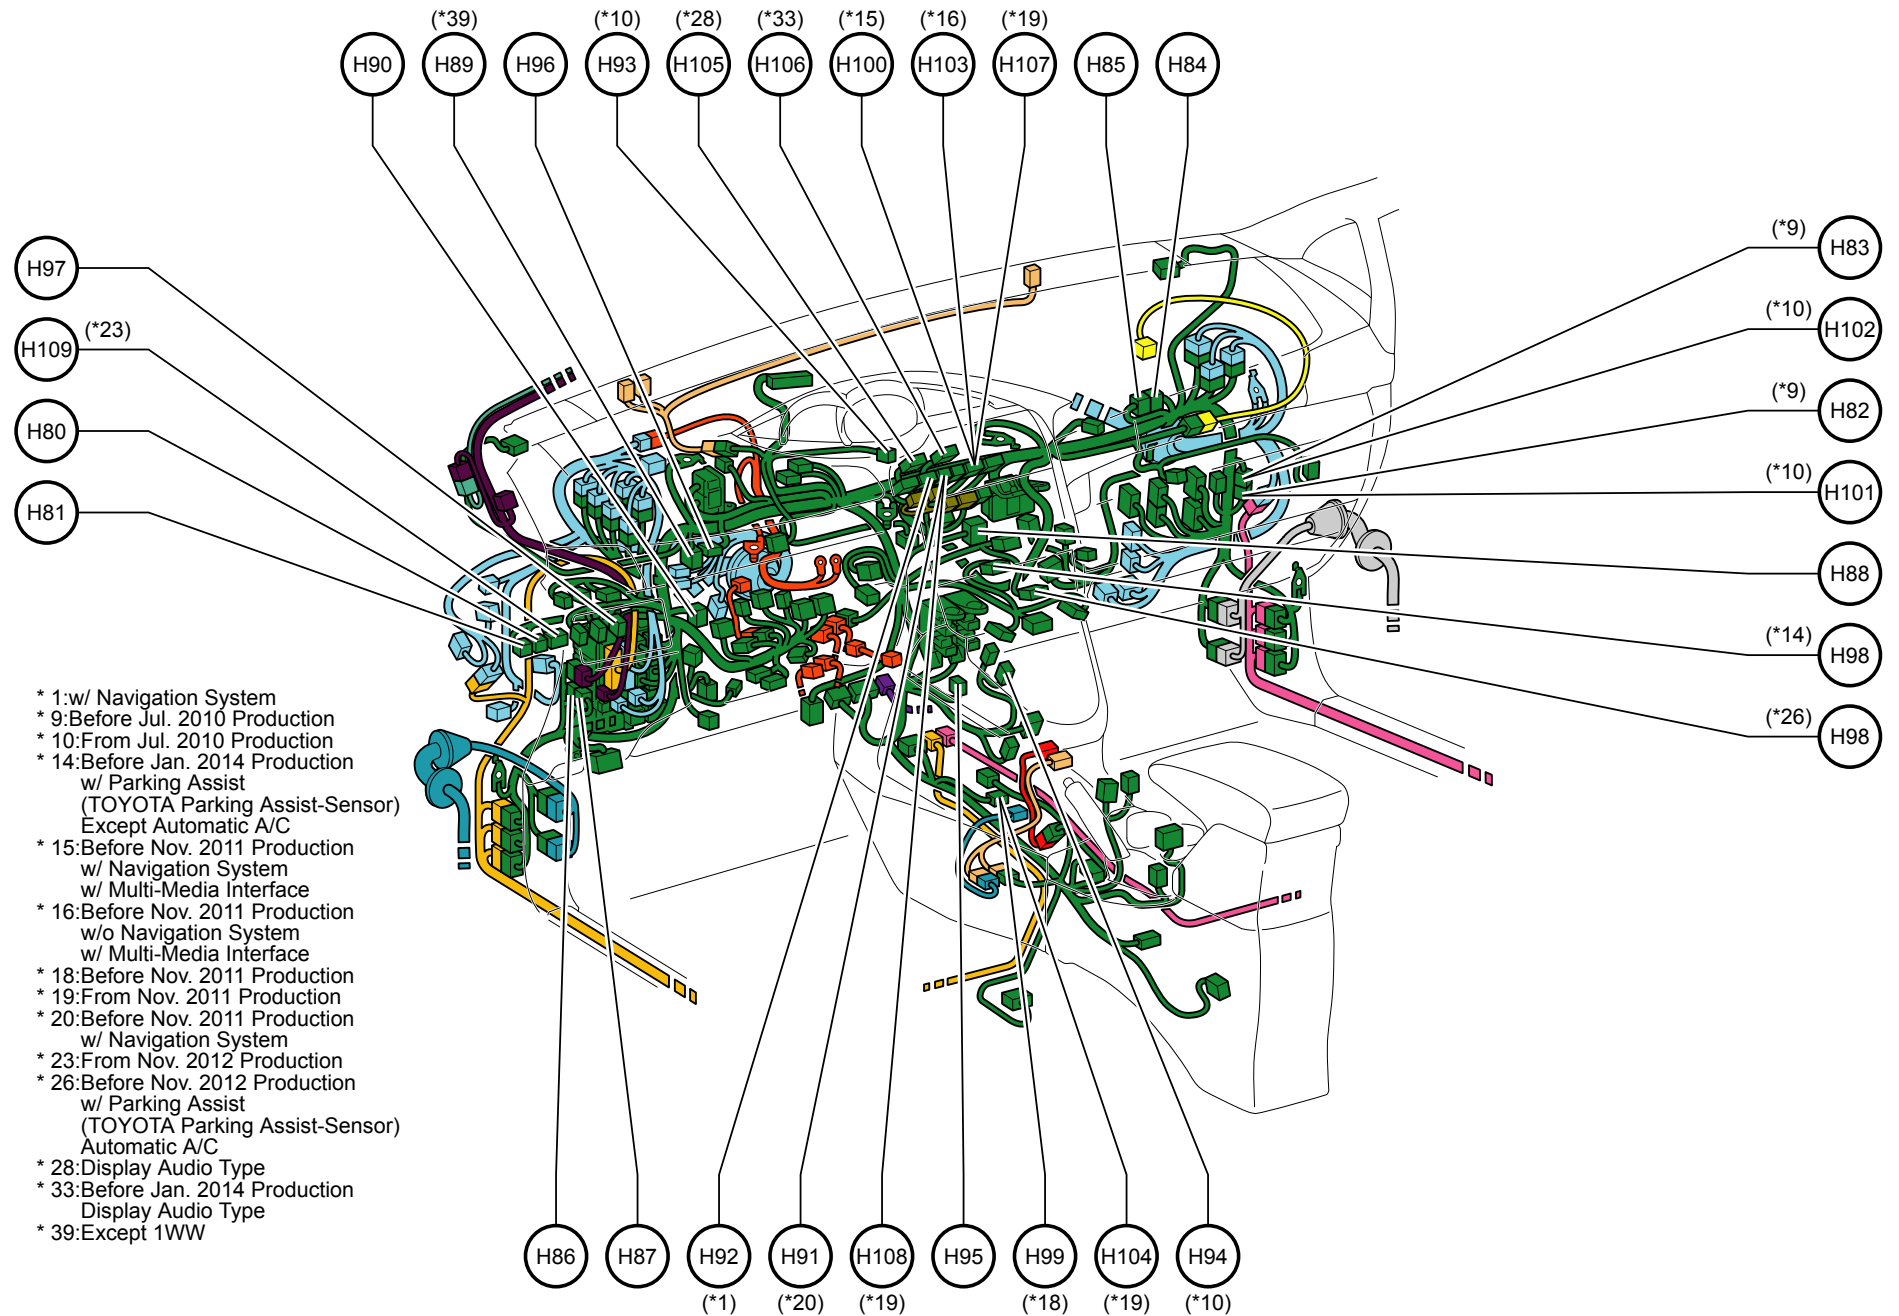
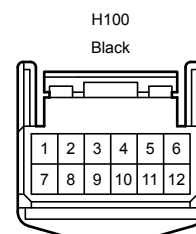
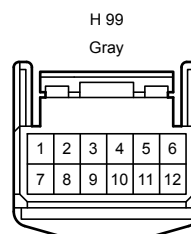
 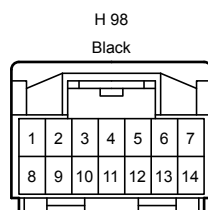
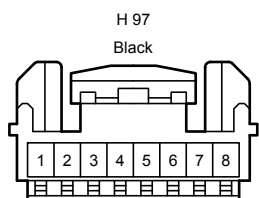

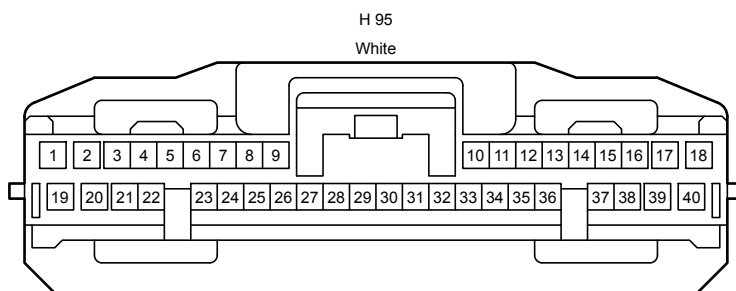
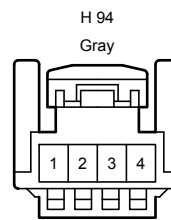
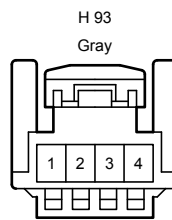
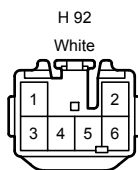
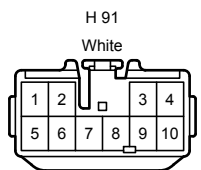
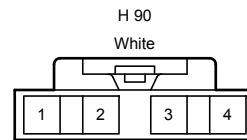
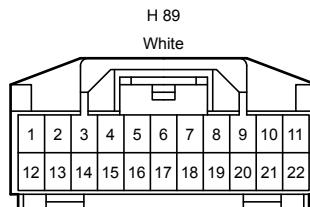
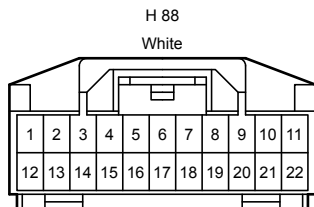
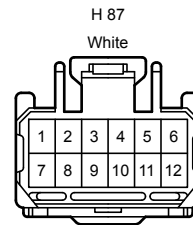
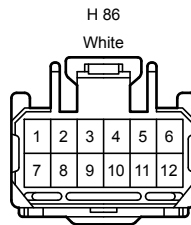
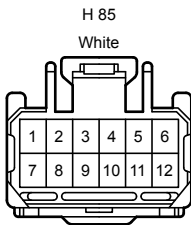
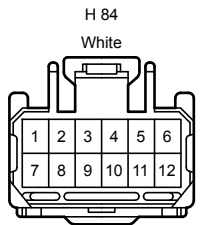
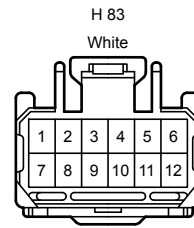
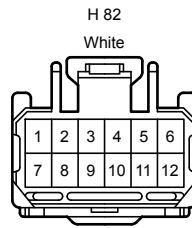


Position of Parts in Instrument Panel <LHD>

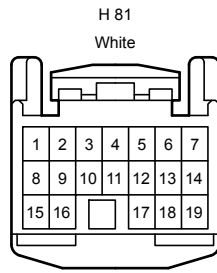

H 80	Main Body ECU
H 81	Main Body ECU
H 82	Junction Connector
H 83	Junction Connector
H 84	Junction Connector
H 85	Junction Connector
H 86	Junction Connector
H 87	Junction Connector
H 88	Junction Connector
H 89	Junction Connector
H 90	Fuse Block Assembly
H 91	Navigation Receiver Assembly
H 92	Navigation Receiver Assembly
H 93	Hazard Warning Signal Switch Assembly
H 94	Pattern Select Switch Assembly
H 95	Clearance Warning ECU Assembly
H 96	No. 1 Clearance Warning Buzzer
H 97	Back Sonar or Clearance Sonar Switch Assembly
H 98	Telltale Light Assembly
H 99	Multi-Media Interface ECU
H 100	Navigation Receiver Assembly
H 101	Junction Connector
H 102	Junction Connector
H 103	Radio Receiver Assembly
H 104	No. 1 Stereo Jack Adapter Assembly
H 105	Radio & Display Receiver Assembly
H 106	Radio & Display Receiver Assembly
H 107	Radio & Display Receiver Assembly
H 108	Radio & Display Receiver Assembly
H 109	Outer Mirror Switch Assembly

Position of Parts in Instrument Panel <LHD>

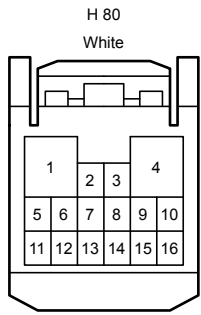

Position of Parts in Instrument Panel <LHD>

