


Position of Parts in Instrument Panel <LHD>

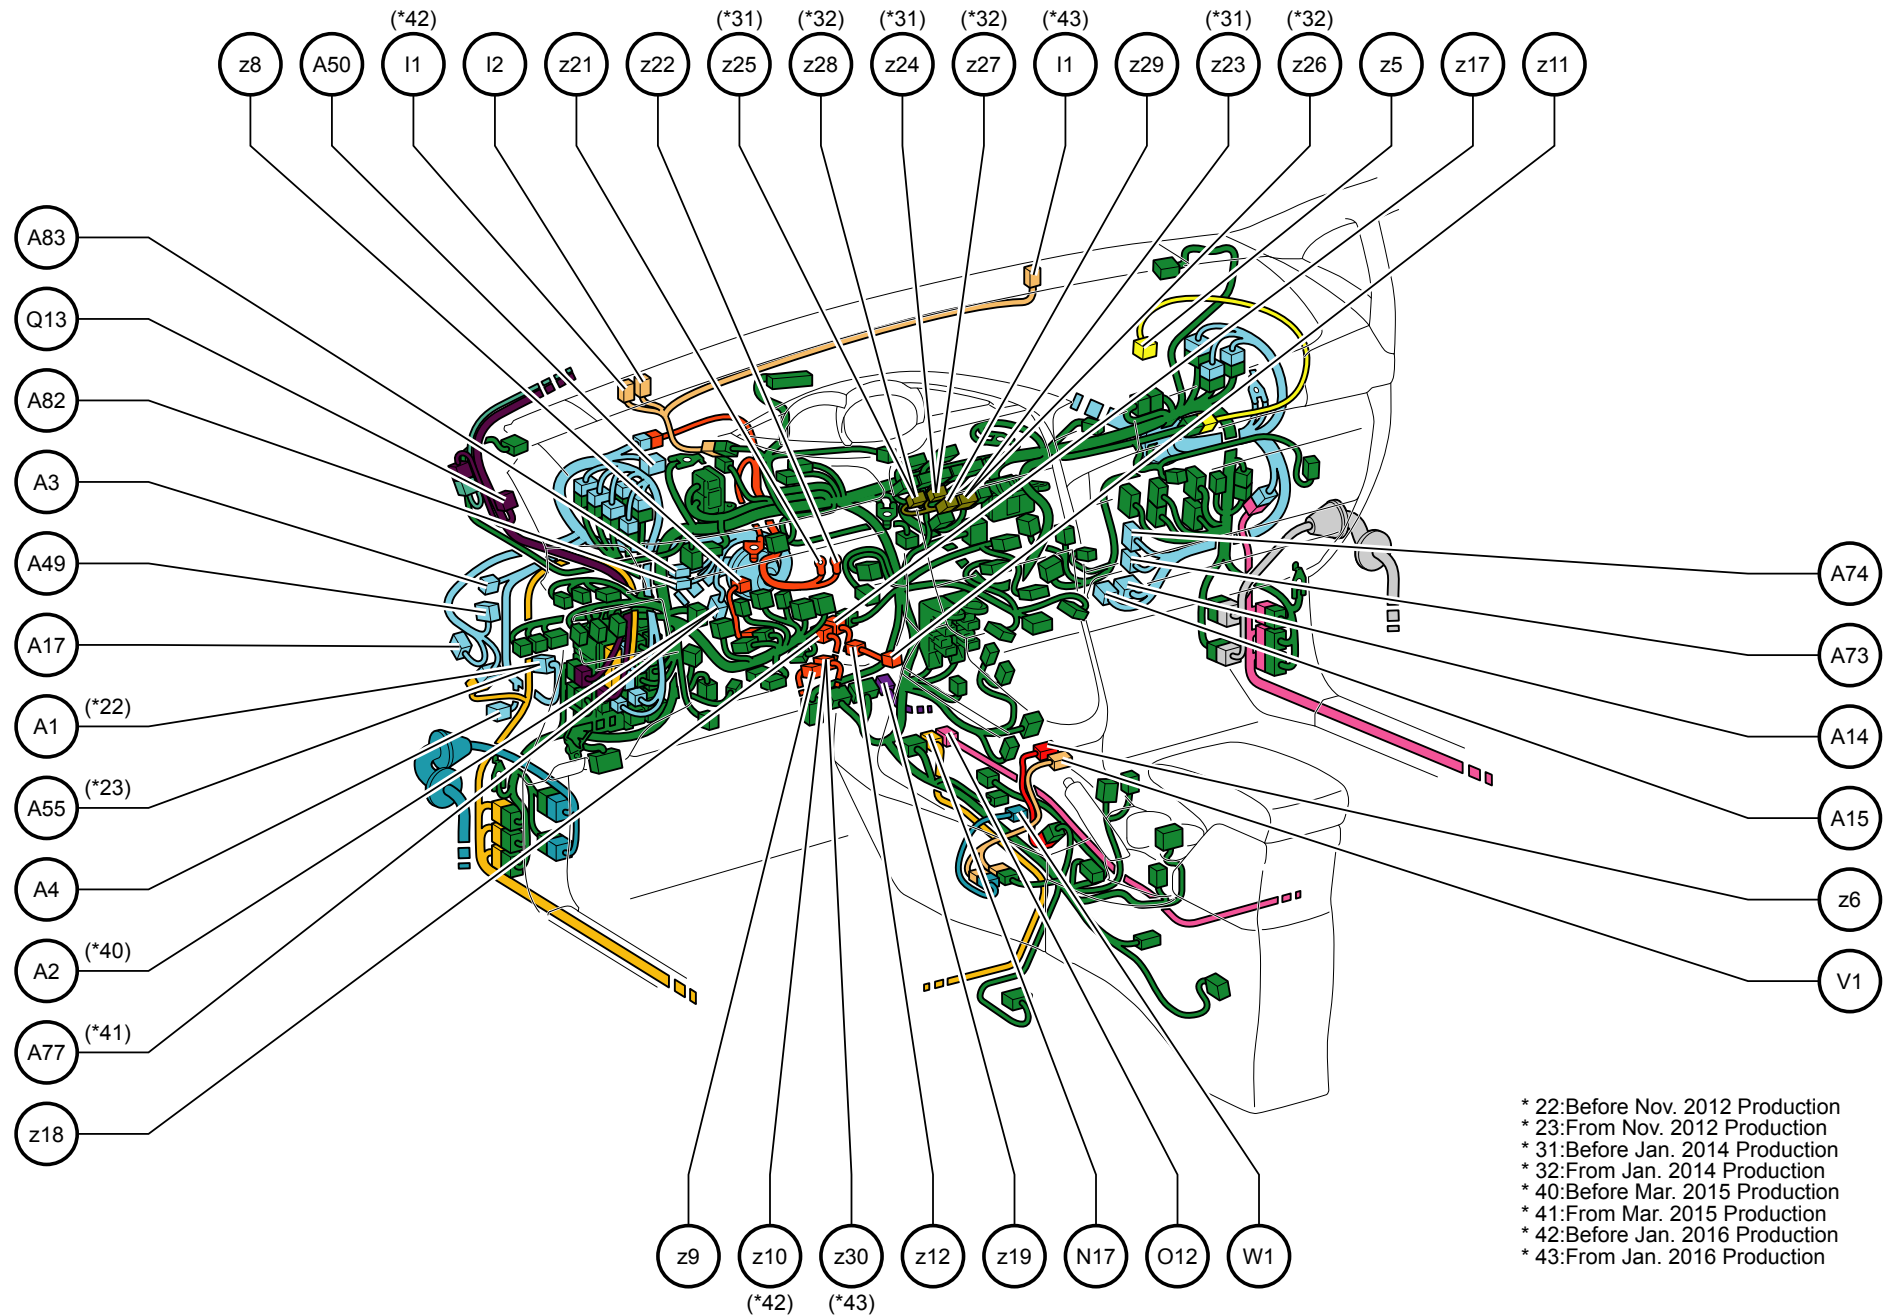

- A 1 Stop Light Switch Assembly
- A 2 Accelerator Pedal Sensor Assembly
- A 3 No. 2 Clutch Start Switch Assembly
- A 4 Clutch Start Switch Assembly
- A 14 Quick Heater Assembly
- A 15 Quick Heater Assembly
- A 17 Stop Light Control Relay
- A 49 Headlight Leveling ECU Assembly
- A 50 Junction Connector
- A 55 Stop Light Switch Assembly
- A 73 Engine Stop and Start ECU
- A 74 Engine Stop and Start ECU
- A 77 Accelerator Pedal Sensor Assembly
- A 82 Diode (No. 1 Pre-Crash Safety City Sensor)
- A 83 Diode (No. 2 Pre-Crash Safety City Sensor)

- I 1 Solar Sensor
- I 2 Automatic Light Control Sensor

- N 17 Center Airbag Sensor Assembly

- O 12 Center Airbag Sensor Assembly


- Q 13 Junction Connector

- V 1 No. 1 Stereo Jack Adapter Assembly

- W 1 Multi-Media Interface ECU

- z 5 Front Passenger Side Squib Circuit
- z 6 No. 1 Stereo Jack Adapter Assembly
- z 8 Key Inter Lock Solenoid
- z 9 Spiral Cable Sub-Assembly , Driver Side Squib Circuit
- z 10 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 11 Spiral Cable Sub-Assembly , Cruise Control Main Switch
- z 12 Spiral Cable Sub-Assembly
- z 17 Power Steering Motor Assembly , Power Steering ECU Assembly
- z 18 Power Steering Torque Sensor , Power Steering ECU Assembly
- z 19 Air Conditioning Amplifier Assembly , A/C Blower Assembly
- z 21 Power Steering ECU Assembly
- z 22 Power Steering ECU Assembly
- z 23 Navigation ECU
- z 24 Radio & Display Receiver Assembly
- z 25 Radio & Display Receiver Assembly
- z 26 Navigation ECU
- z 27 Radio & Display Receiver Assembly
- z 28 Radio & Display Receiver Assembly
- z 29 Navigation ECU
- z 30 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly

Position of Parts in Instrument Panel <LHD>

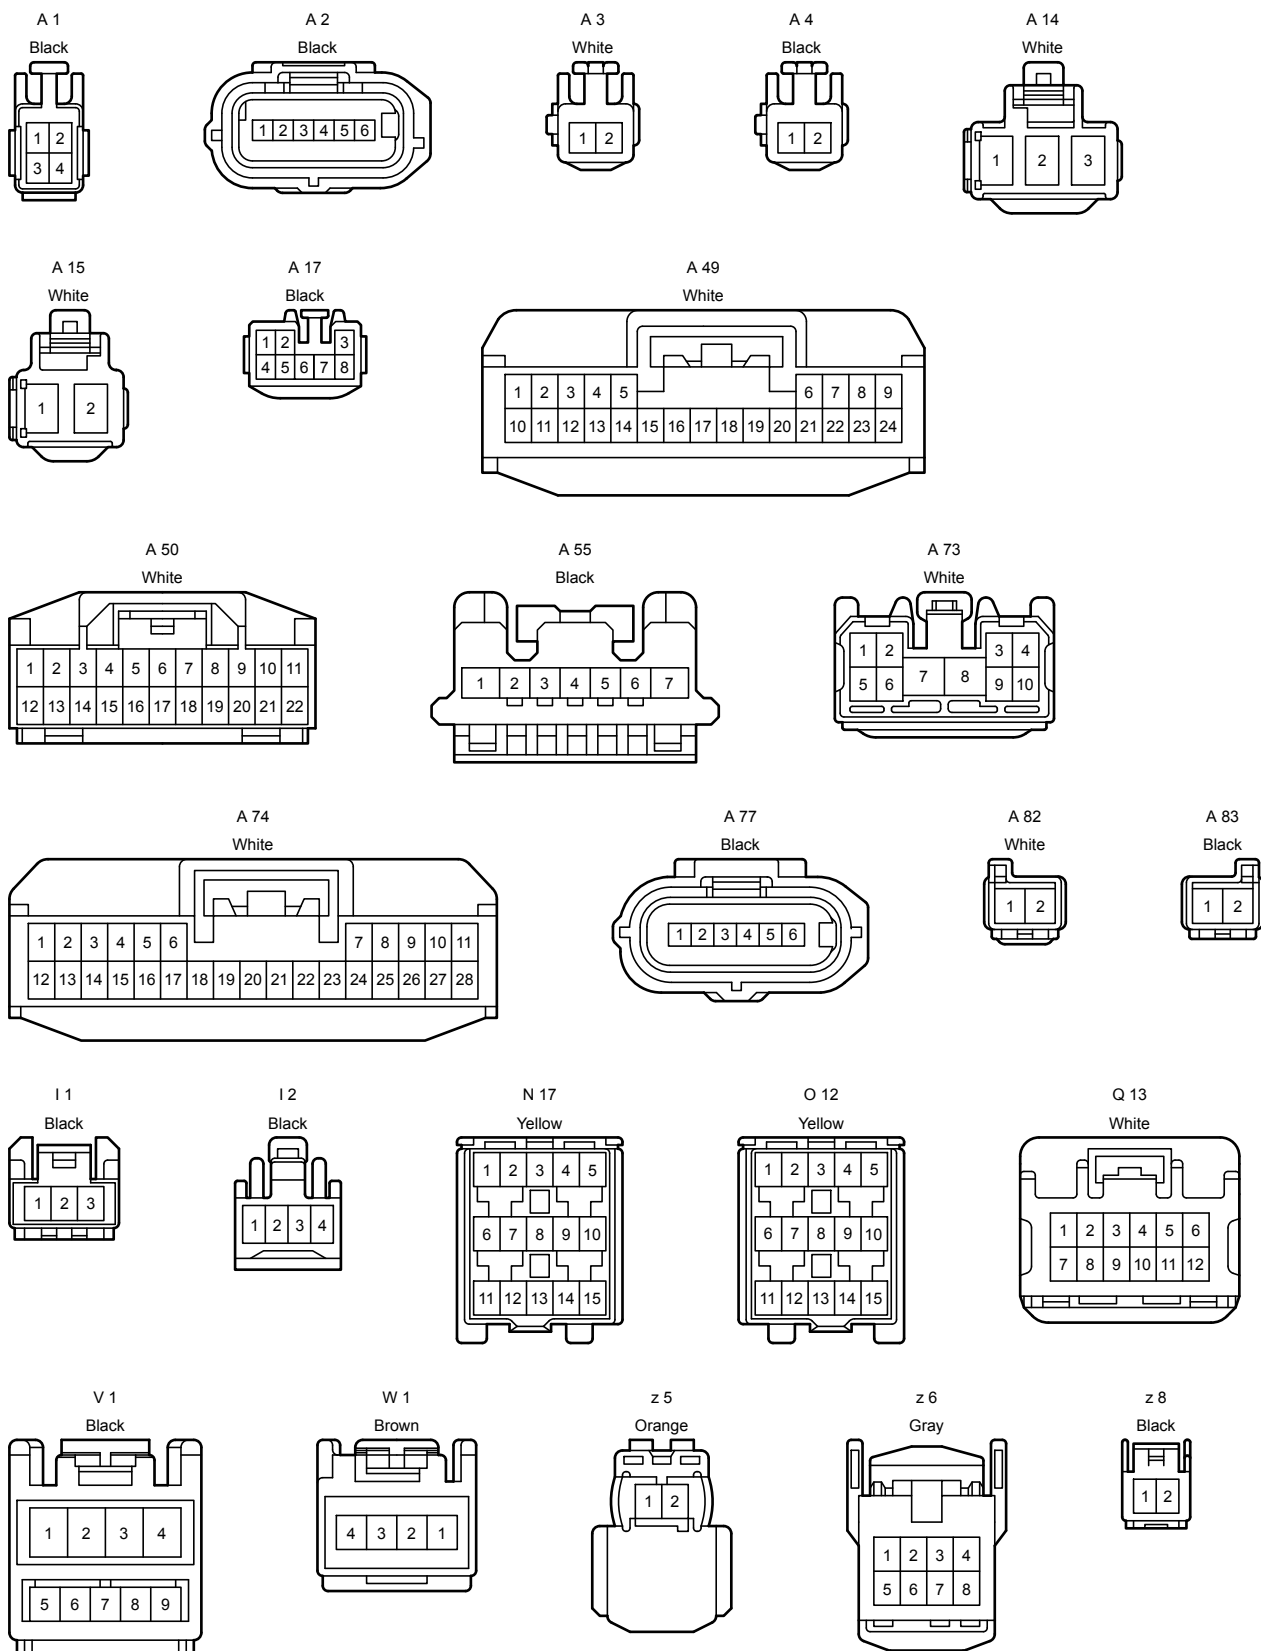

Position of Parts in Instrument Panel <LHD>

