



Position of Parts in Instrument Panel <RHD>

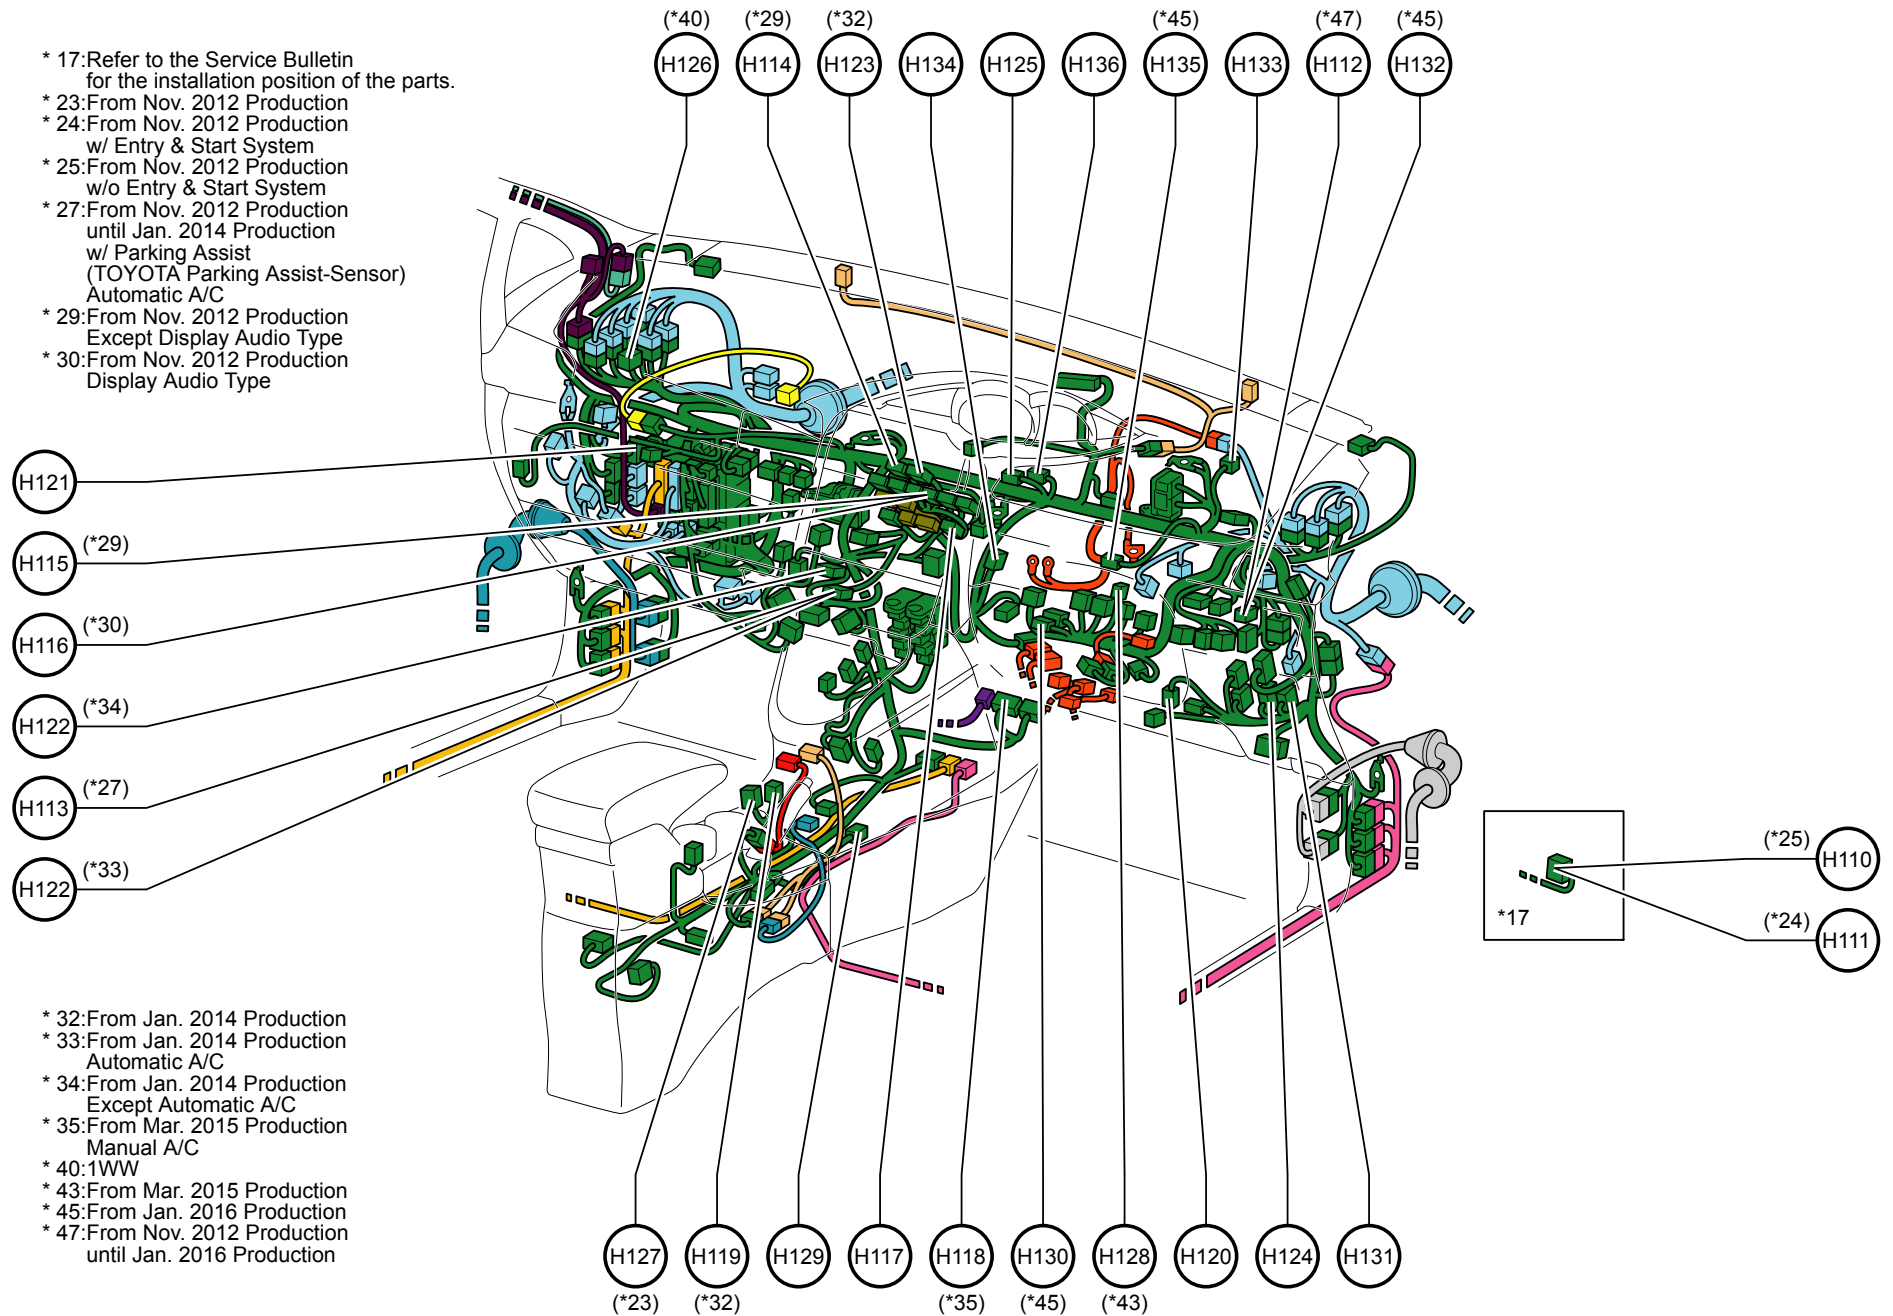


H 110	Transponder Key ECU Assembly
H 111	ID Code Box
H 112	Rheostat Switch (Light Control Rheostat)
H 113	Telltale Light Assembly
H 114	Radio Receiver Assembly
H 115	Radio Receiver Assembly
H 116	Radio & Display Receiver Assembly
H 117	Navigation ECU
H 118	Air Conditioning Amplifier Assembly
H 119	ECO Run Canceling Switch Assembly
H 120	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
H 121	Engine Stop and Start ECU
H 122	Telltale Light Assembly
H 123	Radio & Display Receiver Assembly
H 124	Driving Support ECU Assembly
H 125	Junction Terminal
H 126	Junction Connector
H 127	No. 1 Power Point Socket Assembly
H 128	Steering Sensor
H 129	Door Control Battery
H 130	Spiral Cable Sub-Assembly
H 131	Network Gateway ECU
H 132	Pre-Crash System Cancel Switch Assembly
H 133	Pre-Crash Safety City Buzzer
H 134	Junction Connector
H 135	Double Lock Door Control Relay Assembly
H 136	Junction Connector

Position of Parts in Instrument Panel <RHD>


H110
Black

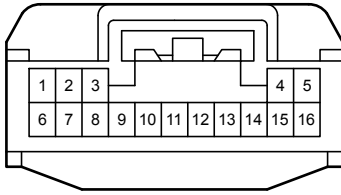


H111
Black

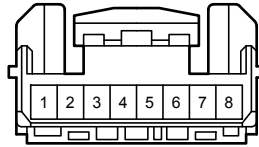


H112
White

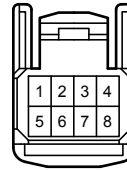


H113
Gray

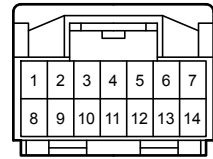


H114
White

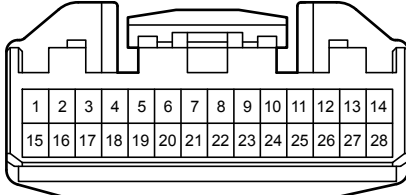


H115
White

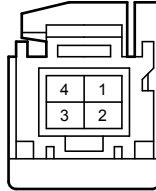


H116
White

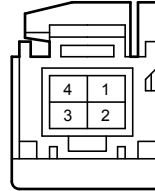


H117
White

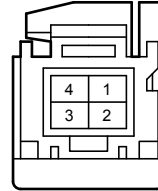


H118
Black

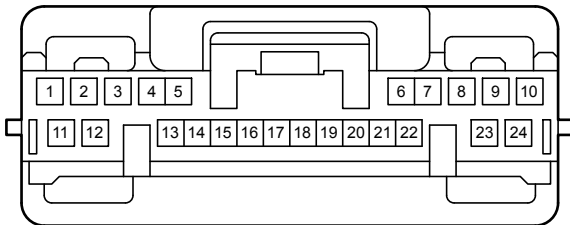


H119
Black

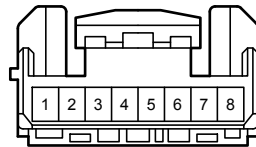


H120
Black

 


H121
Black

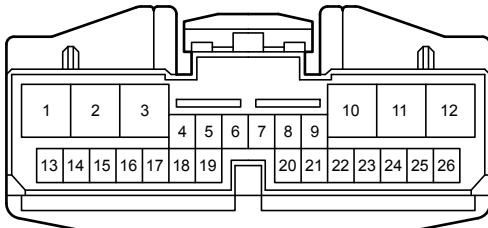


H122
Gray

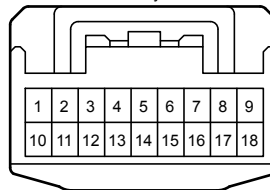


H123
White

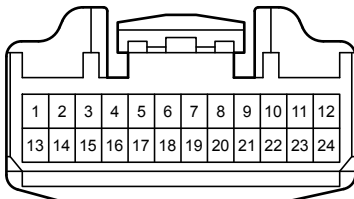


H124
White

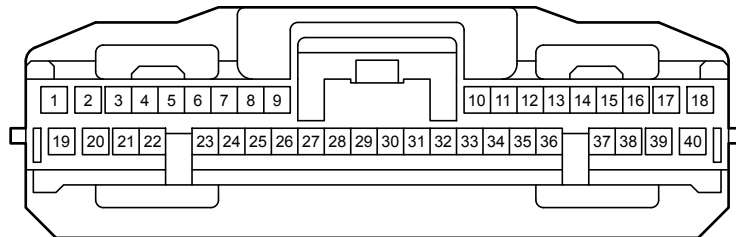

H125
White

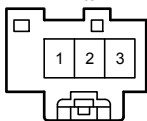


H126
White

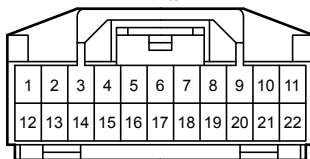

H127
Black




H128
Blue

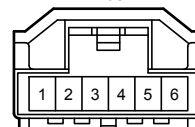


Position of Parts in Instrument Panel <RHD>


H129
Gray

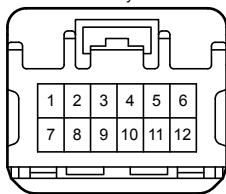


H130
Black

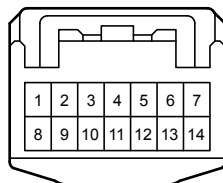

H131
Black

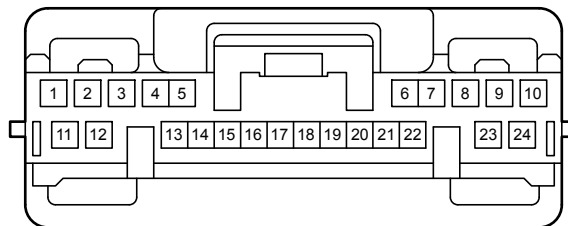


H132
Black

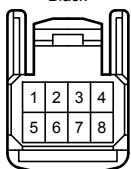


H133
Blue



H134
White

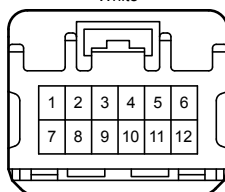

H135
White

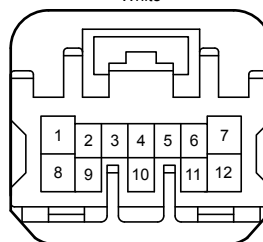

H136
Black

