


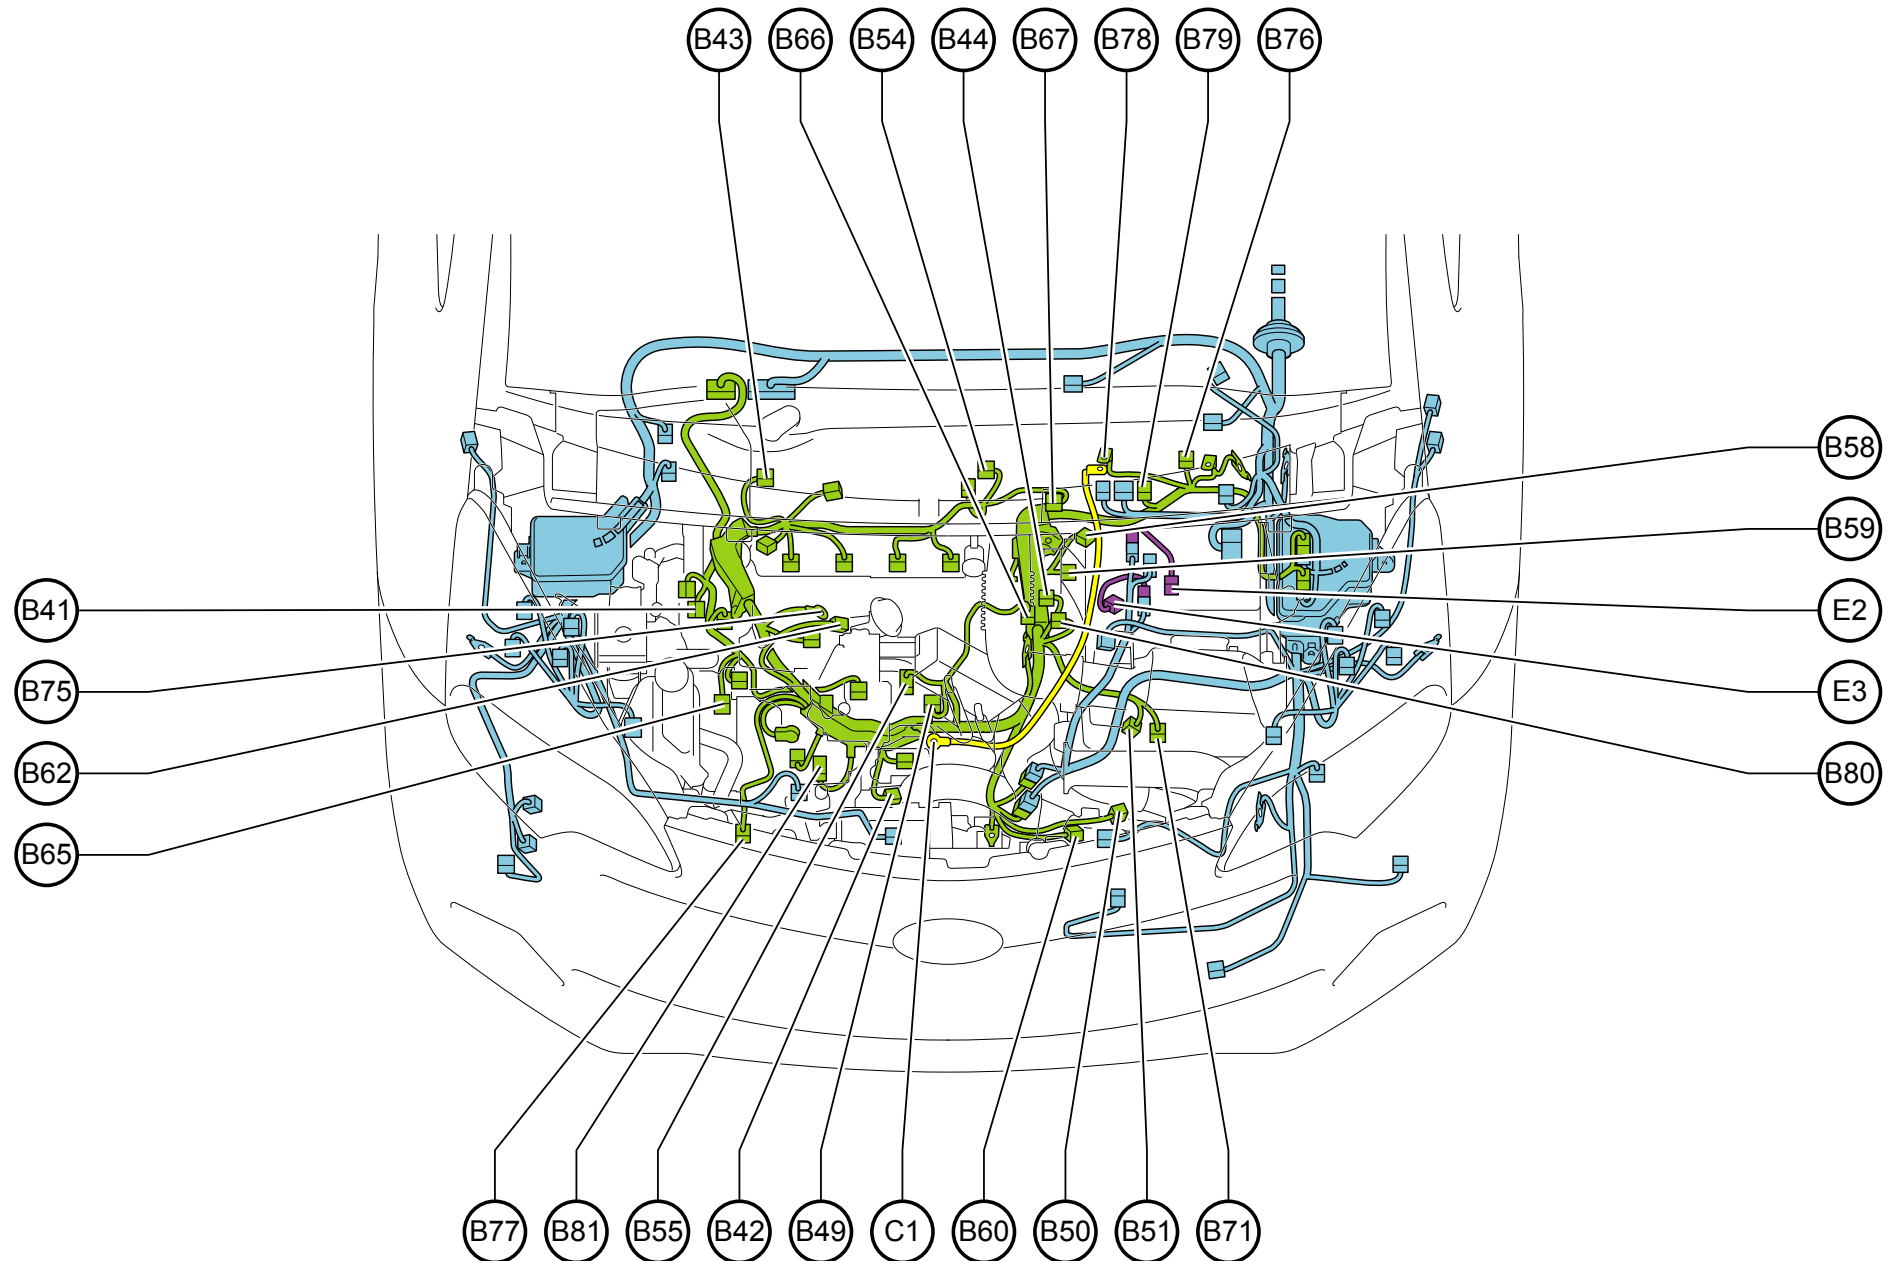

- B 41 No. 2 Exhaust Gas Temperature Sensor
- B 42 Intake Air Temperature Sensor
- B 43 Differential Pressure Sensor
- B 44 Fuel Temperature Sensor
- B 49 Diesel Turbo Pressure Sensor
- B 50 Clutch Stroke Sensor
- B 51 Transmission Revolution Sensor
- B 54 Turbocharger Sub-Assembly
- B 55 Electric EGR Control Valve Assembly
- B 58 Shift and Select Actuator Assembly
- B 59 Shift and Select Actuator Assembly
- B 60 Clutch Actuator Assembly
- B 62 No. 2 EGR Valve Assembly
- B 65 Oil Pressure Switching Valve Assembly
- B 66 VSV (Pressure Release Valve)
- B 67 Injection or Supply Pump Assembly
- B 71 Back-Up Light Switch Assembly
- B 75 Glow Plug Assembly
- B 76 Glow Plug Relay Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 79 Fusible Link Block Assembly
- B 80 Diesel Engine Coolant Temperature Sensor
- B 81 Diesel Throttle Body Assembly

C 1 Starter Assembly

E 2 Park/Neutral Position Switch Assembly

E 3 Shift Stroke Sensor

Position of Parts in Engine Compartment <LHD 1ND-TV>

