


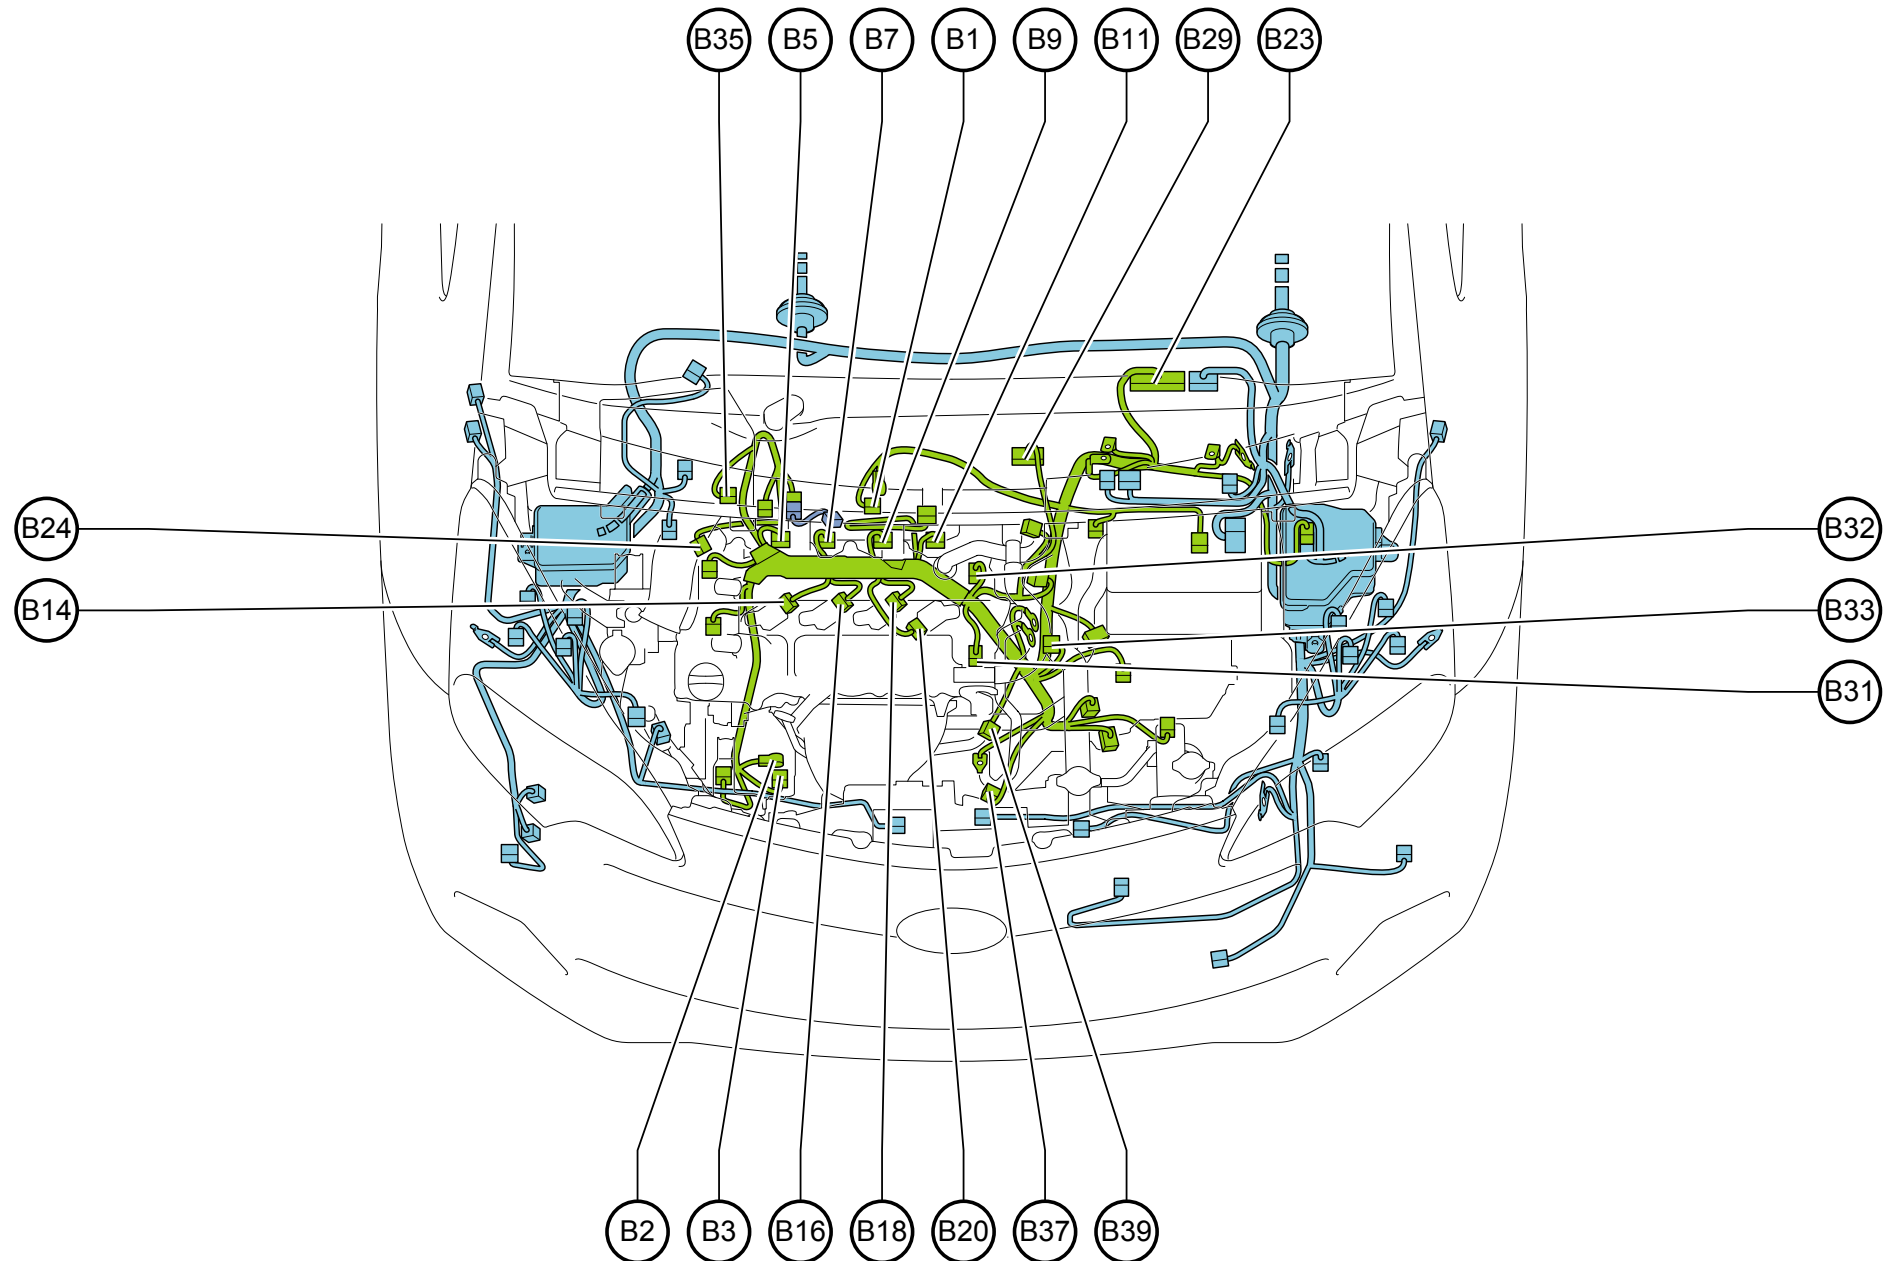

- B 1 Starter Assembly
- B 2 Generator Regulator Assembly
- B 3 Generator Regulator Assembly
- B 5 Fuel Injector Assembly No. 1
- B 7 Fuel Injector Assembly No. 2
- B 9 Fuel Injector Assembly No. 3
- B 11 Fuel Injector Assembly No. 4
- B 14 Ignition Coil Assembly No. 1
- B 16 Ignition Coil Assembly No. 2
- B 18 Ignition Coil Assembly No. 3
- B 20 Ignition Coil Assembly No. 4
- B 23 ECM
- B 24 Crankshaft Position Sensor
- B 29 Throttle with Motor Body Assembly
- B 31 VVT Sensor (Bank 1 Exhaust Side)
- B 32 VVT Sensor (Bank 1 Intake Side)
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 35 E.F.I. Vacuum Sensor Assembly
- B 37 Oxygen Sensor (Bank 1 Sensor 2)
- B 39 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

Position of Parts in Engine Compartment <RHD 1NR-FE>

