


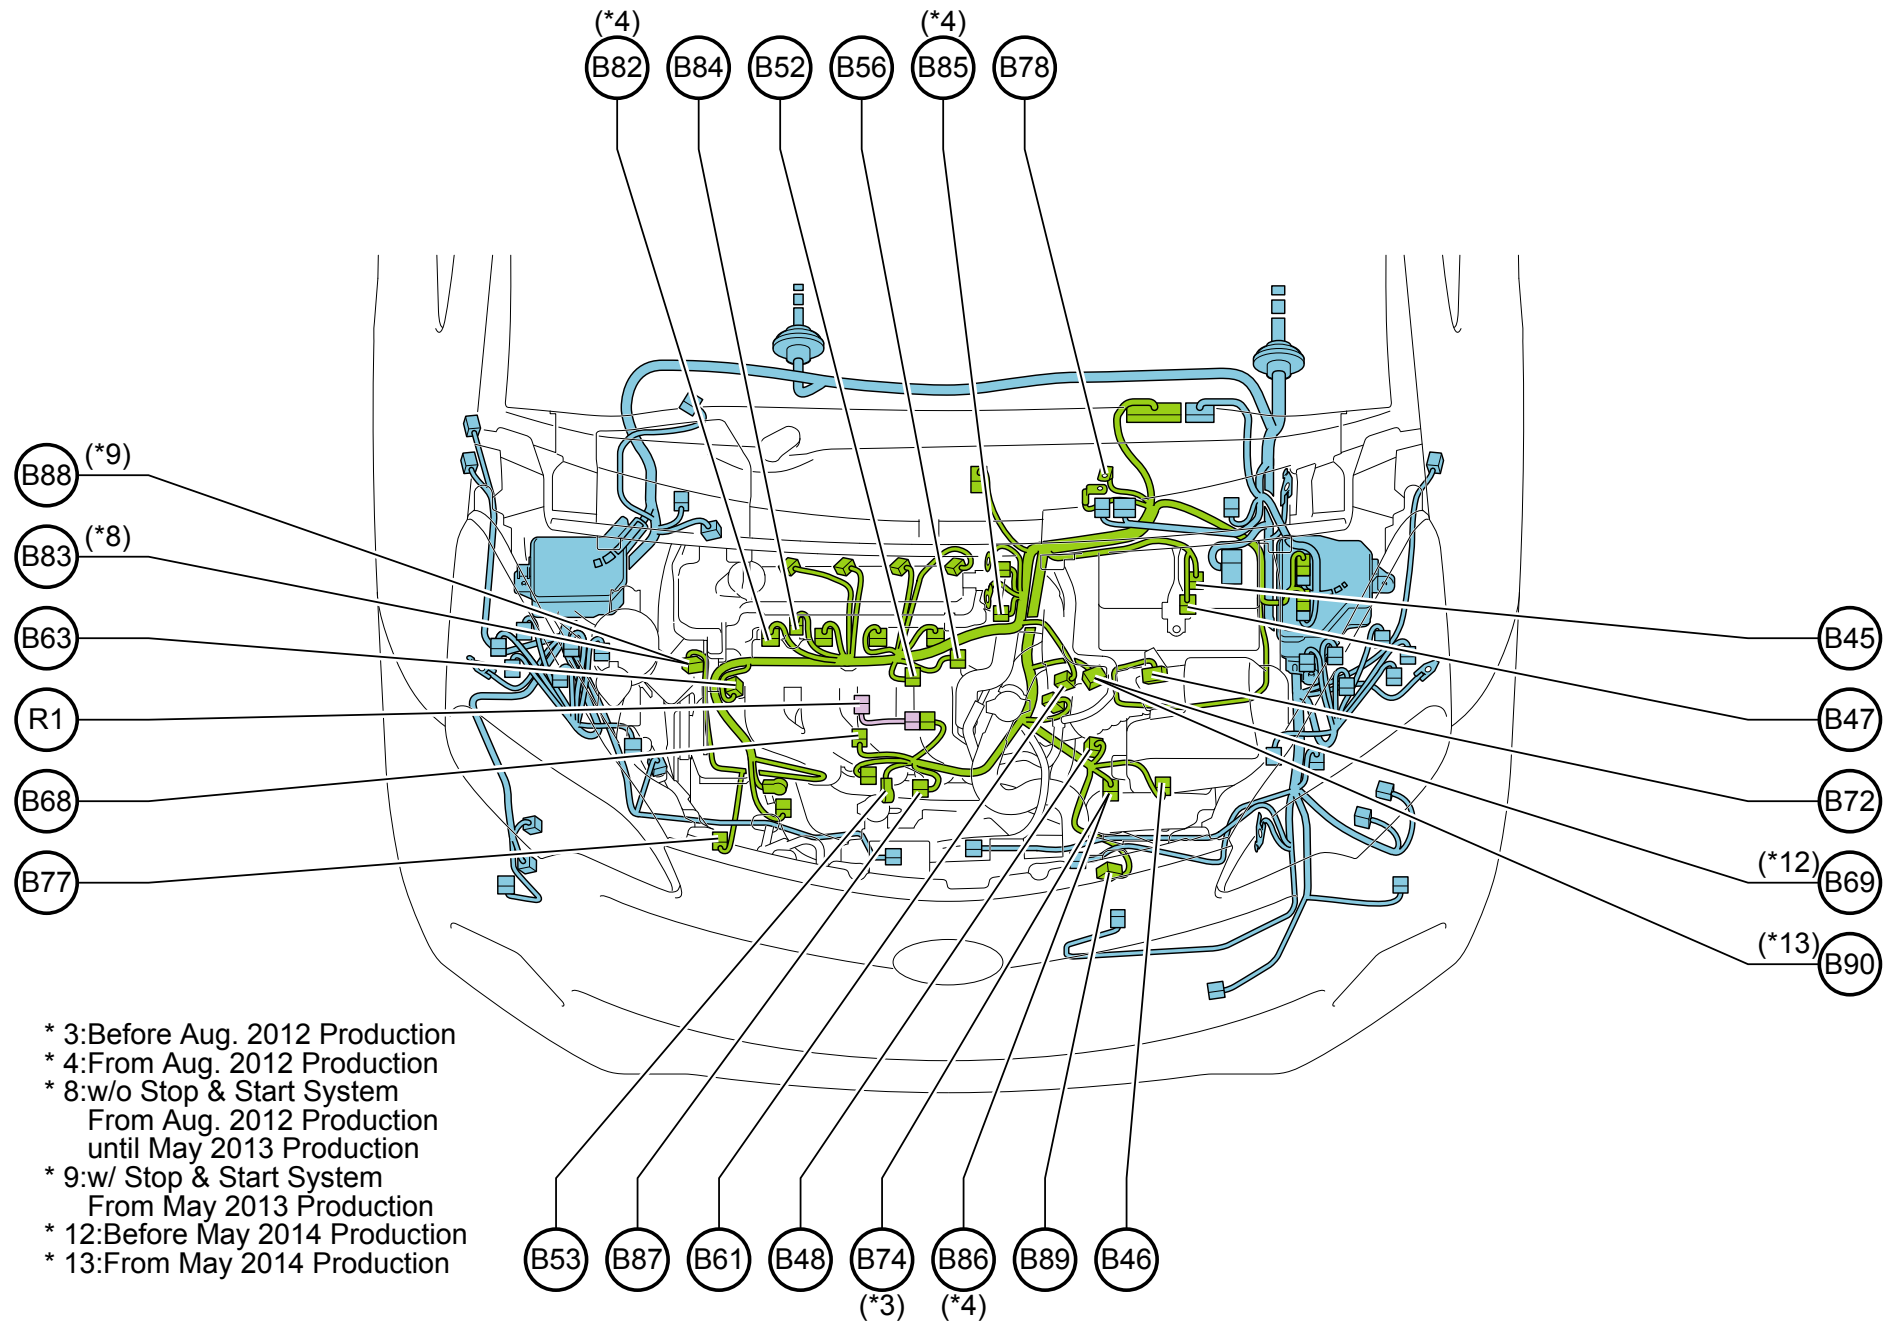

- B 45 Oil Pressure Sensor
- B 46 Transmission Revolution Sensor (Primary)
- B 47 Transmission Revolution Sensor (Secondary)
- B 48 Transmission Revolution Sensor (Turbine)
- B 52 E.G.R. Gas Temperature Sensor
- B 53 Starter Assembly
- B 56 EGR Valve Assembly
- B 61 Purge VSV
- B 63 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- B 68 Engine Oil Pressure Switch Assembly
- B 69 Park/Neutral Position Switch Assembly
- B 72 Intake Mass Air Flow Meter Sub-Assembly
- B 74 CVT Solenoid
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 82 Fuel Injector Assembly No. 1
- B 83 Crankshaft Position Sensor
- B 84 Cam Position Sensor
- B 85 E.F.I. Vacuum Sensor Assembly
- B 86 CVT Solenoid
- B 87 Starter Assembly
- B 88 Crankshaft Position Sensor
- B 89 Oil Pump Motor Assembly
- B 90 Park/Neutral Position Switch Assembly

- R 1 Knock Control Sensor (Bank 1)

