

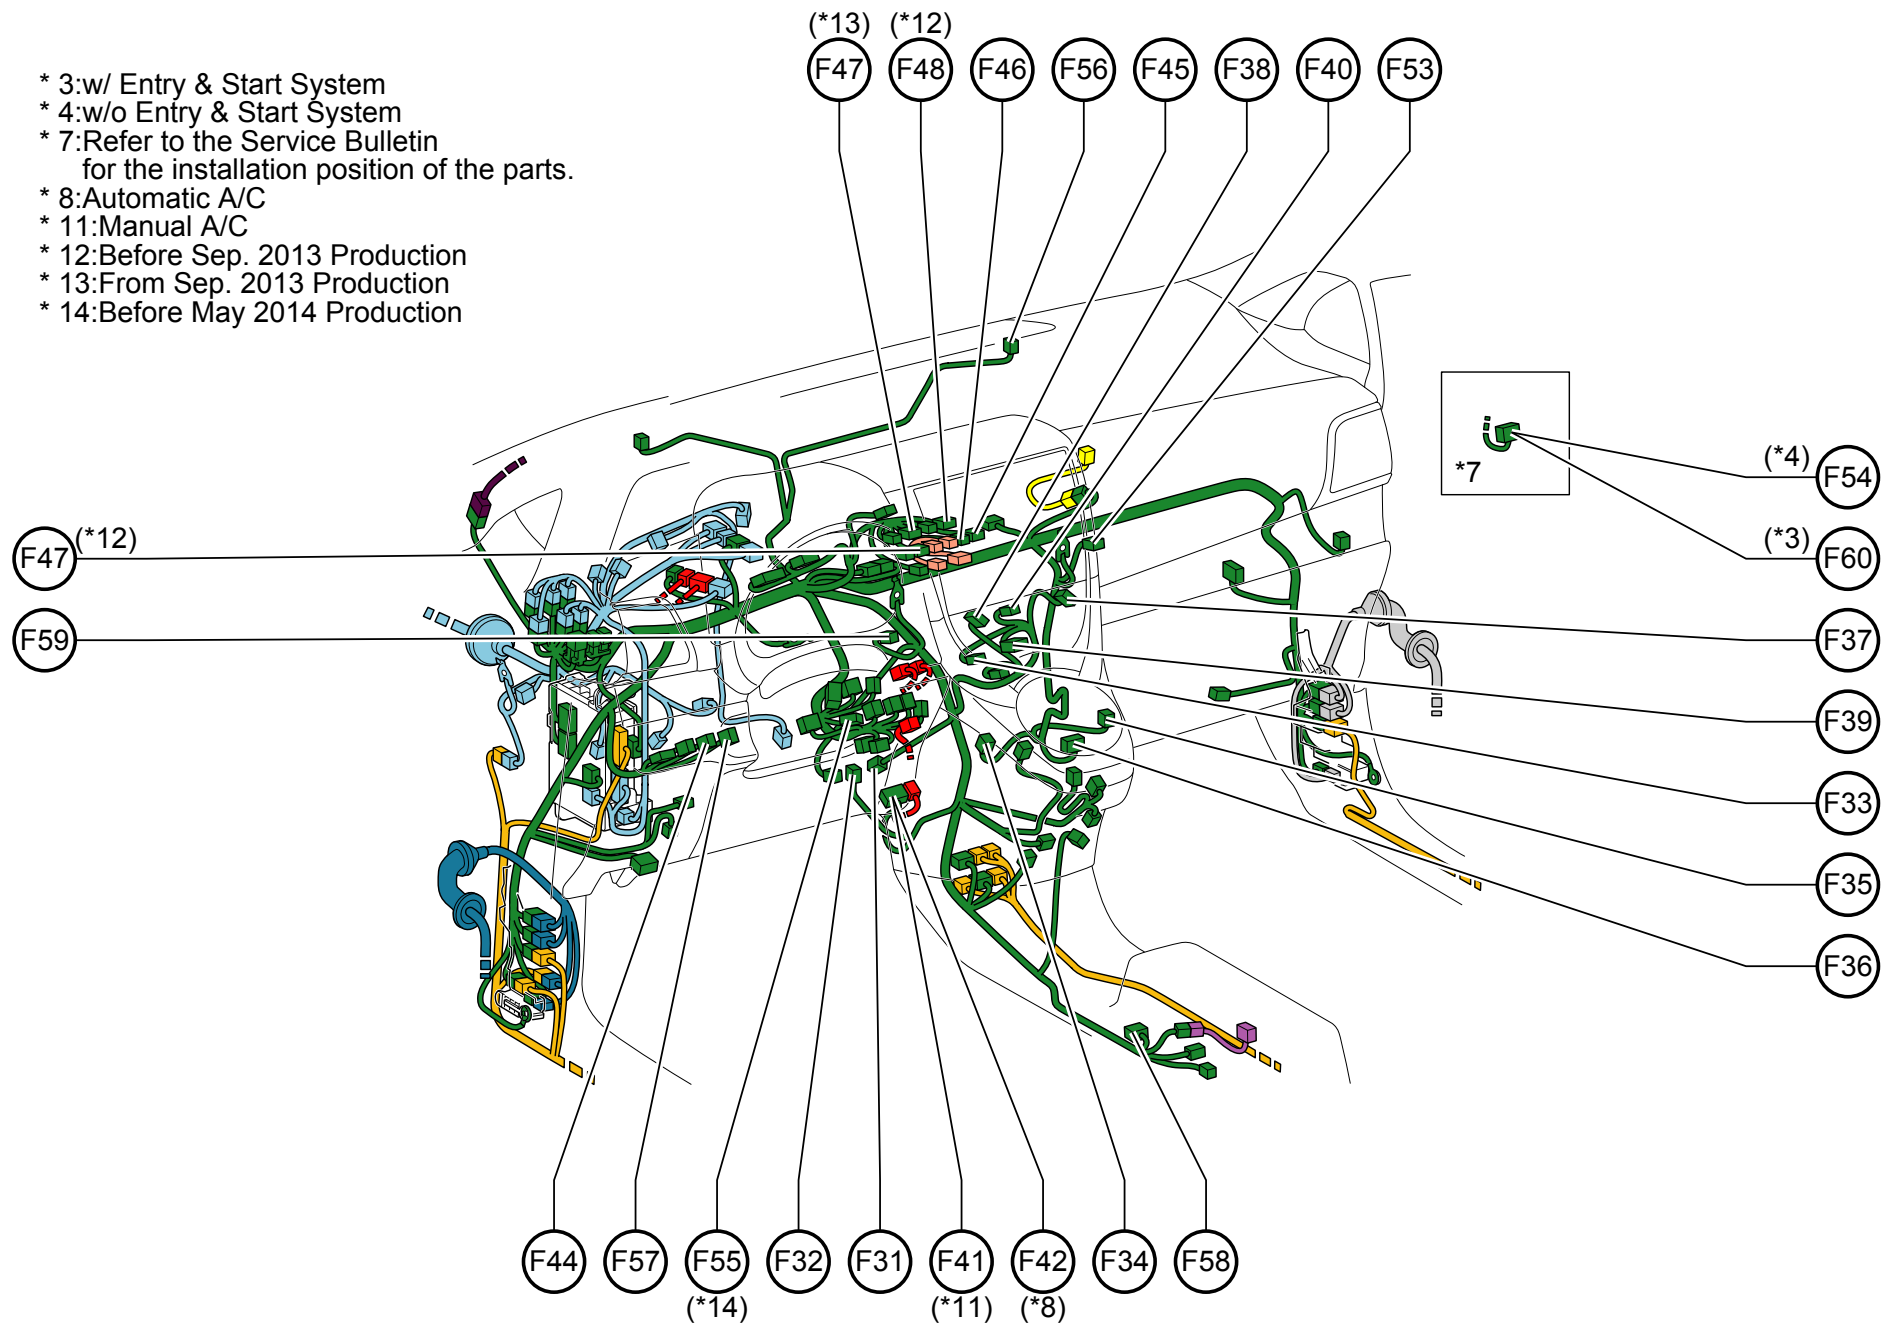
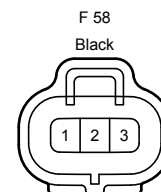
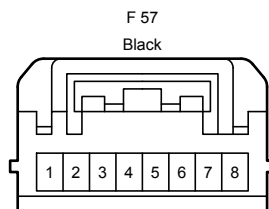
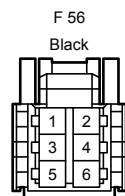
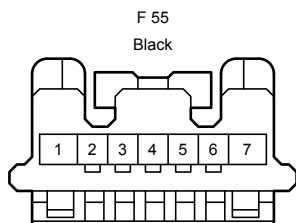
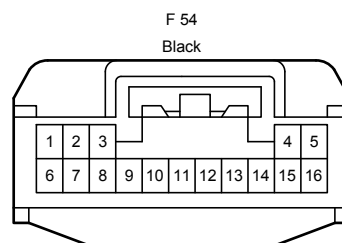
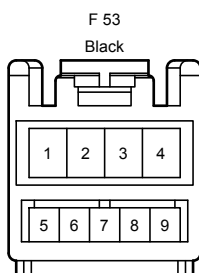
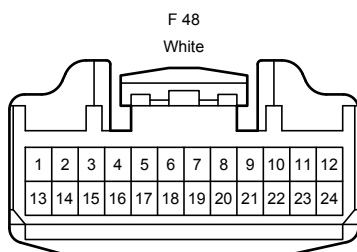
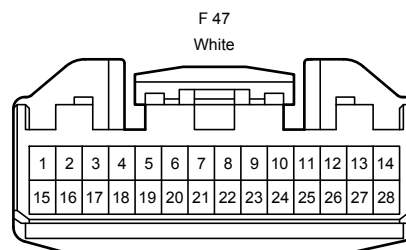
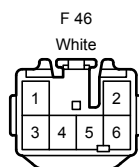
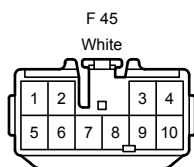
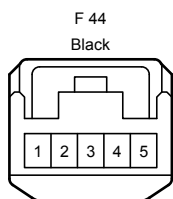
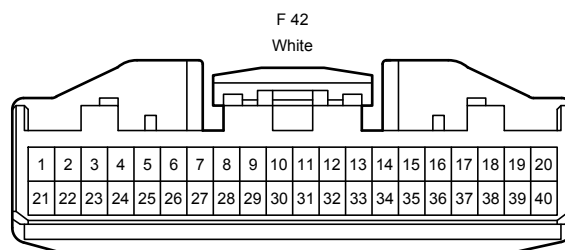
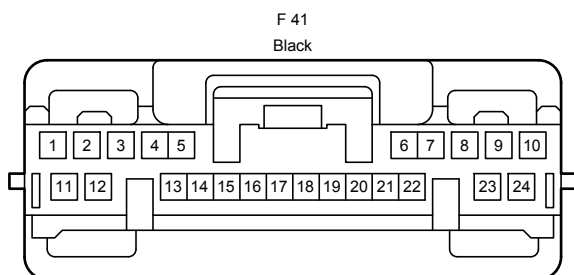
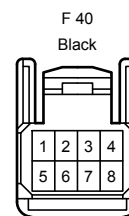
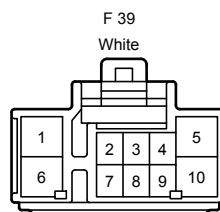
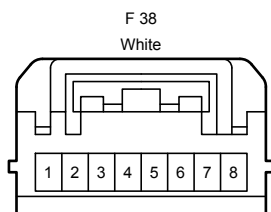
 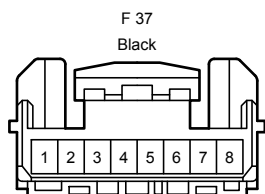
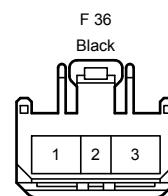
 
 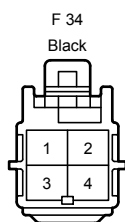


- * 3:w/ Entry & Start System
- * 4:w/o Entry & Start System
- * 7:Refer to the Service Bulletin
for the installation position of the parts.
- * 8:Automatic A/C
- * 11:Manual A/C
- * 12:Before Sep. 2013 Production
- * 13:From Sep. 2013 Production
- * 14:Before May 2014 Production




- F 31 Cooler (Duct Sensor) Thermistor
- F 32 No. 1 Cooler Thermistor
- F 33 Cooler (Room Temperature Sensor) Thermistor
- F 34 Blower Resistor
- F 35 Blower with Fan Motor Sub-Assembly
- F 36 Blower with Fan Motor Sub-Assembly
- F 37 No. 3 Heater Control Sub-Assembly
- F 38 No. 1 Heater Control Sub-Assembly
- F 39 No. 2 Heater Control Sub-Assembly
- F 40 A/C Control Assembly
- F 41 A/C Amplifier Assembly
- F 42 A/C Amplifier Assembly
- F 44 Heater Switch Assembly
- F 45 Radio Receiver Assembly , Radio & Display Receiver Assembly
- F 46 Radio Receiver Assembly , Radio & Display Receiver Assembly
- F 47 Radio Receiver Assembly , Radio & Display Receiver Assembly
- F 48 Radio & Display Receiver Assembly
- F 53 No. 1 Stereo Jack Adapter Assembly
- F 54 Transponder Key ECU Assembly
- F 55 Transponder Key Amplifier
- F 56 Theft Warning Indicator Light Assembly
- F 57 VSC Off Switch
- F 58 Deceleration Sensor
- F 59 Engine Switch
- F 60 ID Code Box

Position of Parts in Instrument Panel <LHD>



F 59

White

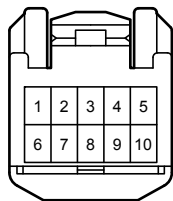

F 60

White

