


Position of Parts in Instrument Panel <LHD>

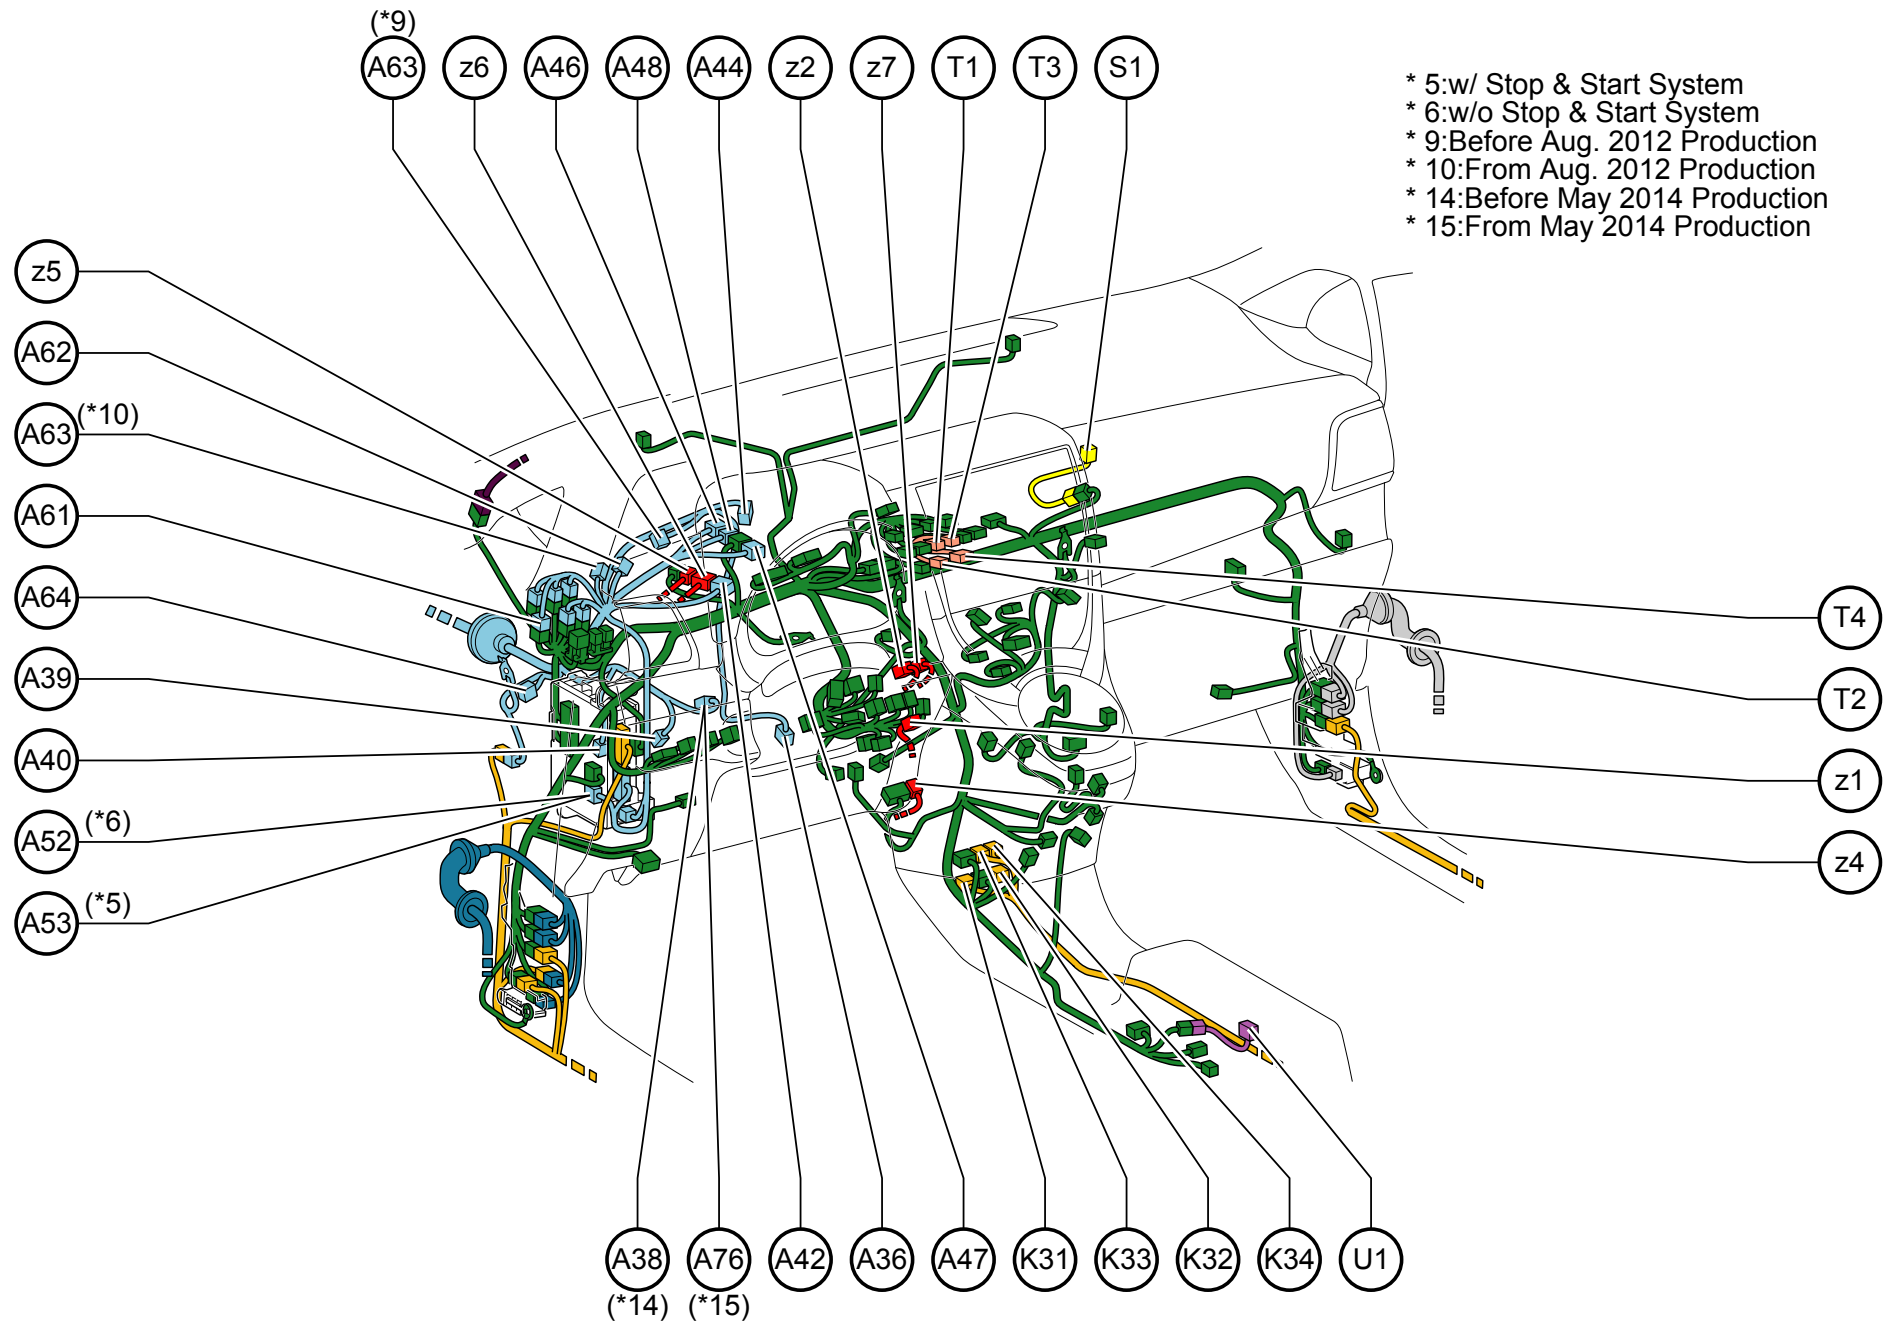

- A 36 Accelerator Pedal Sensor Assembly
- A 38 Stop Light Switch Assembly
- A 39 Clutch Start Switch Assembly
- A 40 Clutch Switch Assembly
- A 42 Power Steering ECU Assembly
- A 44 Quick Heater Assembly
- A 46 Transmission Control ECU Assembly
- A 47 Transmission Control ECU Assembly
- A 48 Transmission Control ECU Assembly
- A 52 Power Management Control ECU
- A 53 Engine Stop and Start ECU
- A 61 Junction Connector
- A 62 Junction Connector
- A 63 Junction Connector
- A 64 Junction Connector
- A 76 Stop Light Switch Assembly

- K 31 Center Airbag Sensor Assembly
- K 32 Center Airbag Sensor Assembly
- K 33 Center Airbag Sensor Assembly
- K 34 Center Airbag Sensor Assembly

- S 1 Instrument Panel Passenger without Door Airbag Assembly


- T 1 Radio & Display Receiver Assembly
- T 2 Extension Module
- T 3 Radio & Display Receiver Assembly
- T 4 Extension Module

- U 1 Seat Heater Switch


- z 1 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 2 Steering Pad Switch Assembly , Spiral Cable Sub-Assembly
- z 4 A/C Amplifier Assembly , A/C Blower Assembly
- z 5 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 6 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly

Position of Parts in Instrument Panel <LHD>


A 36
Black

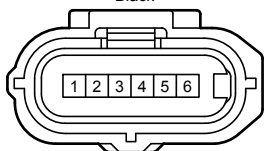


A 38
White

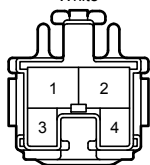


A 39
Black

 


A 40
White

 


A 42
White

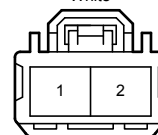


A 44
White

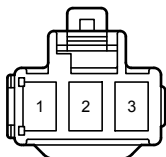


A 46
White

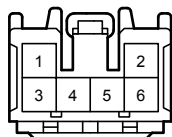


A 47
White

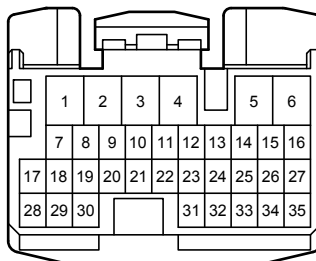


A 48
White

 


A 52
White

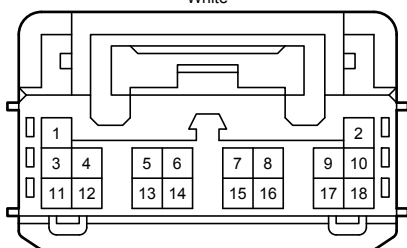


A 53
White

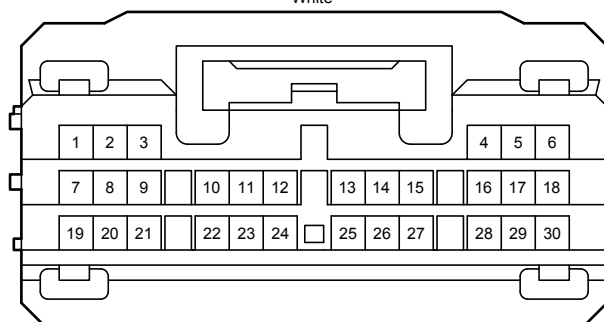


A 61
Blue

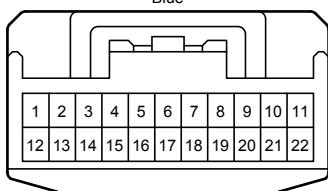


A 62
White

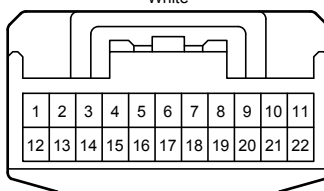


A 63
White

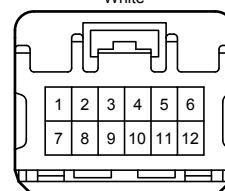


A 64
White

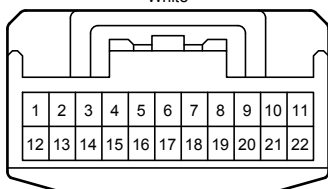

A 76
White

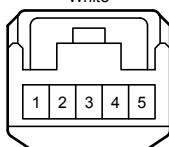

K 31
Yellow

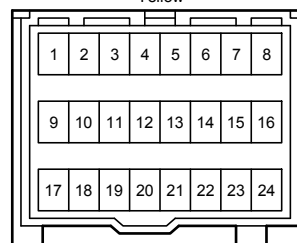

Position of Parts in Instrument Panel <LHD>

