



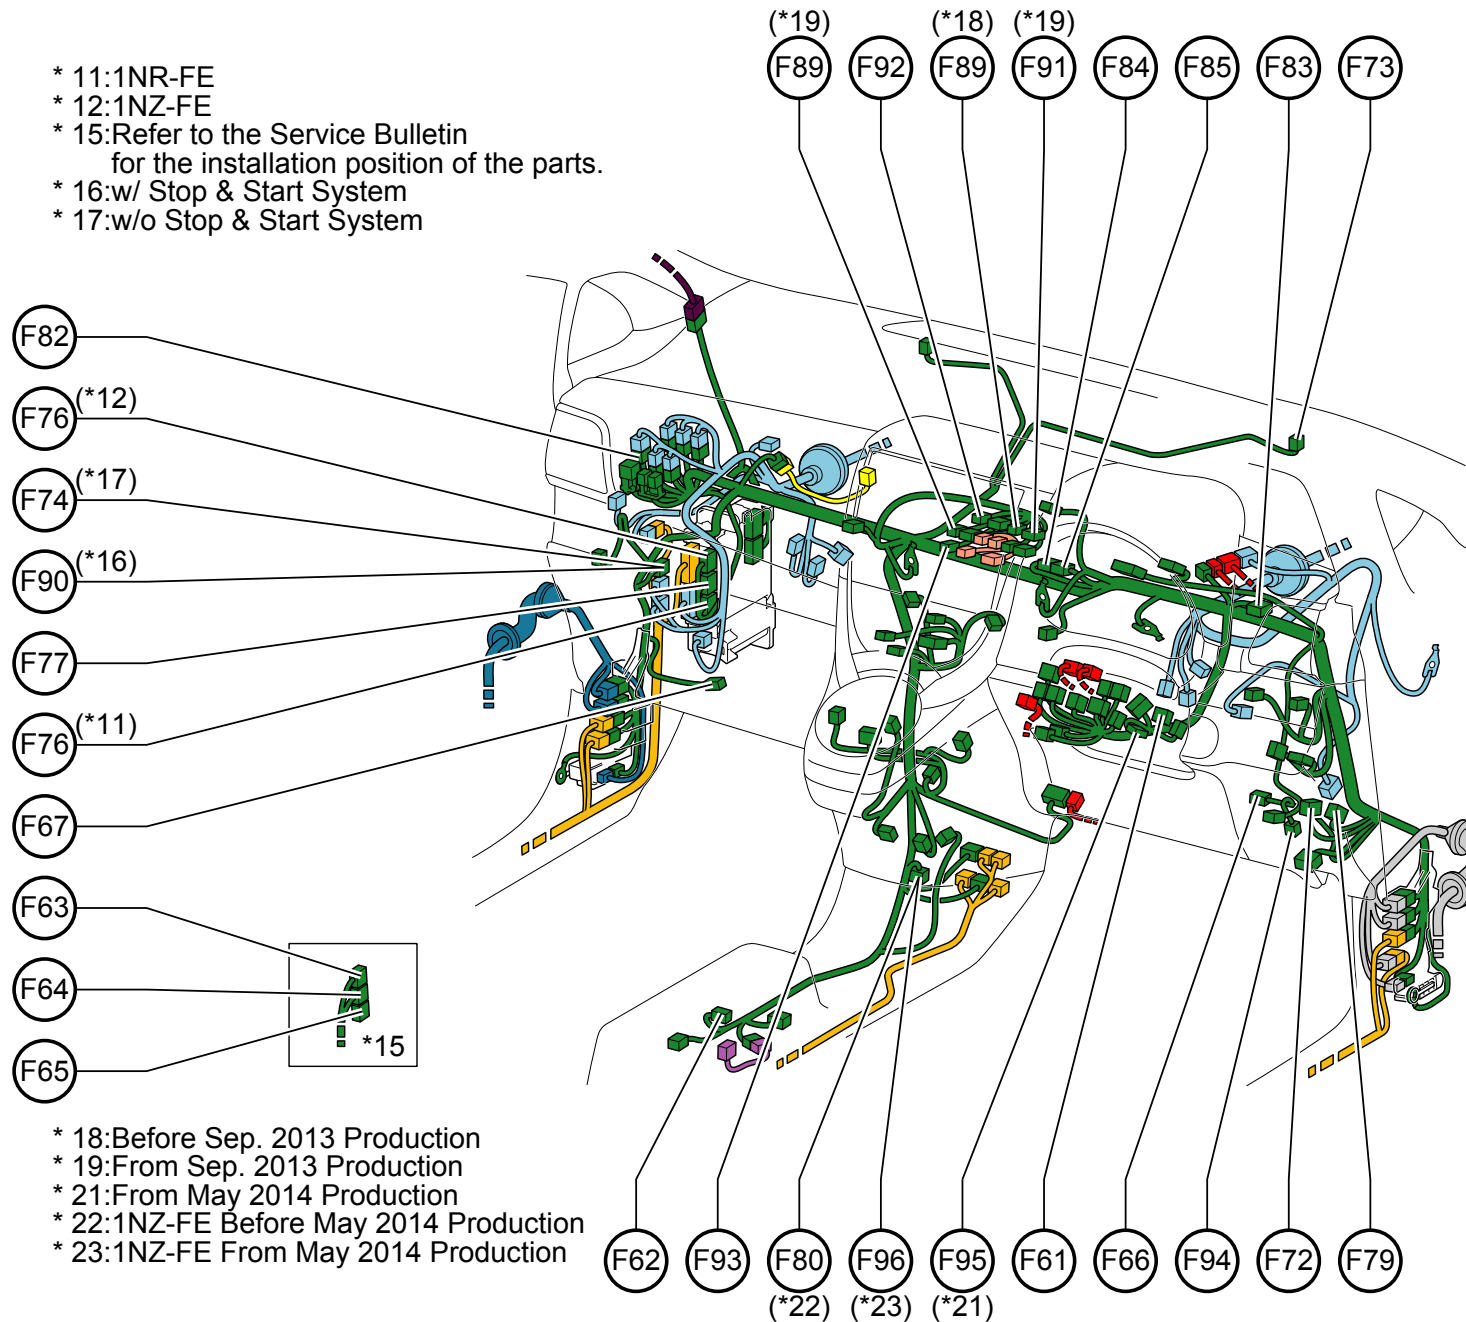


- F 61 Steering Lock Actuator Assembly
- F 62 No. 1 Indoor Electrical Key Antenna Assembly
- F 63 Certification ECU Assembly
- F 64 Certification ECU Assembly
- F 65 Certification ECU Assembly
- F 66 No. 1 Interior Illumination Light Assembly RH
- F 67 No. 1 Interior Illumination Light Assembly LH
- F 72 Windshield Wiper Relay Assembly
- F 73 Automatic Light Control Sensor
- F 74 Power Management Control ECU
- F 76 Main Body ECU
- F 77 Main Body ECU
- F 79 Double Lock Door Control Relay Assembly
- F 80 Oxygen Sensor (Bank 1 Sensor 2)
- F 82 Junction Connector
- F 83 Junction Connector
- F 84 Junction Connector
- F 85 Junction Connector
- F 89 Radio Receiver Assembly , Radio & Display Receiver Assembly
- F 90 Engine Stop and Start ECU
- F 91 Radio & Display Receiver Assembly
- F 92 Option Connector (Navigation Receiver)
- F 93 Extension Module
- F 94 Tire Pressure Warning Reset Switch
- F 95 Transponder Key Coil
- F 96 Oxygen Sensor (Bank 1 Sensor 2)

Position of Parts in Instrument Panel <RHD>


F 61
Black

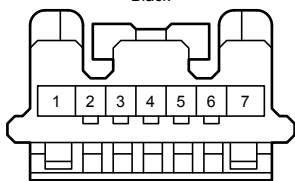


F 62
White

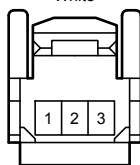


F 63
White

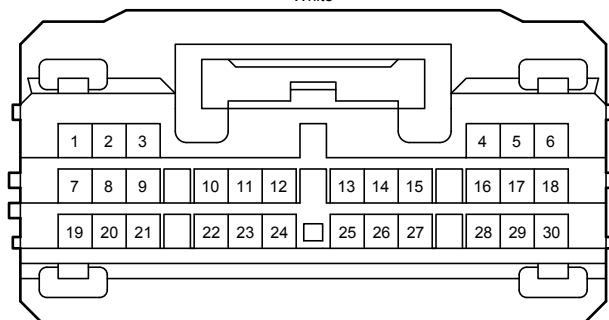


F 64
White

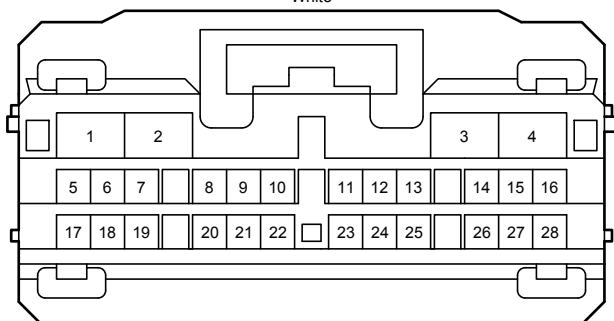


F 65
White

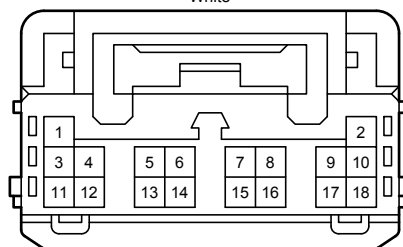


F 66
White

 


F 67
White

 


F 72
White

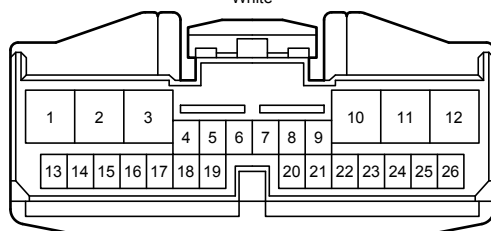


F 73
White

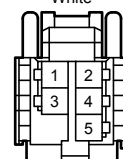

F 74
White

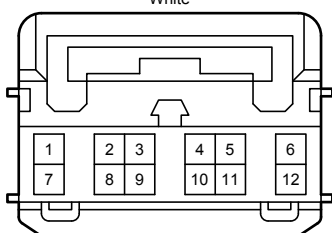


F 76
White

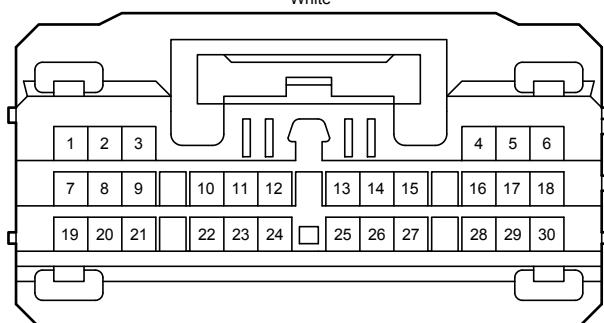


Position of Parts in Instrument Panel <RHD>

F 77
White

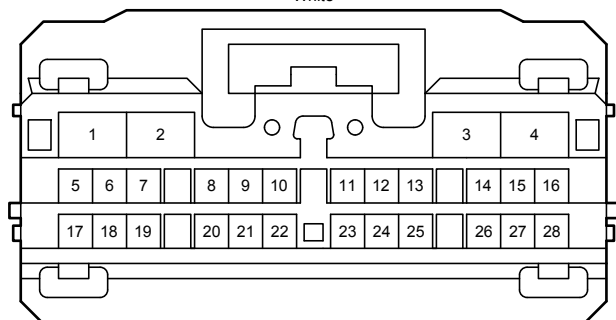


F 79
White

 


F 80
Gray




F 82
Blue

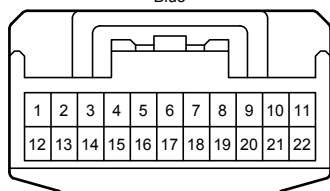


F 83
Gray

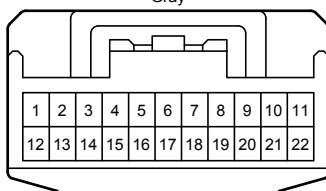


F 84
Black

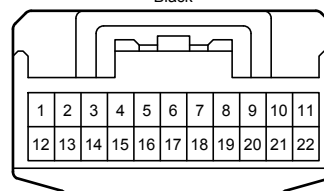


F 85
Black

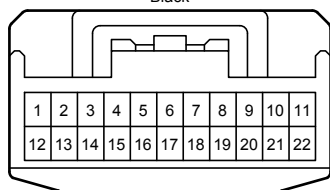


F 89
Gray

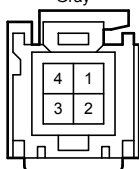


F 90
Black

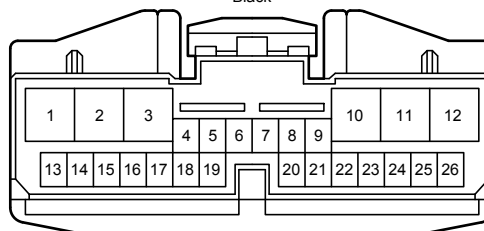


F 91
White

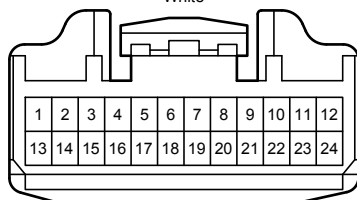


F 92
White

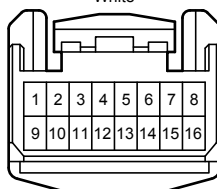


F 93
Gray

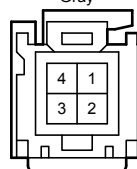

F 94
Black

 

F 95
Black

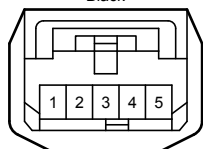

F 96
Black

