

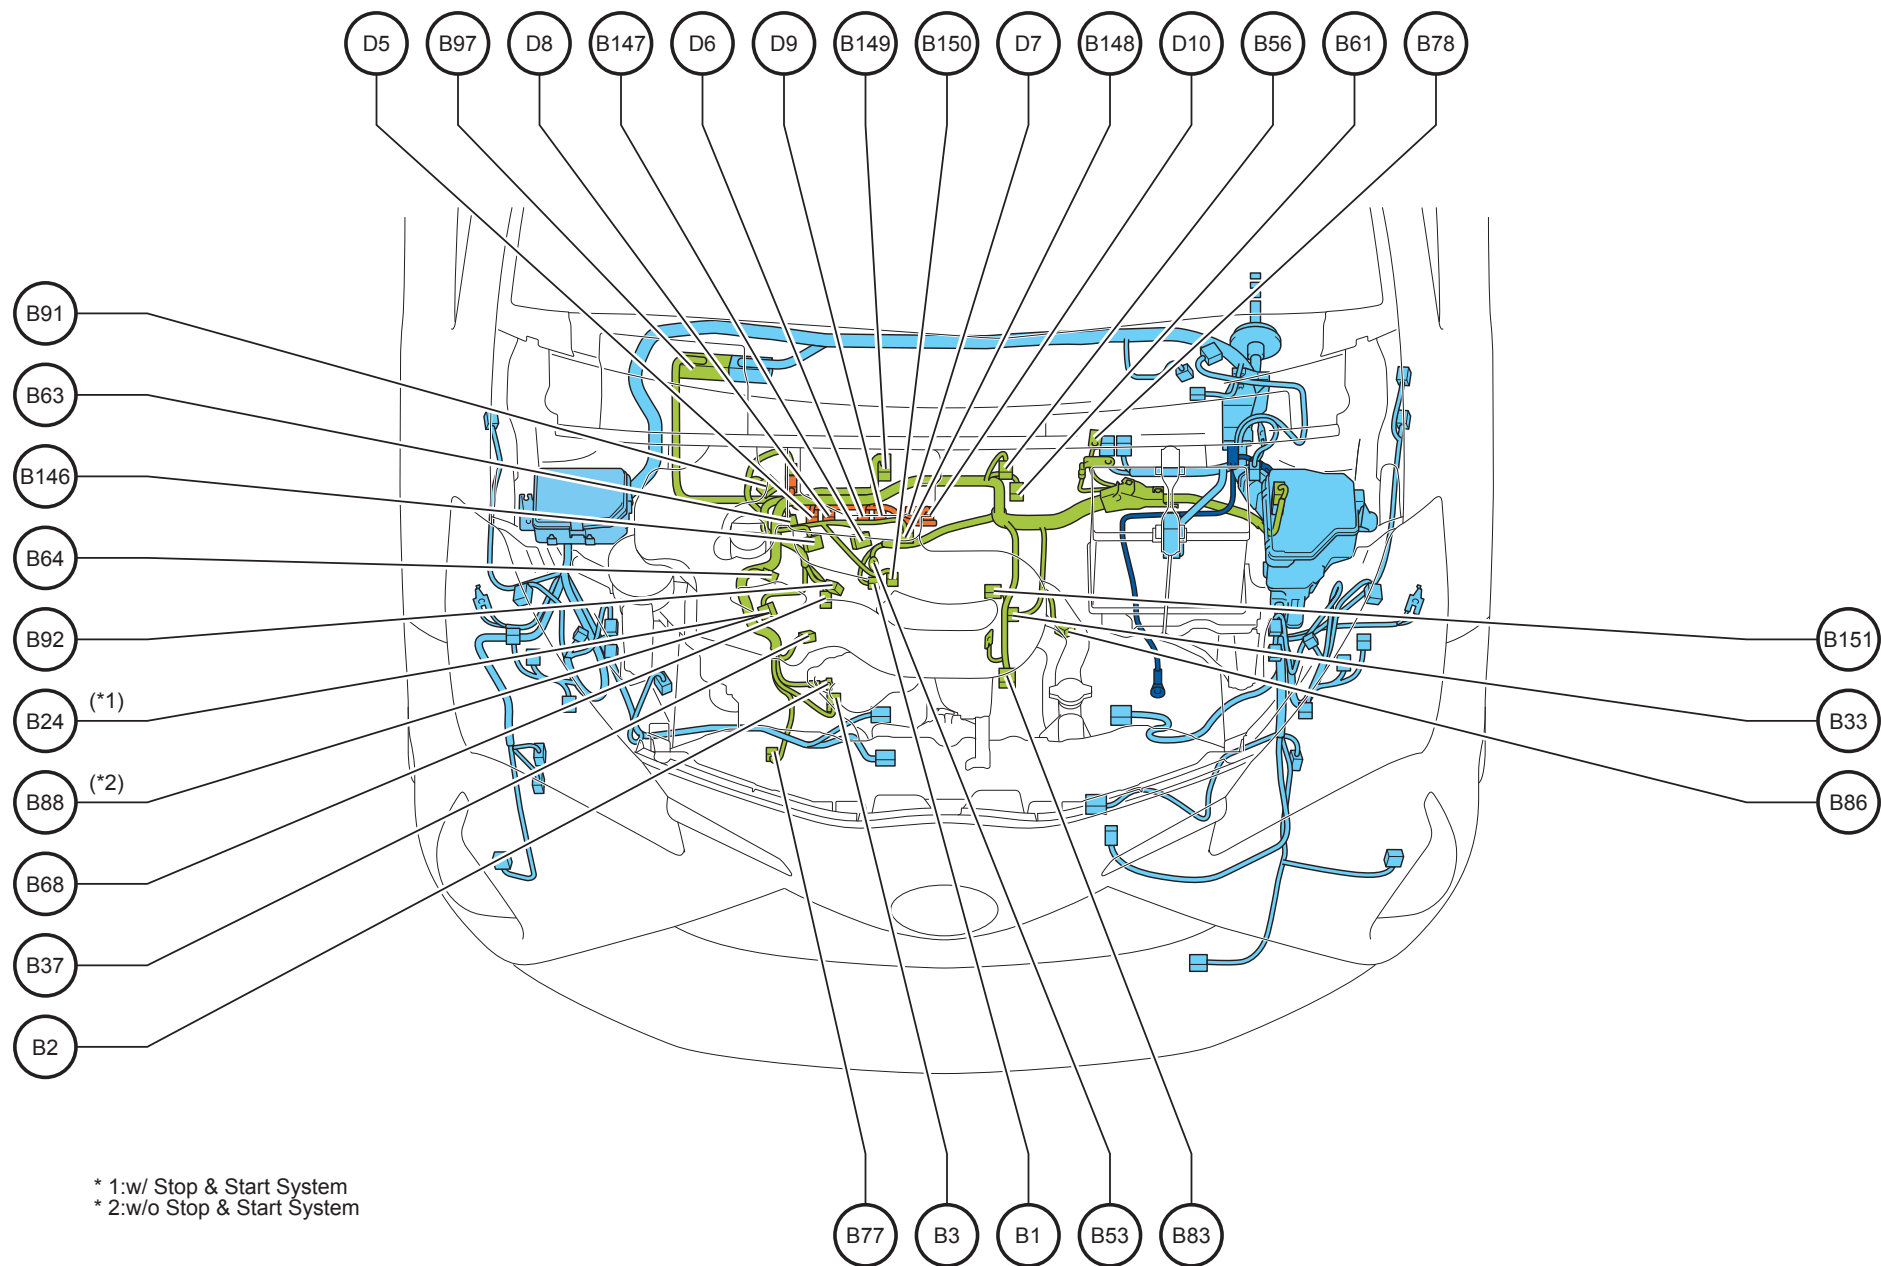
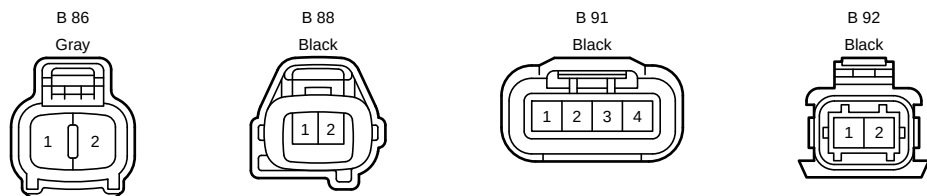
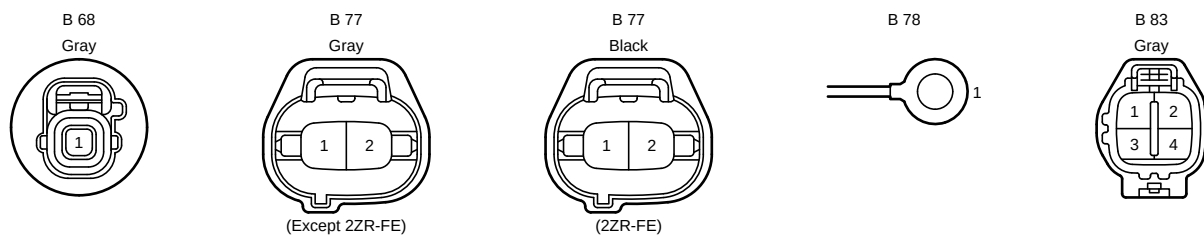


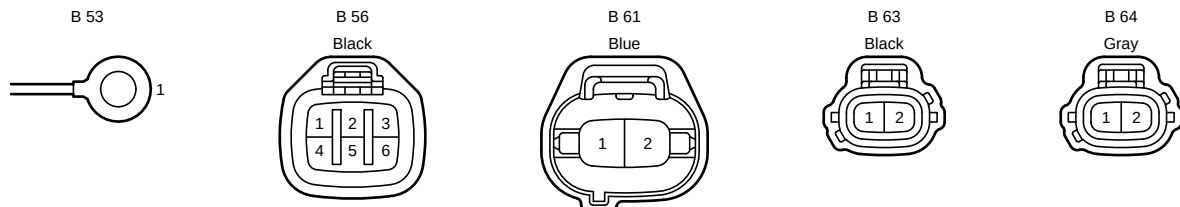



- B 1 Starter Assembly
- B 2 Generator Assembly
- B 3 Generator Assembly
- B 24 No. 1 Crank Position Sensor
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 37 Oxygen Sensor (Bank 1 Sensor 1)
- B 53 Starter Assembly
- B 56 EGR Valve Assembly
- B 61 Purge VSV
- B 63 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- B 64 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- B 68 Engine Oil Pressure Switch Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 83 Oxygen Sensor (Bank 1 Sensor 2)
- B 86 Back-Up Light Switch Assembly
- B 88 Crankshaft Position Sensor
- B 91 E.F.I. Vacuum Sensor Assembly
- B 92 Knock Control Sensor (Bank 1)
- B 97 ECM
- B 146 Ignition Coil No. 1
- B 147 Ignition Coil No. 2
- B 148 Ignition Coil No. 3
- B 149 Throttle with Motor Body Assembly
- B 150 Camshaft Position Sensor (Exhaust Side)
- B 151 Camshaft Position Sensor (Intake Side)

- D 5 Fuel Injector Assembly No. 1
- D 6 Fuel Injector Assembly No. 2
- D 7 Fuel Injector Assembly No. 3
- D 8 Fuel Injector Assembly No. 4
- D 9 Fuel Injector Assembly No. 5
- D 10 Fuel Injector Assembly No. 6

Position of Parts in Engine Compartment <LHD 1KR-FE TMMF Made From May 2018 Production>

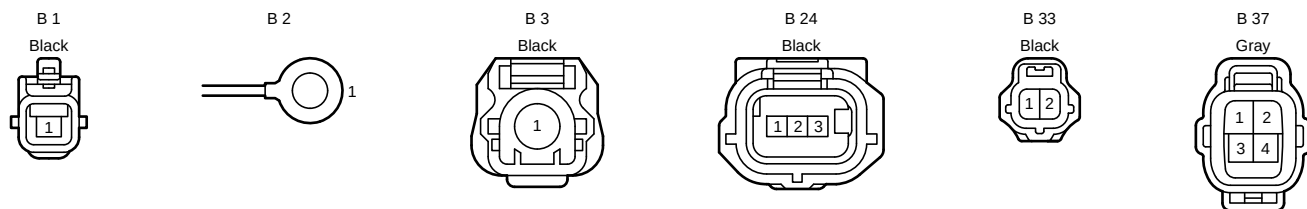


B 97
Black

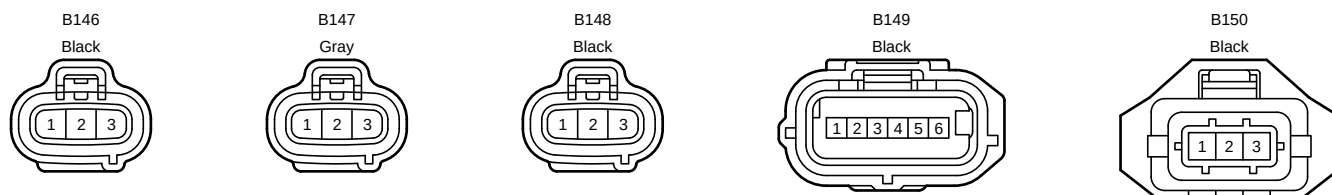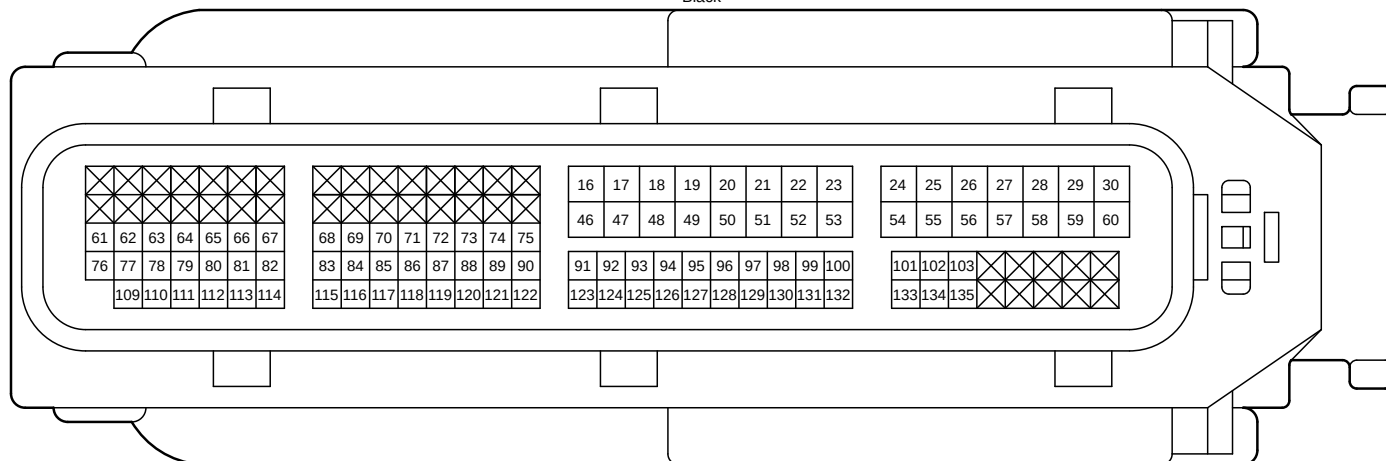

Position of Parts in Engine Compartment <LHD 1KR-FE TMMF Made From May 2018 Production>


B151

Black

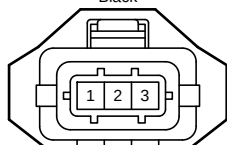


D 5

Black

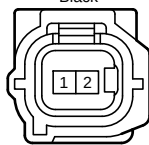


D 6

Black

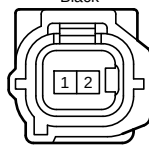


D 7

Black

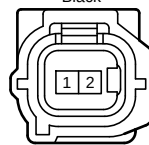


D 8

Black

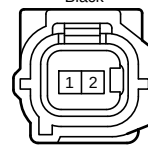

D 9

Black

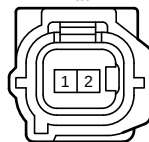

D 10

Black

