


Position of Parts in Engine Compartment <RHD 1KR-FE TMC Made>

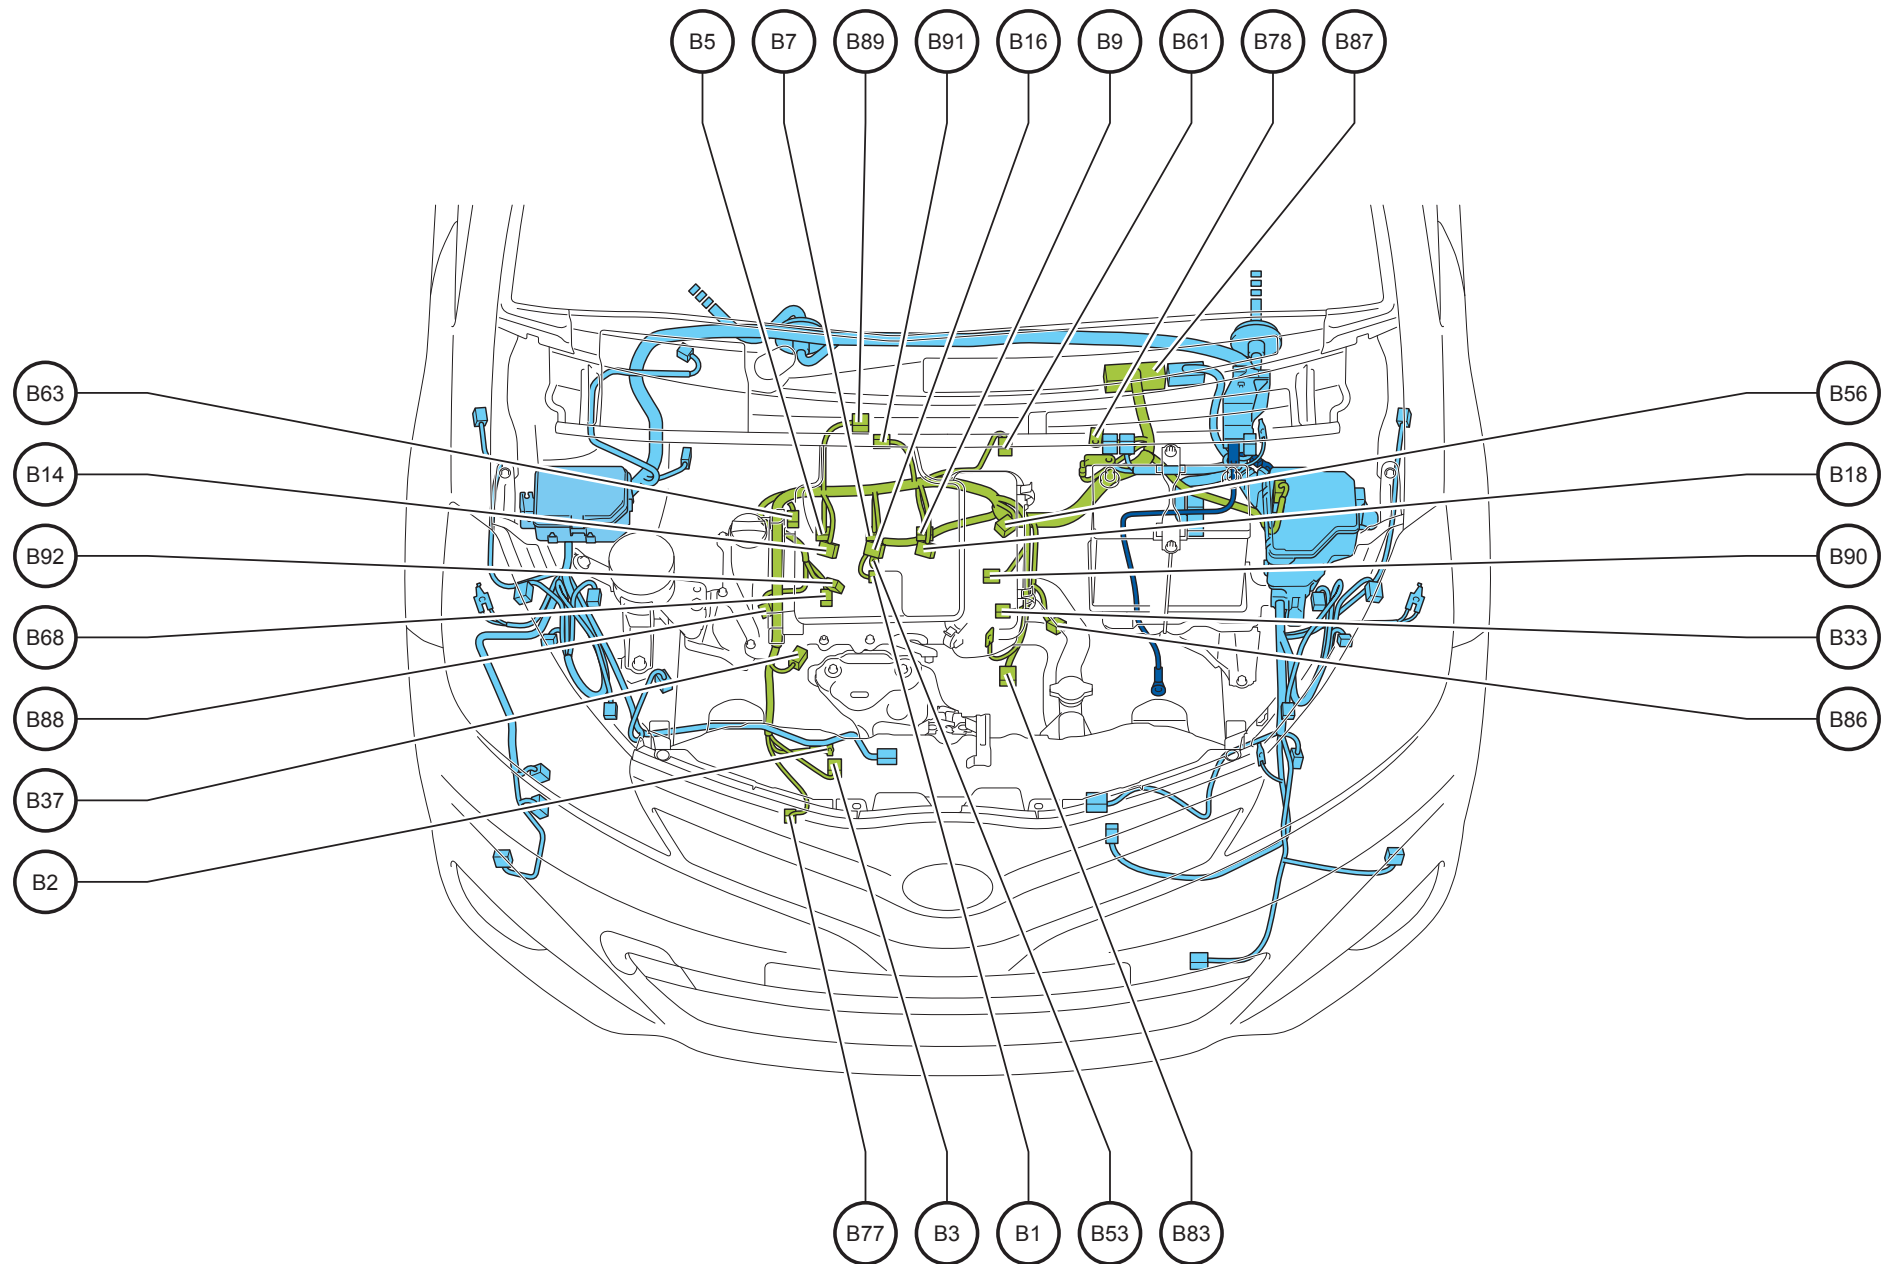

- B 1 Starter Assembly
- B 2 Generator Assembly
- B 3 Generator Assembly
- B 5 Fuel Injector Assembly No. 1
- B 7 Fuel Injector Assembly No. 2
- B 9 Fuel Injector Assembly No. 3
- B 14 Ignition Coil No. 1
- B 16 Ignition Coil No. 2
- B 18 Ignition Coil No. 3
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 37 Oxygen Sensor (Bank 1 Sensor 1)
- B 53 Starter Assembly
- B 56 EGR Valve Assembly
- B 61 Purge VSV
- B 63 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- B 68 Engine Oil Pressure Switch Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 83 Oxygen Sensor (Bank 1 Sensor 2)
- B 86 Back-Up Light Switch Assembly
- B 87 ECM
- B 88 Crankshaft Position Sensor
- B 89 Throttle with Motor Body Assembly
- B 90 Camshaft Position Sensor
- B 91 E.F.I. Vacuum Sensor Assembly
- B 92 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <RHD 1KR-FE TMC Made>

