

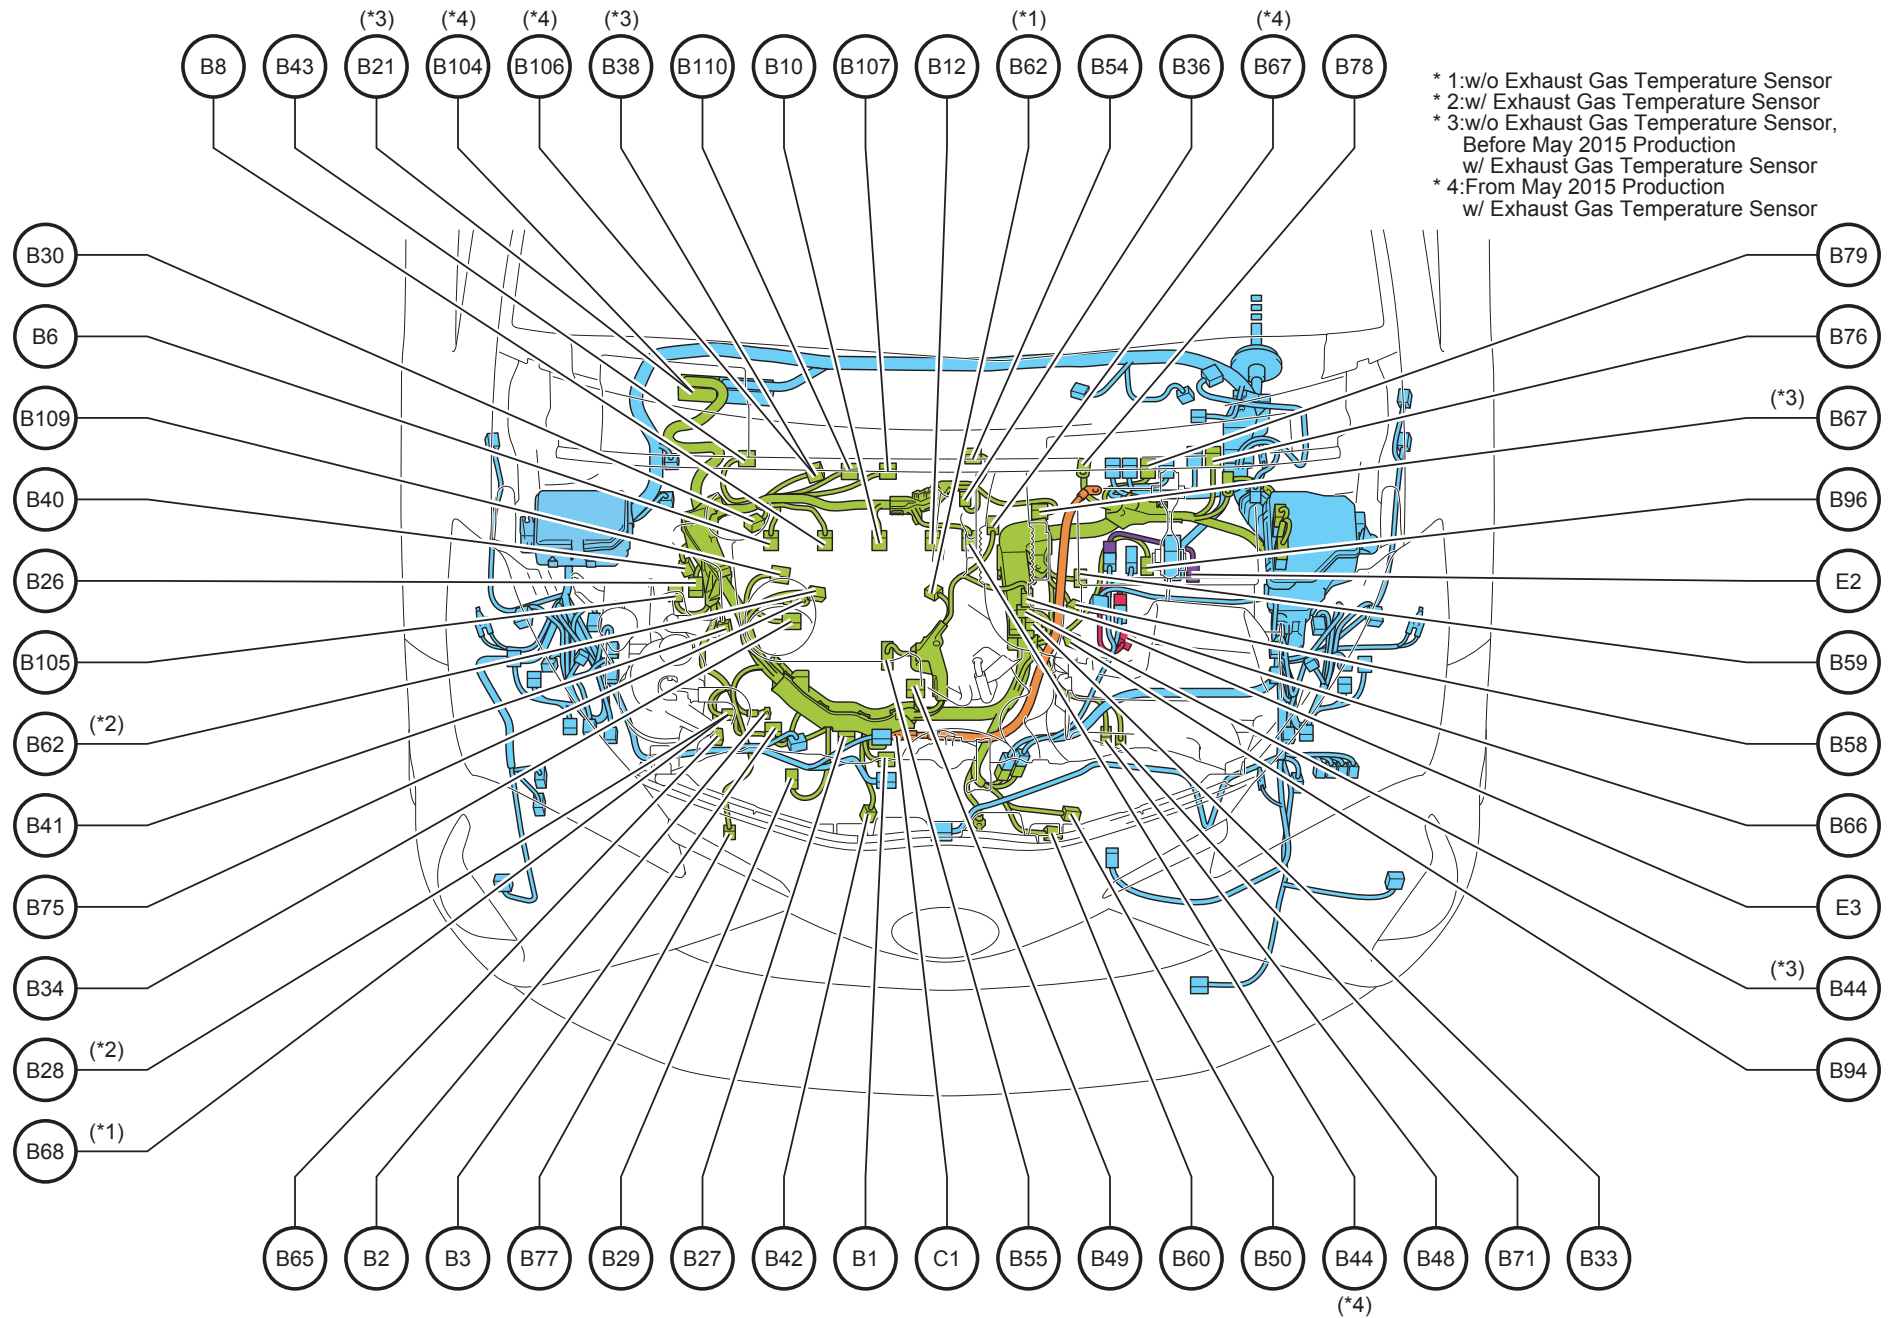
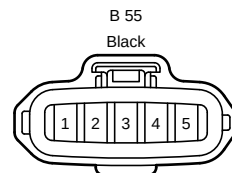
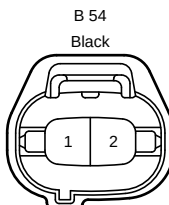
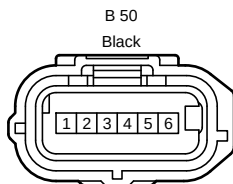
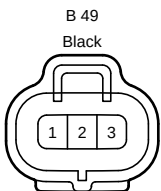
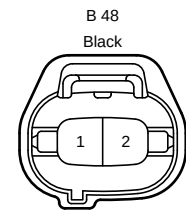
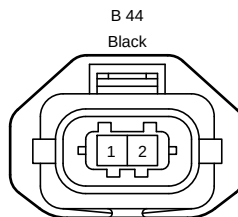
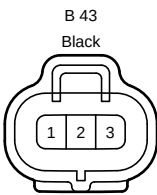
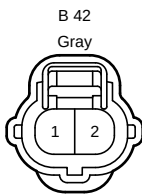
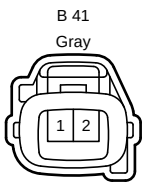
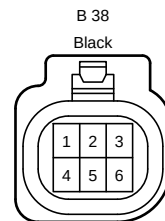
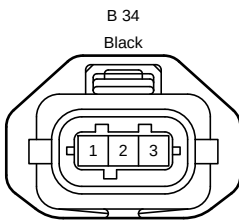
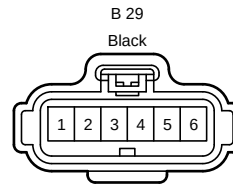
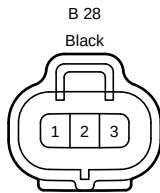
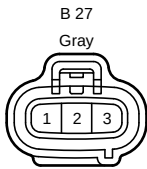
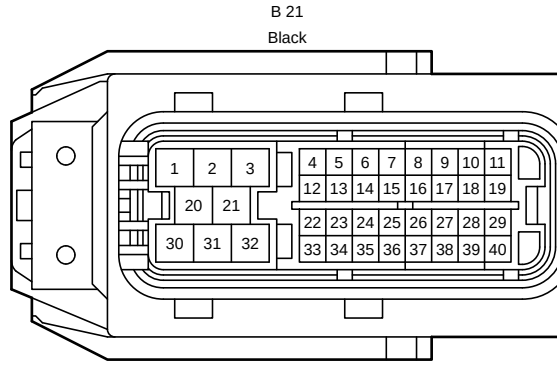
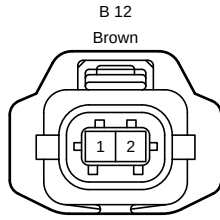
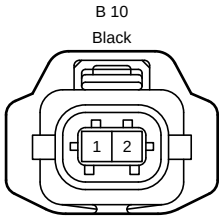
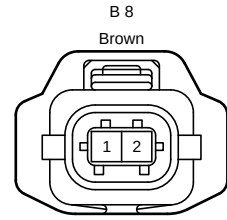
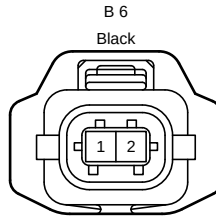


Position of Parts in Engine Compartment <LHD 1ND-TV TMMF Made>

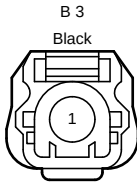

- B 1 Starter Assembly
- B 2 Generator Assembly
- B 3 Generator Assembly
- B 6 Injector Assembly No. 1
- B 8 Injector Assembly No. 2
- B 10 Injector Assembly No. 3
- B 12 Injector Assembly No. 4
- B 21 ECM
- B 26 No. 1 Crank Position Sensor
- B 27 Engine Oil Level Sensor
- B 28 Oil Pressure Sender Gage Assembly
- B 29 Throttle with Motor Body Assembly
- B 30 Camshaft Position Sensor (No. 1 Crank Position Sensor)
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 34 Fuel Pressure Sensor (Common Rail Assembly)
- B 36 Turbocharger Sub-Assembly
- B 38 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 40 Exhaust Gas Temperature Sensor
- B 41 No. 2 Exhaust Gas Temperature Sensor
- B 42 Intake Air Temperature Sensor
- B 43 Differential Pressure Sensor
- B 44 Fuel Temperature Sensor
- B 48 Transmission Revolution Sensor (Turbine)
- B 49 Diesel Turbo Pressure Sensor (E.F.I. Vacuum Sensor Assembly)
- B 50 Clutch Stroke Sensor (Clutch Actuator Assembly)
- B 54 Turbocharger Sub-Assembly
- B 55 Electric EGR Control Valve Assembly
- B 58 Shift and Select Actuator Assembly
- B 59 Shift and Select Actuator Assembly
- B 60 Clutch Actuator Assembly
- B 62 Electric EGR Control Valve Assembly
- B 65 Oil Pressure Switching Valve Assembly
- B 66 VSV (Pressure Release Valve)
- B 67 Injection or Supply Pump Assembly
- B 68 Engine Oil Pressure Switch Assembly
- B 71 Back-Up Light Switch Assembly
- B 75 Glow Plug Assembly
- B 76 Glow Plug Relay Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 79 Fusible Link Block Assembly
- B 94 Crankshaft Position Sensor
- B 96 Park/Neutral Position Switch Assembly
- B 104 ECM
- B 105 Camshaft Position Sensor
- B 106 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 107 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- B 109 Glow Plug Assembly
- B 110 No. 2 Exhaust Gas Temperature Sensor
- C 1 Starter Assembly
- E 2 Park/Neutral Position Switch Assembly
- E 3 Shift Stroke Sensor

Position of Parts in Engine Compartment <LHD 1ND-TV TMMF Made>

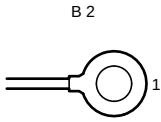

Position of Parts in Engine Compartment <LHD 1ND-TV TMMF Made>

