



Position of Parts in Engine Compartment <LHD 1NR-FE TMMF Made>

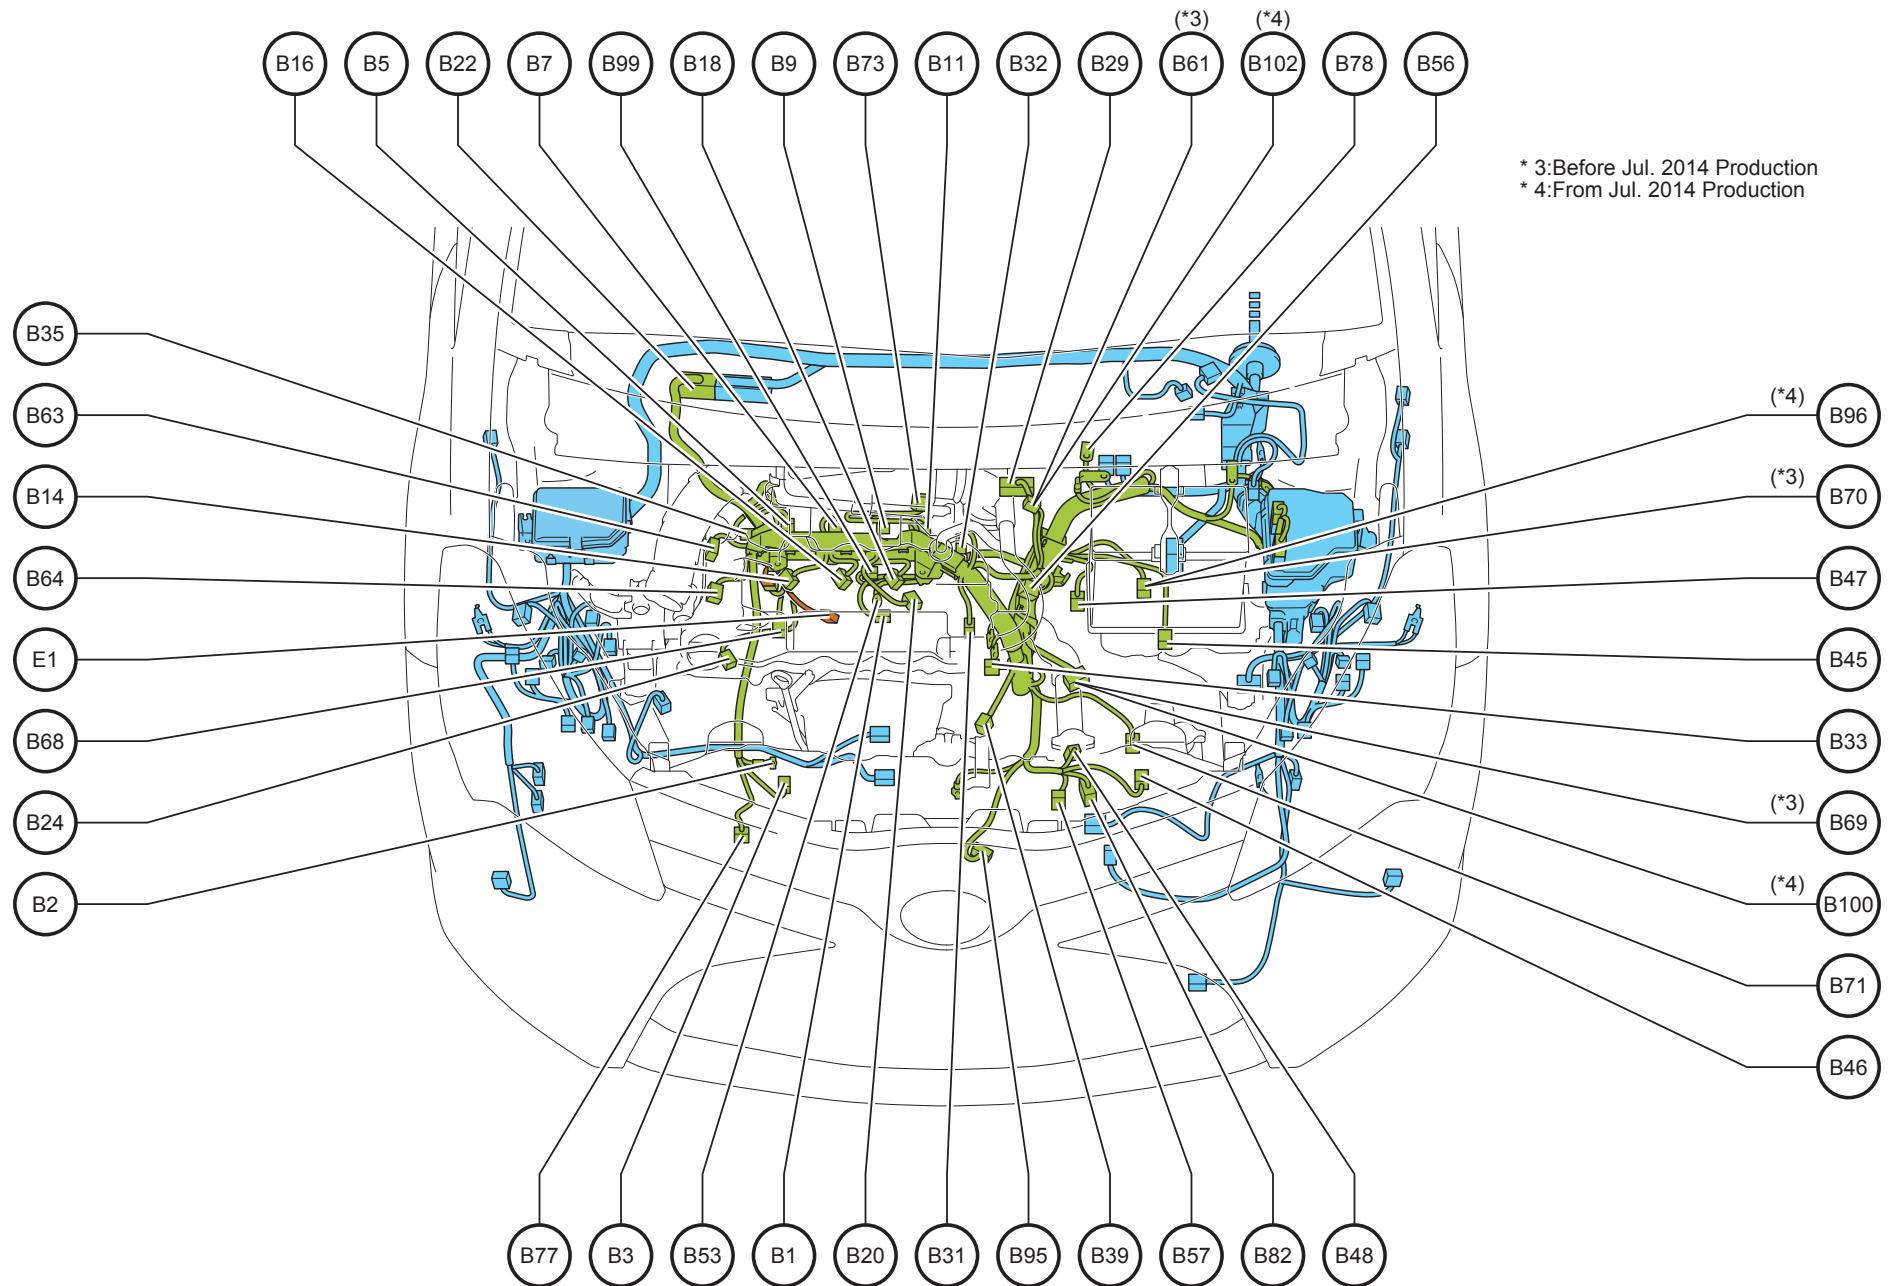

- B 1 Starter Assembly
- B 2 Generator Assembly
- B 3 Generator Assembly
- B 5 Fuel Injector Assembly No. 1
- B 7 Fuel Injector Assembly No. 2
- B 9 Fuel Injector Assembly No. 3
- B 11 Fuel Injector Assembly No. 4
- B 14 Ignition Coil No. 1
- B 16 Ignition Coil No. 2
- B 18 Ignition Coil No. 3
- B 20 Ignition Coil No. 4
- B 22 ECM
- B 24 No. 1 Crank Position Sensor
- B 29 Throttle with Motor Body Assembly
- B 31 VVT Sensor (Bank 1 Exhaust Side)
- B 32 VVT Sensor (Bank 1 Intake Side)
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 35 E.F.I. Vacuum Sensor Assembly
- B 39 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 45 Oil Pressure Sensor
- B 46 Transmission Revolution Sensor (Primary)
- B 47 Transmission Revolution Sensor (Secondary)
- B 48 Transmission Revolution Sensor (Turbine)
- B 53 Starter Assembly
- B 56 EGR Valve Assembly
- B 57 Oil Pump Motor Assembly
- B 61 Purge VSV
- B 63 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- B 64 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- B 68 Engine Oil Pressure Switch Assembly
- B 69 Park/Neutral Position Switch Assembly
- B 70 Park/Neutral Position Switch Assembly
- B 71 Back-Up Light Switch Assembly
- B 73 Intake Mass Air Flow Meter Sub-Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 82 CVT Solenoid
- B 95 Oxygen Sensor (Bank 1 Sensor 2)
- B 96 Park/Neutral Position Switch Assembly
- B 99 Starter Assembly
- B 100 Park/Neutral Position Switch Assembly
- B 102 Purge VSV

- E 1 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <LHD 1NR-FE TMMF Made>

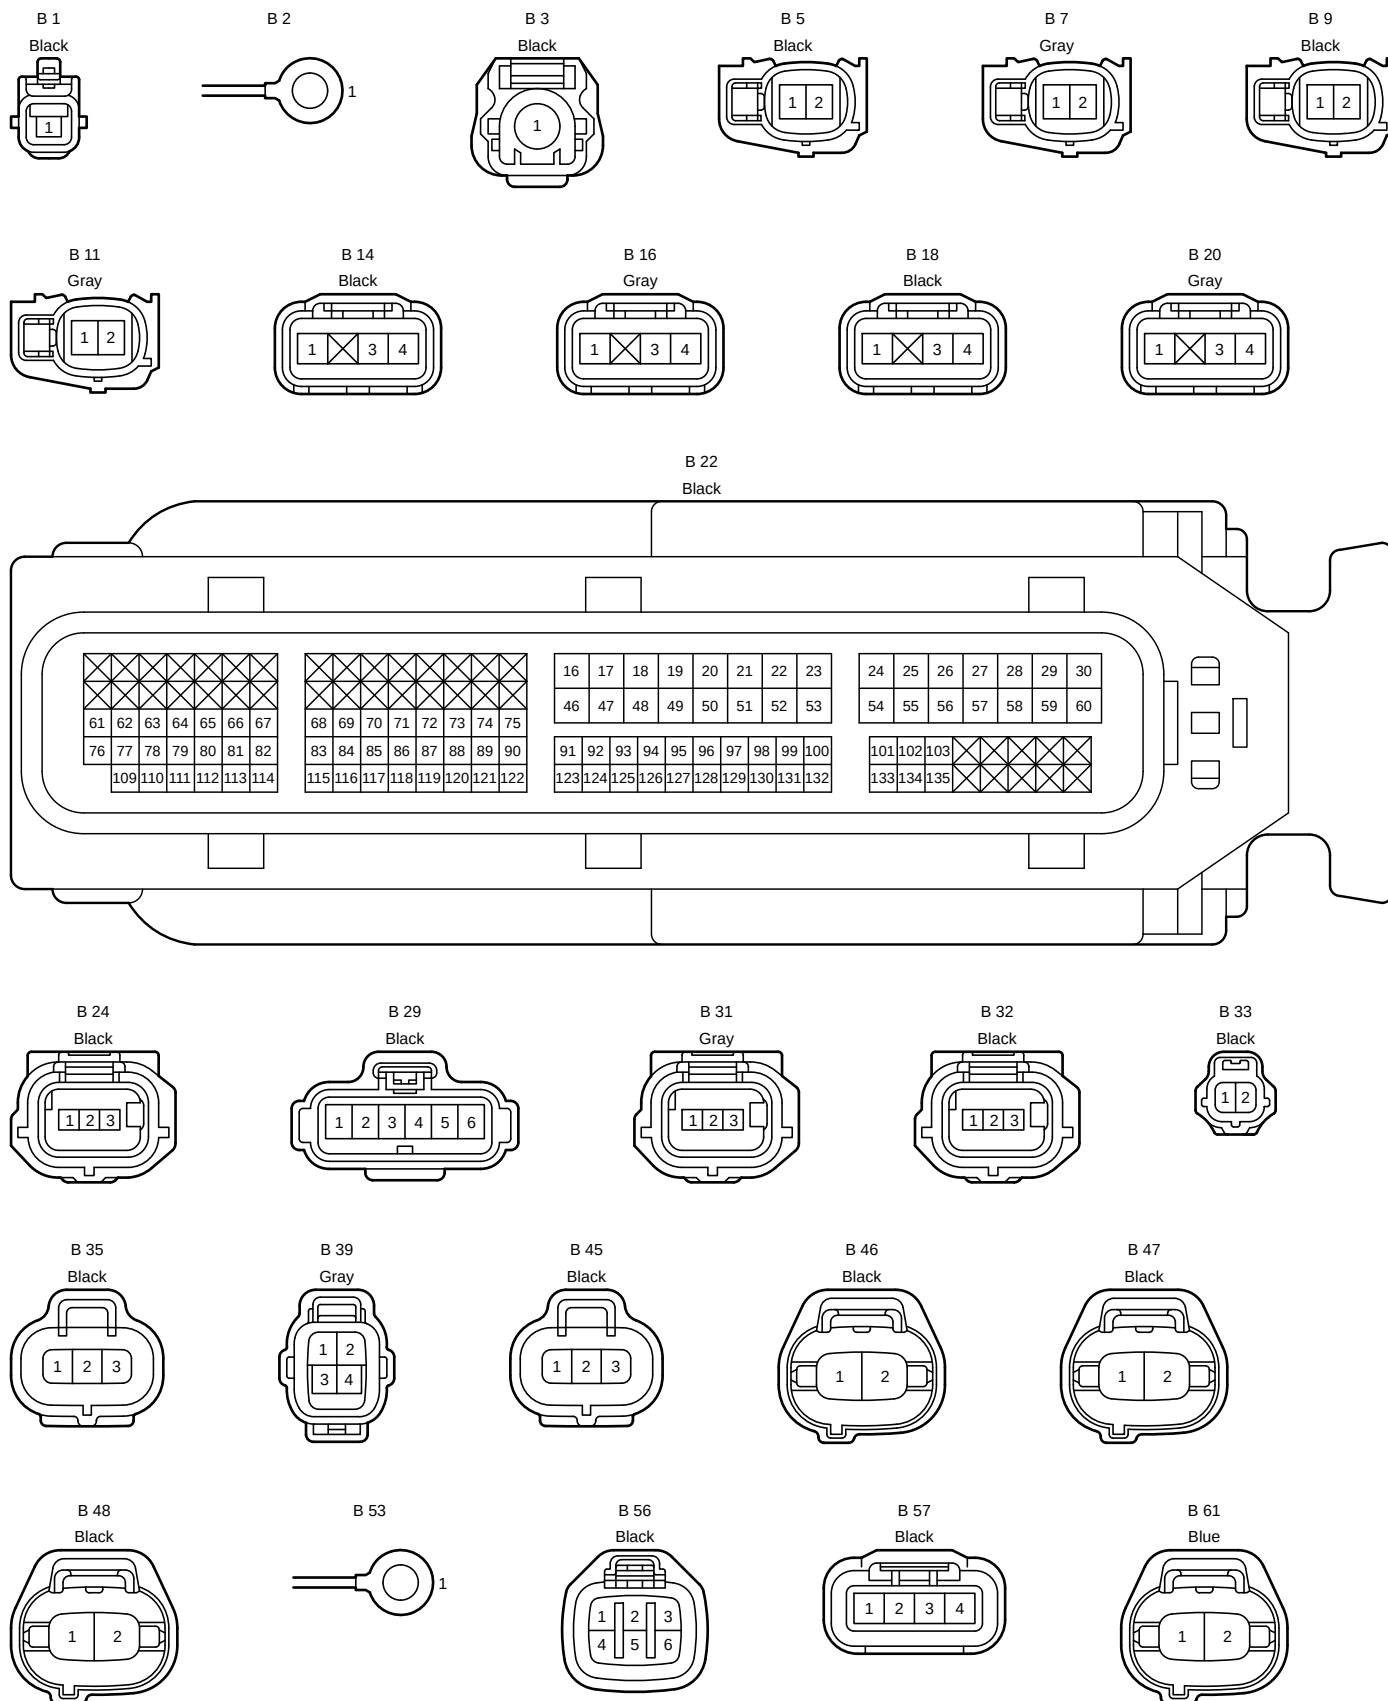

Position of Parts in Engine Compartment <LHD 1NR-FE TMMF Made>

