



Position of Parts in Engine Compartment <RHD 2ZR-FE TMMF Made>

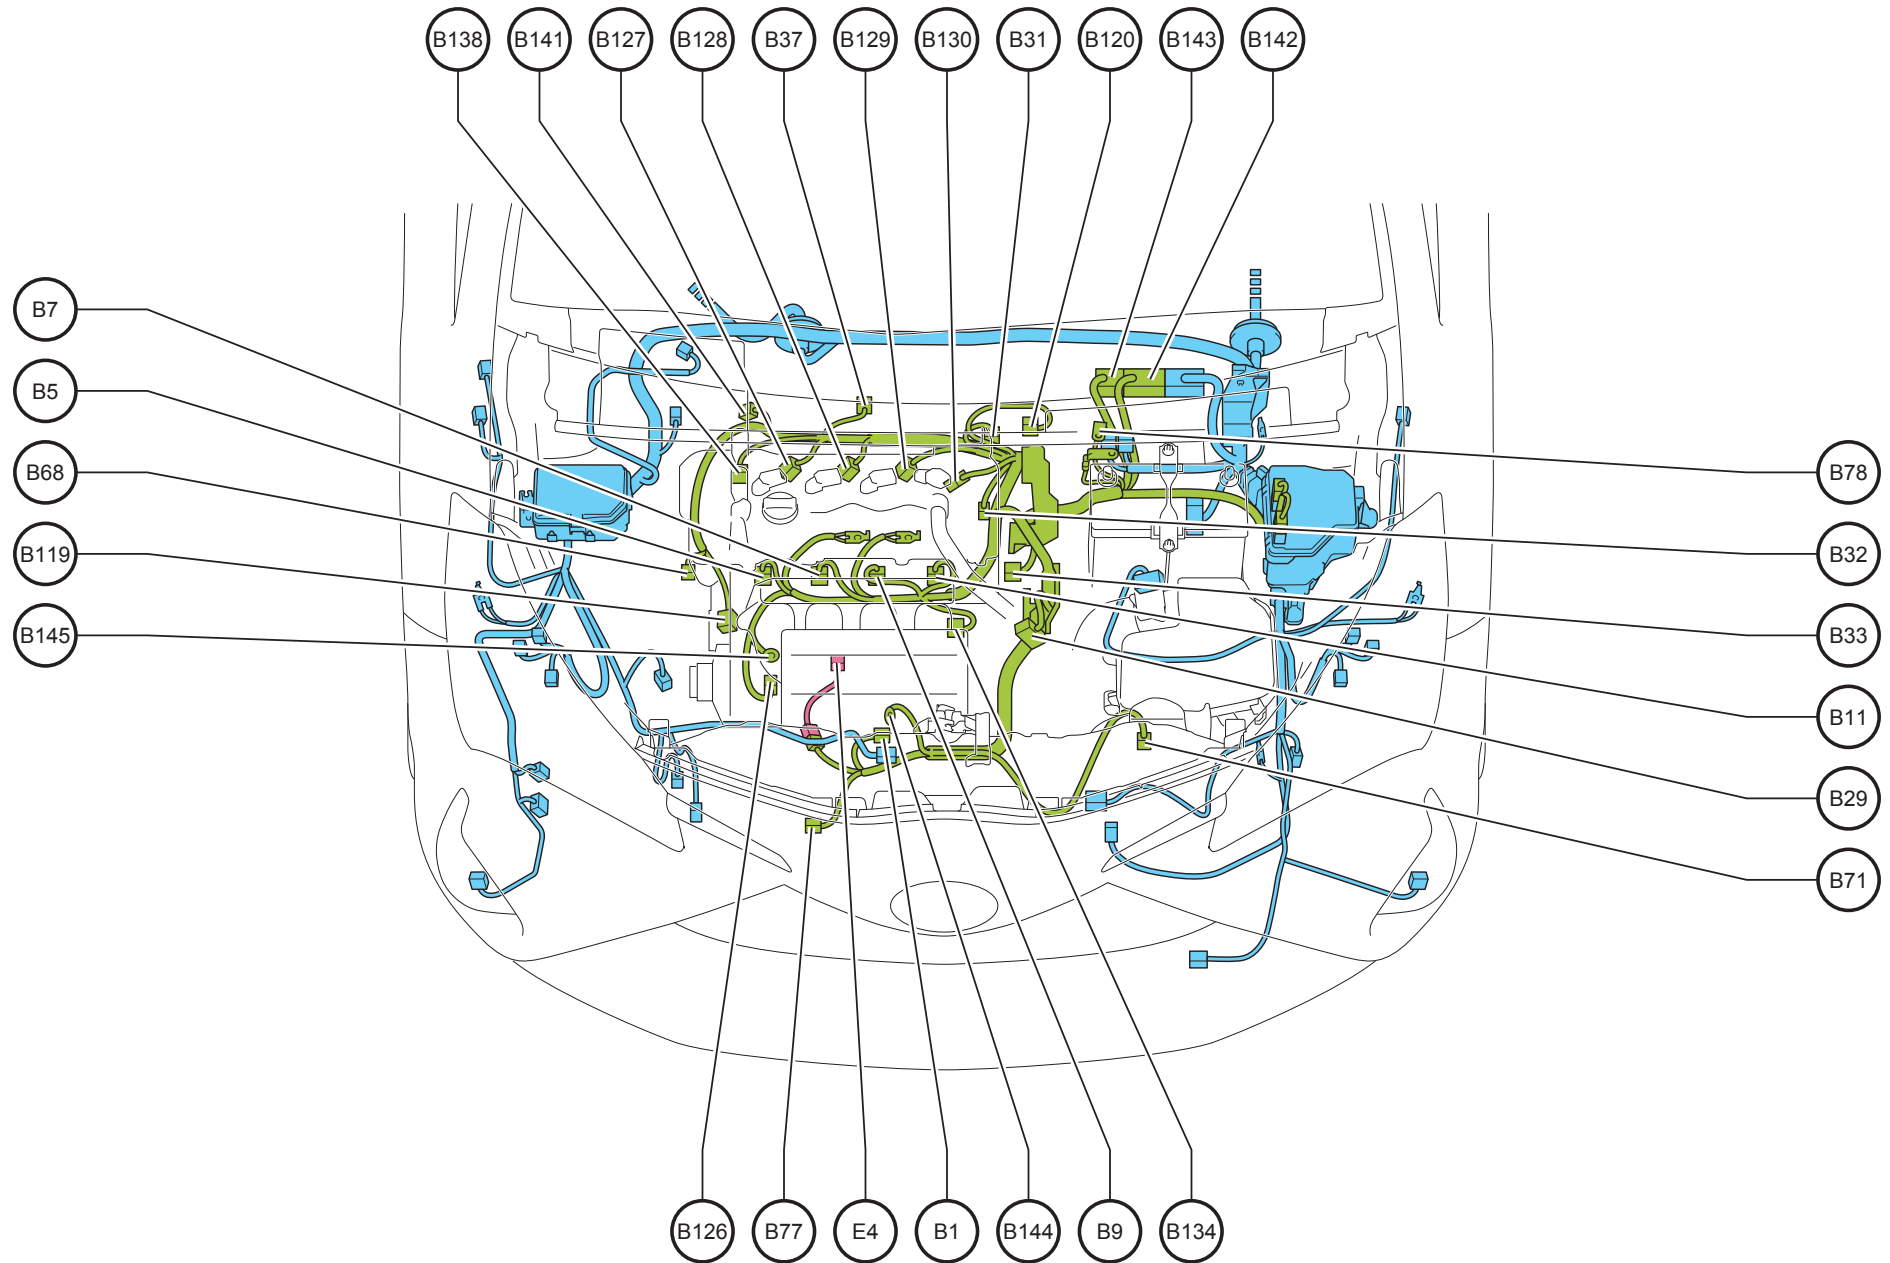

- B 1 Starter Assembly
- B 5 Fuel Injector Assembly No. 1
- B 7 Fuel Injector Assembly No. 2
- B 9 Fuel Injector Assembly No. 3
- B 11 Fuel Injector Assembly No. 4
- B 29 Throttle with Motor Body Assembly
- B 31 VVT Sensor (Bank 1 Exhaust Side)
- B 32 VVT Sensor (Bank 1 Intake Side)
- B 33 E.F.I. Engine Coolant Temperature Sensor
- B 37 Oxygen Sensor (Bank 1 Sensor 1)
- B 68 Engine Oil Pressure Switch Assembly
- B 71 Back-Up Light Switch Assembly
- B 77 With Pulley Compressor Assembly
- B 78 Fusible Link Block Assembly
- B 119 Crank Position Sensor
- B 120 Purge VSV
- B 126 Generator Assembly
- B 127 Ignition Coil No. 1
- B 128 Ignition Coil No. 2
- B 129 Ignition Coil No. 3
- B 130 Ignition Coil No. 4
- B 134 Manifold Temperature Sensor
- B 138 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- B 141 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
- B 142 ECM
- B 143 ECM
- B 144 Starter Assembly
- B 145 Generator Assembly


- E 4 Knock Control Sensor

Position of Parts in Engine Compartment <RHD 2ZR-FE TMMF Made>

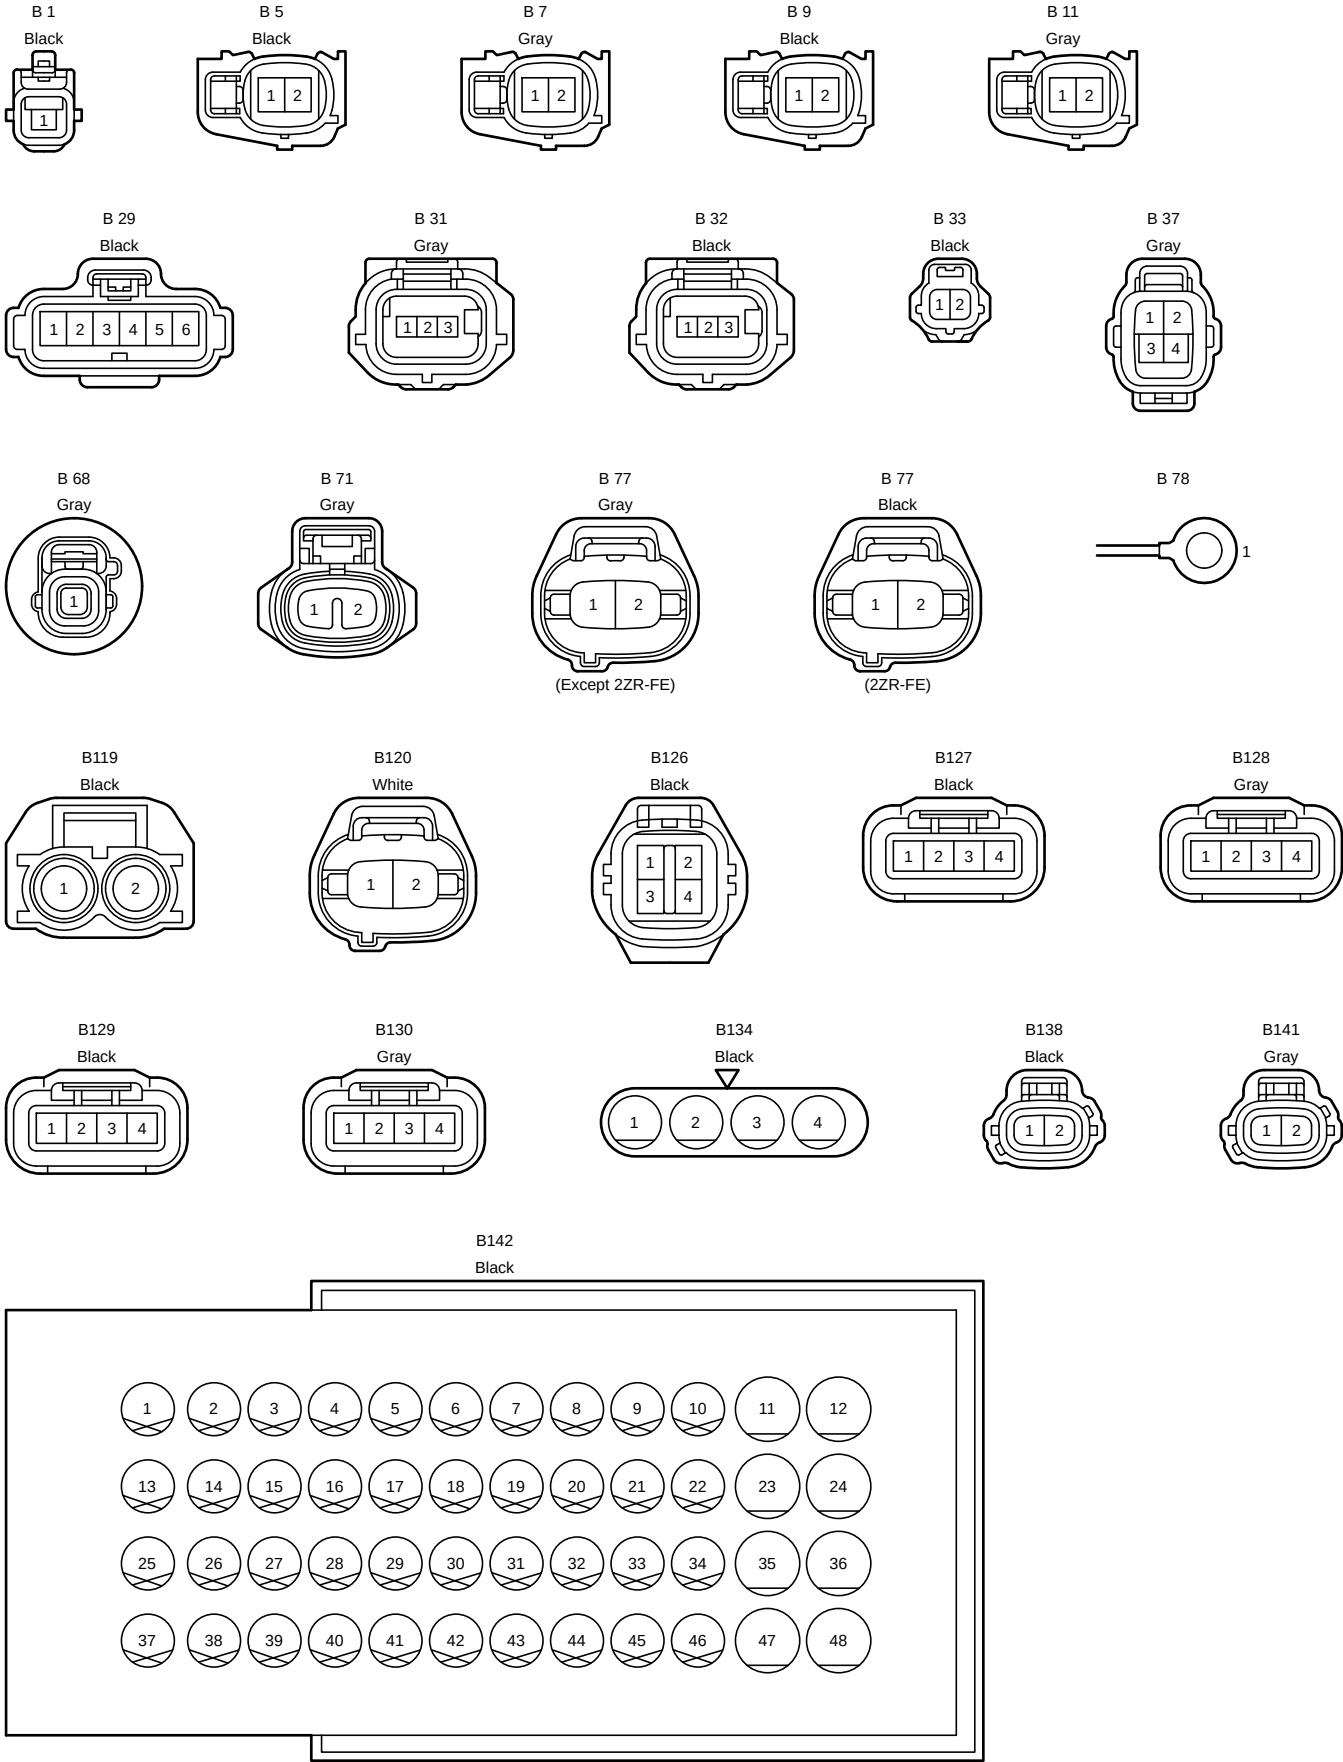

Position of Parts in Engine Compartment <RHD 2ZR-FE TMMF Made>


B143
Black

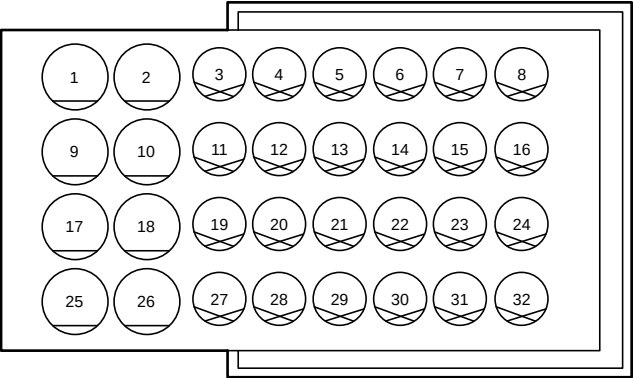

B144



 B145



E 4
Black

