 
 
 
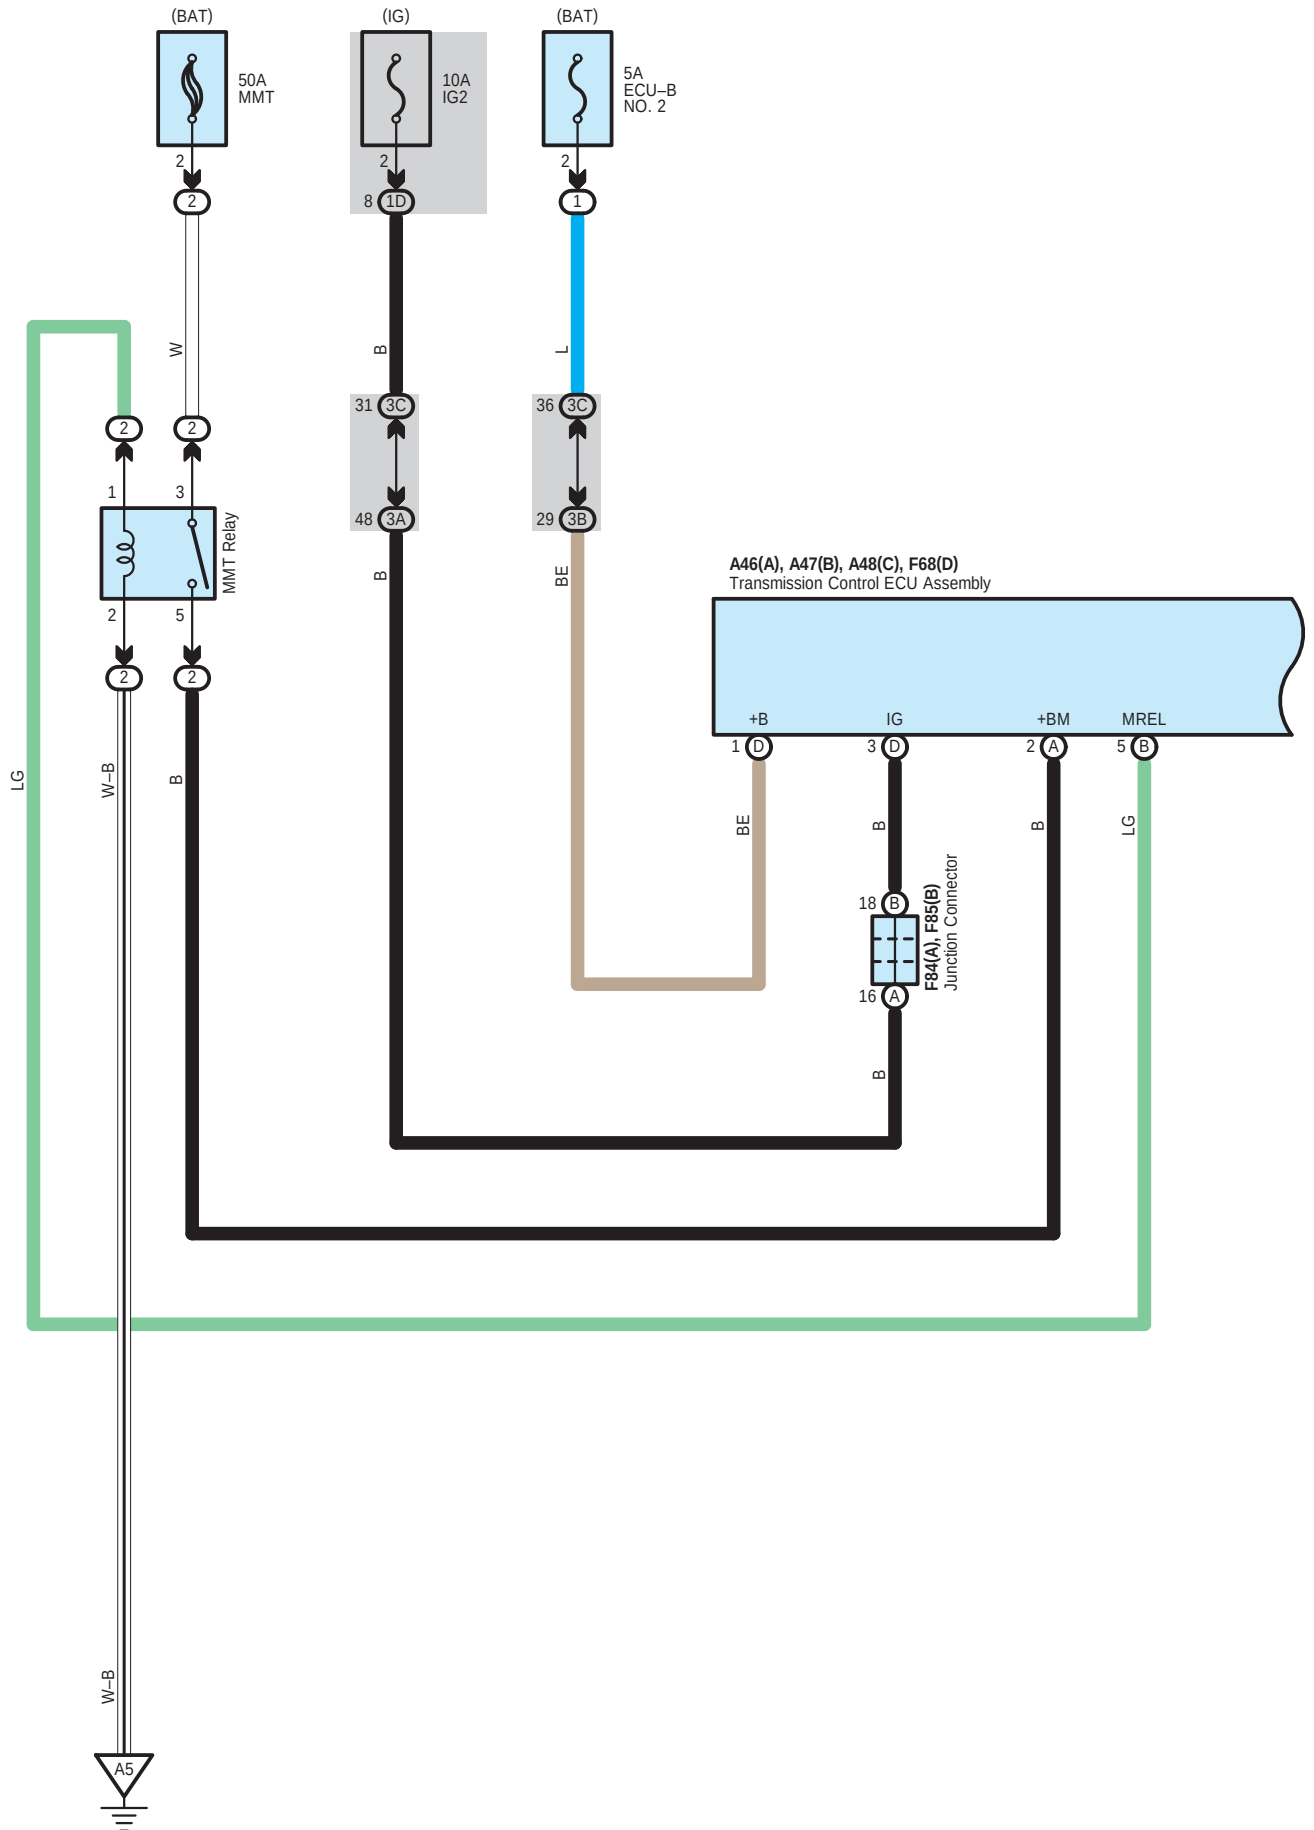 


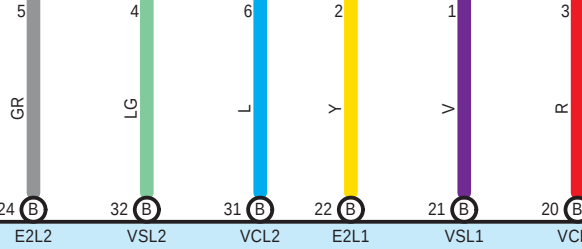


A49
Select Stroke Sensor

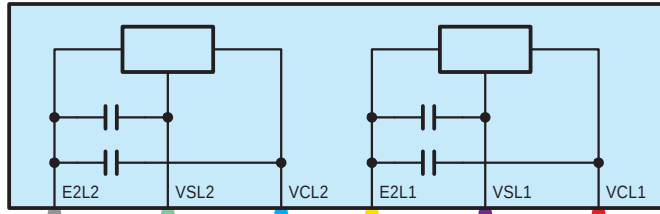


A46(A), A47(B), A48(C), F68(D)
Transmission Control ECU Assembly

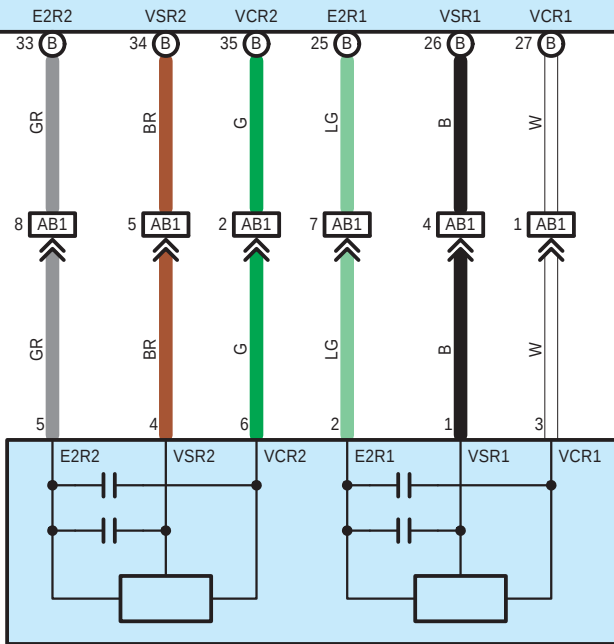


 
B50
Clutch Stroke Sensor
(Clutch Actuator Assembly)

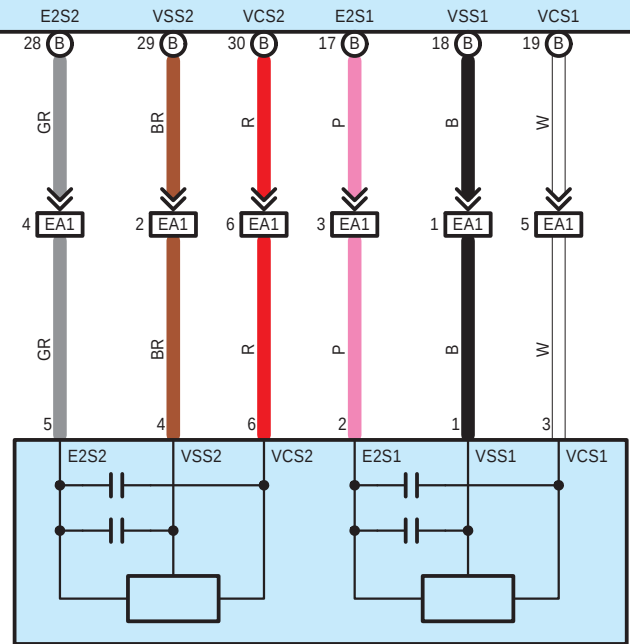


E3
Shift Stroke Sensor

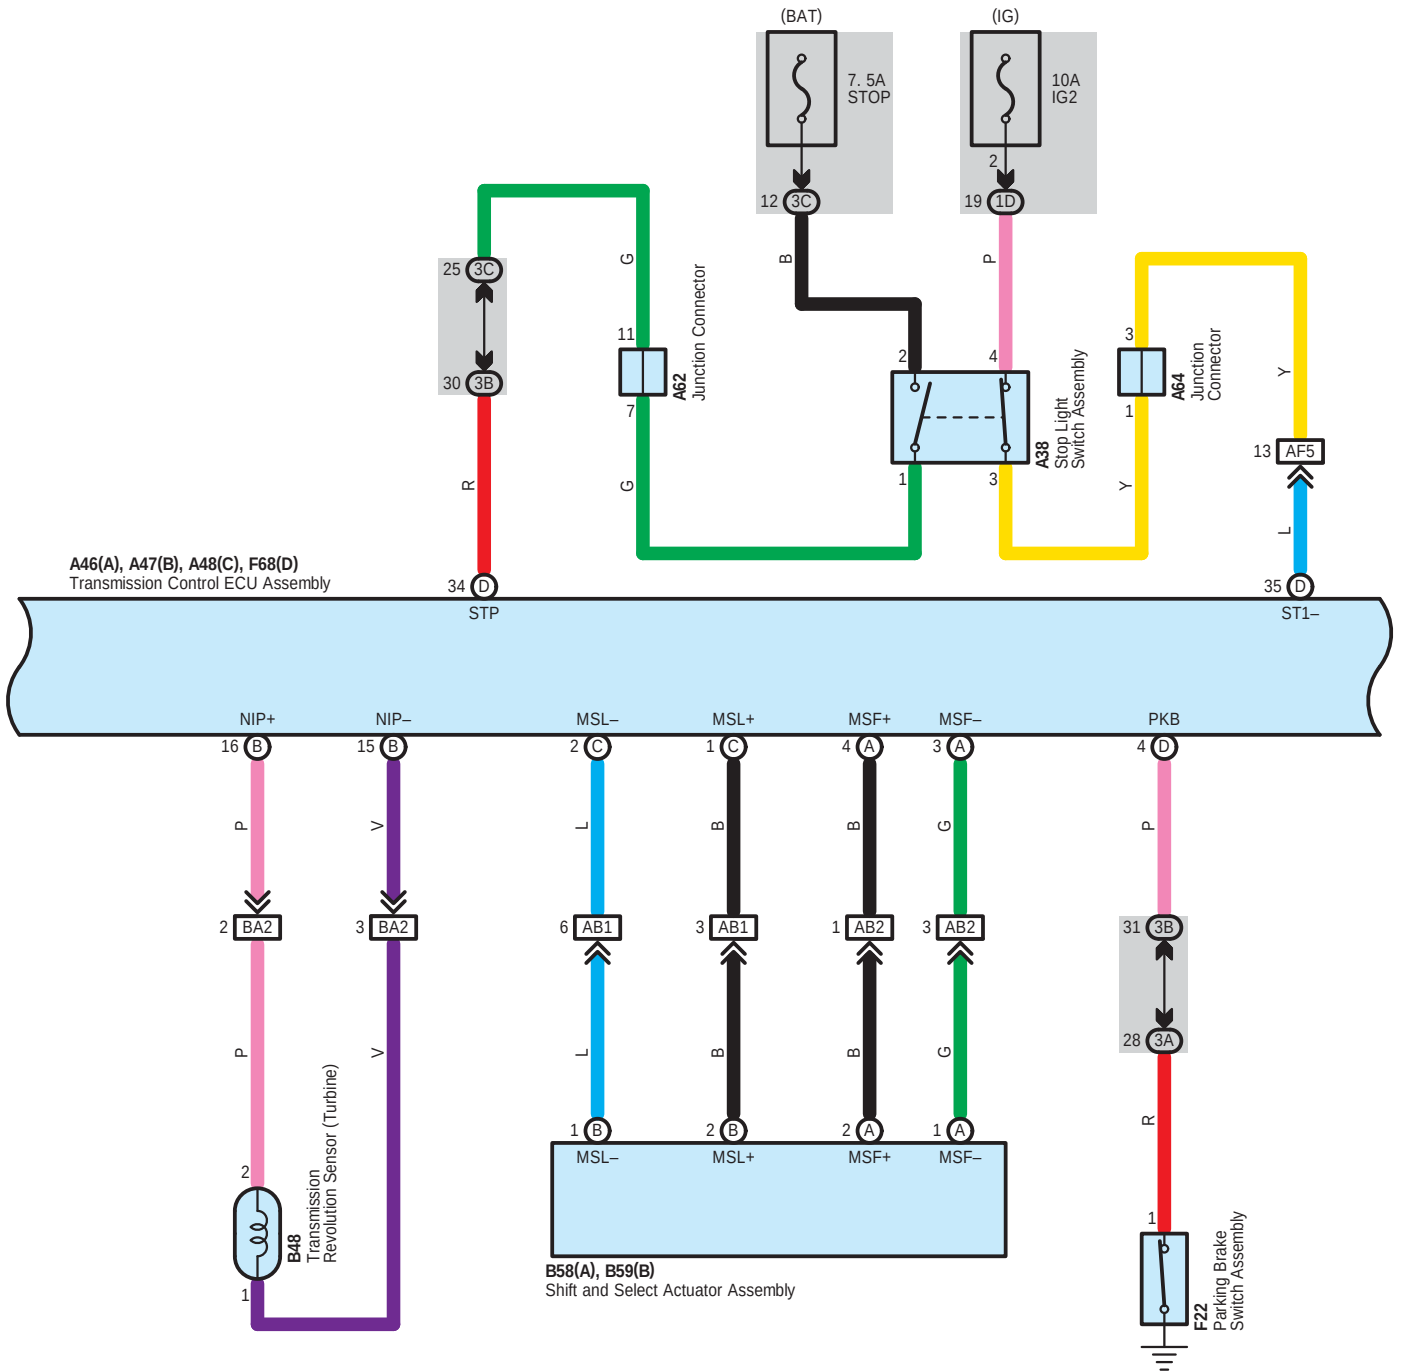 


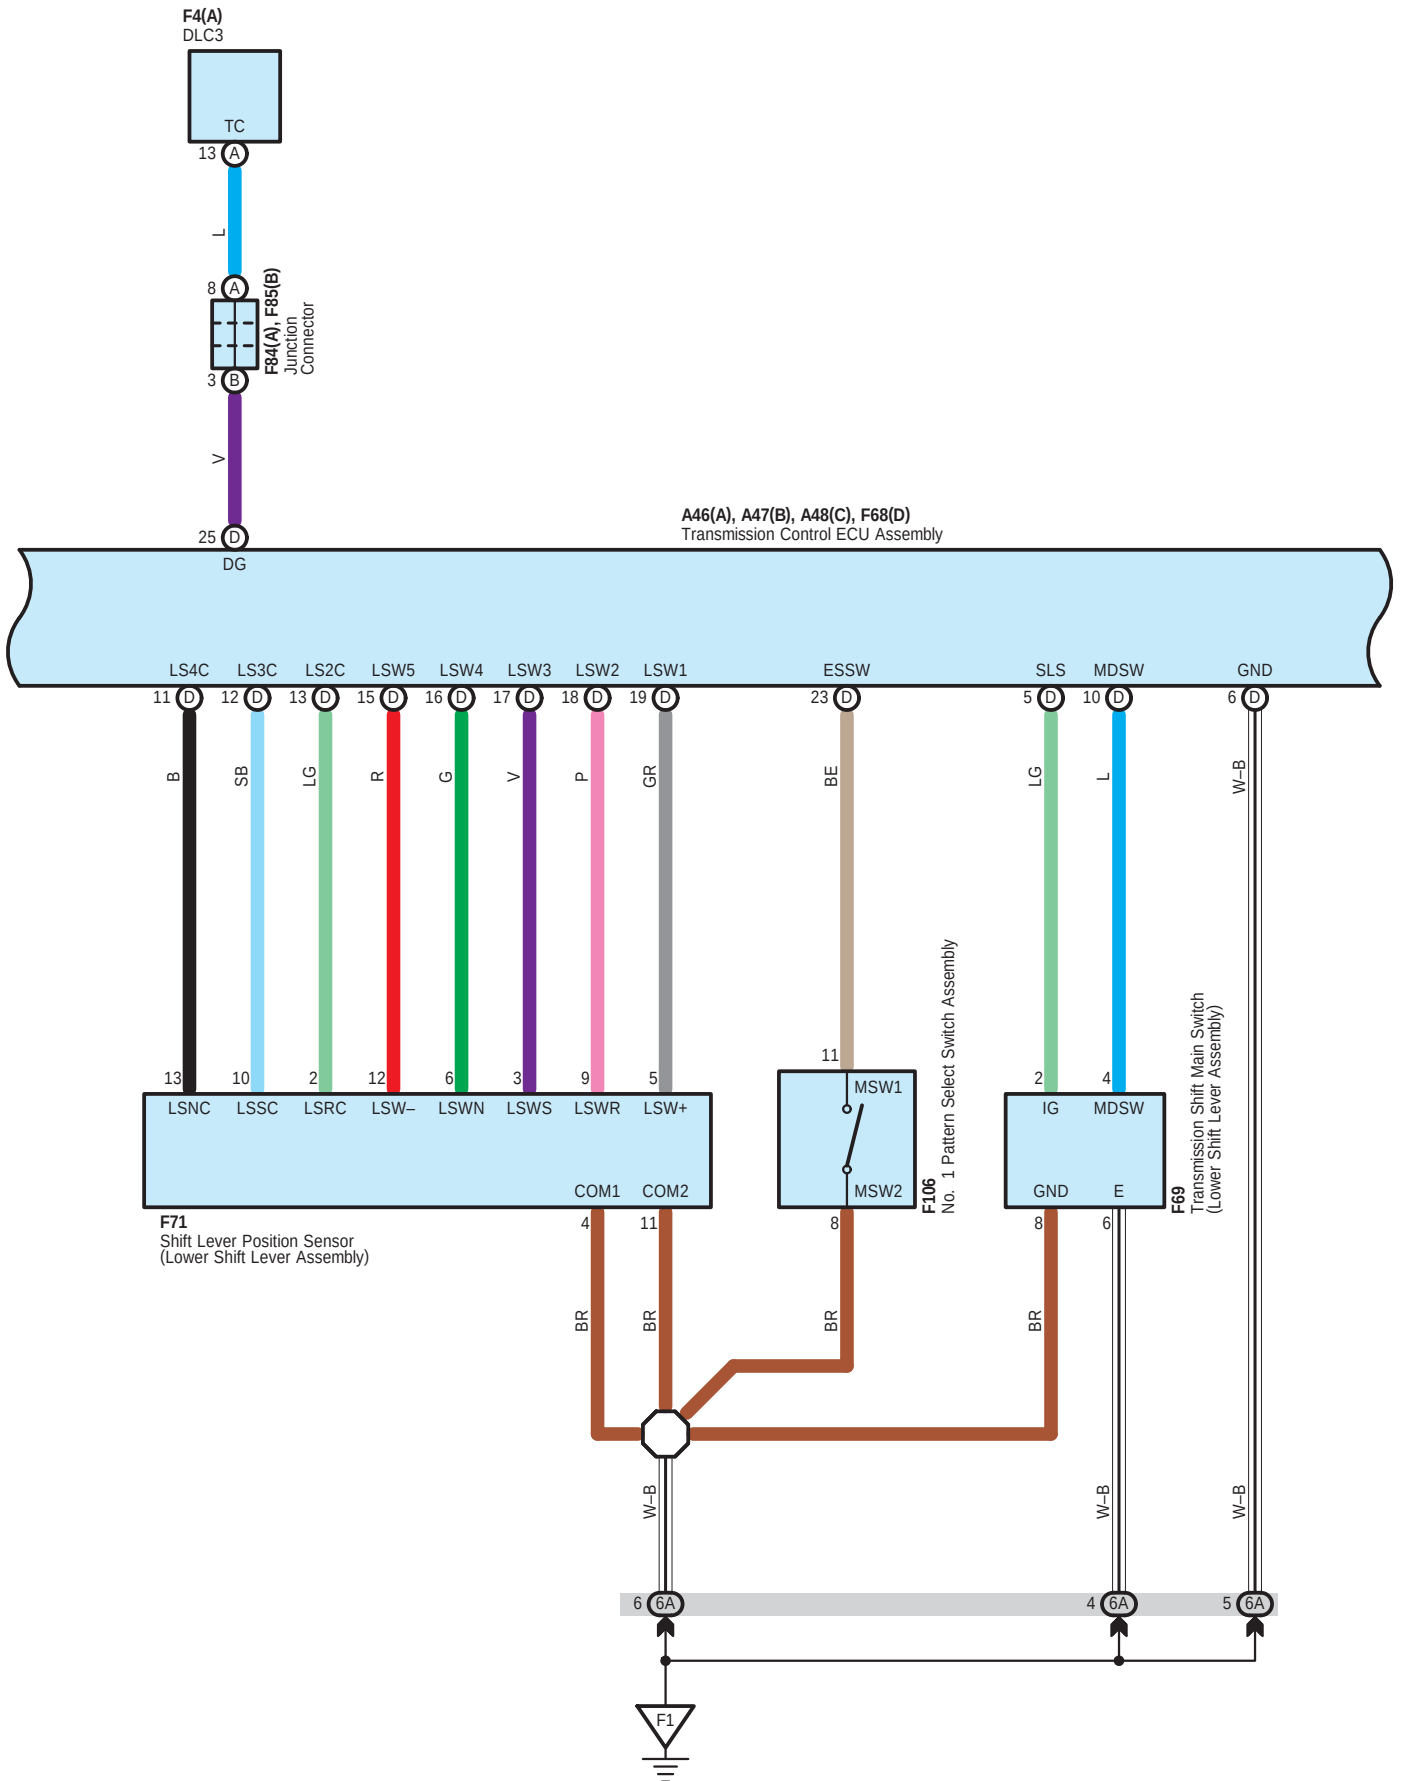 


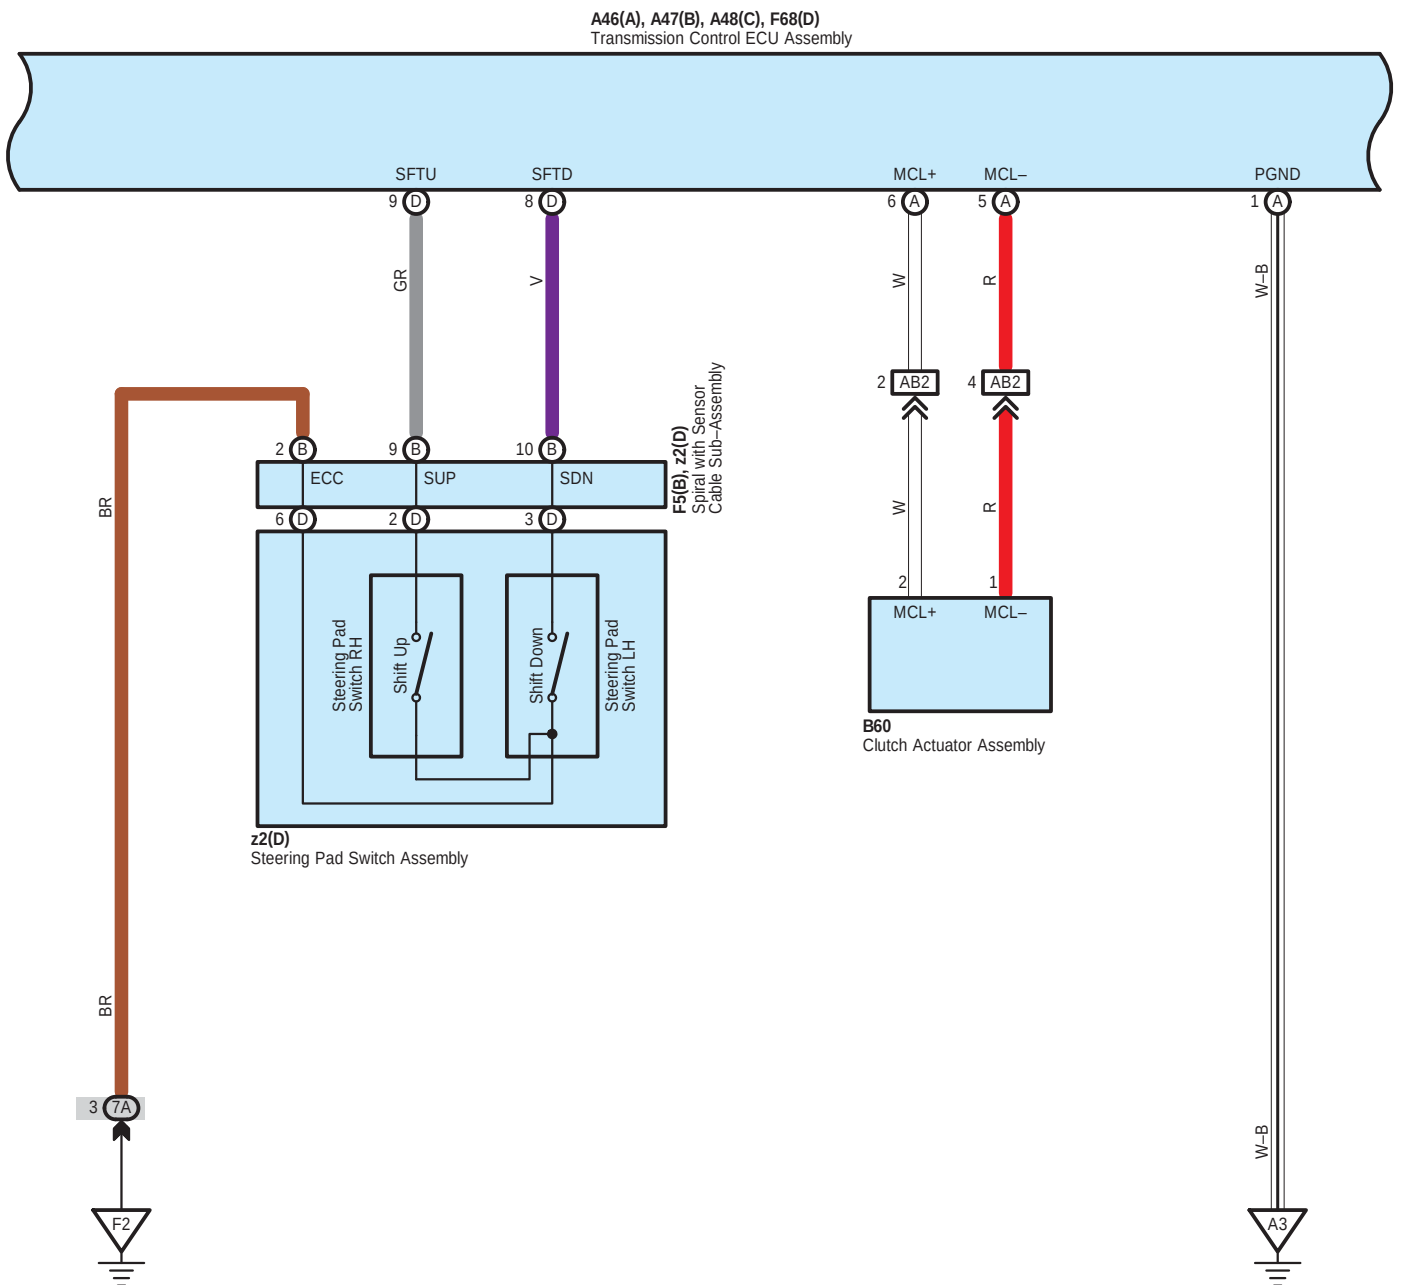 


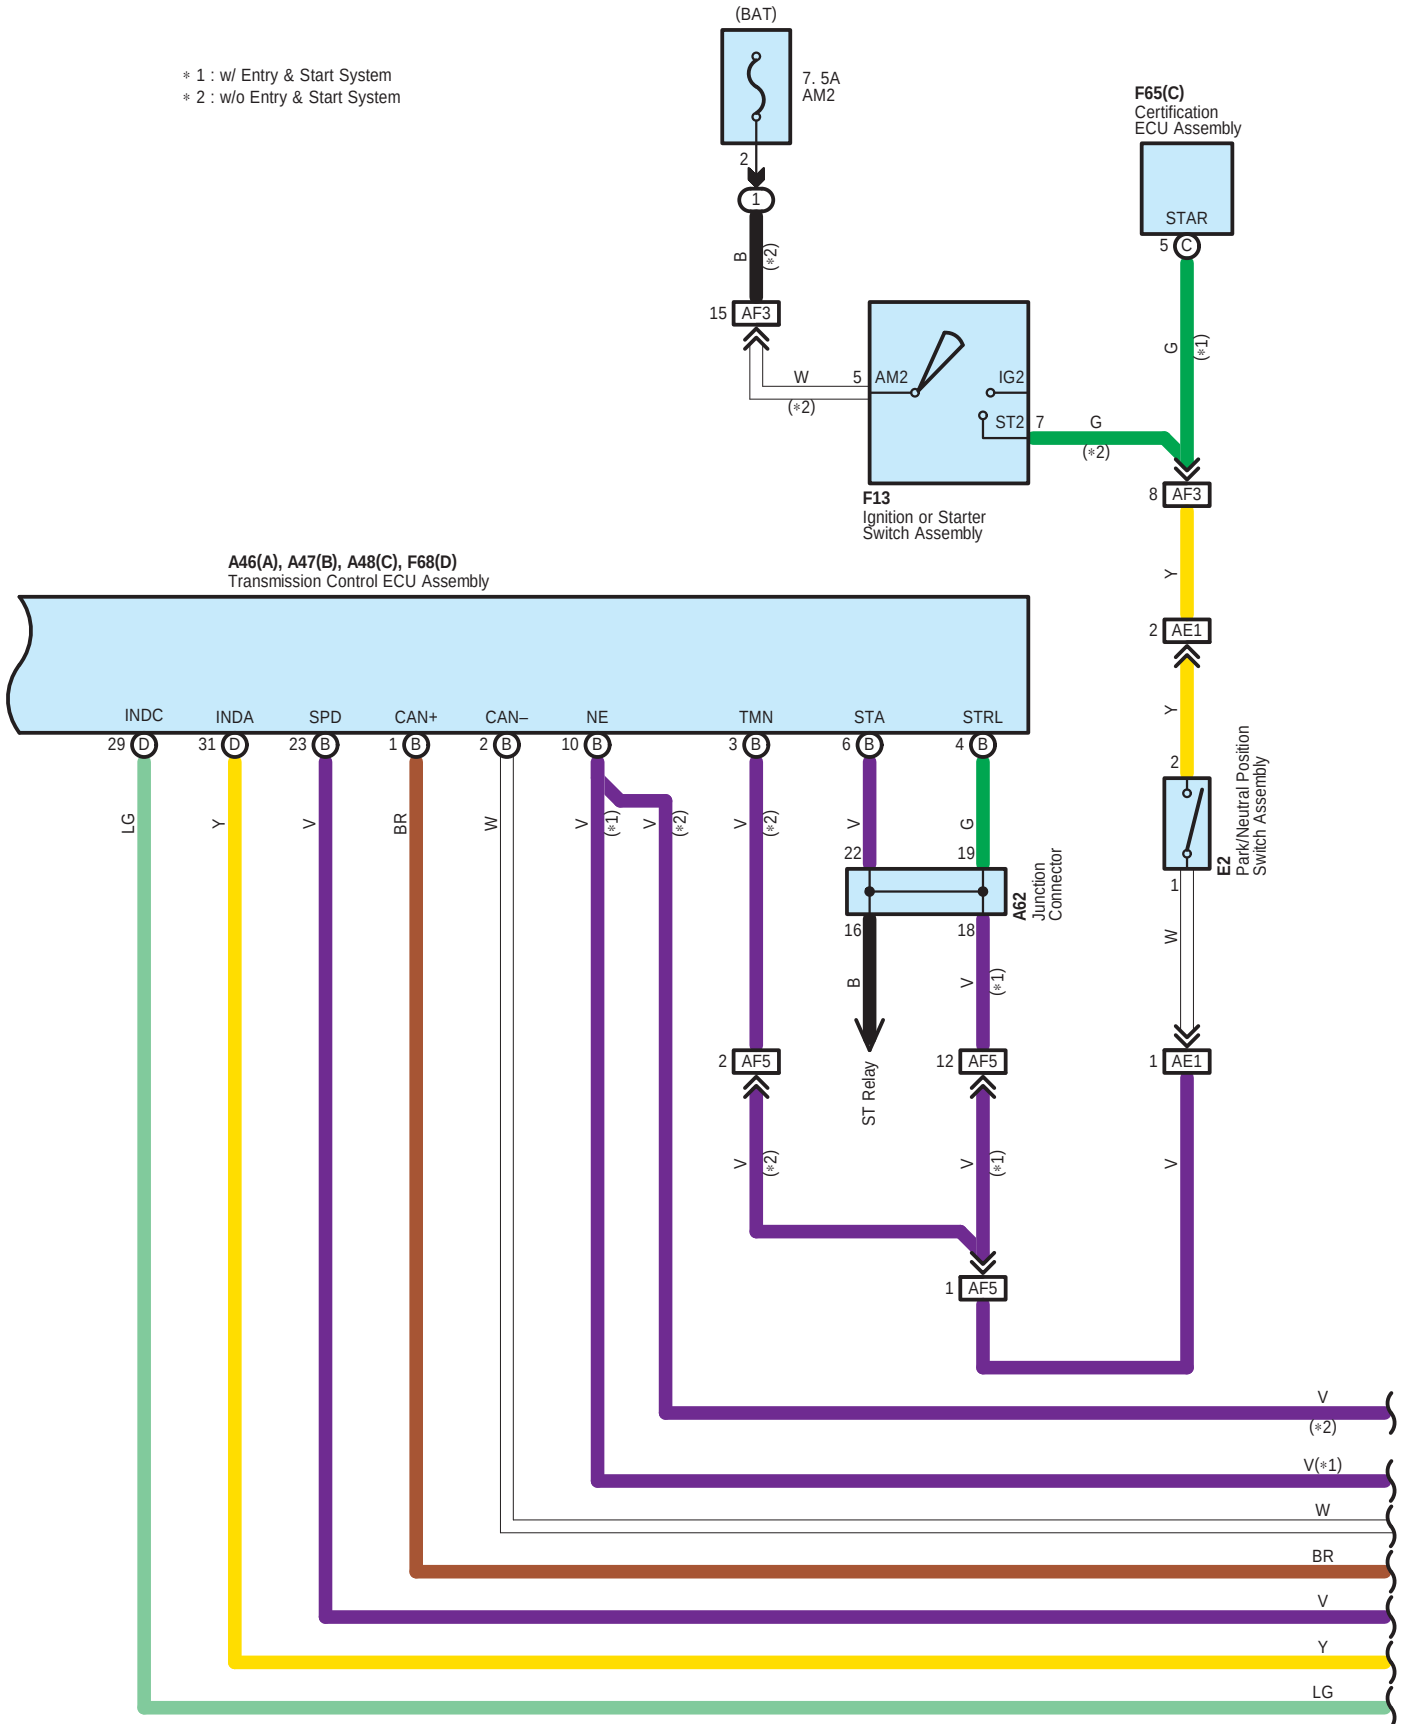 

   
- * 1 : w/ Entry & Start System
- * 2 : w/o Entry & Start System
- * 3 : w/ Exhaust Gas Temperature Sensor
- * 4 : w/o Exhaust Gas Temperature Sensor

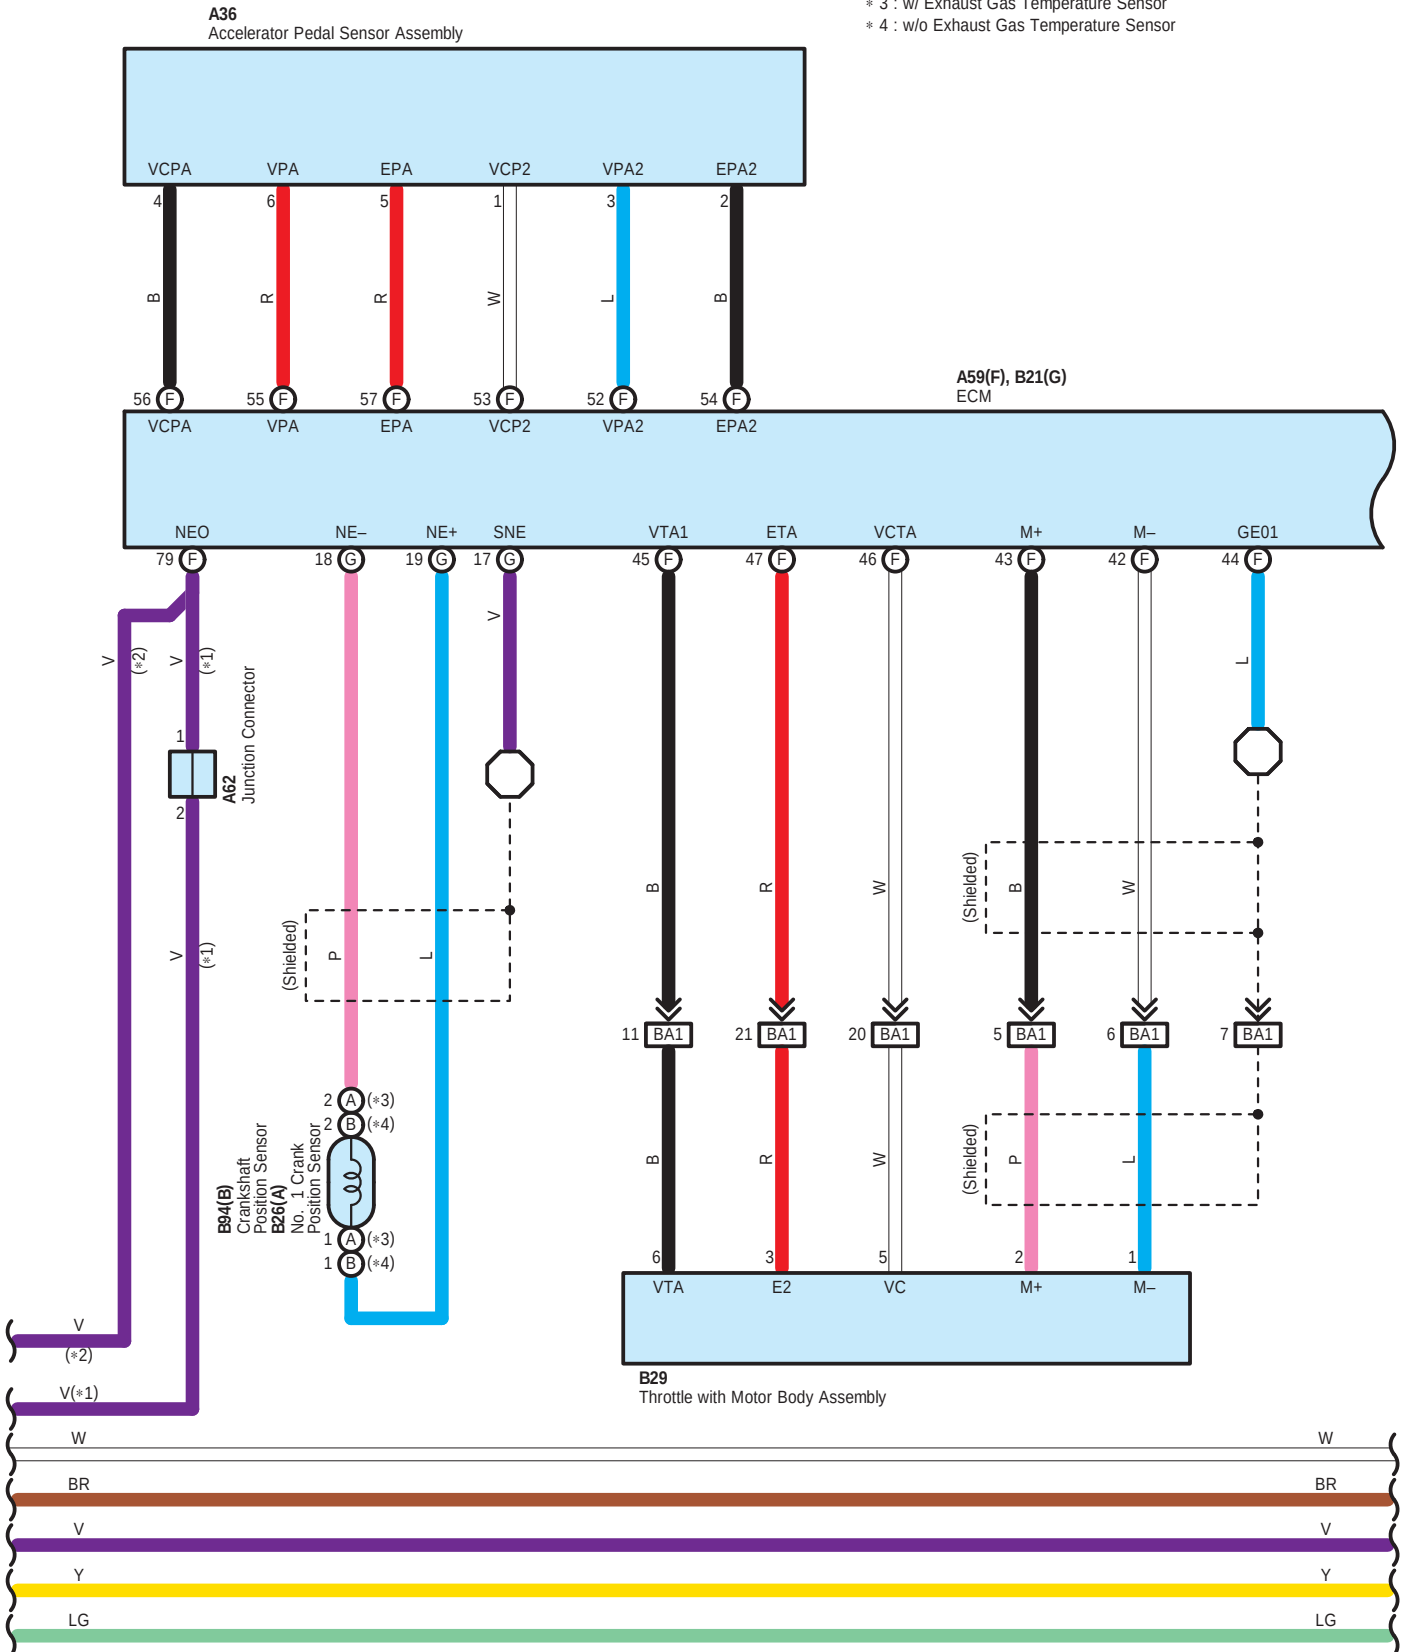

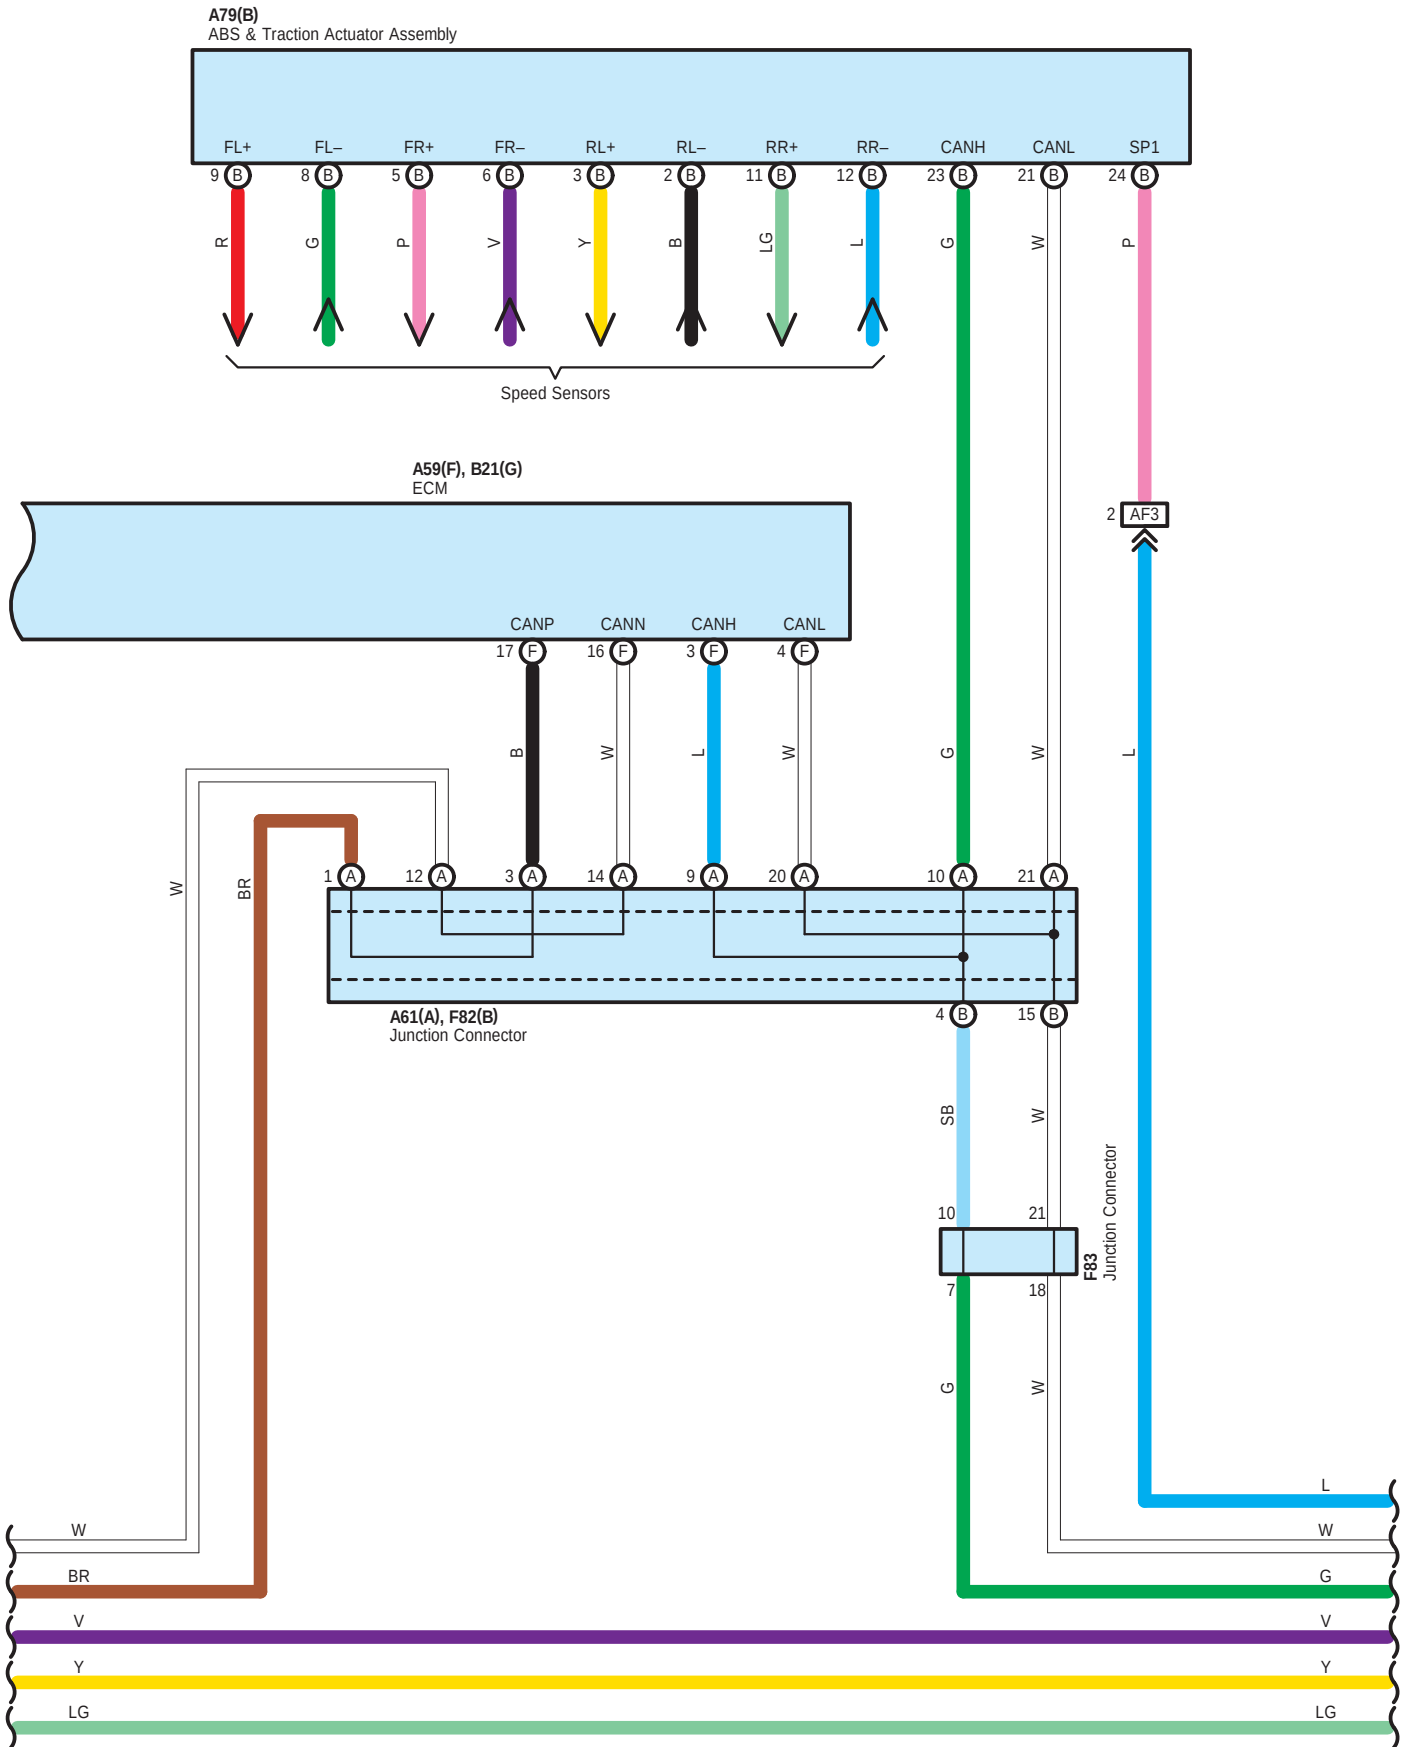


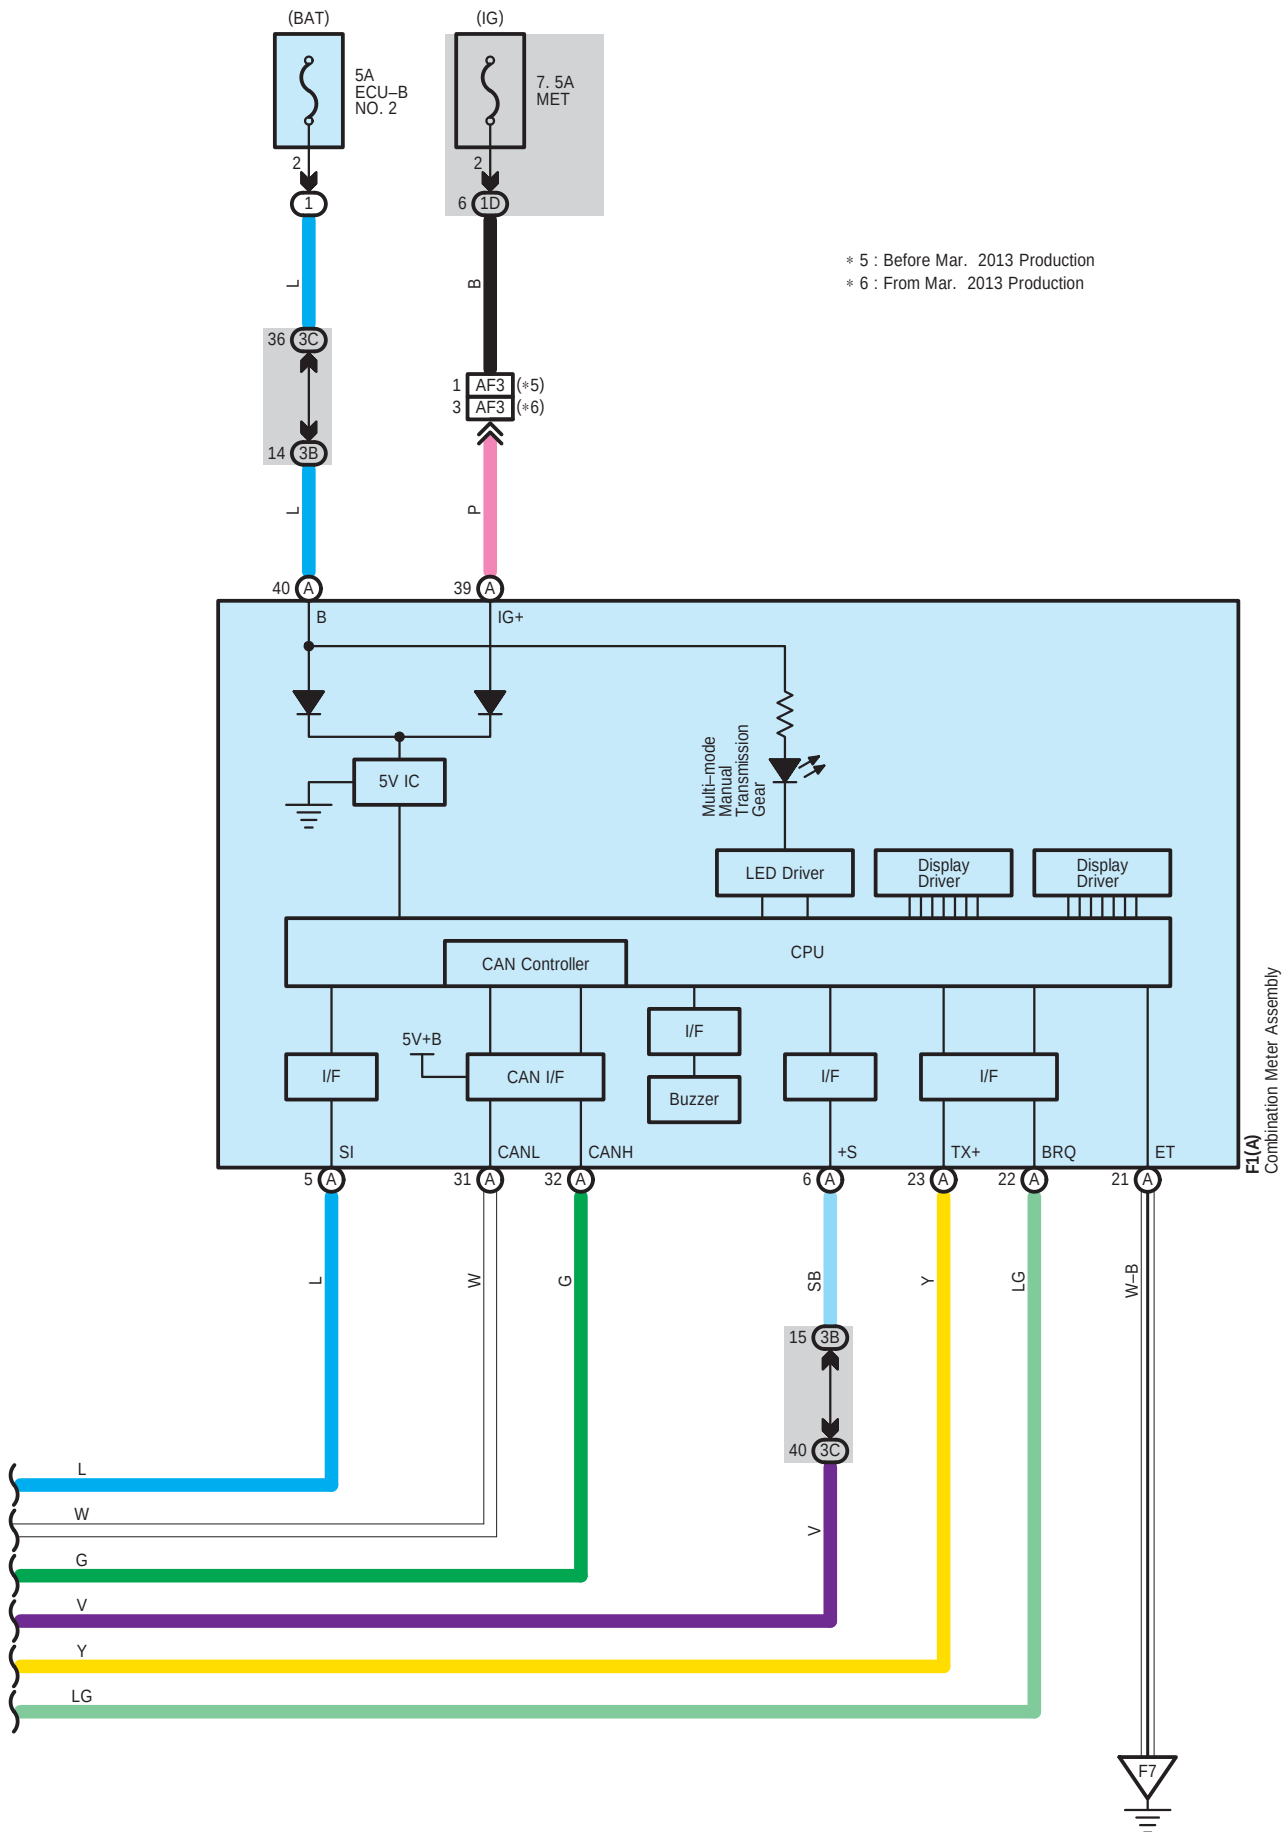


A 36
Black

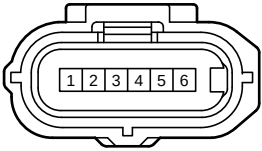 


A 38
White

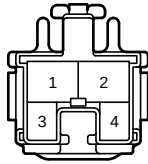 

A 46
White

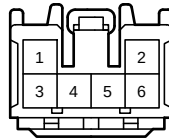 


A 47
White

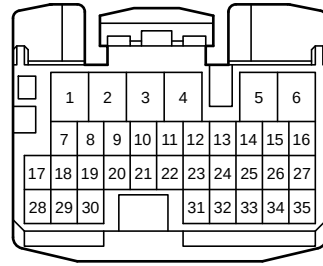 


A 48
White



 
A 49
Black

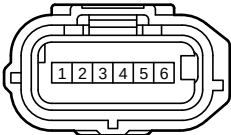


A 59
Black

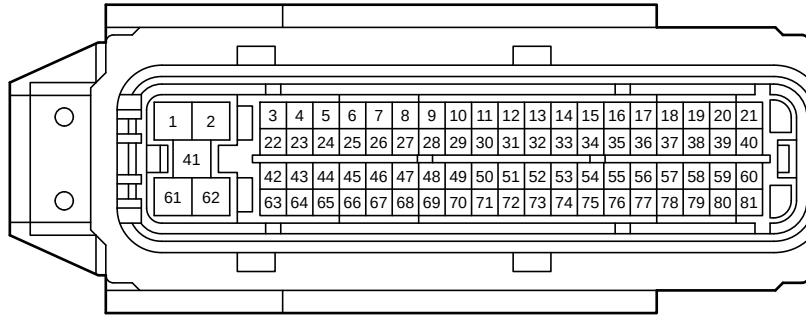 


A 61
Blue

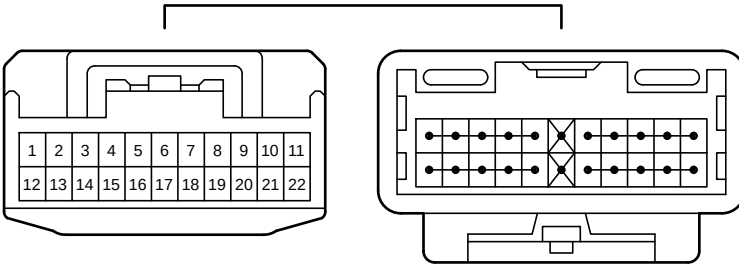 


A 62
White

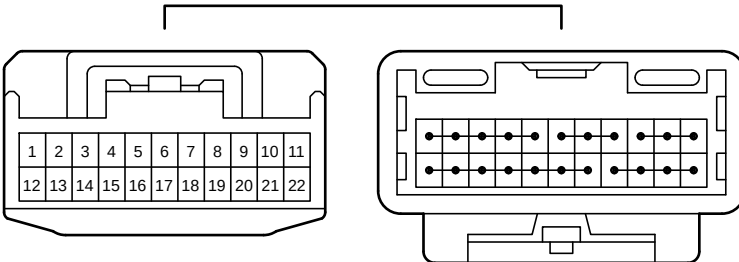 


A 64
White

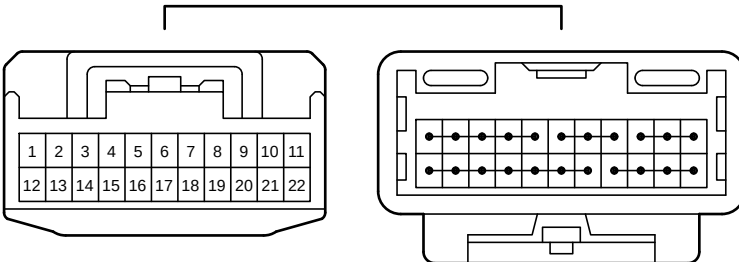 

A 79
Black

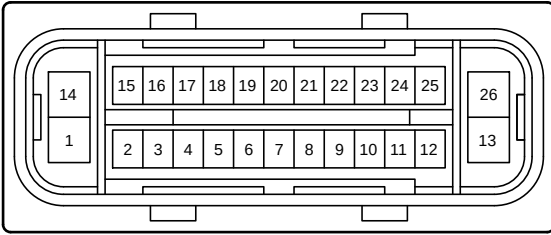 


B 21
Black

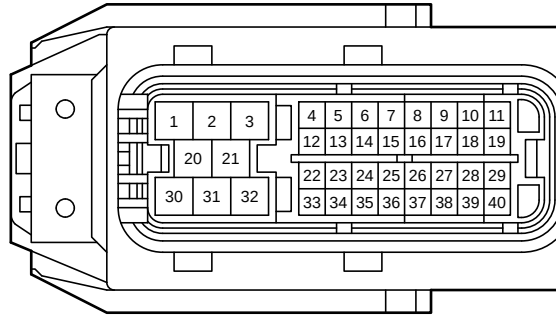 


B 26
Gray



 
B 29
Black

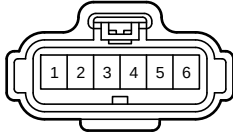

B 48
Black

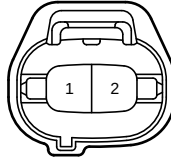 

B 50
Black

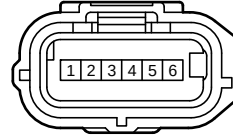 

B 58
Black



B 59
Black



 
B 60
Black




B 94
Black




E 2
Black

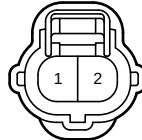


E 3
Black

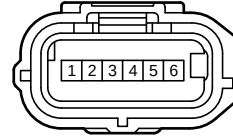 


F 1
Black

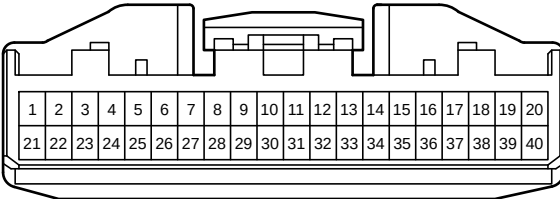 


F 4
White

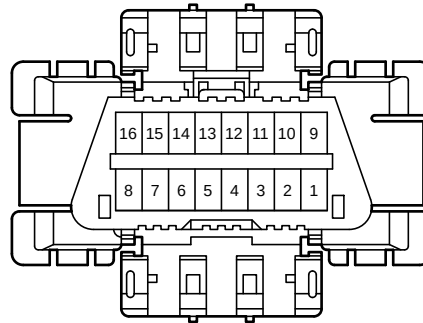 

F 5
Black

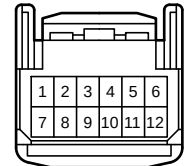 


F 13
White

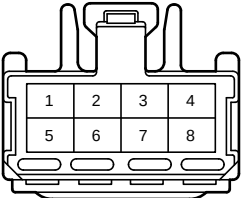 

F 22
White



 F 65
White

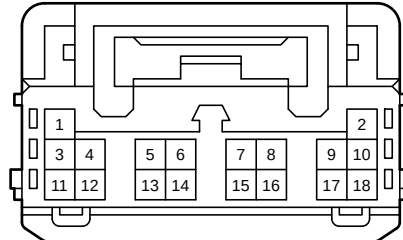

F 68
White

