



Position of Parts in Instrument Panel <LHD>

- * 1:Refer to the Service Bulletin for the installation position of the parts.
- * 2:w/ Power Switch
- * 3:w/o Power Switch
- * 4:Radio Receiver Assembly Type
- * 12:Before Jul. 2014 Production
- * 13:From Jul. 2014 Production
- * 20:Before May 2015 Production

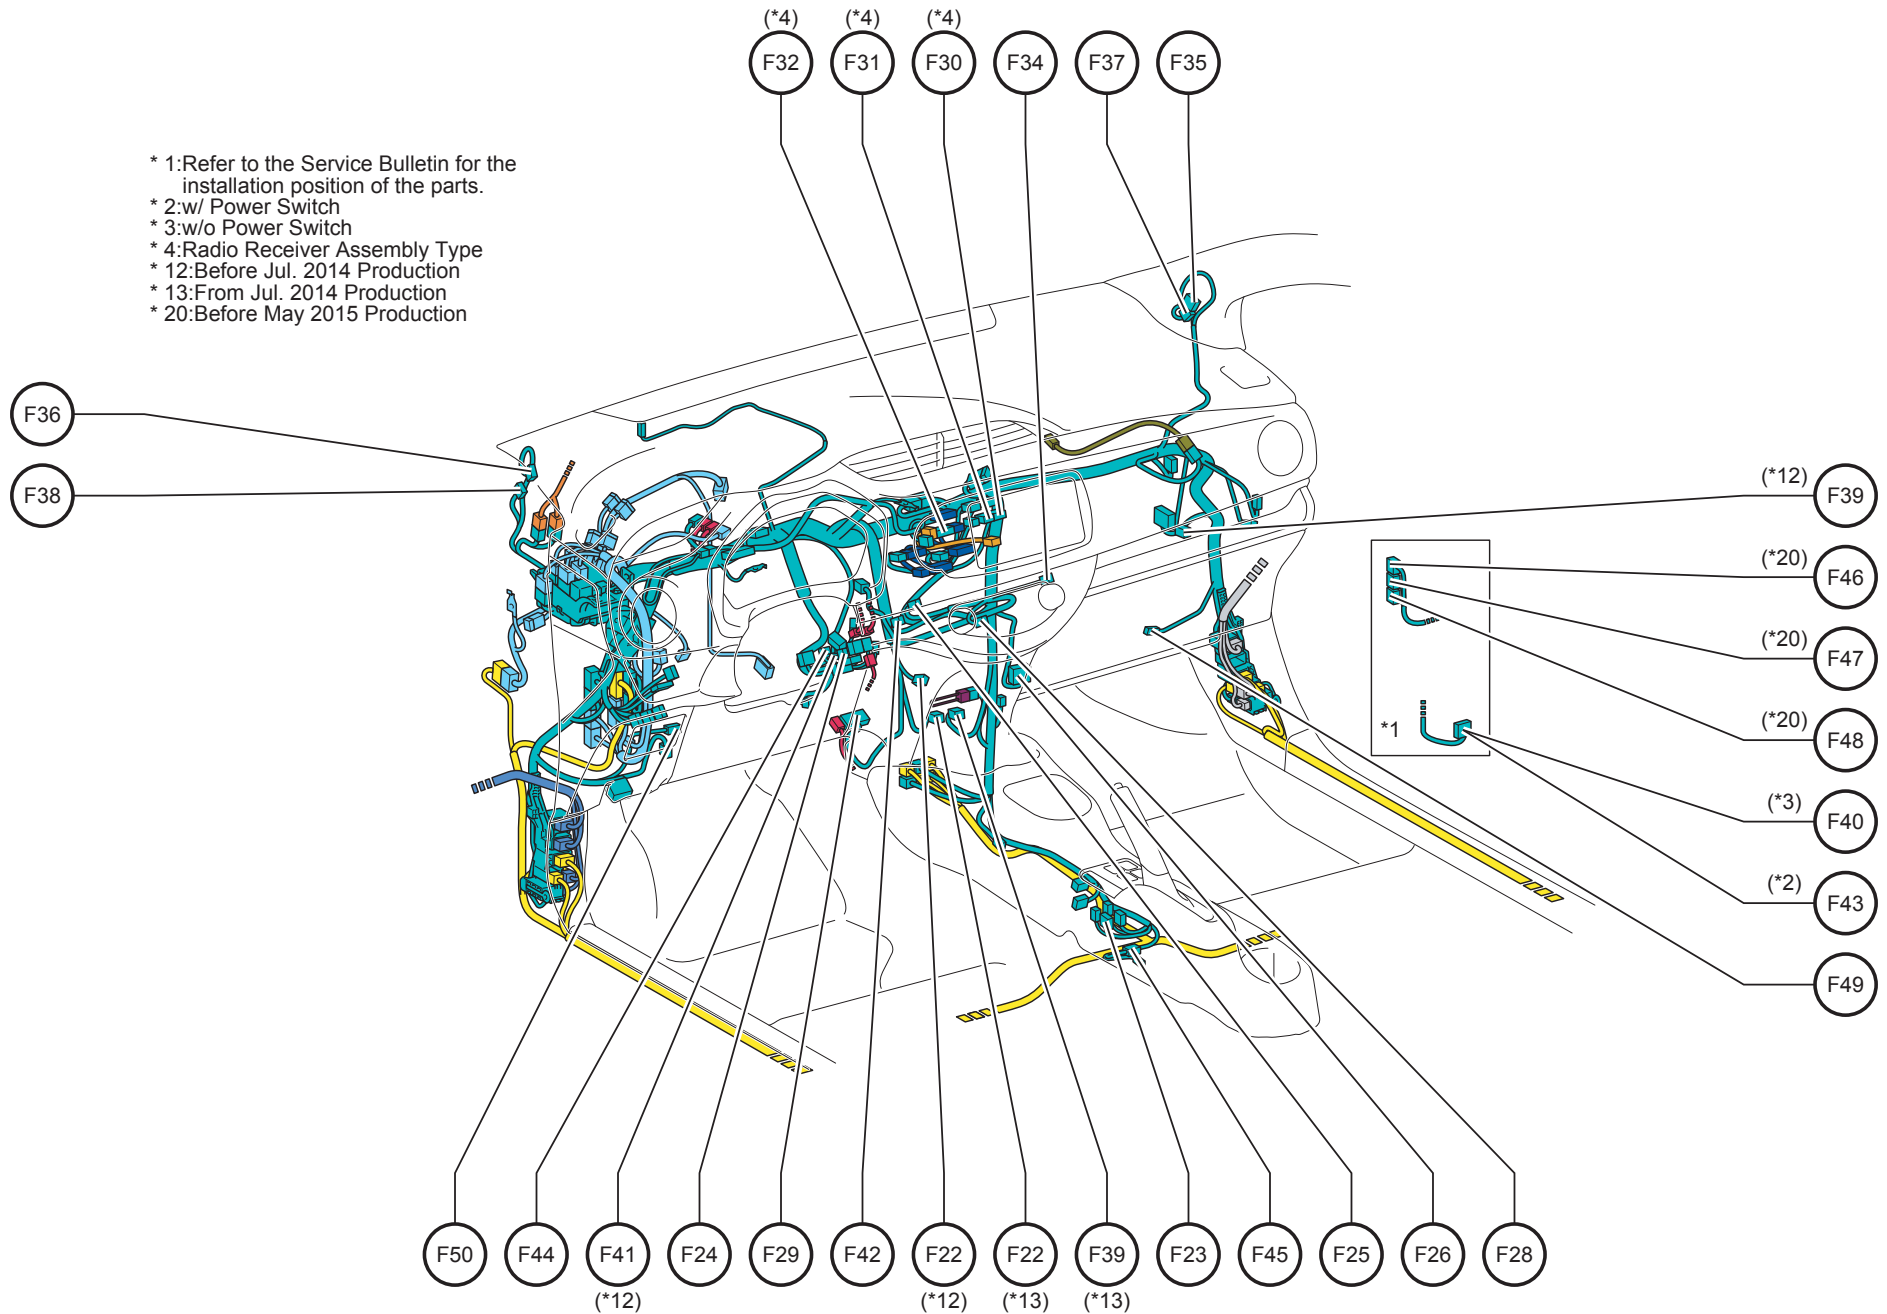

- F 22 Cigarette Lighter Assembly or No. 3 Power Outlet Socket Assembly
- F 23 Seat Heater Switch
- F 24 Steering Sensor
- F 25 Cooler (Room Temperature Sensor) Thermistor
- F 26 Blower Motor with Fan Sub-Assembly
- F 28 A/C Control Assembly
- F 29 A/C Amplifier Assembly
- F 30 Radio Receiver Assembly
- F 31 Radio Receiver Assembly
- F 32 Radio Receiver Assembly
- F 34 Amplifier Microphone Assembly
- F 35 Front No. 2 Speaker Assembly RH
- F 36 Front No. 2 Speaker Assembly LH
- F 37 Front No. 2 Speaker Assembly RH
- F 38 Front No. 2 Speaker Assembly LH
- F 39 No. 1 Stereo Jack Adapter Assembly
- F 40 Transponder Key ECU Assembly
- F 41 Transponder Key Amplifier
- F 42 Power Switch
- F 43 ID Code Box
- F 44 Steering Lock Actuator Assembly
- F 45 No. 1 Indoor Electrical Key Antenna Assembly
- F 46 Certification ECU
- F 47 Certification ECU
- F 48 Certification ECU
- F 49 No. 1 Interior Illumination Light Assembly RH
- F 50 No. 1 Interior Illumination Light Assembly LH

Position of Parts in Instrument Panel <LHD>

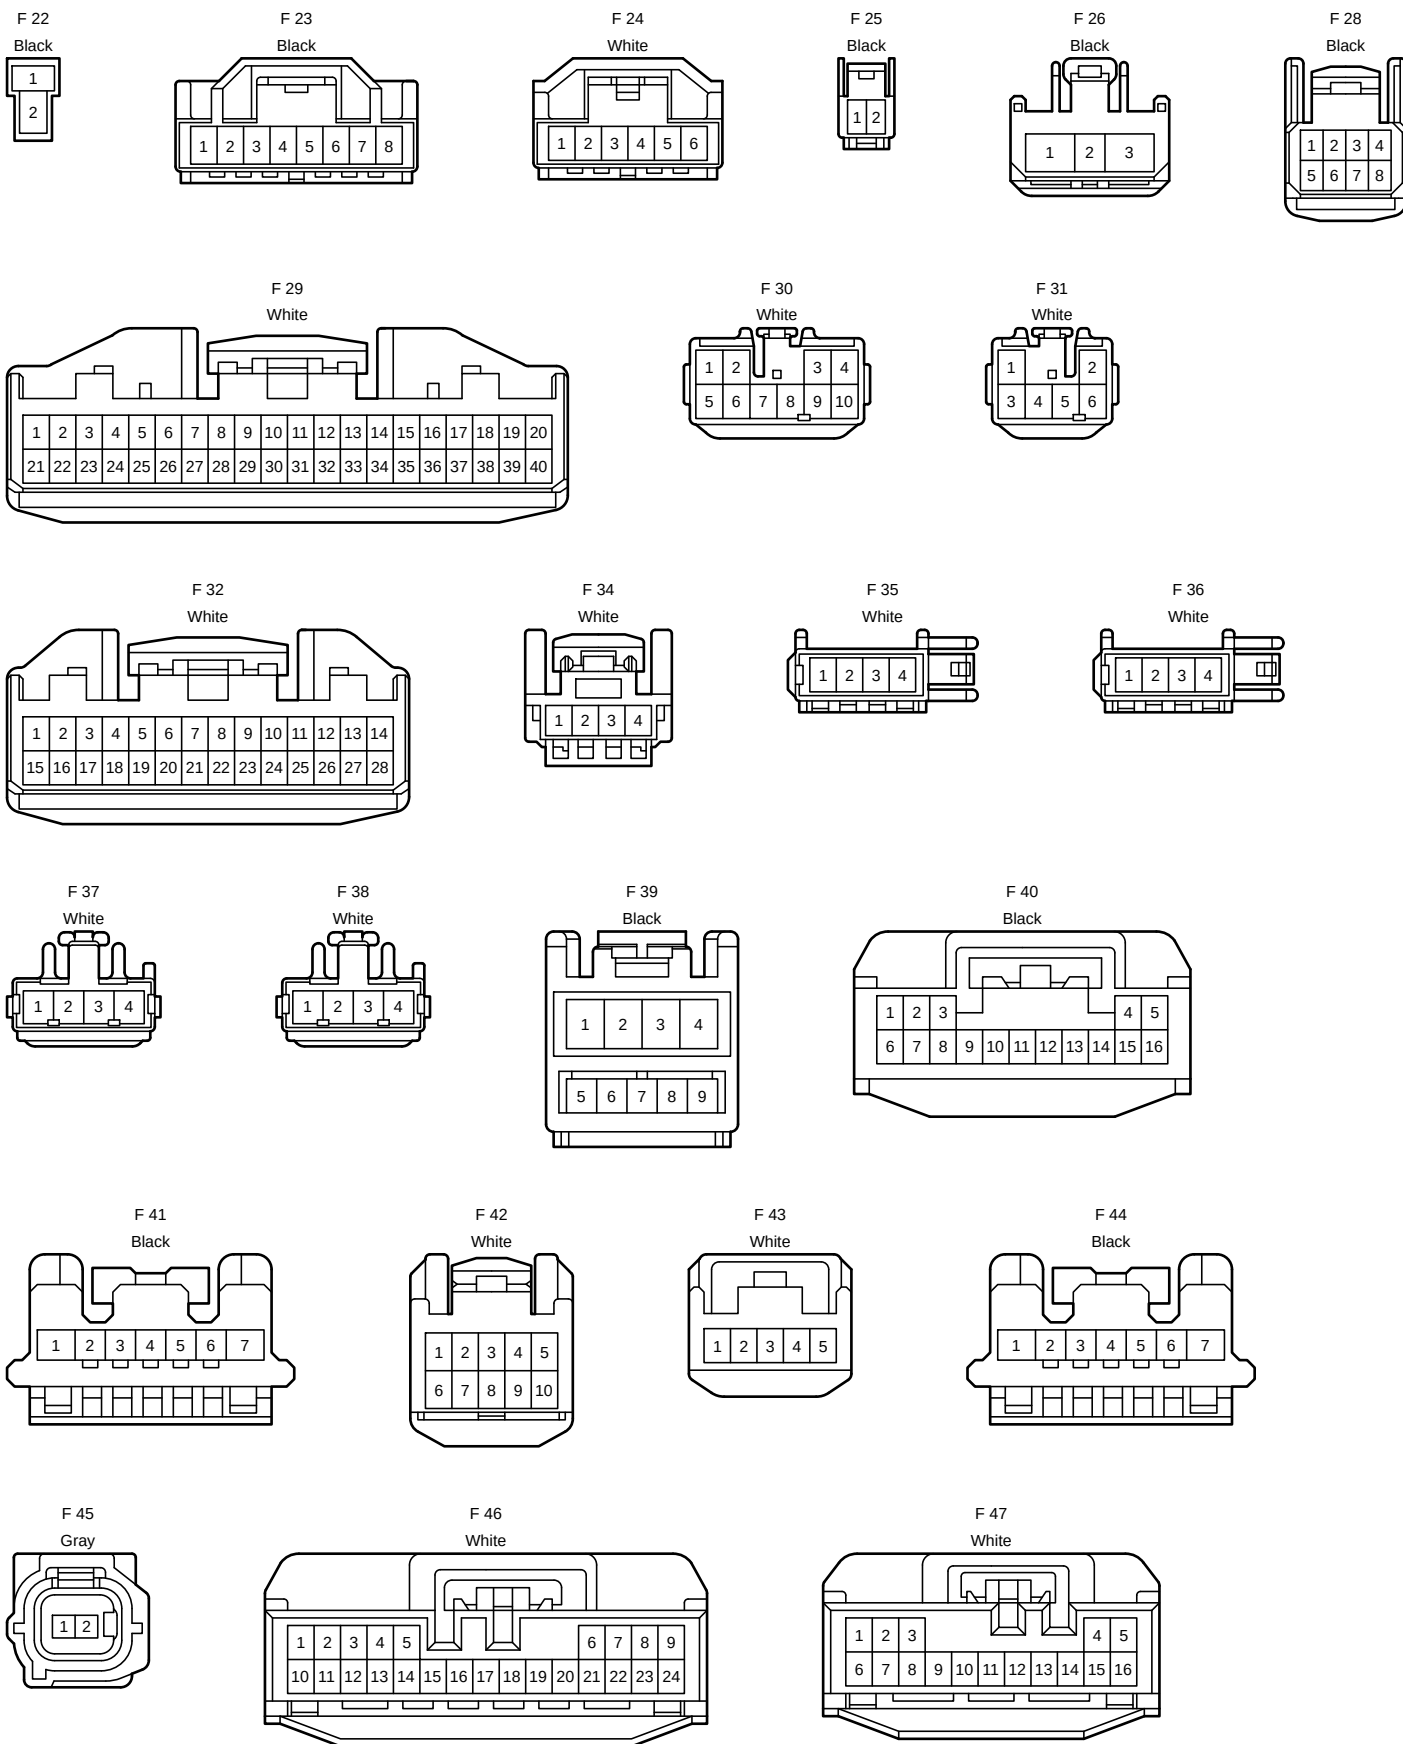

Position of Parts in Instrument Panel <LHD>

