


Position of Parts in Engine Compartment <RHD H/B 1KR-FE>

- * 5:TMC Made From
Aug. 2008 Production,
TMMF Made From
Nov. 2008 Production
- * 6:Except *5
- * 7:TMMF Made From Nov. 2008
Production
- * 8:Except *7
- * 9:TMC Made,
TMMF Made Before
Jul. 2010 Production
- * 10:TMMF Made From
Jul. 2010 Production

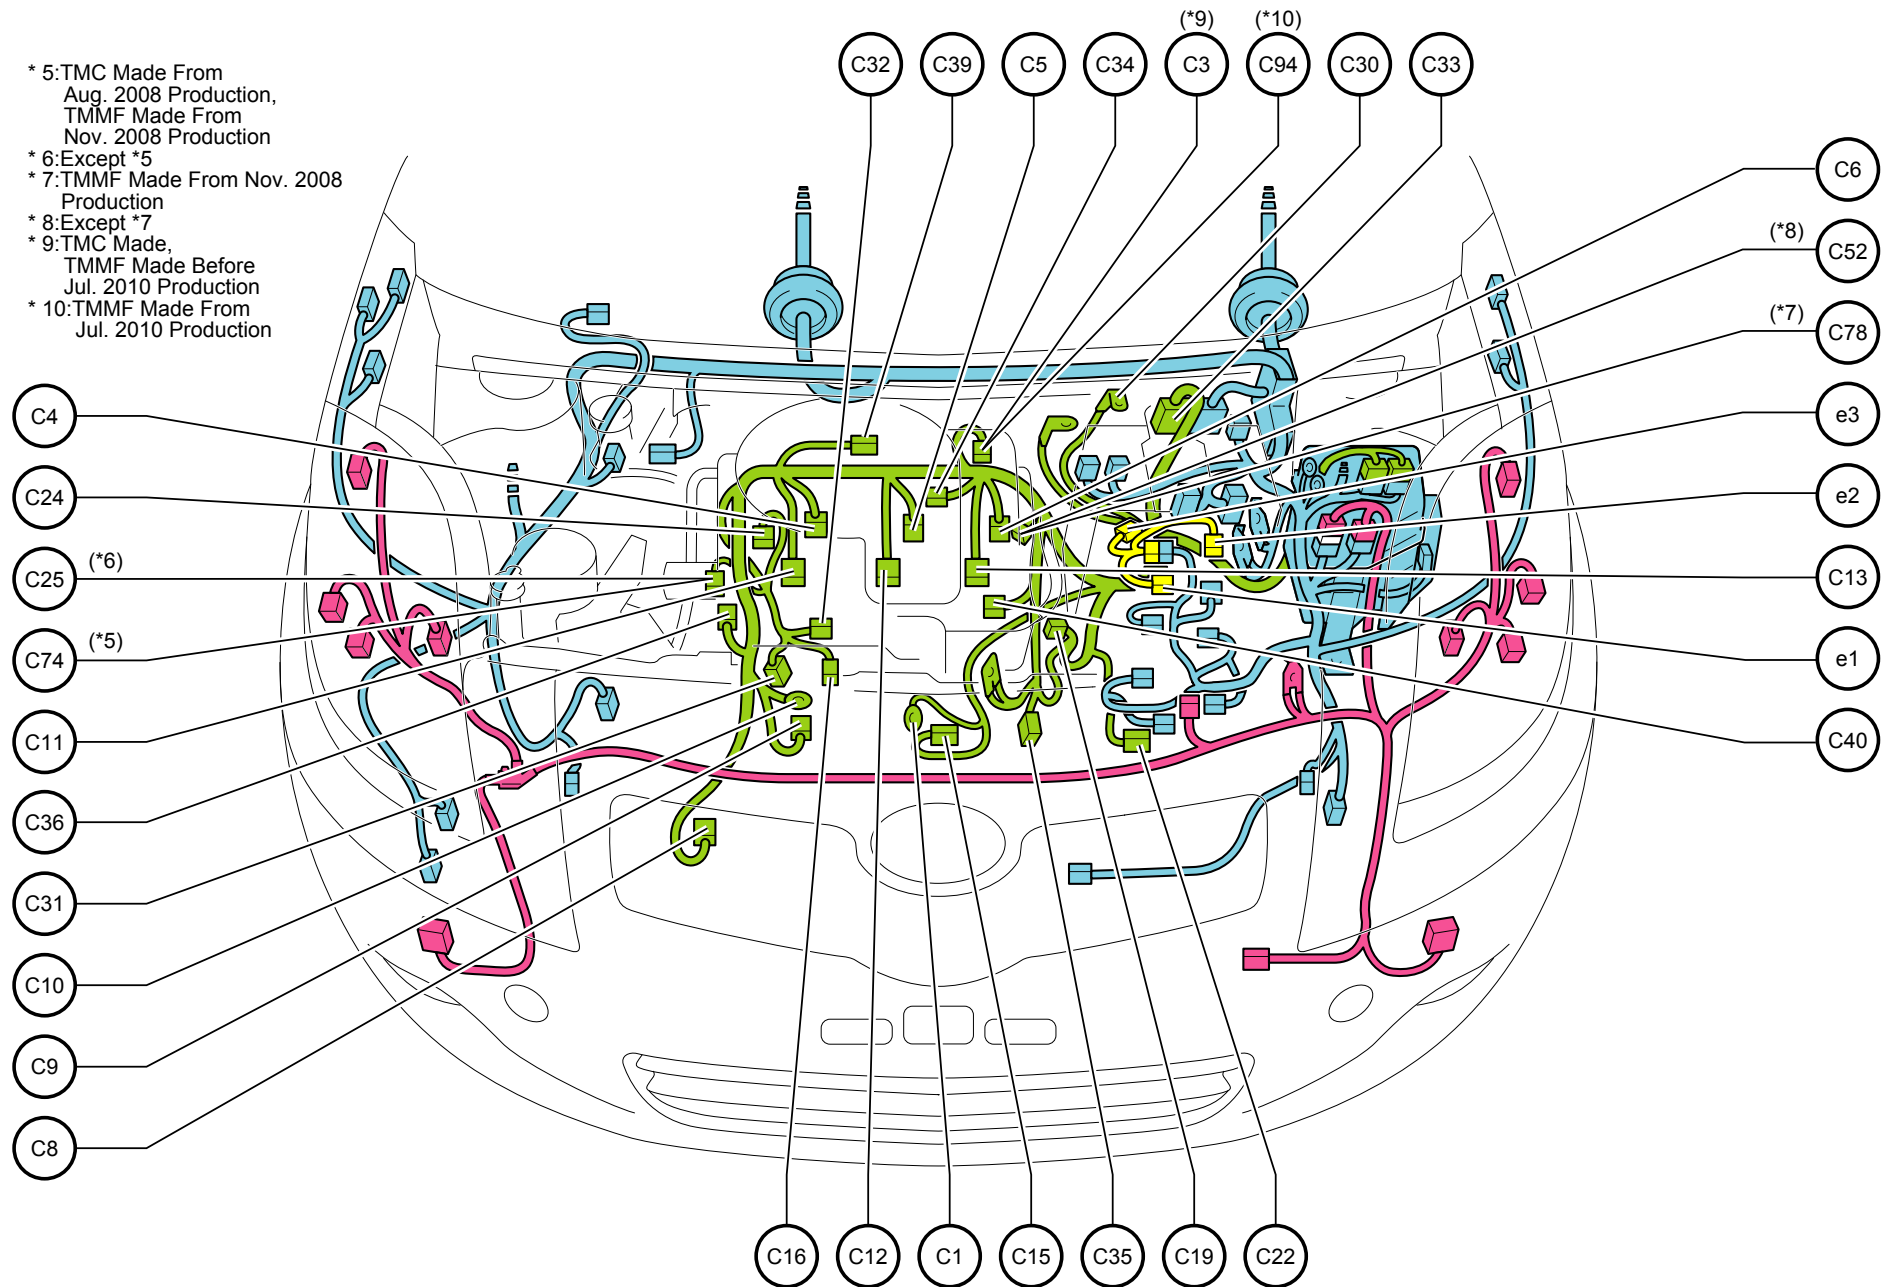

- C 1 Starter
- C 3 VSV (Purge)
- C 4 Fuel Injector (No.1)
- C 5 Fuel Injector (No.2)
- C 6 Fuel Injector (No.3)
- C 8 A/C Compressor
- C 9 Alternator
- C 10 Alternator
- C 11 Ignition Coil (No.1)
- C 12 Ignition Coil (No.2)
- C 13 Ignition Coil (No.3)
- C 15 Starter
- C 16 Engine Oil Pressure SW
- C 19 Water Temp. Sensor
- C 22 Back-Up Lamp SW
- C 24 Camshaft Timing Oil Control Valve
- C 25 Noise Filter (Ignition)
- C 30 Fusible Link Block
- C 31 Crankshaft Position Sensor
- C 32 Knock Control Sensor (Bank 1)
- C 33 Engine ECU
- C 34 Vacuum Sensor Assembly
- C 35 Oxygen Sensor (Bank 1 Sensor 2)
- C 36 Oxygen Sensor (Bank 1 Sensor 1)
- C 39 Throttle Body Assembly
- C 40 Camshaft Position Sensor
- C 52 EGR Valve Control Motor
- C 74 Noise Filter (Ignition)
- C 78 EGR Valve Control Motor
- C 94 VSV (Purge)

- e 1 Clutch Actuator
- e 2 Shift Actuator
- e 3 Select Actuator

Position of Parts in Engine Compartment <RHD H/B 1KR-FE>

