


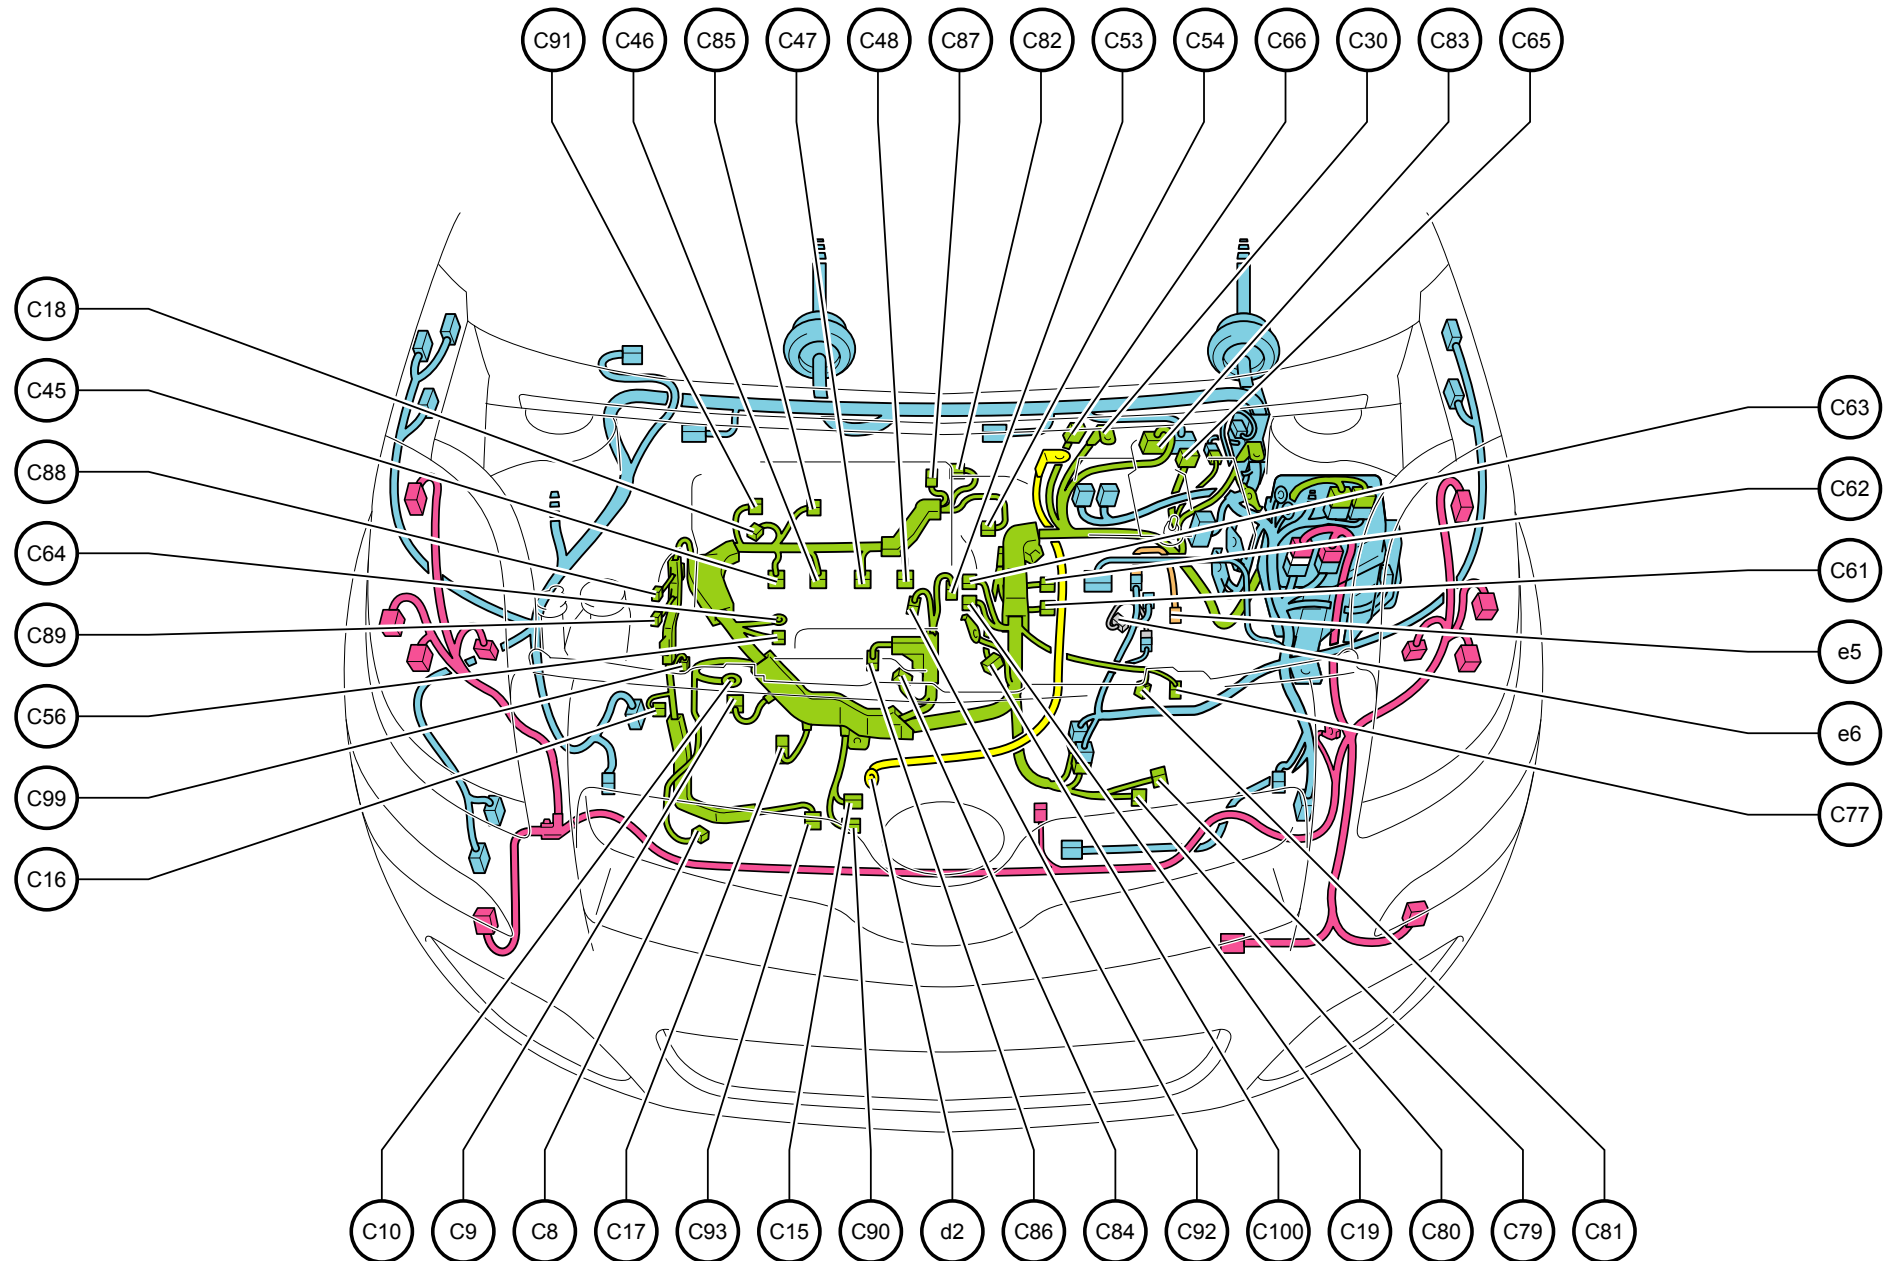

C 8 A/C Compressor  
C 9 Alternator  
C 10 Alternator  
C 15 Starter  
C 16 Engine Oil Pressure SW  
C 17 Throttle Body Assembly  
C 18 Camshaft Position Sensor  
C 19 Water Temp. Sensor  
C 30 Fusible Link Block  
C 45 Injector No.1  
C 46 Injector No.2  
C 47 Injector No.3  
C 48 Injector No.4  
C 53 VSV (Pressure Release Valve)  
C 54 Magnetic Proportional Valve  
C 56 Fuel Pressure Sensor  
C 61 Shift Actuator  
C 62 Select Actuator  
C 63 Fuel Temp. Sensor  
C 64 Glow Plug  
C 65 Glow Plug Relay  
C 66 Fusible Link Block  
C 77 Back-Up Lamp SW  
C 79 Clutch Stroke Sensor  
C 80 Clutch Actuator  
C 81 Transmission Revolution Sensor  
C 82 Turbocharger Sub-Assembly  
C 83 Engine ECU  
C 84 Turbo Pressure Sensor  
C 85 Air Fuel Ratio Sensor (Bank 1 Sensor 1)  
C 86 EGR Valve Control Motor  
C 87 Turbocharger Sub-Assembly  
C 88 Exhaust Gas Temperature Sensor  
C 89 No.2 Exhaust Gas Temperature Sensor  
C 90 Diesel Turbo Inlet Air Temperature Sensor  
C 91 Differential Pressure Sensor  
C 92 VSV (EGR)  
C 93 Oil Level Sensor  
C 99 Crankshaft Position Sensor  
C 100 Crankshaft Position Sensor

d 2 Starter

e 5 Neutral Start SW

e 6 Shift Stroke Sensor

