

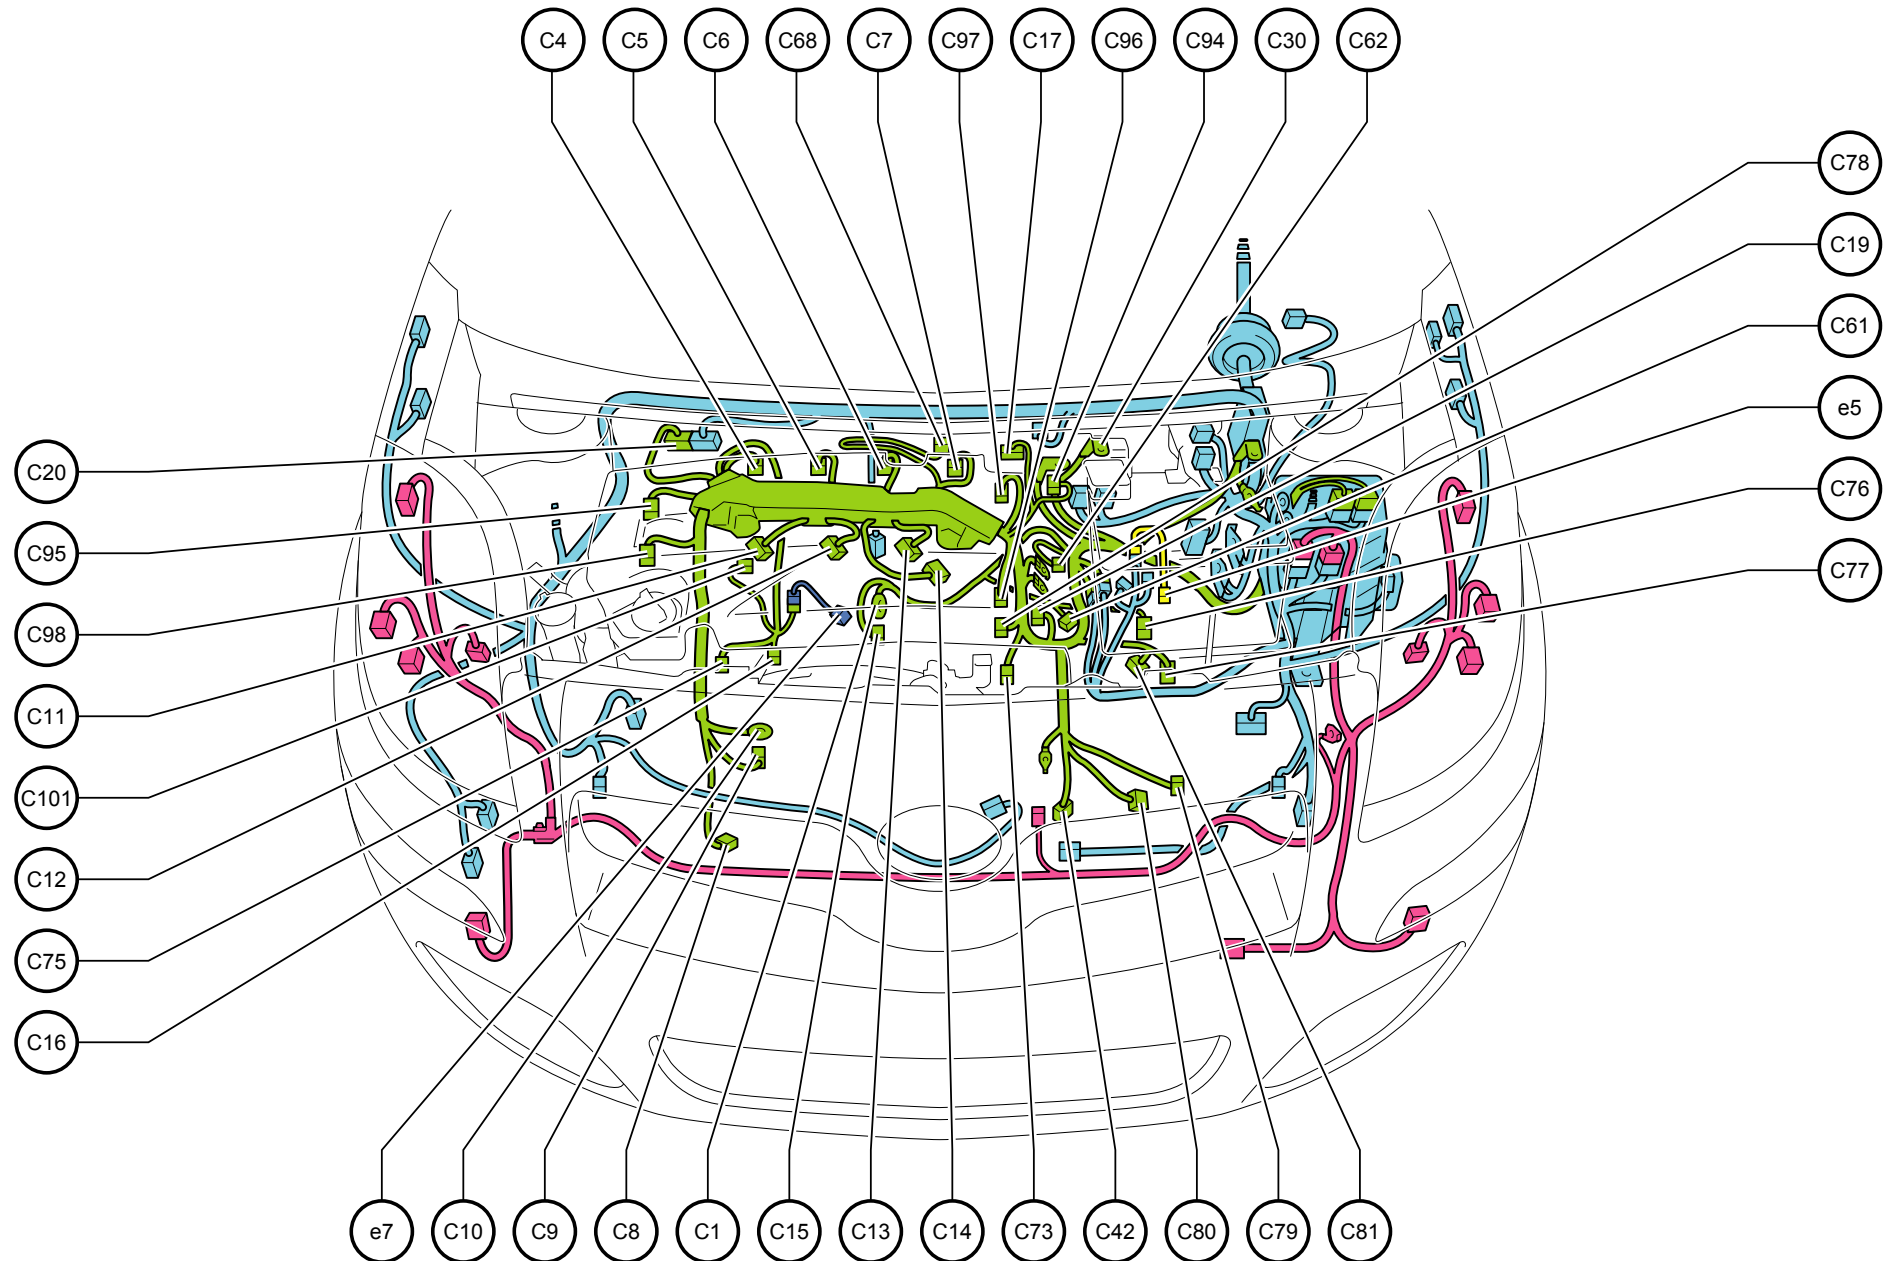


Position of Parts in Engine Compartment <LHD H/B 1NR-FE>

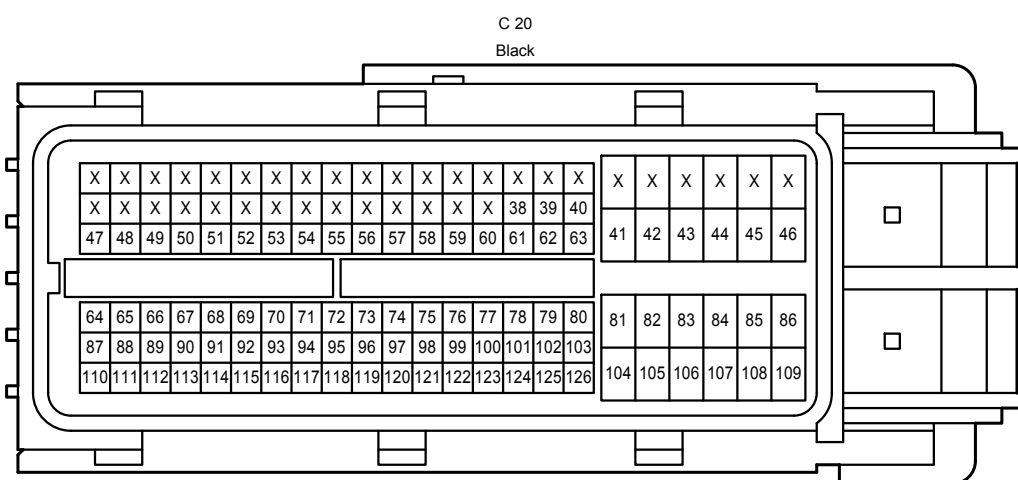

- C 1 Starter
- C 4 Fuel Injector (No.1)
- C 5 Fuel Injector (No.2)
- C 6 Fuel Injector (No.3)
- C 7 Fuel Injector (No.4)
- C 8 A/C Compressor
- C 9 Alternator
- C 10 Alternator
- C 11 Ignition Coil (No.1)
- C 12 Ignition Coil (No.2)
- C 13 Ignition Coil (No.3)
- C 14 Ignition Coil (No.4)
- C 15 Starter
- C 16 Engine Oil Pressure SW
- C 17 Throttle Body Assembly
- C 19 Water Temp. Sensor
- C 20 Engine ECU
- C 30 Fusible Link Block
- C 42 Oxygen Sensor (Bank 1 Sensor 2)
- C 61 Shift Actuator
- C 62 Select Actuator
- C 68 Air Flow Meter
- C 73 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 75 Crankshaft Position Sensor
- C 76 Park/Neutral Position SW
- C 77 Back-Up Lamp SW
- C 78 EGR Valve Control Motor
- C 79 Clutch Stroke Sensor
- C 80 Clutch Actuator
- C 81 Transmission Revolution Sensor
- C 94 VSV (Purge)
- C 95 Camshaft Timing Oil Control Valve (Intake Side)
- C 96 VVT Sensor (Exhaust Side)
- C 97 VVT Sensor (Intake Side)
- C 98 Camshaft Timing Oil Control Valve (Exhaust Side)
- C 101 E.F.I. Vacuum Sensor Assembly

- e 5 Neutral Start SW
- e 7 Knock Control Sensor (Bank 1)

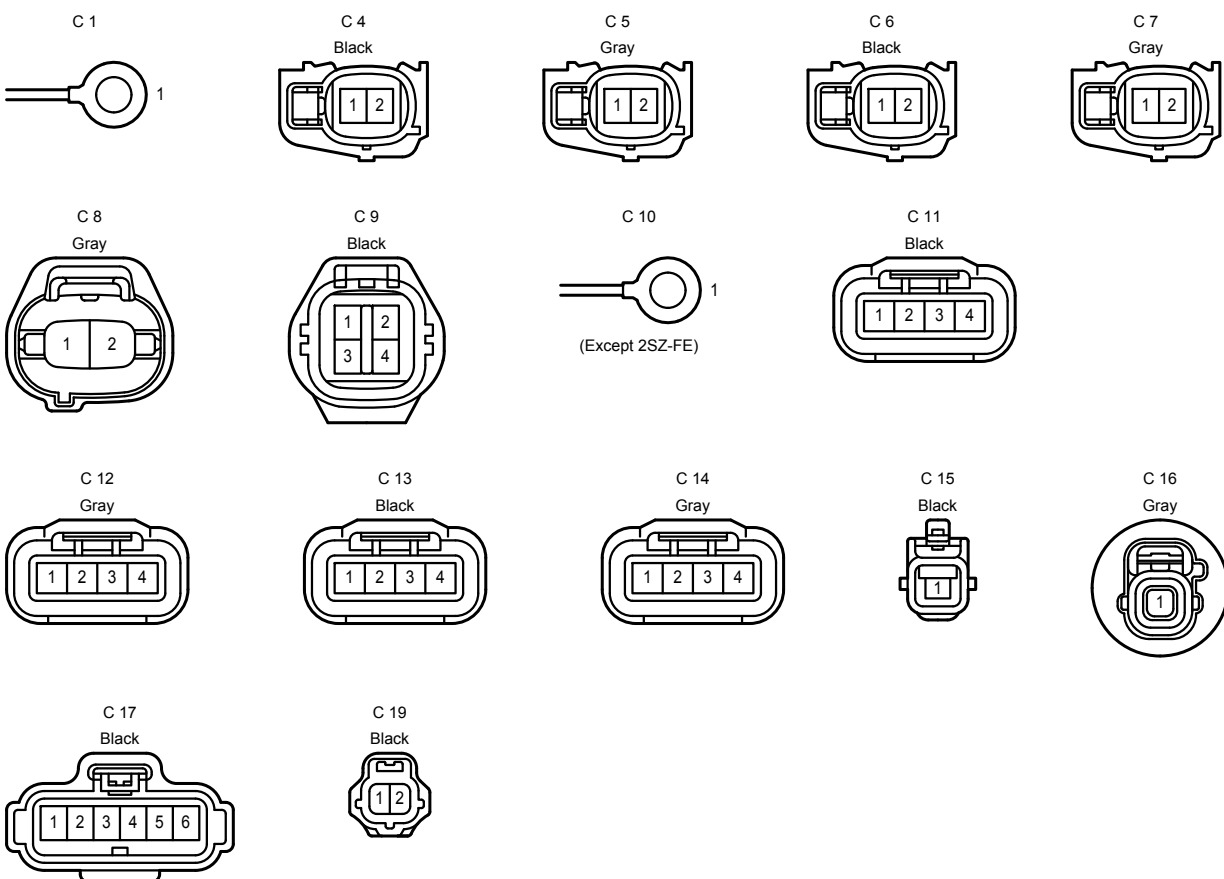

C 73
Dark Gray




C 75
Black



C 76
Black




C 77
Gray

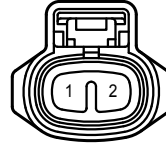

C 78
Black




C 79
Black

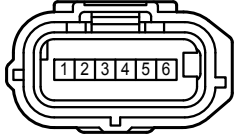


C 80
Black



C 81
Black

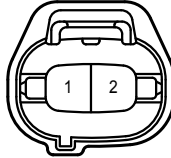


C 94
Black

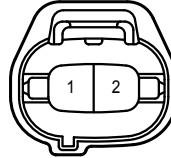


C 95
Black



C 96
Gray

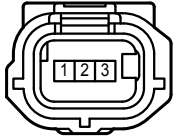


C 97
Black

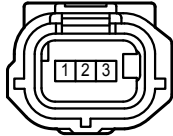


C 98
Gray



C101
Black

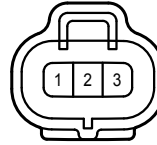

e 5
Black

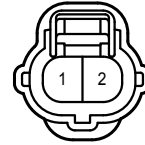

e 7
Black

