


Position of Parts in Engine Compartment <LHD H/B 2ZR-FE>

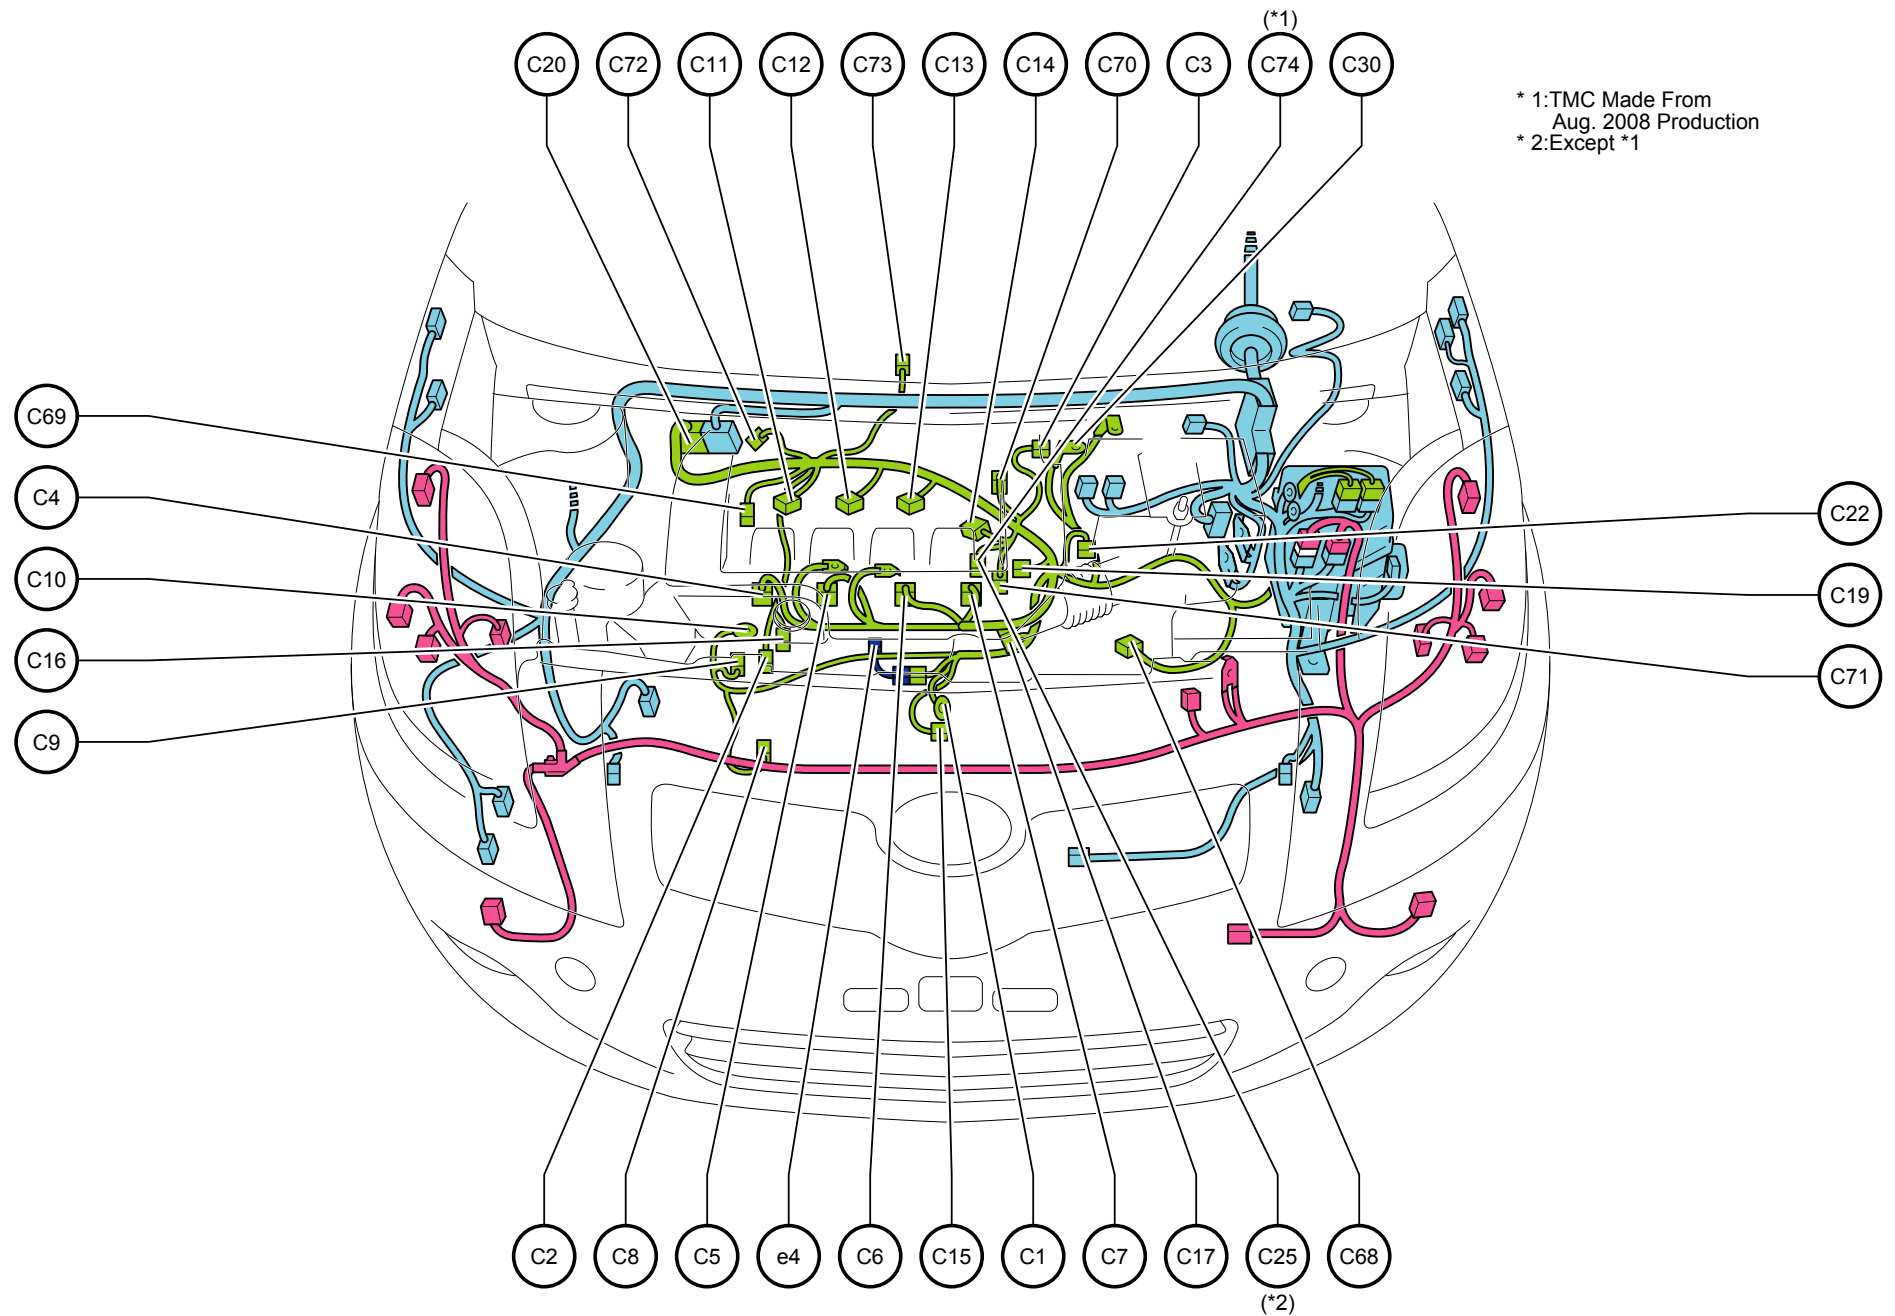

- C 1 Starter
 - C 2 Crankshaft Position Sensor
 - C 3 VSV (Purge)
 - C 4 Fuel Injector (No.1)
 - C 5 Fuel Injector (No.2)
 - C 6 Fuel Injector (No.3)
 - C 7 Fuel Injector (No.4)
 - C 8 A/C Compressor
 - C 9 Alternator
 - C 10 Alternator
 - C 11 Ignition Coil (No.1)
 - C 12 Ignition Coil (No.2)
 - C 13 Ignition Coil (No.3)
 - C 14 Ignition Coil (No.4)
 - C 15 Starter
 - C 16 Engine Oil Pressure SW
 - C 17 Throttle Body Assembly
 - C 19 Water Temp. Sensor
 - C 20 Engine ECU
 - C 22 Back-Up Lamp SW
 - C 22 Back-Up Lamp SW
 - C 25 Noise Filter (Ignition)
 - C 30 Fusible Link Block
 - C 68 Air Flow Meter
 - C 69 Camshaft Timing Oil Control Valve (Intake Side)
 - C 69 Camshaft Timing Oil Control Valve (Intake Side)
 - C 70 VVT Sensor (Exhaust Side)
 - C 71 VVT Sensor (Intake Side)
 - C 71 VVT Sensor (Intake Side)
 - C 72 Camshaft Timing Oil Control Valve (Exhaust Side)
 - C 72 Camshaft Timing Oil Control Valve (Exhaust Side)
 - C 73 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
 - C 74 Noise Filter (Ignition)
-
- e 4 Knock Control Sensor (Bank 1)

Position of Parts in Engine Compartment <LHD H/B 2ZR-FE>

