

Description	Group-Page	Description	Group-Page	Description	Group-Page
ADJUSTER (TAPPET) NOISE DIAGNOSIS - DIAGNOSIS AND TESTING, LASH	9-28	BELT TENSIONER & PULLEY - INSTALLATION, TIMING	9-59	CATALYTIC CONVERTER - INSTALLATION	11-3
ADJUSTMENT, FRONT FOG LAMP UNIT	8L-25	BELT TENSIONER & PULLEY - REMOVAL, TIMING	9-59	CATALYTIC CONVERTER - REMOVAL	11-2
ADJUSTMENT, HEADLAMP UNIT	8L-42	BLOCK - DESCRIPTION, ENGINE	9-30	CENTER HIGH MOUNTED STOP LAMP BULB - INSTALLATION	8L-19
AIMING - STANDARD PROCEDURE, LAMP BAR	8L-65	BLOCK HEATER - 2.4L - DESCRIPTION, ENGINE	7-20	CENTER HIGH MOUNTED STOP LAMP BULB - REMOVAL	8L-18
ARM BUSHING - INSTALLATION, LOWER CONTROL	2-3	BLOCK HEATER - 2.4L - OPERATION, ENGINE	7-20	CENTER HIGH MOUNTED STOP LAMP UNIT - INSTALLATION	8L-19
ARM BUSHING - INSTALLATION, LOWER SUSPENSION	2-8	BORE FITTING - STANDARD PROCEDURE, PISTON TO CYLINDER	9-30	CENTER HIGH MOUNTED STOP LAMP UNIT - REMOVAL	8L-19
ARM BUSHING - INSTALLATION, UPPER SUSPENSION	2-8	BORE HONING - STANDARD PROCEDURE, CYLINDER	9-31	CHAIN - INSTALLATION, BALANCE SHAFT	9-64
ARM BUSHING - REMOVAL, LOWER CONTROL	2-2	BRACKET BUSHING - INSTALLATION, CLEVIS	2-4	CHAIN - REMOVAL, BALANCE SHAFT	9-64
ARM BUSHING - REMOVAL, LOWER SUSPENSION	2-7	BRACKET BUSHING - REMOVAL, CLEVIS	2-2	CHANGE - STANDARD PROCEDURE, ENGINE OIL AND FILTER	9-47
ARM BUSHING - REMOVAL, UPPER SUSPENSION	2-7	BRAKE LAMP SWITCH - DESCRIPTION	8L-16	CHART - DIAGNOSIS AND TESTING, COOLING SYSTEM DIAGNOSIS	7-5
ARM BUSHINGS - INSTALLATION, UPPER CONTROL	2-4	BRAKE LAMP SWITCH - DIAGNOSIS AND TESTING	8L-17	CHECK, STANDARD PROCEDURE - ENGINE OIL LEVEL	9-47
ARM BUSHINGS - REMOVAL, UPPER CONTROL	2-3	BRAKE LAMP SWITCH - INSTALLATION	8L-18	CHECKING - DIAGNOSIS AND TESTING, ENGINE OIL PRESSURE	9-46
ARMS - INSPECTION, ROCKER	9-30	BRAKE LAMP SWITCH - OPERATION	8L-16	CHECKS - DIAGNOSIS AND TESTING, PRELIMINARY	7-2
ARMS - INSTALLATION, ROCKER	9-30	BRAKE LAMP SWITCH - REMOVAL	8L-17	CLAMPS - DESCRIPTION, HOSE	7-1
ARMS - REMOVAL, ROCKER	9-29	BULB - INSTALLATION, CENTER HIGH MOUNTED STOP LAMP	8L-19	CLAMPS - OPERATION, HOSE	7-2
ASSEMBLY - INSTALLATION, ENGINE	9-12	BULB - INSTALLATION, FRONT FOG LAMP	8L-22	CLEANING, CAMSHAFT(S)	9-24
ASSEMBLY - REMOVAL, ENGINE	9-12	BULB - INSTALLATION, FRONT LAMP	8L-27	CLEANING, CYLINDER HEAD	9-20
ASSEMBLY, OIL PUMP	9-50	BULB - INSTALLATION, FRONT POSITION LAMP	8L-28	CLEANING, CYLINDER HEAD COVER	9-26
BACKUP LAMP SWITCH - DESCRIPTION	8L-15	BULB - INSTALLATION, HEADLAMP	8L-32	CLEANING, EXHAUST MANIFOLD	9-53
BACKUP LAMP SWITCH - DIAGNOSIS AND TESTING	8L-15	BULB - INSTALLATION, LICENSE PLATE LAMP	8L-45	CLEANING, INTAKE/EXHAUST VALVES & SEATS	9-27
BACKUP LAMP SWITCH - OPERATION	8L-15	BULB - INSTALLATION, REAR LAMP	8L-59	CLEANING, OIL PUMP	9-49
BALANCE SHAFT - DESCRIPTION	9-59	BULB - INSTALLATION, REPEATER LAMP	8L-60	CLEANING, RADIATOR	7-24
BALANCE SHAFT - OPERATION	9-59	BULB - REMOVAL, CENTER HIGH MOUNTED STOP LAMP	8L-18	CLEANING, RADIATOR PRESSURE CAP	7-25
BALANCE SHAFT - REMOVAL	9-60	BULB - REMOVAL, FRONT FOG LAMP	8L-21	CLEANING, REMOVAL	9-55
BALANCE SHAFT CARRIER - INSTALLATION	9-64	BULB - REMOVAL, FRONT LAMP	8L-27	CLEANING, STANDARD PROCEDURE	9-31
BALANCE SHAFT CARRIER - REMOVAL	9-64	BULB - REMOVAL, FRONT POSITION LAMP	8L-28	CLEARANCE USING PLASTIGAGE - STANDARD PROCEDURE, MEASURING BEARING	9-11
BALANCE SHAFT CHAIN - INSTALLATION	9-64	BULB - REMOVAL, HEADLAMP	8L-30	CLEVIS BRACKET BUSHING - INSTALLATION	2-4
BALANCE SHAFT CHAIN - REMOVAL	9-64	BULB - REMOVAL, LICENSE PLATE LAMP	8L-44	CLEVIS BRACKET BUSHING - REMOVAL	2-2
BALANCE SHAFT TIMING, INSTALLATION	9-61	BULB - REMOVAL, REAR LAMP	8L-59	COLLAR - INSTALLATION, STRUCTURAL	9-44
BALL JOINT - INSTALLATION, LOWER	2-5	BULB - REMOVAL, REPEATER LAMP	8L-60	COLLAR - REMOVAL, STRUCTURAL	9-44
BALL JOINT - INSTALLATION, UPPER	2-6	BUSHING - INSTALLATION, CLEVIS BRACKET	2-4	COMBINATION FLASHER - DESCRIPTION	8L-19
BALL JOINT - REMOVAL, LOWER	2-5	BUSHING - INSTALLATION, LOWER CONTROL ARM	2-3	COMBINATION FLASHER - OPERATION	8L-19
BALL JOINT - REMOVAL, UPPER	2-6	BUSHING - INSTALLATION, LOWER SUSPENSION ARM	2-8	COMBUSTION PRESSURE LEAKAGE TEST - DIAGNOSIS AND TESTING, CYLINDER	9-3
BAR - DESCRIPTION, LAMP	8L-65	BUSHING - INSTALLATION, UPPER SUSPENSION ARM	2-8	COMPRESSION PRESSURE TEST - DIAGNOSIS AND TESTING, CYLINDER	9-3
BAR - DIAGNOSIS AND TESTING, LAMP	8L-65	BUSHING - REMOVAL, CLEVIS BRACKET	2-2	CONNECTING ROD - DESCRIPTION, PISTON	9-40
BAR - INSTALLATION, LAMP	8L-66	BUSHING - REMOVAL, LOWER CONTROL ARM	2-2	CONNECTING ROD - INSTALLATION, PISTON	9-41
BAR - OPERATION, LAMP	8L-65	BUSHING - REMOVAL, LOWER SUSPENSION ARM	2-7	CONNECTING ROD - OPERATION, PISTON	9-40
BAR - REMOVAL, LAMP	8L-65	BUSHING - REMOVAL, UPPER SUSPENSION ARM	2-7	CONNECTING ROD - REMOVAL, PISTON	9-40
BAR AIMING - STANDARD PROCEDURE, LAMP	8L-65	BUSHINGS - INSTALLATION, UPPER CONTROL ARM	2-4	CONNECTING ROD, FITTING	9-32
BAR SWITCH - DESCRIPTION, LAMP	8L-67	BUSHINGS - REMOVAL, UPPER CONTROL ARM	2-3	CONNECTOR - INSTALLATION, TRAILER TOW	8L-61
BAR SWITCH - INSTALLATION, LAMP	8L-67	CAMSHAFT END-PLAY - STANDARD PROCEDURE	9-23	CONNECTOR - REMOVAL, TRAILER TOW	8L-61
BAR SWITCH - REMOVAL, LAMP	8L-67	CAMSHAFT OIL SEAL(S) - INSTALLATION	9-22	CONTAINER - DESCRIPTION, COOLANT RECOVERY PRESS	7-20
BEAM RELAY - DESCRIPTION, HEADLAMP HIGH	8L-33	CAMSHAFT OIL SEAL(S) - REMOVAL	9-22	CONTAINER - OPERATION, COOLANT RECOVERY PRESS	7-20
BEAM RELAY - DESCRIPTION, HEADLAMP LOW	8L-39	CAMSHAFT(S) - CLEANING	9-24	CONTROL ARM BUSHING - INSTALLATION, LOWER	2-3
BEAM RELAY - DIAGNOSIS AND TESTING, HEADLAMP HIGH	8L-34	CAMSHAFT(S) - DESCRIPTION	9-23	CONTROL ARM BUSHING - REMOVAL, LOWER	2-2
BEAM RELAY - DIAGNOSIS AND TESTING, HEADLAMP LOW	8L-40	CAMSHAFT(S) - INSPECTION	9-25	CONTROL ARM BUSHINGS - INSTALLATION, UPPER	2-4
BEAM RELAY - INSTALLATION, HEADLAMP HIGH	8L-35	CAMSHAFT(S) - INSTALLATION	9-25	CONTROL ARM BUSHINGS - REMOVAL, UPPER	2-3
BEAM RELAY - INSTALLATION, HEADLAMP LOW	8L-41	CAMSHAFT(S) - OPERATION	9-23	CONVERTER - DESCRIPTION, CATALYTIC	11-2
BEAM RELAY - OPERATION, HEADLAMP HIGH	8L-33	CAMSHAFT(S) - REMOVAL	9-24	CONVERTER - INSPECTION, CATALYTIC	11-3
BEAM RELAY - OPERATION, HEADLAMP LOW	8L-39	CAP - CLEANING, RADIATOR PRESSURE	7-25	CONVERTER - INSTALLATION, CATALYTIC	11-3
BEAM RELAY - REMOVAL, HEADLAMP HIGH	8L-34	CAP - DESCRIPTION, RADIATOR PRESSURE	7-25	CONVERTER - REMOVAL, CATALYTIC	11-2
BEAM RELAY - REMOVAL, HEADLAMP LOW	8L-40	CAP - DIAGNOSIS AND TESTING, RADIATOR PRESSURE	7-25	COOLANT - DESCRIPTION, ENGINE	7-19
BEARING - FITTING - STANDARD PROCEDURE, MAIN	9-35	CAP - INSPECTION, RADIATOR PRESSURE	7-25	COOLANT - DESCRIPTION, HOAT	7-18
BEARING CLEARANCE USING PLASTIGAGE - STANDARD PROCEDURE, MEASURING	9-11	CAP - OPERATION, RADIATOR PRESSURE	7-25	COOLANT RECOVERY PRESS CONTAINER - DESCRIPTION	7-20
BELT - INSTALLATION, TIMING	9-56	CARRIER - INSTALLATION, BALANCE SHAFT	9-64	COOLANT RECOVERY PRESS CONTAINER - OPERATION	7-20
BELT - REMOVAL, TIMING	9-55	CARRIER - REMOVAL, BALANCE SHAFT	9-64	COOLANT TEMPERATURE SENSOR - DESCRIPTION, ENGINE	7-21
BELT COVER(S) - INSTALLATION, TIMING	9-53	CATALYTIC CONVERTER - DESCRIPTION	11-2	COOLANT TEMPERATURE SENSOR - INSTALLATION, ENGINE	7-22
BELT COVER(S) - REMOVAL, TIMING	9-53	CATALYTIC CONVERTER - INSPECTION	11-3		
BELT DIAGNOSIS - DIAGNOSIS AND TESTING, SERPENTINE DRIVE	7-15				

Description	Group-Page	Description	Group-Page	Description	Group-Page
COOLANT TEMPERATURE SENSOR - OPERATION, ENGINE	7-21	DAYTIME RUNNING LAMP RELAY - REMOVAL	8L-21	DIAGNOSIS AND TESTING, ENGINE	9-5
COOLANT TEMPERATURE SENSOR - REMOVAL, ENGINE	7-21	DESCRIPTION - OPERATION	7-20	DIAGNOSIS AND TESTING, ENGINE DIAGNOSIS - PERFORMANCE	9-5
COOLER - DESCRIPTION, TRANS	7-30	DESCRIPTION, BACKUP LAMP SWITCH	8L-15	DIAGNOSIS AND TESTING, ENGINE MECHANICAL	9-7
COOLERS AND TUBES - STANDARD PROCEDURE, FLUSHING	7-30	DESCRIPTION, BALANCE SHAFT	9-59	DIAGNOSIS AND TESTING, ENGINE OIL LEAK INSPECTION	9-4
COOLING, SPECIAL TOOLS	7-13	DESCRIPTION, BRAKE LAMP SWITCH	8L-16	DIAGNOSIS AND TESTING, ENGINE OIL PRESSURE CHECKING	9-46
COOLING SYSTEM - OPERATION	7-2	DESCRIPTION, CAMSHAFT(S)	9-23	DIAGNOSIS AND TESTING, EXHAUST SYSTEM	11-2
COOLING SYSTEM - REVERSE FLUSHING - STANDARD PROCEDURE	7-12	DESCRIPTION, CATALYTIC CONVERTER	11-2	DIAGNOSIS AND TESTING, FRONT FOG LAMP RELAY	8L-23
COOLING SYSTEM - STANDARD PROCEDURE, DRAINING	7-11	DESCRIPTION, COMBINATION FLASHER	8L-19	DIAGNOSIS AND TESTING, HEADLAMP HIGH BEAM RELAY	8L-34
COOLING SYSTEM - STANDARD PROCEDURE, REFILLING	7-11	DESCRIPTION, COOLANT RECOVERY PRESS CONTAINER	7-20	DIAGNOSIS AND TESTING, HEADLAMP LEVELING SWITCH	8L-37
COOLING SYSTEM 2.4L ENGINE - DESCRIPTION	7-1	DESCRIPTION, COOLING SYSTEM 2.4L ENGINE	7-1	DIAGNOSIS AND TESTING, HEADLAMP LOW BEAM RELAY	8L-40
COOLING SYSTEM DIAGNOSIS CHART - DIAGNOSIS AND TESTING	7-5	DESCRIPTION, CRANKSHAFT	9-32	DIAGNOSIS AND TESTING, INTAKE MANIFOLD LEAKS	9-51
COOLING SYSTEM LEAKS - DIAGNOSIS AND TESTING	7-2	DESCRIPTION, CYLINDER HEAD	9-19	DIAGNOSIS AND TESTING, LAMP BAR LIGHTING - EXTERIOR	8L-7
CORE AND OIL GALLERY PLUGS - STANDARD PROCEDURE, ENGINE	9-9	DESCRIPTION, DAYTIME RUNNING LAMP RELAY	8L-20	DIAGNOSIS AND TESTING, LASH ADJUSTER (TAPPET) NOISE	9-28
COVER - CLEANING, CYLINDER HEAD	9-26	DESCRIPTION, ENGINE - 2.4L	9-3	DIAGNOSIS AND TESTING, MULTI-FUNCTION SWITCH	8L-50
COVER - INSPECTION, CYLINDER HEAD	9-26	DESCRIPTION, ENGINE BLOCK	9-30	DIAGNOSIS AND TESTING, ON-BOARD DIAGNOSTICS (OBD)	7-2
COVER - INSTALLATION, CYLINDER HEAD	9-26	DESCRIPTION, ENGINE BLOCK HEATER - 2.4L	7-20	DIAGNOSIS AND TESTING, PARK LAMP RELAY	8L-55
COVER - REMOVAL, CYLINDER HEAD	9-26	DESCRIPTION, ENGINE COOLANT	7-19	DIAGNOSIS AND TESTING, PRELIMINARY CHECKS	7-2
COVER(S) - INSTALLATION, TIMING BELT	9-53	DESCRIPTION, ENGINE COOLANT TEMPERATURE SENSOR	7-21	DIAGNOSIS AND TESTING, RADIATOR PRESSURE CAP	7-25
COVER(S) - REMOVAL, TIMING BELT	9-53	DESCRIPTION, ENGINE MOUNTING	9-44	DIAGNOSIS AND TESTING, REAR FOG LAMP RELAY	8L-57
CRANKSHAFT - DESCRIPTION	9-32	DESCRIPTION, EXHAUST MANIFOLD	9-53	DIAGNOSIS AND TESTING, SERPENTINE DRIVE BELT DIAGNOSIS	7-15
CRANKSHAFT - INSPECTION	9-34	DESCRIPTION, EXHAUST SYSTEM	11-1	DIAGNOSIS AND TESTING, TRAILER TOW RELAY	8L-62
CRANKSHAFT - INSTALLATION	9-34	DESCRIPTION, FRONT FOG LAMP RELAY	8L-22	DIAGNOSIS CHART - DIAGNOSIS AND TESTING, COOLING SYSTEM	7-5
CRANKSHAFT - OPERATION	9-33	DESCRIPTION, HAZARD SWITCH	8L-28	DIAGNOSTICS (OBD) - DIAGNOSIS AND TESTING, ON-BOARD	7-2
CRANKSHAFT - REMOVAL	9-33	DESCRIPTION, HEADLAMP HIGH BEAM RELAY	8L-33	DISASSEMBLY, OIL PUMP	9-49
CRANKSHAFT END PLAY - STANDARD PROCEDURE	9-33	DESCRIPTION, HEADLAMP LEVELING MOTOR	8L-35	DRAINING COOLING SYSTEM - STANDARD PROCEDURE	7-11
CRANKSHAFT OIL SEAL - FRONT - INSTALLATION	9-37	DESCRIPTION, HEADLAMP LEVELING SWITCH	8L-37	DRIVE BELT DIAGNOSIS - DIAGNOSIS AND TESTING, SERPENTINE	7-15
CRANKSHAFT OIL SEAL - FRONT - REMOVAL	9-37	DESCRIPTION, HEADLAMP LOW BEAM RELAY	8L-39	ELECTRIC - DESCRIPTION, RADIATOR FAN	7-26
CRANKSHAFT OIL SEAL - REAR - INSTALLATION	9-39	DESCRIPTION, HEAT SHIELDS	11-4	ELECTRIC - INSTALLATION, RADIATOR FAN	7-27
CRANKSHAFT OIL SEAL - REAR - REMOVAL	9-38	DESCRIPTION, HOAT COOLANT	7-18	ELECTRIC - OPERATION, RADIATOR FAN	7-26
CRANKSHAFT SPROCKET - INSTALLATION	9-56	DESCRIPTION, HOSE CLAMPS	7-1	ELECTRIC - REMOVAL, RADIATOR FAN	7-26
CRANKSHAFT SPROCKET - REMOVAL	9-55	DESCRIPTION, INTAKE MANIFOLD	9-51	END PLAY - STANDARD PROCEDURE, CRANKSHAFT	9-33
CROSS-OVER PIPE - INSTALLATION	11-4	DESCRIPTION, INTAKE/EXHAUST VALVES & SEATS	9-27	END-PLAY - STANDARD PROCEDURE, CAMSHAFT	9-23
CROSS-OVER PIPE - REMOVAL	11-4	DESCRIPTION, LAMP BAR	8L-65	ENGINE - 2.4L - DESCRIPTION	9-3
CYLINDER BORE FITTING - STANDARD PROCEDURE, PISTON TO	9-30	DESCRIPTION, LAMP BAR SWITCH	8L-67	ENGINE - DESCRIPTION, COOLING SYSTEM 2.4L	7-1
CYLINDER BORE HONING - STANDARD PROCEDURE	9-31	DESCRIPTION, LAMPS/LIGHTING - EXTERIOR	8L-2	ENGINE - DIAGNOSIS AND TESTING	9-5
CYLINDER COMBUSTION PRESSURE LEAKAGE TEST - DIAGNOSIS AND TESTING	9-3	DESCRIPTION, LUBRICATION	9-46	ENGINE - INSTALLATION, 2.4L	7-14,7-17,7-22,7-28
CYLINDER COMPRESSION PRESSURE TEST - DIAGNOSIS AND TESTING	9-3	DESCRIPTION, MUFFLER	11-4	ENGINE - REMOVAL, 2.4L	7-14,7-16,7-22,7-27
CYLINDER HEAD - CLEANING	9-20	DESCRIPTION, MULTI-FUNCTION SWITCH	8L-46	ENGINE - SPECIFICATIONS, 2.4L	9-13
CYLINDER HEAD - DESCRIPTION	9-19	DESCRIPTION, OIL FILTER	9-47	ENGINE - STANDARD PROCEDURE, HYDROSTATIC LOCKED	9-9
CYLINDER HEAD - INSPECTION	9-21	DESCRIPTION, OIL PRESSURE SENSOR/SWITCH	9-48	ENGINE ASSEMBLY - INSTALLATION	9-12
CYLINDER HEAD - INSTALLATION	9-21	DESCRIPTION, PARK LAMP RELAY	8L-54	ENGINE ASSEMBLY - REMOVAL	9-12
CYLINDER HEAD - OPERATION	9-19	DESCRIPTION, PISTON & CONNECTING ROD	9-40	ENGINE BLOCK - DESCRIPTION	9-30
CYLINDER HEAD - REMOVAL	9-20	DESCRIPTION, RADIATOR	7-22	ENGINE BLOCK HEATER - 2.4L - DESCRIPTION	7-20
CYLINDER HEAD COVER - CLEANING	9-26	DESCRIPTION, RADIATOR FAN - ELECTRIC	7-26	ENGINE BLOCK HEATER - 2.4L - OPERATION	7-20
CYLINDER HEAD COVER - INSPECTION	9-26	DESCRIPTION, RADIATOR PRESSURE CAP	7-25	ENGINE COOLANT - DESCRIPTION	7-19
CYLINDER HEAD COVER - INSTALLATION	9-26	DESCRIPTION, REAR FOG LAMP RELAY	8L-56	ENGINE COOLANT TEMPERATURE SENSOR - DESCRIPTION	7-21
CYLINDER HEAD COVER - REMOVAL	9-26	DESCRIPTION, TRAILER TOW RELAY	8L-62	ENGINE COOLANT TEMPERATURE SENSOR - INSTALLATION	7-22
CYLINDER HEAD GASKET - DIAGNOSIS AND TESTING	9-19	DESCRIPTION, TRAILER TOW WIRING	8L-64	ENGINE COOLANT TEMPERATURE SENSOR - OPERATION	7-21
CYLINDER HEAD OFF - INSTALLATION	9-28	DESCRIPTION, TRANS COOLER	7-30	ENGINE COOLANT TEMPERATURE SENSOR - REMOVAL	7-21
CYLINDER HEAD OFF - REMOVAL	9-27	DESCRIPTION, WATER PUMP - 2.4L	7-27		
CYLINDER HEAD ON - INSTALLATION	9-28	DIAGNOSIS - DIAGNOSIS AND TESTING, LASH ADJUSTER (TAPPET) NOISE	9-28		
CYLINDER HEAD ON - REMOVAL	9-27	DIAGNOSIS - DIAGNOSIS AND TESTING, SERPENTINE DRIVE BELT	7-15		
DAMAGED OR WORN THREADS - STANDARD PROCEDURE, REPAIR OF	9-9	DIAGNOSIS - PERFORMANCE - DIAGNOSIS AND TESTING, ENGINE	9-5		
DAMPER - INSTALLATION, VIBRATION	9-43	DIAGNOSIS AND TESTING, BACKUP LAMP SWITCH	8L-15		
DAMPER - REMOVAL, VIBRATION	9-43	DIAGNOSIS AND TESTING, BRAKE LAMP SWITCH	8L-17		
DAYTIME RUNNING LAMP RELAY - DESCRIPTION	8L-20	DIAGNOSIS AND TESTING, COOLING SYSTEM DIAGNOSIS CHART	7-5		
DAYTIME RUNNING LAMP RELAY - INSTALLATION	8L-21	DIAGNOSIS AND TESTING, COOLING SYSTEM LEAKS	7-2		
DAYTIME RUNNING LAMP RELAY - OPERATION	8L-20	DIAGNOSIS AND TESTING, CYLINDER COMBUSTION PRESSURE LEAKAGE TEST	9-3		
		DIAGNOSIS AND TESTING, CYLINDER COMPRESSION PRESSURE TEST	9-3		
		DIAGNOSIS AND TESTING, CYLINDER HEAD GASKET	9-19		

Description	Group-Page	Description	Group-Page	Description	Group-Page
ENGINE CORE AND OIL GALLERY PLUGS - STANDARD PROCEDURE	9-9	FRONT FOG LAMP BULB - INSTALLATION	8L-22	HEADLAMP LOW BEAM RELAY - INSTALLATION	8L-41
ENGINE DIAGNOSIS - PERFORMANCE - DIAGNOSIS AND TESTING	9-5	FRONT FOG LAMP BULB - REMOVAL	8L-21	HEADLAMP LOW BEAM RELAY - OPERATION	8L-39
ENGINE GASKET SURFACE PREPARATION - STANDARD PROCEDURE	9-11	FRONT FOG LAMP RELAY - DESCRIPTION	8L-22	HEADLAMP LOW BEAM RELAY - REMOVAL	8L-40
ENGINE MECHANICAL - DIAGNOSIS AND TESTING	9-7	FRONT FOG LAMP RELAY - DIAGNOSIS AND TESTING	8L-23	HEADLAMP UNIT - ADJUSTMENT	8L-42
ENGINE MOUNTING - DESCRIPTION	9-44	FRONT FOG LAMP RELAY - INSTALLATION	8L-24	HEADLAMP UNIT - INSTALLATION	8L-42
ENGINE OIL AND FILTER CHANGE - STANDARD PROCEDURE	9-47	FRONT FOG LAMP RELAY - OPERATION	8L-22	HEADLAMP UNIT - REMOVAL	8L-41
ENGINE OIL LEAK INSPECTION - DIAGNOSIS AND TESTING	9-4	FRONT FOG LAMP RELAY - REMOVAL	8L-24	HEAT SHIELDS - DESCRIPTION	11-4
ENGINE OIL LEVEL CHECK, STANDARD PROCEDURE	9-47	FRONT FOG LAMP UNIT - ADJUSTMENT	8L-25	HEATER - 2.4L - DESCRIPTION, ENGINE BLOCK	7-20
ENGINE OIL PRESSURE CHECKING - DIAGNOSIS AND TESTING	9-46	FRONT FOG LAMP UNIT - INSTALLATION	8L-25	HEATER - 2.4L - OPERATION, ENGINE BLOCK	7-20
ENGINE, SPECIAL TOOLS - 2.4L	9-17	FRONT FOG LAMP UNIT - REMOVAL	8L-24	HIGH BEAM RELAY - DESCRIPTION, HEADLAMP	8L-33
EXHAUST MANIFOLD - CLEANING	9-53	FRONT LAMP BULB - INSTALLATION	8L-27	HIGH BEAM RELAY - DIAGNOSIS AND TESTING, HEADLAMP	8L-34
EXHAUST MANIFOLD - DESCRIPTION	9-53	FRONT LAMP BULB - REMOVAL	8L-27	HIGH BEAM RELAY - INSTALLATION, HEADLAMP	8L-35
EXHAUST MANIFOLD - INSPECTION	9-53	FRONT LAMP UNIT - INSTALLATION	8L-28	HIGH BEAM RELAY - OPERATION, HEADLAMP	8L-33
EXHAUST MANIFOLD - INSTALLATION	9-53	FRONT LAMP UNIT - REMOVAL	8L-27	HIGH BEAM RELAY - REMOVAL, HEADLAMP	8L-34
EXHAUST MANIFOLD - OPERATION	9-53	FRONT MOUNT - INSTALLATION	9-44	HIGH MOUNTED STOP LAMP BULB - INSTALLATION, CENTER	8L-19
EXHAUST MANIFOLD - REMOVAL	9-53	FRONT MOUNT - REMOVAL	9-44	HIGH MOUNTED STOP LAMP BULB - REMOVAL, CENTER	8L-18
EXHAUST SYSTEM - DESCRIPTION	11-1	FRONT POSITION LAMP BULB - INSTALLATION	8L-28	HIGH MOUNTED STOP LAMP UNIT - INSTALLATION, CENTER	8L-19
EXHAUST SYSTEM - DIAGNOSIS AND TESTING	11-2	FRONT POSITION LAMP BULB - REMOVAL	8L-28	HIGH MOUNTED STOP LAMP UNIT - REMOVAL, CENTER	8L-19
EXTERIOR - DESCRIPTION, LAMPS/ LIGHTING	8L-2	FRONT SUSPENSION, SPECIAL TOOLS	2-1	HOAT COOLANT - DESCRIPTION	7-18
EXTERIOR - DIAGNOSIS AND TESTING, LAMPS/LIGHTING	8L-7	GALLERY PLUGS - STANDARD PROCEDURE, ENGINE CORE AND OIL	9-9	HONING - STANDARD PROCEDURE, CYLINDER BORE	9-31
EXTERIOR - OPERATION, LAMPS/ LIGHTING	8L-5	GASKET - DIAGNOSIS AND TESTING, CYLINDER HEAD	9-19	HOSE CLAMPS - DESCRIPTION	7-1
EXTERIOR - SPECIFICATIONS, LAMPS/LIGHTING	8L-15	GASKET SURFACE PREPARATION - STANDARD PROCEDURE, ENGINE	9-11	HOSE CLAMPS - OPERATION	7-2
FAN - ELECTRIC - DESCRIPTION, RADIATOR	7-26	GASKETS AND SEALERS - STANDARD PROCEDURE, FORM-IN-PLACE	9-10	HYDRAULIC LIFTERS - INSTALLATION	9-29
FAN - ELECTRIC - INSTALLATION, RADIATOR	7-27	HAZARD SWITCH - DESCRIPTION	8L-28	HYDRAULIC LIFTERS - REMOVAL	9-29
FAN - ELECTRIC - OPERATION, RADIATOR	7-26	HAZARD SWITCH - INSTALLATION	8L-30	HYDROSTATIC LOCKED ENGINE - STANDARD PROCEDURE	9-9
FAN - ELECTRIC - REMOVAL, RADIATOR	7-26	HAZARD SWITCH - OPERATION	8L-29	INSPECTION - DIAGNOSIS AND TESTING, ENGINE OIL LEAK	9-4
FILTER - DESCRIPTION, OIL	9-47	HAZARD SWITCH - REMOVAL	8L-29	INSPECTION, CAMSHAFT(S)	9-25
FILTER - INSTALLATION, OIL	9-47	HEAD - CLEANING, CYLINDER	9-20	INSPECTION, CATALYTIC CONVERTER	11-3
FILTER - REMOVAL, OIL	9-47	HEAD - DESCRIPTION, CYLINDER	9-19	INSPECTION, CRANKSHAFT	9-34
FILTER CHANGE - STANDARD PROCEDURE, ENGINE OIL	9-47	HEAD - INSPECTION, CYLINDER	9-21	INSPECTION, CYLINDER HEAD	9-21
FITTING - CONNECTING ROD	9-32	HEAD - INSTALLATION, CYLINDER	9-21	INSPECTION, CYLINDER HEAD COVER	9-26
FITTING - PISTON RING	9-42	HEAD - OPERATION, CYLINDER	9-19	INSPECTION, EXHAUST MANIFOLD	9-53
FITTING - STANDARD PROCEDURE, MAIN BEARING	9-35	HEAD - REMOVAL, CYLINDER	9-20	INSPECTION, INTAKE MANIFOLD	9-52
FITTING - STANDARD PROCEDURE, PISTON TO CYLINDER BORE	9-30	HEAD COVER - CLEANING, CYLINDER	9-26	INSPECTION, OIL PUMP	9-50
FLASHER - DESCRIPTION, COMBINATION	8L-19	HEAD COVER - INSPECTION, CYLINDER	9-26	INSPECTION, RADIATOR	7-24
FLASHER - OPERATION, COMBINATION	8L-19	HEAD COVER - INSTALLATION, CYLINDER	9-26	INSPECTION, RADIATOR PRESSURE CAP	7-25
FLUSHING - STANDARD PROCEDURE, COOLING SYSTEM - REVERSE	7-12	HEAD COVER - REMOVAL, CYLINDER	9-26	INSPECTION, REMOVAL	9-28
FLUSHING COOLERS AND TUBES - STANDARD PROCEDURE	7-30	HEAD GASKET - DIAGNOSIS AND TESTING, CYLINDER	9-19	INSPECTION, ROCKER ARMS	9-30
FOG LAMP BULB - INSTALLATION, FRONT	8L-22	HEAD OFF - INSTALLATION, CYLINDER	9-28	INSPECTION, STANDARD PROCEDURE	9-32
FOG LAMP BULB - REMOVAL, FRONT	8L-21	HEAD OFF - REMOVAL, CYLINDER	9-27	INSPECTION, WATER PUMP - 2.4L	7-28
FOG LAMP RELAY - DESCRIPTION, FRONT	8L-22	HEAD ON - INSTALLATION, CYLINDER	9-28	INSTALLATION - BALANCE SHAFT TIMING	9-61
FOG LAMP RELAY - DESCRIPTION, REAR	8L-56	HEAD ON - REMOVAL, CYLINDER	9-27	INSTALLATION, 2.4L	7-20
FOG LAMP RELAY - DIAGNOSIS AND TESTING, FRONT	8L-23	HEADLAMP BULB - INSTALLATION	8L-32	INSTALLATION, 2.4L	9-19
FOG LAMP RELAY - DIAGNOSIS AND TESTING, REAR	8L-57	HEADLAMP BULB - REMOVAL	8L-30	INSTALLATION, 2.4L ENGINE	7-14, 7-17, 7-22, 7-28
FOG LAMP RELAY - INSTALLATION, FRONT	8L-24	HEADLAMP HIGH BEAM RELAY - DESCRIPTION	8L-33	INSTALLATION, BALANCE SHAFT CARRIER	9-64
FOG LAMP RELAY - INSTALLATION, REAR	8L-58	HEADLAMP HIGH BEAM RELAY - DIAGNOSIS AND TESTING	8L-34	INSTALLATION, BALANCE SHAFT CHAIN	9-64
FOG LAMP RELAY - OPERATION, FRONT	8L-22	HEADLAMP HIGH BEAM RELAY - INSTALLATION	8L-35	INSTALLATION, BRAKE LAMP SWITCH	8L-18
FOG LAMP RELAY - OPERATION, REAR	8L-57	HEADLAMP HIGH BEAM RELAY - OPERATION	8L-33	INSTALLATION, CAMSHAFT OIL SEAL(S)	9-22
FOG LAMP RELAY - REMOVAL, FRONT	8L-24	HEADLAMP HIGH BEAM RELAY - REMOVAL	8L-34	INSTALLATION, CAMSHAFT(S)	9-25
FOG LAMP RELAY - REMOVAL, REAR	8L-58	HEADLAMP LEVELING MOTOR - DESCRIPTION	8L-35	INSTALLATION, CATALYTIC CONVERTER	11-3
FOG LAMP UNIT - ADJUSTMENT, FRONT	8L-25	HEADLAMP LEVELING MOTOR - INSTALLATION	8L-36	INSTALLATION, CENTER HIGH MOUNTED STOP LAMP BULB	8L-19
FOG LAMP UNIT - INSTALLATION, FRONT	8L-25	HEADLAMP LEVELING MOTOR - OPERATION	8L-36	INSTALLATION, CENTER HIGH MOUNTED STOP LAMP UNIT	8L-19
FOG LAMP UNIT - REMOVAL, FRONT	8L-24	HEADLAMP LEVELING MOTOR - REMOVAL	8L-36	INSTALLATION, CLEVIS BRACKET BUSHING	2-4
FORM-IN-PLACE GASKETS AND SEALERS - STANDARD PROCEDURE	9-10	HEADLAMP LEVELING SWITCH - DESCRIPTION	8L-37	INSTALLATION, CRANKSHAFT	9-34
FRONT - INSTALLATION, CRANKSHAFT OIL SEAL	9-37	HEADLAMP LEVELING SWITCH - DIAGNOSIS AND TESTING	8L-37	INSTALLATION, CRANKSHAFT OIL SEAL - FRONT	9-37
FRONT - REMOVAL, CRANKSHAFT OIL SEAL	9-37	HEADLAMP LEVELING SWITCH - INSTALLATION	8L-38	INSTALLATION, CRANKSHAFT OIL SEAL - REAR	9-39
		HEADLAMP LEVELING SWITCH - OPERATION	8L-37	INSTALLATION, CRANKSHAFT SPROCKET	9-56
		HEADLAMP LEVELING SWITCH - REMOVAL	8L-38	INSTALLATION, CROSS-OVER PIPE	11-4
		HEADLAMP LOW BEAM RELAY - DESCRIPTION	8L-39	INSTALLATION, CYLINDER HEAD	9-21
		HEADLAMP LOW BEAM RELAY - DIAGNOSIS AND TESTING	8L-40	INSTALLATION, CYLINDER HEAD COVER	9-26
				INSTALLATION, CYLINDER HEAD OFF	9-28
				INSTALLATION, CYLINDER HEAD ON	9-28

Description	Group-Page	Description	Group-Page	Description	Group-Page
INSTALLATION, DAYTIME RUNNING LAMP RELAY	8L-21	JOINT - REMOVAL, UPPER BALL	2-6	LAMP UNIT - REMOVAL, REAR	8L-59
INSTALLATION, ENGINE ASSEMBLY	9-12	LAMP - INSTALLATION	8L-66	LAMP UNIT - REMOVAL, REPEATER	8L-61
INSTALLATION, ENGINE COOLANT TEMPERATURE SENSOR	7-22	LAMP - REMOVAL	8L-66	LAMPS/LIGHTING - EXTERIOR - DESCRIPTION	8L-2
INSTALLATION, EXHAUST MANIFOLD	9-53	LAMP BAR - DESCRIPTION	8L-65	LAMPS/LIGHTING - EXTERIOR - DIAGNOSIS AND TESTING	8L-7
INSTALLATION, FRONT FOG LAMP BULB	8L-22	LAMP BAR - INSTALLATION	8L-66	LAMPS/LIGHTING - EXTERIOR - OPERATION	8L-5
INSTALLATION, FRONT FOG LAMP RELAY	8L-24	LAMP BAR - OPERATION	8L-65	LAMPS/LIGHTING - EXTERIOR - SPECIFICATIONS	8L-15
INSTALLATION, FRONT FOG LAMP UNIT	8L-25	LAMP BAR - REMOVAL	8L-65	LASH ADJUSTER (TAPPET) NOISE	
INSTALLATION, FRONT LAMP BULB	8L-27	LAMP BAR AIMING - STANDARD PROCEDURE	8L-65	DIAGNOSIS - DIAGNOSIS AND TESTING	9-28
INSTALLATION, FRONT LAMP UNIT	8L-28	LAMP BAR SWITCH - DESCRIPTION	8L-67	LEAK INSPECTION - DIAGNOSIS AND TESTING, ENGINE OIL	9-4
INSTALLATION, FRONT MOUNT	9-44	LAMP BAR SWITCH - INSTALLATION	8L-67	LEAKAGE TEST - DIAGNOSIS AND TESTING, CYLINDER COMBUSTION PRESSURE	9-3
INSTALLATION, FRONT POSITION LAMP BULB	8L-28	LAMP BAR SWITCH - REMOVAL	8L-67	LEAKS - DIAGNOSIS AND TESTING, COOLING SYSTEM	7-2
INSTALLATION, HAZARD SWITCH	8L-30	LAMP BULB - INSTALLATION, CENTER HIGH MOUNTED STOP	8L-19	LEAKS - DIAGNOSIS AND TESTING, INTAKE MANIFOLD	9-51
INSTALLATION, HEADLAMP BULB	8L-32	LAMP BULB - INSTALLATION, FRONT	8L-27	LEVEL CHECK, STANDARD PROCEDURE - ENGINE OIL	9-47
INSTALLATION, HEADLAMP HIGH BEAM RELAY	8L-35	LAMP BULB - INSTALLATION, FRONT POSITION	8L-28	LEVELING MOTOR - DESCRIPTION, HEADLAMP	8L-35
INSTALLATION, HEADLAMP LEVELING MOTOR	8L-36	LAMP BULB - INSTALLATION, LICENSE PLATE	8L-45	LEVELING MOTOR - INSTALLATION, HEADLAMP	8L-36
INSTALLATION, HEADLAMP LEVELING SWITCH	8L-38	LAMP BULB - INSTALLATION, REAR	8L-59	LEVELING MOTOR - OPERATION, HEADLAMP	8L-36
INSTALLATION, HEADLAMP LOW BEAM RELAY	8L-41	LAMP BULB - INSTALLATION, REPEATER	8L-60	LEVELING MOTOR - REMOVAL, HEADLAMP	8L-36
INSTALLATION, HEADLAMP UNIT	8L-42	LAMP BULB - REMOVAL, CENTER HIGH MOUNTED STOP	8L-18	LEVELING SWITCH - DESCRIPTION, HEADLAMP	8L-37
INSTALLATION, HYDRAULIC LIFTERS	9-29	LAMP BULB - REMOVAL, FRONT	8L-27	LEVELING SWITCH - DIAGNOSIS AND TESTING, HEADLAMP	8L-37
INSTALLATION, INTAKE MANIFOLD	9-52	LAMP BULB - REMOVAL, FRONT FOG POSITION	8L-21	LEVELING SWITCH - INSTALLATION, HEADLAMP	8L-38
INSTALLATION, LAMP	8L-66	LAMP BULB - REMOVAL, FRONT POSITION	8L-28	LEVELING SWITCH - OPERATION, HEADLAMP	8L-37
INSTALLATION, LAMP BAR	8L-66	LAMP BULB - REMOVAL, LICENSE PLATE	8L-44	LEVELING SWITCH - REMOVAL, HEADLAMP	8L-38
INSTALLATION, LAMP BAR SWITCH	8L-67	LAMP BULB - REMOVAL, REAR	8L-59	LICENSE PLATE LAMP BULB - INSTALLATION	8L-45
INSTALLATION, LICENSE PLATE LAMP BULB	8L-45	LAMP BULB - REMOVAL, REPEATER	8L-60	LICENSE PLATE LAMP BULB - REMOVAL	8L-44
INSTALLATION, LICENSE PLATE LAMP UNIT	8L-46	LAMP RELAY - DESCRIPTION, DAYTIME RUNNING	8L-20	LICENSE PLATE LAMP UNIT - INSTALLATION	8L-46
INSTALLATION, LOWER BALL JOINT	2-5	LAMP RELAY - DESCRIPTION, FRONT FOG	8L-22	LICENSE PLATE LAMP UNIT - REMOVAL	8L-45
INSTALLATION, LOWER CONTROL ARM BUSHING	2-3	LAMP RELAY - DESCRIPTION, PARK	8L-54	LIFTERS - INSTALLATION, HYDRAULIC	9-29
INSTALLATION, LOWER SUSPENSION ARM BUSHING	2-8	LAMP RELAY - DESCRIPTION, REAR FOG	8L-56	LIFTERS - REMOVAL, HYDRAULIC	9-29
INSTALLATION, MUFFLER	11-5	LAMP RELAY - DIAGNOSIS AND TESTING, FRONT FOG	8L-23	LOCKED ENGINE - STANDARD PROCEDURE, HYDROSTATIC	9-9
INSTALLATION, MULTI-FUNCTION SWITCH	8L-53	LAMP RELAY - DIAGNOSIS AND TESTING, PARK	8L-55	LOW BEAM RELAY - DESCRIPTION, HEADLAMP	8L-39
INSTALLATION, OIL FILTER	9-47	LAMP RELAY - DIAGNOSIS AND TESTING, REAR FOG	8L-57	LOW BEAM RELAY - DIAGNOSIS AND TESTING, HEADLAMP	8L-40
INSTALLATION, OIL PAN	9-48	LAMP RELAY - INSTALLATION, DAYTIME RUNNING	8L-21	LOW BEAM RELAY - INSTALLATION, HEADLAMP	8L-41
INSTALLATION, OIL PUMP	9-50	LAMP RELAY - INSTALLATION, FRONT FOG	8L-24	LOW BEAM RELAY - OPERATION, HEADLAMP	8L-39
INSTALLATION, PARK LAMP RELAY	8L-56	LAMP RELAY - INSTALLATION, PARK	8L-56	LOW BEAM RELAY - REMOVAL, HEADLAMP	8L-40
INSTALLATION, PISTON & CONNECTING ROD	9-41	LAMP RELAY - INSTALLATION, REAR FOG	8L-58	LOWER BALL JOINT - INSTALLATION	2-5
INSTALLATION, RADIATOR	7-24	LAMP RELAY - OPERATION, DAYTIME RUNNING	8L-20	LOWER BALL JOINT - REMOVAL	2-5
INSTALLATION, RADIATOR FAN - ELECTRIC	7-27	LAMP RELAY - OPERATION, FRONT FOG	8L-22	LOWER CONTROL ARM BUSHING - INSTALLATION	2-3
INSTALLATION, REAR FOG LAMP RELAY	8L-58	LAMP RELAY - OPERATION, PARK	8L-54	LOWER CONTROL ARM BUSHING - REMOVAL	2-2
INSTALLATION, REAR LAMP BULB	8L-59	LAMP RELAY - OPERATION, REAR FOG	8L-57	LOWER SUSPENSION ARM BUSHING - INSTALLATION	2-8
INSTALLATION, REAR LAMP UNIT	8L-60	LAMP RELAY - REMOVAL, DAYTIME RUNNING	8L-21	LOWER SUSPENSION ARM BUSHING - REMOVAL	2-7
INSTALLATION, REAR MOUNT	9-45	LAMP RELAY - REMOVAL, FRONT FOG	8L-24	LUBRICATION - DESCRIPTION	9-46
INSTALLATION, REPEATER LAMP BULB	8L-60	LAMP RELAY - REMOVAL, PARK	8L-55	LUBRICATION - OPERATION	9-46
INSTALLATION, REPEATER LAMP UNIT	8L-61	LAMP RELAY - REMOVAL, REAR FOG	8L-58	MAIN BEARING - FITTING - STANDARD PROCEDURE	9-35
INSTALLATION, RHD	5-1	LAMP SWITCH - DESCRIPTION, BACKUP	8L-15	MANIFOLD - CLEANING, EXHAUST	9-53
INSTALLATION, ROCKER ARMS	9-30	LAMP SWITCH - DIAGNOSIS AND TESTING, BACKUP	8L-17	MANIFOLD - DESCRIPTION, EXHAUST	9-53
INSTALLATION, STRUCTURAL COLLAR	9-44	LAMP SWITCH - DIAGNOSIS AND TESTING, BRAKE	8L-18	MANIFOLD - DESCRIPTION, INTAKE	9-51
INSTALLATION, TIMING BELT	9-56	LAMP SWITCH - INSTALLATION, BRAKE	8L-15	MANIFOLD - INSPECTION, EXHAUST	9-53
INSTALLATION, TIMING BELT COVER(S)	9-53	LAMP SWITCH - OPERATION, BACKUP	8L-18	MANIFOLD - INSPECTION, INTAKE	9-52
INSTALLATION, TIMING BELT TENSIONER & PULLEY	9-59	LAMP SWITCH - OPERATION, BRAKE	8L-16	MANIFOLD - INSTALLATION, EXHAUST	9-53
INSTALLATION, TRAILER TOW CONNECTOR	8L-61	LAMP SWITCH - REMOVAL, BRAKE	8L-17	MANIFOLD - INSTALLATION, INTAKE	9-52
INSTALLATION, TRAILER TOW RELAY	8L-63	LAMP UNIT - ADJUSTMENT, FRONT FOG	8L-25	MANIFOLD - OPERATION, EXHAUST	9-53
INSTALLATION, UPPER BALL JOINT	2-6	LAMP UNIT - INSTALLATION, CENTER HIGH MOUNTED STOP	8L-19	MANIFOLD - OPERATION, INTAKE	9-51
INSTALLATION, UPPER CONTROL ARM BUSHINGS	2-4	LAMP UNIT - INSTALLATION, FRONT FOG	8L-28	MANIFOLD - REMOVAL, EXHAUST	9-53
INSTALLATION, UPPER SUSPENSION ARM BUSHING	2-8	LAMP UNIT - INSTALLATION, LICENSE PLATE	8L-45	MANIFOLD - REMOVAL, INTAKE	9-52
INSTALLATION, VIBRATION DAMPER	9-43	LAMP UNIT - INSTALLATION, LICENSE PLATE	8L-46		
INTAKE MANIFOLD - DESCRIPTION	9-51	LAMP UNIT - INSTALLATION, REAR	8L-60		
INTAKE MANIFOLD - INSPECTION	9-52	LAMP UNIT - INSTALLATION, REPEATER	8L-61		
INTAKE MANIFOLD - INSTALLATION	9-52	LAMP UNIT - REMOVAL, CENTER HIGH MOUNTED STOP	8L-19		
INTAKE MANIFOLD - OPERATION	9-51	LAMP UNIT - REMOVAL, FRONT	8L-27		
INTAKE MANIFOLD - REMOVAL	9-52	LAMP UNIT - REMOVAL, FRONT FOG	8L-24		
INTAKE MANIFOLD LEAKS - DIAGNOSIS AND TESTING	9-51	LAMP UNIT - REMOVAL, LICENSE PLATE	8L-45		
INTAKE/EXHAUST VALVES & SEATS - CLEANING	9-27				
INTAKE/EXHAUST VALVES & SEATS - DESCRIPTION	9-27				
JOINT - INSTALLATION, LOWER BALL	2-5				
JOINT - INSTALLATION, UPPER BALL	2-6				
JOINT - REMOVAL, LOWER BALL	2-5				

Description	Group-Page	Description	Group-Page	Description	Group-Page
MANIFOLD LEAKS - DIAGNOSIS AND TESTING, INTAKE	9-51	OPERATION, COOLING SYSTEM	7-2	PRESSURE CAP - CLEANING, RADIATOR	7-25
MEASURING BEARING CLEARANCE USING PLASTIGAGE - STANDARD PROCEDURE	9-11	OPERATION, CRANKSHAFT	9-33	PRESSURE CAP - DESCRIPTION, RADIATOR	7-25
MECHANICAL - DIAGNOSIS AND TESTING, ENGINE	9-7	OPERATION, CYLINDER HEAD	9-19	PRESSURE CAP - DIAGNOSIS AND TESTING, RADIATOR	7-25
MOTOR - DESCRIPTION, HEADLAMP LEVELING	8L-35	OPERATION, DAYTIME RUNNING LAMP RELAY	8L-20	PRESSURE CAP - INSPECTION, RADIATOR	7-25
MOTOR - INSTALLATION, HEADLAMP LEVELING	8L-36	OPERATION, DESCRIPTION	7-20	PRESSURE CAP - OPERATION, RADIATOR	7-25
MOTOR - OPERATION, HEADLAMP LEVELING	8L-36	OPERATION, ENGINE BLOCK HEATER - 2.4L	7-20	PRESSURE CHECKING - DIAGNOSIS AND TESTING, ENGINE OIL	9-46
MOTOR - REMOVAL, HEADLAMP LEVELING	8L-36	OPERATION, ENGINE COOLANT TEMPERATURE SENSOR	7-21	PRESSURE LEAKAGE TEST - DIAGNOSIS AND TESTING, CYLINDER COMBUSTION	9-3
MOUNT - INSTALLATION, FRONT	9-44	OPERATION, EXHAUST MANIFOLD	9-53	PRESSURE SENSOR/SWITCH - DESCRIPTION, OIL	9-48
MOUNT - INSTALLATION, REAR	9-45	OPERATION, FRONT FOG LAMP RELAY	8L-22	PRESSURE SENSOR/SWITCH - OPERATION, OIL	9-48
MOUNT - REMOVAL, FRONT	9-44	OPERATION, HAZARD SWITCH	8L-29	PRESSURE TEST - DIAGNOSIS AND TESTING, CYLINDER COMPRESSION	9-3
MOUNT - REMOVAL, REAR	9-45	OPERATION, HEADLAMP HIGH BEAM RELAY	8L-33	PULLEY - INSTALLATION, TIMING BELT TENSIONER	9-59
MOUNTED STOP LAMP BULB - INSTALLATION, CENTER HIGH	8L-19	OPERATION, HEADLAMP LEVELING MOTOR	8L-36	PULLEY - REMOVAL, TIMING BELT TENSIONER	9-59
MOUNTED STOP LAMP BULB - REMOVAL, CENTER HIGH	8L-18	OPERATION, HEADLAMP LOW BEAM RELAY	8L-39	PUMP - 2.4L - DESCRIPTION, WATER	7-27
MOUNTED STOP LAMP UNIT - INSTALLATION, CENTER HIGH	8L-19	OPERATION, HOSE CLAMPS	7-2	PUMP - 2.4L - INSPECTION, WATER	7-28
MOUNTED STOP LAMP UNIT - REMOVAL, CENTER HIGH	8L-19	OPERATION, INTAKE MANIFOLD	9-51	PUMP - 2.4L - OPERATION, WATER	7-27
MOUNTING - DESCRIPTION, ENGINE	9-44	OPERATION, LAMP BAR	8L-65	PUMP - ASSEMBLY, OIL	9-50
MUFFLER - DESCRIPTION	11-4	OPERATION, LAMPS/LIGHTING - EXTERIOR	8L-5	PUMP - CLEANING, OIL	9-49
MUFFLER - INSTALLATION	11-5	OPERATION, LUBRICATION	9-46	PUMP - DISASSEMBLY, OIL	9-49
MUFFLER - REMOVAL	11-4	OPERATION, MULTI-FUNCTION SWITCH	8L-48	PUMP - INSPECTION, OIL	9-50
MULTI-FUNCTION SWITCH - DESCRIPTION	8L-46	OPERATION, OIL PRESSURE SENSOR/ SWITCH	9-48	PUMP - INSTALLATION, OIL	9-50
MULTI-FUNCTION SWITCH - DIAGNOSIS AND TESTING	8L-50	OPERATION, PARK LAMP RELAY	8L-54	PUMP - REMOVAL, OIL	9-49
MULTI-FUNCTION SWITCH - INSTALLATION	8L-53	OPERATION, PISTON & CONNECTING ROD	9-40	RADIATOR - CLEANING	7-24
MULTI-FUNCTION SWITCH - OPERATION	8L-48	OPERATION, RADIATOR FAN - ELECTRIC	7-26	RADIATOR - DESCRIPTION	7-22
MULTI-FUNCTION SWITCH - REMOVAL	8L-53	OPERATION, RADIATOR PRESSURE CAP	7-25	RADIATOR - INSPECTION	7-24
NOISE DIAGNOSIS - DIAGNOSIS AND TESTING, LASH ADJUSTER (TAPPET)	9-28	OPERATION, REAR FOG LAMP RELAY	8L-57	RADIATOR - INSTALLATION	7-24
OFF - INSTALLATION, CYLINDER HEAD	9-28	OPERATION, TRAILER TOW RELAY	8L-62	RADIATOR - REMOVAL	7-22
OFF - REMOVAL, CYLINDER HEAD	9-27	OPERATION, WATER PUMP - 2.4L	7-27	RADIATOR FAN - ELECTRIC - DESCRIPTION	7-26
OIL AND FILTER CHANGE - STANDARD PROCEDURE, ENGINE	9-47	PAN - INSTALLATION, OIL	9-48	RADIATOR FAN - ELECTRIC - INSTALLATION	7-27
OIL FILTER - DESCRIPTION	9-47	PAN - REMOVAL, OIL	9-48	RADIATOR FAN - ELECTRIC - OPERATION	7-26
OIL FILTER - INSTALLATION	9-47	PARK LAMP RELAY - DESCRIPTION	8L-54	RADIATOR FAN - ELECTRIC - REMOVAL	7-26
OIL FILTER - REMOVAL	9-47	PARK LAMP RELAY - DIAGNOSIS AND TESTING	8L-55	RADIATOR PRESSURE CAP - CLEANING	7-25
OIL GALLERY PLUGS - STANDARD PROCEDURE, ENGINE CORE	9-9	PARK LAMP RELAY - INSTALLATION	8L-56	RADIATOR PRESSURE CAP - DESCRIPTION	7-25
OIL LEAK INSPECTION - DIAGNOSIS AND TESTING, ENGINE	9-4	PARK LAMP RELAY - OPERATION	8L-54	RADIATOR PRESSURE CAP - DIAGNOSIS AND TESTING	7-25
OIL LEVEL CHECK, STANDARD PROCEDURE - ENGINE	9-47	PARK LAMP RELAY - REMOVAL	8L-55	RADIATOR PRESSURE CAP - INSTALLATION, CRANKSHAFT OIL SEAL	9-39
OIL PAN - INSTALLATION	9-48	PERFORMANCE - DIAGNOSIS AND TESTING, ENGINE DIAGNOSIS	9-5	REAR - REMOVAL, CRANKSHAFT OIL SEAL	9-38
OIL PAN - REMOVAL	9-48	PIPE - INSTALLATION, CROSS-OVER	11-4	REAR FOG LAMP RELAY - DESCRIPTION	8L-56
OIL PRESSURE CHECKING - DIAGNOSIS AND TESTING, ENGINE	9-46	PIPE - REMOVAL, CROSS-OVER	11-4	REAR FOG LAMP RELAY - DIAGNOSIS AND TESTING	8L-57
OIL PRESSURE SENSOR/SWITCH - DESCRIPTION	9-48	PISTON & CONNECTING ROD - DESCRIPTION	9-40	REAR FOG LAMP RELAY - INSTALLATION	8L-58
OIL PRESSURE SENSOR/SWITCH - OPERATION	9-48	PISTON & CONNECTING ROD - INSTALLATION	9-41	REAR FOG LAMP RELAY - OPERATION	8L-57
OIL PUMP - ASSEMBLY	9-50	PISTON & CONNECTING ROD - OPERATION	9-40	REAR FOG LAMP RELAY - REMOVAL	8L-58
OIL PUMP - CLEANING	9-49	PISTON & CONNECTING ROD - REMOVAL	9-40	REAR LAMP BULB - INSTALLATION	8L-59
OIL PUMP - DISASSEMBLY	9-49	PISTON RING, FITTING	9-42	REAR LAMP BULB - REMOVAL	8L-59
OIL PUMP - INSPECTION	9-50	PISTON TO CYLINDER BORE FITTING - STANDARD PROCEDURE	9-30	REAR LAMP UNIT - INSTALLATION	8L-60
OIL PUMP - INSTALLATION	9-50	PLASTIGAGE - STANDARD PROCEDURE, MEASURING BEARING CLEARANCE USING	9-11	REAR LAMP UNIT - REMOVAL	8L-59
OIL PUMP - REMOVAL	9-49	PLATE LAMP BULB - INSTALLATION, LICENSE	8L-45	REAR MOUNT - INSTALLATION	9-45
OIL SEAL - FRONT - INSTALLATION, CRANKSHAFT	9-37	PLATE LAMP BULB - REMOVAL, LICENSE	8L-44	REAR MOUNT - REMOVAL	9-45
OIL SEAL - FRONT - REMOVAL, CRANKSHAFT	9-37	PLATE LAMP UNIT - INSTALLATION, LICENSE	8L-46	REAR SUSPENSION, SPECIAL TOOLS	2-6
OIL SEAL - REAR - INSTALLATION, CRANKSHAFT	9-39	PLATE LAMP UNIT - REMOVAL, LICENSE	8L-45	RECOVERY PRESS CONTAINER - DESCRIPTION, COOLANT	7-20
OIL SEAL - REAR - REMOVAL, CRANKSHAFT	9-38	PLAY - STANDARD PROCEDURE, CRANKSHAFT END	9-33	RECOVERY PRESS CONTAINER - OPERATION, COOLANT	7-20
OIL SEAL(S) - INSTALLATION, CAMSHAFT	9-22	PLUGS - STANDARD PROCEDURE, ENGINE CORE AND OIL GALLERY	9-9	REFILLING COOLING SYSTEM - STANDARD PROCEDURE	7-11
OIL SEAL(S) - REMOVAL, CAMSHAFT	9-22	POSITION LAMP BULB - INSTALLATION, FRONT	8L-28	RELAY - DESCRIPTION, DAYTIME RUNNING LAMP	8L-20
ON-BOARD DIAGNOSTICS (OBD) - DIAGNOSIS AND TESTING	7-2	POSITION LAMP BULB - REMOVAL, FRONT	8L-28	RELAY - DESCRIPTION, FRONT FOG LAMP	8L-22
OPERATION, BACKUP LAMP SWITCH	8L-15	PRELIMINARY CHECKS - DIAGNOSIS AND TESTING	7-2	RELAY - DESCRIPTION, HEADLAMP HIGH BEAM	8L-33
OPERATION, BALANCE SHAFT	9-59	PREPARATION - STANDARD PROCEDURE, ENGINE GASKET SURFACE	9-11	RELAY - DESCRIPTION, HEADLAMP LOW BEAM	8L-39
OPERATION, BRAKE LAMP SWITCH	8L-16	PRESS CONTAINER - DESCRIPTION, COOLANT RECOVERY	7-20	RELAY - DESCRIPTION, PARK LAMP	8L-54
OPERATION, CAMSHAFT(S)	9-23	PRESS CONTAINER - OPERATION, COOLANT RECOVERY	7-20	RELAY - DESCRIPTION, REAR FOG LAMP	8L-56
OPERATION, COMBINATION FLASHER	8L-19			RELAY - DESCRIPTION, TRAILER TOW	8L-62
OPERATION, COOLANT RECOVERY PRESS CONTAINER	7-20				

Description	Group-Page	Description	Group-Page	Description	Group-Page
RELAY - DIAGNOSIS AND TESTING, FRONT FOG LAMP	8L-23	REMOVAL, HEADLAMP HIGH BEAM RELAY	8L-34	SEAL - REAR - REMOVAL, CRANKSHAFT OIL	9-38
RELAY - DIAGNOSIS AND TESTING, HEADLAMP HIGH BEAM	8L-34	REMOVAL, HEADLAMP LEVELING MOTOR	8L-36	SEALERS - STANDARD PROCEDURE, FORM-IN-PLACE GASKETS	9-10
RELAY - DIAGNOSIS AND TESTING, HEADLAMP LOW BEAM	8L-40	REMOVAL, HEADLAMP LEVELING SWITCH	8L-38	SEAL(S) - INSTALLATION, CAMSHAFT OIL	9-22
RELAY - DIAGNOSIS AND TESTING, PARK LAMP	8L-55	REMOVAL, HEADLAMP LOW BEAM RELAY	8L-40	SEAL(S) - REMOVAL, CAMSHAFT OIL	9-22
RELAY - DIAGNOSIS AND TESTING, REAR FOG LAMP	8L-57	REMOVAL, HEADLAMP UNIT	8L-41	SEATS - CLEANING, INTAKE/EXHAUST VALVES	9-27
RELAY - DIAGNOSIS AND TESTING, TRAILER TOW	8L-62	REMOVAL, HYDRAULIC LIFTERS	9-29	SEATS - DESCRIPTION, INTAKE/EXHAUST VALVES	9-27
RELAY - INSTALLATION, DAYTIME RUNNING LAMP	8L-21	REMOVAL, INTAKE MANIFOLD	9-52	SENSOR - DESCRIPTION, ENGINE COOLANT TEMPERATURE	7-21
RELAY - INSTALLATION, FRONT FOG LAMP	8L-24	REMOVAL, LAMP	8L-66	SENSOR - INSTALLATION, ENGINE COOLANT TEMPERATURE	7-22
RELAY - INSTALLATION, HEADLAMP HIGH BEAM	8L-35	REMOVAL, LAMP BAR	8L-65	SENSOR - OPERATION, ENGINE COOLANT TEMPERATURE	7-21
RELAY - INSTALLATION, HEADLAMP LOW BEAM	8L-41	REMOVAL, LAMP BAR SWITCH	8L-67	SENSOR - REMOVAL, ENGINE COOLANT TEMPERATURE	7-21
RELAY - INSTALLATION, PARK LAMP	8L-56	REMOVAL, LICENSE PLATE LAMP BULB	8L-44	SENSOR/SWITCH - DESCRIPTION, OIL PRESSURE	9-48
RELAY - INSTALLATION, REAR FOG LAMP	8L-58	REMOVAL, LICENSE PLATE LAMP UNIT	8L-45	SENSOR/SWITCH - OPERATION, OIL PRESSURE	9-48
RELAY - OPERATION, DAYTIME RUNNING LAMP	8L-20	REMOVAL, LOWER BALL JOINT	2-5	SERPENTINE DRIVE BELT DIAGNOSIS - DIAGNOSIS AND TESTING	7-15
RELAY - OPERATION, FRONT FOG LAMP	8L-22	REMOVAL, LOWER CONTROL ARM BUSHING	2-2	SHAFT - DESCRIPTION, BALANCE	9-59
RELAY - OPERATION, HEADLAMP HIGH BEAM	8L-33	REMOVAL, LOWER SUSPENSION ARM BUSHING	2-7	SHAFT - OPERATION, BALANCE	9-59
RELAY - OPERATION, HEADLAMP LOW BEAM	8L-39	REMOVAL, MUFFLER	11-4	SHAFT - REMOVAL, BALANCE	9-60
RELAY - OPERATION, PARK LAMP	8L-54	REMOVAL, MULTI-FUNCTION SWITCH	8L-53	SHAFT CARRIER - INSTALLATION, BALANCE	9-64
RELAY - OPERATION, REAR FOG LAMP	8L-57	REMOVAL, OIL FILTER	9-47	SHAFT CARRIER - REMOVAL, BALANCE	9-64
RELAY - OPERATION, TRAILER TOW	8L-62	REMOVAL, OIL PAN	9-48	SHAFT CHAIN - INSTALLATION, BALANCE	9-64
RELAY - REMOVAL, DAYTIME RUNNING LAMP	8L-21	REMOVAL, OIL PUMP	9-49	SHAFT CHAIN - REMOVAL, BALANCE	9-64
RELAY - REMOVAL, FRONT FOG LAMP	8L-24	REMOVAL, PARK LAMP RELAY	8L-55	SHAFT TIMING, INSTALLATION - BALANCE	9-61
RELAY - REMOVAL, HEADLAMP HIGH BEAM	8L-34	REMOVAL, PISTON & CONNECTING ROD	9-40	SHIELDS - DESCRIPTION, HEAT	11-4
RELAY - REMOVAL, HEADLAMP LOW BEAM	8L-40	REMOVAL, RADIATOR	7-22	SPECIAL TOOLS - 2.4L ENGINE	9-17
RELAY - REMOVAL, PARK LAMP	8L-55	REMOVAL, RADIATOR FAN - ELECTRIC	7-26	SPECIAL TOOLS - COOLING	7-13
RELAY - REMOVAL, REAR FOG LAMP	8L-58	REMOVAL, REAR FOG LAMP RELAY	8L-58	SPECIAL TOOLS - FRONT SUSPENSION	2-1
RELAY - REMOVAL, TRAILER TOW	8L-63	REMOVAL, REAR LAMP BULB	8L-59	SPECIAL TOOLS - REAR SUSPENSION	2-6
REMOVAL - CLEANING	9-55	REMOVAL, REAR LAMP UNIT	8L-59	SPECIFICATIONS - TORQUE	7-13
REMOVAL - INSPECTION	9-28	REMOVAL, REAR MOUNT	9-45	SPECIFICATIONS, 2.4L ENGINE	9-13
REMOVAL, 2.4L	7-20	REMOVAL, REPEATER LAMP BULB	8L-60	SPECIFICATIONS, LAMPS/LIGHTING - EXTERIOR	8L-15
REMOVAL, 2.4L	9-19	REMOVAL, REPEATER LAMP UNIT	8L-61	SPECIFICATIONS, TORQUE	9-16
REMOVAL, 2.4L ENGINE	7-14,7-16,7-22,7-27	REMOVAL, RHD	5-1	SPROCKET - INSTALLATION, CRANKSHAFT	9-56
REMOVAL, BALANCE SHAFT	9-60	REMOVAL, ROCKER ARMS	9-29	SPROCKET - REMOVAL, CRANKSHAFT	9-55
REMOVAL, BALANCE SHAFT CARRIER	9-64	REMOVAL, STRUCTURAL COLLAR	9-44	STANDARD PROCEDURE - CLEANING	9-31
REMOVAL, BALANCE SHAFT CHAIN	9-64	REMOVAL, TIMING BELT	9-55	STANDARD PROCEDURE - ENGINE OIL LEVEL CHECK	9-47
REMOVAL, BRAKE LAMP SWITCH	8L-17	REMOVAL, TIMING BELT COVER(S)	9-53	STANDARD PROCEDURE - INSPECTION	9-32
REMOVAL, CAMSHAFT OIL SEAL(S)	9-22	REMOVAL, TIMING BELT TENSIONER & PULLEY	9-59	STANDARD PROCEDURE, CAMSHAFT END-PLAY	9-23
REMOVAL, CAMSHAFT(S)	9-24	REMOVAL, TRAILER TOW CONNECTOR	8L-61	STANDARD PROCEDURE, COOLING SYSTEM - REVERSE FLUSHING	7-12
REMOVAL, CATALYTIC CONVERTER	11-2	REMOVAL, TRAILER TOW RELAY	8L-63	STANDARD PROCEDURE, CRANKSHAFT END PLAY	9-33
REMOVAL, CENTER HIGH MOUNTED STOP LAMP BULB	8L-18	REMOVAL, UPPER BALL JOINT	2-6	STANDARD PROCEDURE, CYLINDER BORE HONING	9-31
REMOVAL, CENTER HIGH MOUNTED STOP LAMP UNIT	8L-19	REMOVAL, UPPER CONTROL ARM BUSHINGS	2-3	STANDARD PROCEDURE, DRAINING COOLING SYSTEM	7-11
REMOVAL, CLEVIS BRACKET BUSHING	2-2	REMOVAL, UPPER SUSPENSION ARM BUSHING	2-7	STANDARD PROCEDURE, ENGINE CORE AND OIL GALLERY PLUGS	9-9
REMOVAL, CRANKSHAFT	9-33	REMOVAL, VIBRATION DAMPER	9-43	STANDARD PROCEDURE, ENGINE GASKET SURFACE PREPARATION	9-11
REMOVAL, CRANKSHAFT OIL SEAL - FRONT	9-37	REPAIR OF DAMAGED OR WORN THREADS - STANDARD PROCEDURE	9-9	STANDARD PROCEDURE, ENGINE OIL AND FILTER CHANGE	9-47
REMOVAL, CRANKSHAFT OIL SEAL - REAR	9-38	REPEATER LAMP BULB - INSTALLATION	8L-60	STANDARD PROCEDURE, FLUSHING COOLERS AND TUBES	7-30
REMOVAL, CRANKSHAFT SPROCKET	9-55	REPEATER LAMP BULB - REMOVAL	8L-60	STANDARD PROCEDURE, FORM-IN-PLACE GASKETS AND SEALERS	9-10
REMOVAL, CROSS-OVER PIPE	11-4	REPEATER LAMP UNIT - INSTALLATION	8L-61	STANDARD PROCEDURE, HYDROSTATIC LOCKED ENGINE	9-9
REMOVAL, CYLINDER HEAD	9-20	REPEATER LAMP UNIT - REMOVAL	8L-61	STANDARD PROCEDURE, LAMP BAR AIMING	8L-65
REMOVAL, CYLINDER HEAD COVER	9-26	REVERSE FLUSHING - STANDARD PROCEDURE, COOLING SYSTEM	7-12	STANDARD PROCEDURE, MAIN BEARING - FITTING	9-35
REMOVAL, CYLINDER HEAD OFF	9-27	RHD - INSTALLATION	5-1	STANDARD PROCEDURE, MEASURING BEARING CLEARANCE USING PLASTIGAGE	9-11
REMOVAL, CYLINDER HEAD ON	9-27	RHD - REMOVAL	5-1	STANDARD PROCEDURE, PISTON TO CYLINDER BORE FITTING	9-30
REMOVAL, DAYTIME RUNNING LAMP RELAY	8L-21	RING, FITTING - PISTON	9-42	STANDARD PROCEDURE, REFILLING COOLING SYSTEM	7-11
REMOVAL, ENGINE ASSEMBLY	9-12	ROCKER ARMS - INSPECTION	9-30	STANDARD PROCEDURE, REPAIR OF DAMAGED OR WORN THREADS	9-9
REMOVAL, ENGINE COOLANT TEMPERATURE SENSOR	7-21	ROCKER ARMS - INSTALLATION	9-30		
REMOVAL, EXHAUST MANIFOLD	9-53	ROCKER ARMS - REMOVAL	9-29		
REMOVAL, FRONT FOG LAMP BULB	8L-21	ROD - DESCRIPTION, PISTON & CONNECTING	9-40		
REMOVAL, FRONT FOG LAMP RELAY	8L-24	ROD - INSTALLATION, PISTON & CONNECTING	9-41		
REMOVAL, FRONT FOG LAMP UNIT	8L-24	ROD - OPERATION, PISTON & CONNECTING	9-40		
REMOVAL, FRONT LAMP BULB	8L-27	ROD - REMOVAL, PISTON & CONNECTING	9-40		
REMOVAL, FRONT LAMP UNIT	8L-27	ROD, FITTING - CONNECTING	9-32		
REMOVAL, FRONT MOUNT	9-44	RUNNING LAMP RELAY - DESCRIPTION, DAYTIME	8L-20		
REMOVAL, FRONT POSITION LAMP BULB	8L-28	RUNNING LAMP RELAY - INSTALLATION, DAYTIME	8L-21		
REMOVAL, HAZARD SWITCH	8L-29	RUNNING LAMP RELAY - OPERATION, DAYTIME	8L-20		
REMOVAL, HEADLAMP BULB	8L-30	RUNNING LAMP RELAY - REMOVAL, DAYTIME	8L-21		

Description	Group-Page	Description	Group-Page	Description	Group-Page
STOP LAMP BULB - INSTALLATION, CENTER HIGH MOUNTED	8L-19	TENSIONER & PULLEY - INSTALLATION, TIMING BELT	9-59	TO CYLINDER BORE FITTING - STANDARD PROCEDURE, PISTON	9-30
STOP LAMP BULB - REMOVAL, CENTER HIGH MOUNTED	8L-18	TENSIONER & PULLEY - REMOVAL, TIMING BELT	9-59	TOOLS - 2.4L ENGINE, SPECIAL	9-17
STOP LAMP UNIT - INSTALLATION, CENTER HIGH MOUNTED	8L-19	TEST - DIAGNOSIS AND TESTING, CYLINDER COMBUSTION PRESSURE LEAKAGE	9-3	TOOLS - COOLING, SPECIAL	7-13
STOP LAMP UNIT - REMOVAL, CENTER HIGH MOUNTED	8L-19	TEST - DIAGNOSIS AND TESTING, CYLINDER COMPRESSION PRESSURE	9-3	TOOLS - FRONT SUSPENSION, SPECIAL	2-1
STRUCTURAL COLLAR - INSTALLATION	9-44	TESTING, BACKUP LAMP SWITCH - DIAGNOSIS	8L-15	TOOLS - REAR SUSPENSION, SPECIAL	2-6
STRUCTURAL COLLAR - REMOVAL	9-44	TESTING, BRAKE LAMP SWITCH - DIAGNOSIS	8L-17	TORQUE - SPECIFICATIONS	9-16
SURFACE PREPARATION - STANDARD PROCEDURE, ENGINE GASKET	9-11	TESTING, COOLING SYSTEM DIAGNOSIS CHART - DIAGNOSIS	7-5	TORQUE, SPECIFICATIONS	7-13
SUSPENSION ARM BUSHING - INSTALLATION, LOWER	2-8	TESTING, COOLING SYSTEM LEAKS - DIAGNOSIS	7-2	TOW CONNECTOR - INSTALLATION, TRAILER	8L-61
SUSPENSION ARM BUSHING - INSTALLATION, UPPER	2-8	TESTING, CYLINDER COMBUSTION PRESSURE LEAKAGE TEST - DIAGNOSIS	9-3	TOW CONNECTOR - REMOVAL, TRAILER	8L-61
SUSPENSION ARM BUSHING - REMOVAL, LOWER	2-7	TESTING, CYLINDER COMPRESSION PRESSURE TEST - DIAGNOSIS	9-3	TOW RELAY - DESCRIPTION, TRAILER	8L-62
SUSPENSION ARM BUSHING - REMOVAL, UPPER	2-7	TESTING, CYLINDER HEAD GASKET - DIAGNOSIS	9-19	TOW RELAY - DIAGNOSIS AND TESTING, TRAILER	8L-62
SUSPENSION, SPECIAL TOOLS - FRONT	2-1	TESTING, ENGINE - DIAGNOSIS	9-5	TOW RELAY - INSTALLATION, TRAILER	8L-63
SUSPENSION, SPECIAL TOOLS - REAR	2-6	TESTING, ENGINE DIAGNOSIS - PERFORMANCE - DIAGNOSIS	9-5	TOW RELAY - OPERATION, TRAILER	8L-62
SWITCH - DESCRIPTION, BACKUP LAMP	8L-15	TESTING, ENGINE MECHANICAL - DIAGNOSIS	9-7	TOW RELAY - REMOVAL, TRAILER	8L-63
SWITCH - DESCRIPTION, BRAKE LAMP	8L-16	TESTING, ENGINE OIL LEAK INSPECTION - DIAGNOSIS	9-4	TOW WIRING - DESCRIPTION, TRAILER	8L-64
SWITCH - DESCRIPTION, HAZARD	8L-28	TESTING, ENGINE OIL PRESSURE CHECKING - DIAGNOSIS	9-46	TRAILER TOW CONNECTOR - INSTALLATION	8L-61
SWITCH - DESCRIPTION, HEADLAMP LEVELING	8L-37	TESTING, EXHAUST SYSTEM - DIAGNOSIS	11-2	TRAILER TOW CONNECTOR - REMOVAL	8L-61
SWITCH - DESCRIPTION, LAMP BAR	8L-67	TESTING, FRONT FOG LAMP RELAY - DIAGNOSIS	8L-23	TRAILER TOW RELAY - DESCRIPTION	8L-62
SWITCH - DESCRIPTION, MULTI- FUNCTION	8L-46	TESTING, HEADLAMP HIGH BEAM RELAY - DIAGNOSIS	8L-34	TRAILER TOW RELAY - DIAGNOSIS AND TESTING	8L-62
SWITCH - DIAGNOSIS AND TESTING, BACKUP LAMP	8L-15	TESTING, HEADLAMP LEVELING SWITCH - DIAGNOSIS	8L-37	TRAILER TOW RELAY - INSTALLATION	8L-63
SWITCH - DIAGNOSIS AND TESTING, BRAKE LAMP	8L-17	TESTING, HEADLAMP LOW BEAM RELAY - DIAGNOSIS	8L-40	TRAILER TOW RELAY - OPERATION	8L-62
SWITCH - DIAGNOSIS AND TESTING, HEADLAMP LEVELING	8L-37	TESTING, INTAKE MANIFOLD LEAKS - DIAGNOSIS	9-51	TRAILER TOW RELAY - REMOVAL	8L-63
SWITCH - DIAGNOSIS AND TESTING, MULTI-FUNCTION	8L-50	TESTING, LAMP BAR - DIAGNOSIS	8L-65	TRAILER TOW WIRING - DESCRIPTION	8L-64
SWITCH - INSTALLATION, BRAKE LAMP	8L-18	TESTING, LAMPS/LIGHTING - EXTERIOR - DIAGNOSIS	8L-7	TRANS COOLER - DESCRIPTION	7-30
SWITCH - INSTALLATION, HAZARD	8L-30	TESTING, LASH ADJUSTER (TAPPET) NOISE DIAGNOSIS - DIAGNOSIS	9-28	TUBES - STANDARD PROCEDURE, FLUSHING COOLERS	7-30
SWITCH - INSTALLATION, HEADLAMP LEVELING	8L-38	TESTING, MULTI-FUNCTION SWITCH - DIAGNOSIS	8L-50	UNIT - ADJUSTMENT, FRONT FOG LAMP	8L-25
SWITCH - INSTALLATION, LAMP BAR	8L-67	TESTING, ON-BOARD DIAGNOSTICS (OBD) - DIAGNOSIS	7-2	UNIT - ADJUSTMENT, HEADLAMP	8L-42
SWITCH - INSTALLATION, MULTI- FUNCTION	8L-53	TESTING, PARK LAMP RELAY - DIAGNOSIS	8L-55	UNIT - INSTALLATION, CENTER HIGH MOUNTED STOP LAMP	8L-19
SWITCH - OPERATION, BACKUP LAMP	8L-15	TESTING, PRELIMINARY CHECKS - DIAGNOSIS	7-2	UNIT - INSTALLATION, FRONT FOG LAMP	8L-25
SWITCH - OPERATION, BRAKE LAMP	8L-16	TESTING, RADIATOR PRESSURE CAP - DIAGNOSIS	7-25	UNIT - INSTALLATION, FRONT LAMP	8L-28
SWITCH - OPERATION, HAZARD	8L-29	TESTING, REAR FOG LAMP RELAY - DIAGNOSIS	8L-57	UNIT - INSTALLATION, HEADLAMP	8L-42
SWITCH - OPERATION, HEADLAMP LEVELING	8L-37	TESTING, SERPENTINE DRIVE BELT DIAGNOSIS - DIAGNOSIS	7-15	UNIT - INSTALLATION, LICENSE PLATE LAMP	8L-46
SWITCH - OPERATION, MULTI-FUNCTION	8L-48	TESTING, TRAILER TOW RELAY - DIAGNOSIS	8L-62	UNIT - INSTALLATION, REAR LAMP	8L-60
SWITCH - REMOVAL, BRAKE LAMP	8L-17	THREADS - STANDARD PROCEDURE, REPAIR OF DAMAGED OR WORN	9-9	UNIT - INSTALLATION, REPEATER LAMP	8L-61
SWITCH - REMOVAL, HAZARD	8L-29	TIMING BELT - INSTALLATION	9-56	UPPER BALL JOINT - INSTALLATION	2-6
SWITCH - REMOVAL, HEADLAMP LEVELING	8L-38	TIMING BELT - REMOVAL	9-55	UPPER BALL JOINT - REMOVAL	2-6
SWITCH - REMOVAL, LAMP BAR	8L-67	TIMING BELT COVER(S) - INSTALLATION	9-53	UPPER CONTROL ARM BUSHINGS - INSTALLATION	2-4
SWITCH - REMOVAL, MULTI-FUNCTION	8L-53	TIMING BELT COVER(S) - REMOVAL	9-53	UPPER CONTROL ARM BUSHINGS - REMOVAL	2-3
SYSTEM - DESCRIPTION, EXHAUST	11-1	TIMING BELT TENSIONER & PULLEY - INSTALLATION	9-59	UPPER SUSPENSION ARM BUSHING - INSTALLATION	2-8
SYSTEM - DIAGNOSIS AND TESTING, EXHAUST	11-2	TIMING BELT TENSIONER & PULLEY - REMOVAL	9-59	UPPER SUSPENSION ARM BUSHING - REMOVAL	2-7
SYSTEM - OPERATION, COOLING	7-2	TIMING, INSTALLATION - BALANCE SHAFT	9-61	USING PLASTIGAGE - STANDARD PROCEDURE, MEASURING BEARING CLEARANCE	9-11
SYSTEM - REVERSE FLUSHING - STANDARD PROCEDURE, COOLING	7-12			VALVES & SEATS - CLEANING, INTAKE/EXHAUST	9-27
SYSTEM - STANDARD PROCEDURE, DRAINING COOLING	7-11			VALVES & SEATS - DESCRIPTION, INTAKE/EXHAUST	9-27
SYSTEM - STANDARD PROCEDURE, REFILLING COOLING	7-11			VIBRATION DAMPER - INSTALLATION	9-43
SYSTEM 2.4L ENGINE - DESCRIPTION, COOLING	7-1			VIBRATION DAMPER - REMOVAL	9-43
SYSTEM DIAGNOSIS CHART - DIAGNOSIS AND TESTING, COOLING	7-5			WATER PUMP - 2.4L - DESCRIPTION	7-27
SYSTEM LEAKS - DIAGNOSIS AND TESTING, COOLING	7-2			WATER PUMP - 2.4L - INSPECTION	7-28
TEMPERATURE SENSOR - DESCRIPTION, ENGINE COOLANT	7-21			WATER PUMP - 2.4L - OPERATION	7-27
TEMPERATURE SENSOR - INSTALLATION, ENGINE COOLANT	7-22			WIRING - DESCRIPTION, TRAILER TOW	8L-64
TEMPERATURE SENSOR - OPERATION, ENGINE COOLANT	7-21			WORN THREADS - STANDARD PROCEDURE, REPAIR OF DAMAGED OR	9-9
TEMPERATURE SENSOR - REMOVAL, ENGINE COOLANT	7-21				