

SWITCH, MIRROR > DIAGNOSIS AND TESTING > DIAGNOSIS AND TESTING

1. Remove the power mirror switch.
2. Disconnect the wiring harness connector from the switch.
3. Using a ohmmeter, test for continuity between the terminals of the switch.
4. If results shown in the table are not obtained, replace the switch.

POWER MIRROR SWITCH TEST

SWITCH POSITION	CONTINUITY BETWEEN
MIRROR SELECT SWITCH IN "LEFT" POSITION	
UP	6-16
	15-13
DOWN	8-16
	15-13
LEFT	6-16
	15-13
RIGHT	8-13
	15-16
MIRROR SELECT SWITCH IN "RIGHT" POSITION	
UP	14-16
	17-13
DOWN	14-13
	17-16
LEFT	7-16
	14-13
RIGHT	7-13
	14-16

DRIVER POWER FOLDING MIRROR

CLOSING	11-13
	12-16

PASSENGER POWER FOLDING MIRROR

CLOSING	1-13
	10-16