



ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


- (a) Remove the front door inside scuff plate.
- (b) Remove the rear door inside scuff plate.

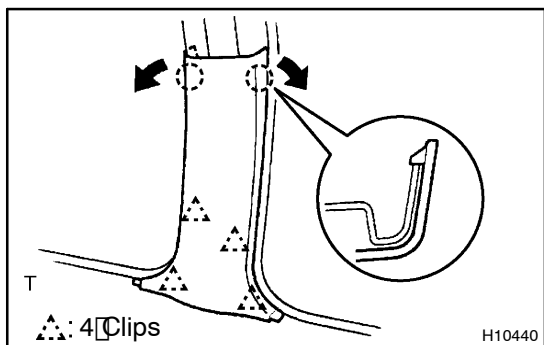

- (c) Remove the center pillar lower garnish.
- (d) Remove the seat belt pretensioner (See page BO-150).

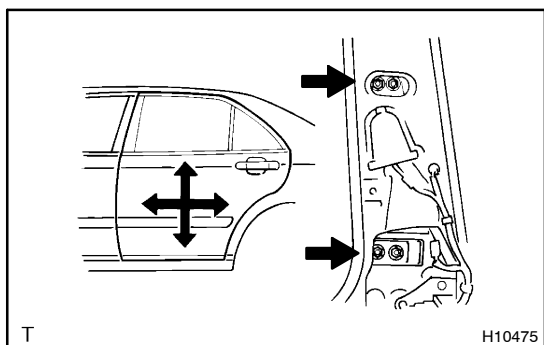


- (e) Adjust the door by loosening the body side hinge nuts.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)
- (f) Install the seat belt pretensioner (See page BO-159).
- (g) Install the lower center pillar garnish.
- (h) Install the rear door inside scuff plate.
- (i) Install the front door inside scuff plate.

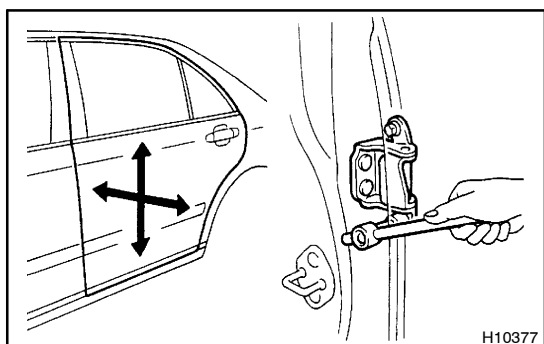

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the door side hinge bolts.
Torque: 27 N·m (275 kgf·cm, 20 ft·lbf)

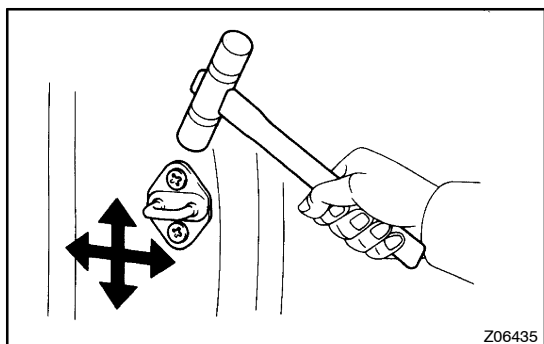

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.
- (b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- (c) Tighten the striker mounting screws again.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)