


Power window master switch circuit

CIRCUIT DESCRIPTION

Power window master switch circuit can be checked using DTC check. (See page DI-622)

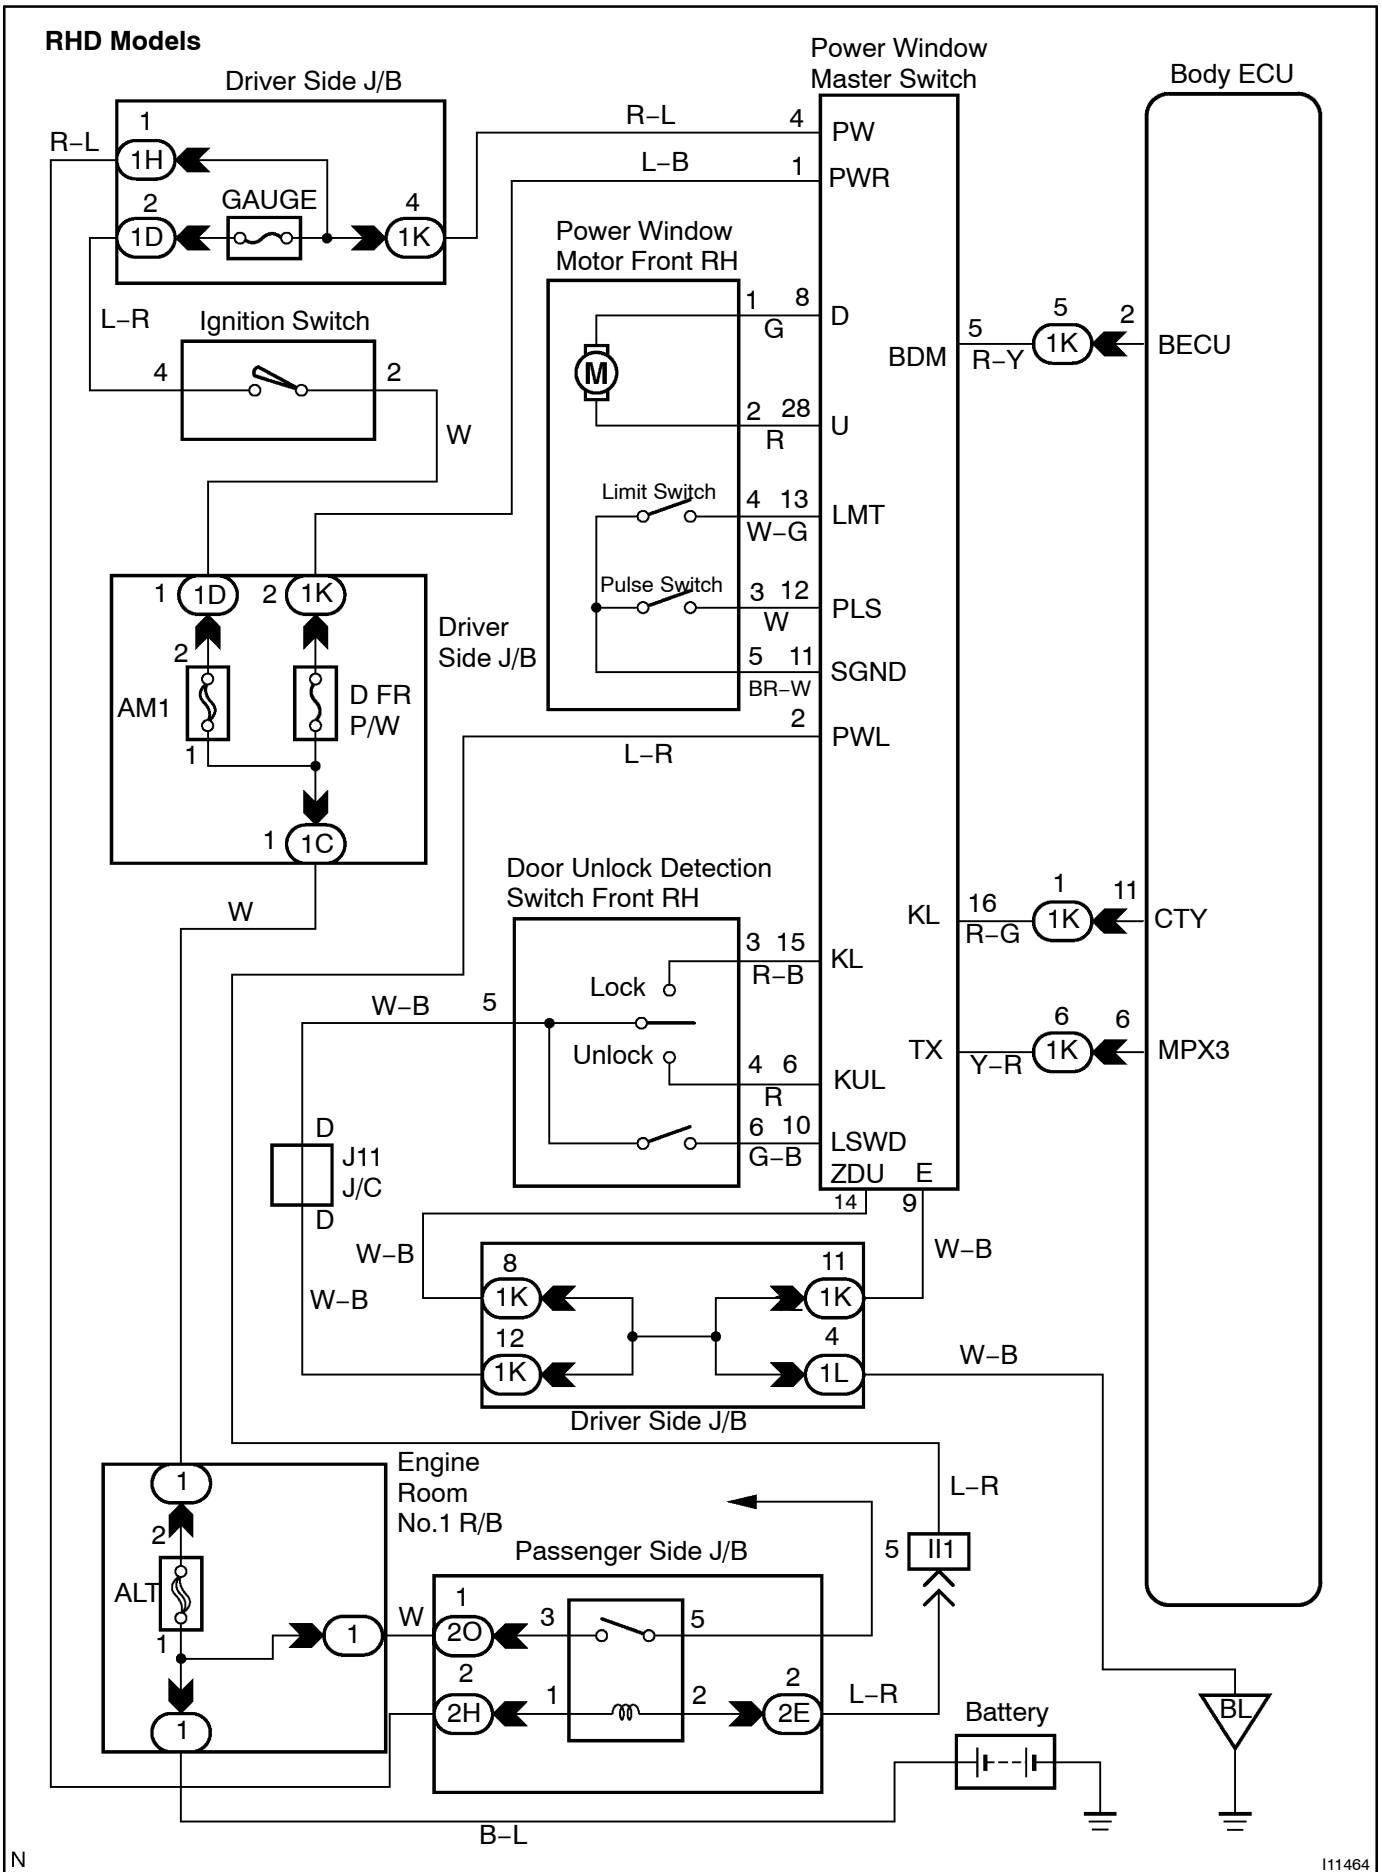

INSPECTION PROCEDURE

1 Check the power window master switch circuit using DTC check (See page DI-622).

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-554).

OK

2 Check the power window master switch. (See page BE-109)

NG

Replace the power window master switch.

OK

3 Check wireharness and connector between power window master switch and body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-554).