


DTC	C1225 / 25 - C1227 / 27	TRC-Related Solenoid Circuits
------------	--------------------------------	--------------------------------------

CIRCUIT DESCRIPTION

The TRC solenoids operate in accordance with signals from the ECU and raise the fluid pressure in and release it from the brake cylinders.

DTC No.	DTC Detecting Condition	Trouble Area
C1225 / 25	Detection of any of conditions 1. through 4.: 1. When SM1 or SM2 is ON, excessive electric current on SM1 or SM2 continues for 0.05 sec. or more. 2. When SM1 or SM2 is OFF, open circuit of SM1 or SM2 continues for 0.05 sec. or more. 3. When SM1 or SM2 is ON, open circuit of SM1 or SM2 continues for 0.1 sec. or more. 4. When SM1 or SM2 is OFF, electric current application on SM1 or SM2 continues for 0.1 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SM1 or SM2 circuit
C1226 / 26	Open or short circuit of SRM1 or SRM2 continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SRM1 or SRM2 circuit
C1227 / 27	Open or short circuit of SRC1 or SRC2 continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SRC1 or SRC2 circuit


WIRING DIAGRAM

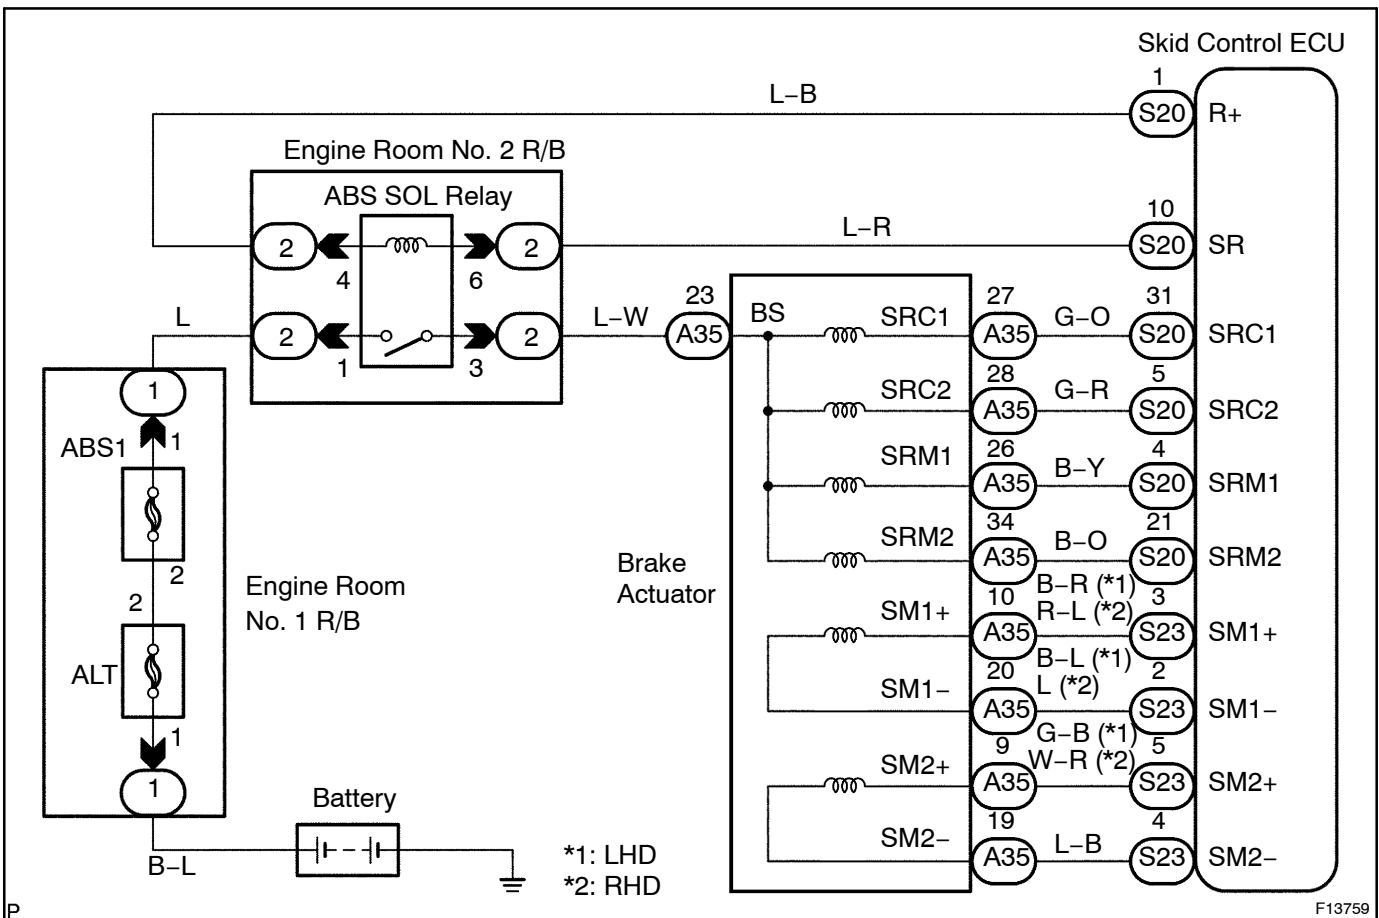

INSPECTION PROCEDURE

1 Check brake actuator solenoid.

SM1- SM1+ SM2+

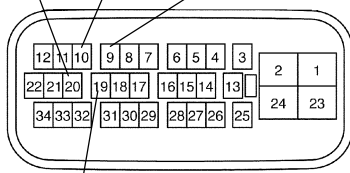

SM2-

F10772

PREPARATION:


Disconnect the brake actuator connector.

CHECK:

Check continuity between terminals SM1+ - SM1-, and terminals SM2+ - SM2- of brake actuator.

OK:**Continuity****HINT:**Resistance of each solenoid: 8.1 - 9.1 Ω at 25 $^{\circ}$ C**CHECK:**

Check continuity between terminal BS and terminals SRC1, SRC2, SRM1 and SRM2 of brake actuator.

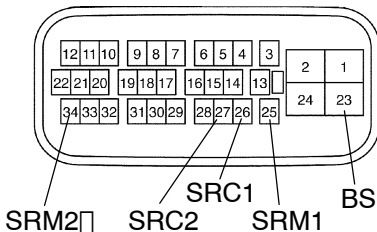OK:**Continuity****HINT:**Resistance of each solenoid at 25 $^{\circ}$ CSRC1, SRC2: 8.1 - 9.1 Ω SRM1, SRM2: 4.9 - 5.5 Ω 

SRM2 SRC2 SRC1 SRM1 BS

F10772

NG

Replace brake actuator.

OK

2 Check for open and short circuit in harness and connector between skid control ECU and brake actuator (See page IN-34).

NG

Repair or replace harness or connector.

OK

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.