


CAMSHAFT TIMING OIL CONTROL VALVE

SF0FJ-04

ON-VEHICLE INSPECTION

INSPECT OIL CONTROL VALVE RESISTANCE

- (a) Remove the V-bank cover.
- (b) Remove the air cleaner inlet and intake air connector.
- (c) Disconnect the oil control valve connector.

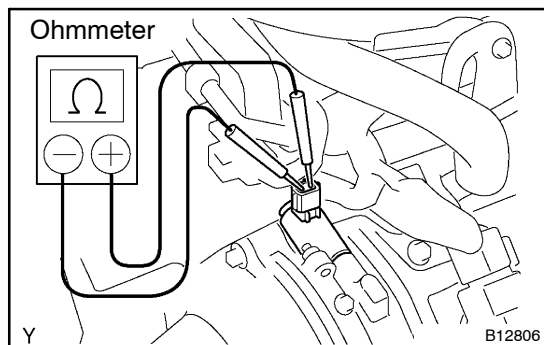

- (d) Using an Ohmmeter, measure the resistance between the terminals.

Resistance: 6.9 – 7.9 Ω at 20°C (68°F)

If the resistance is not as specified, replace the valve.

- (e) Reconnect the oil control valve connector.
- (f) Reinstall the intake air connector and air cleaner inlet.
- (g) Reinstall the V-bank cover.