

# INTERIOR AND SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## CONTENTS

INTERIOR .....	52A
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) .....	52B



# INTERIOR

## CONTENTS

SERVICE SPECIFICATIONS .....	3	FRONT SEAT* .....	18
SPECIAL TOOL .....	3	REAR SEAT <SPACE RUNNER> .....	24
INSTRUMENT PANEL* .....	3	SECOND SEAT <SPACE WAGON> .....	27
TRIMS <SPACE RUNNER - L.H. drive vehicles> .....	8	THIRD SEAT <SPACE WAGON> .....	34
TRIMS <SPACE RUNNER - R.H. drive vehicles> .....	12	SEAT ADJUSTER AND STRIKER .....	37
TRIMS <SPACE WAGON> .....	16	SEAT BELT .....	39
INSIDE REAR VIEW MIRROR .....	18	Front Seat Belt .....	39
		Rear Seat Belt <SPACE RUNNER> .....	40
		Second Seat Belt and Third Seat Belt <SPACE WAGON> .....	41

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.


#### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring, side impact sensors and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).

## SERVICE SPECIFICATIONS

Items	Standard value	
Seat back heater resistance (between terminals) $\Omega$ (When ambient temperature is 20°C)	6.84 - 7.92	
Seat cushion heater resistance (between terminals) $\Omega$ (When ambient temperature is 20°C)	Between terminals 1 and 2	0.38 - 0.44
	Between terminals 2 and 3	6.84 - 7.92
	Between terminals 1 and 3	6.46 - 7.48






## SPECIAL TOOL

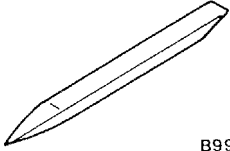Tool	Number	Name	Use
 B990784	MB990784	Ornament remover	Removal of switch, trim, etc.

## INSTRUMENT PANEL

### REMOVAL AND INSTALLATION


For installation of the instrument panel, the bolts and screws described below are used. They are indicated by symbols in the illustration.

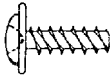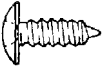Name	Symbol	Size mm (D x L)	Colour	Shape
Tapping screw	a	5 x 12	-	 19Z0022
	b	5 x 20	-	
	c	4 x 12	-	
	d	5 x 16	-	 19Z0004
	e	5 x 16	Black	
	f	5 x 12	-	
Washer-assembled screw	g	5 x 16	-	 19Z0006
Washer-assembled bolt	h	6 x 16	Black	 19Z0005
	i	6 x 16	-	
	j	6 x 16	-	 19Z0010

D = Thread diameter  
 L = Effective thread length

**Caution: SRS**

1. For the passenger side air bag module removal/installation, always observe the service procedures of GROUP 52B - Air Bag Module and Clock Spring.
2. Do not subject the SRS-ECU to any shocks when removing or installing the instrument panel.


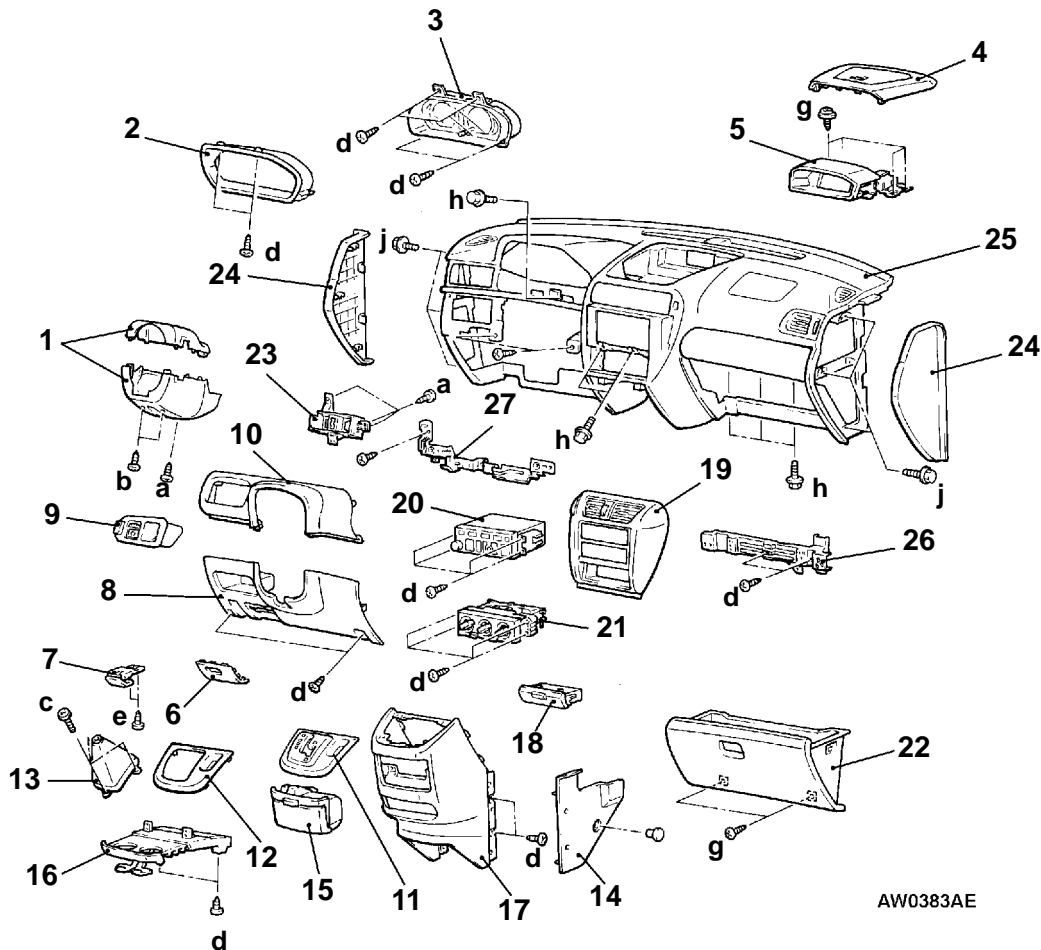



AW0383AE

**Removal steps**

- |  |   |
|--|---|
| 1. Column cover  | 13. Shift lever cover <M/T>                         |
| 2. Metal bezel   | 14. Side console cover                              |
| 3. Combination meter   | 15. Ashtray   |
| 4. Hood panel  | 16. Cup holder                                      |
| 5. Center hood   | 17. Center console                                  |
| 6. Fuse box lid  | 18. Box   |
| 7. Hood lock release handle  | 19. Center air outlet assembly                      |
| 8. Under cover assembly  | 20. Radio and tape player                           |
| 9. Switch panel assembly   | 21. Heater control assembly<br>(Refer to GROUP 55.) |
| 10. Driver's side upper cover  | 22. Glove box                                       |
| • Steering column mounting bolt<br>(Refer to GROUP 37A - Steering<br>Wheel and Shaft.) | 23. Instrument panel connector holder               |
| • Shift knob (Refer to GROUP<br>22/23 - Transmission Control.)                         | 24. Instrument panel side cover                     |
| 11. Shift lever cover assembly <A/T>   | 25. Instrument panel assembly                       |
| 12. Console panel <M/T>  | 26. Glove box frame                                 |
|  | 27. Lower frame                                     |

CLIP AND CLAW POSITIONS

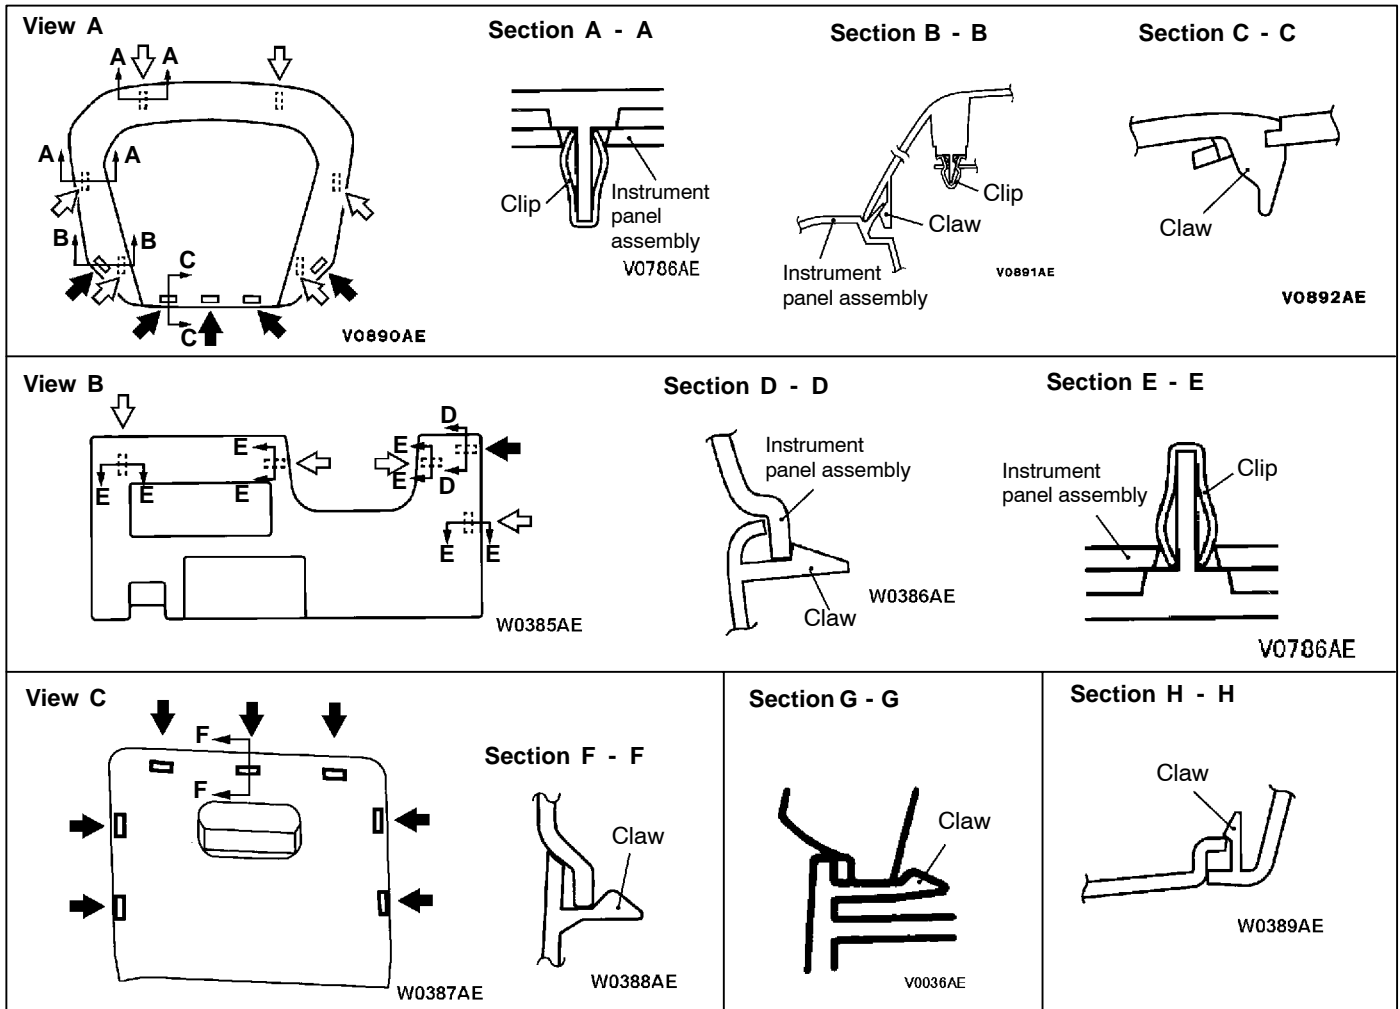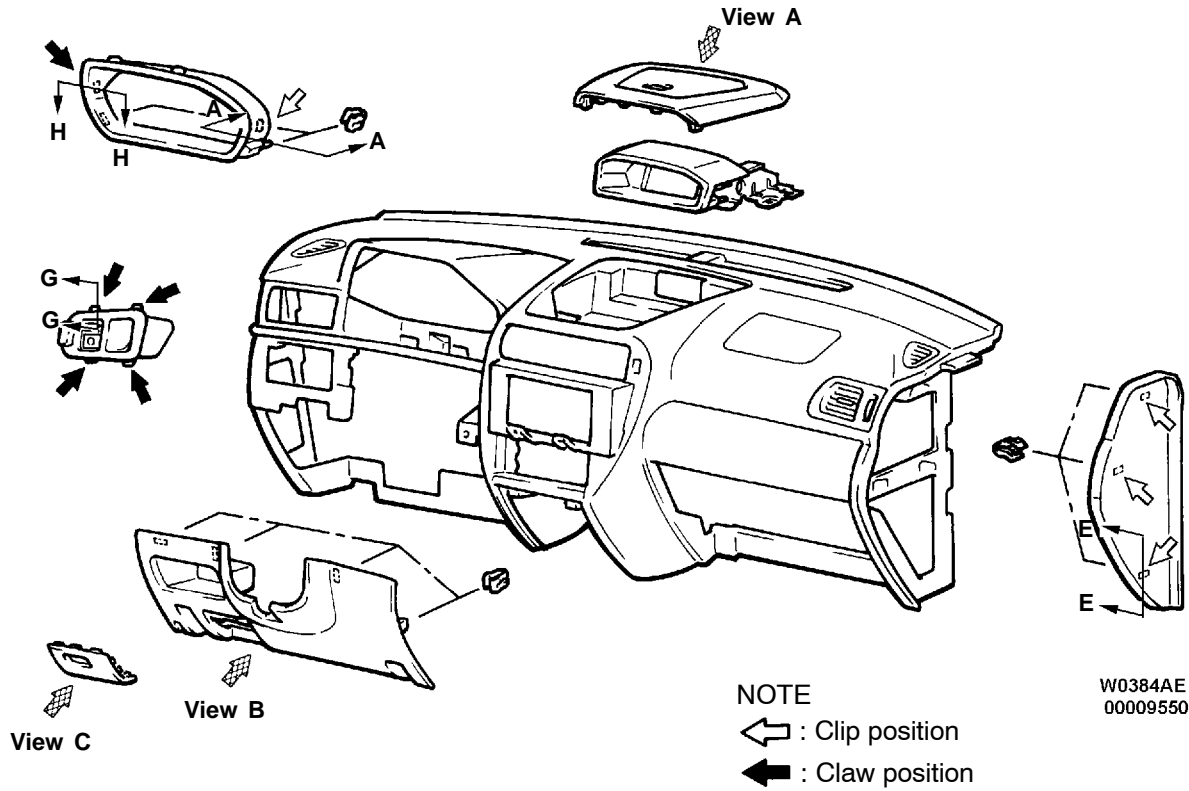

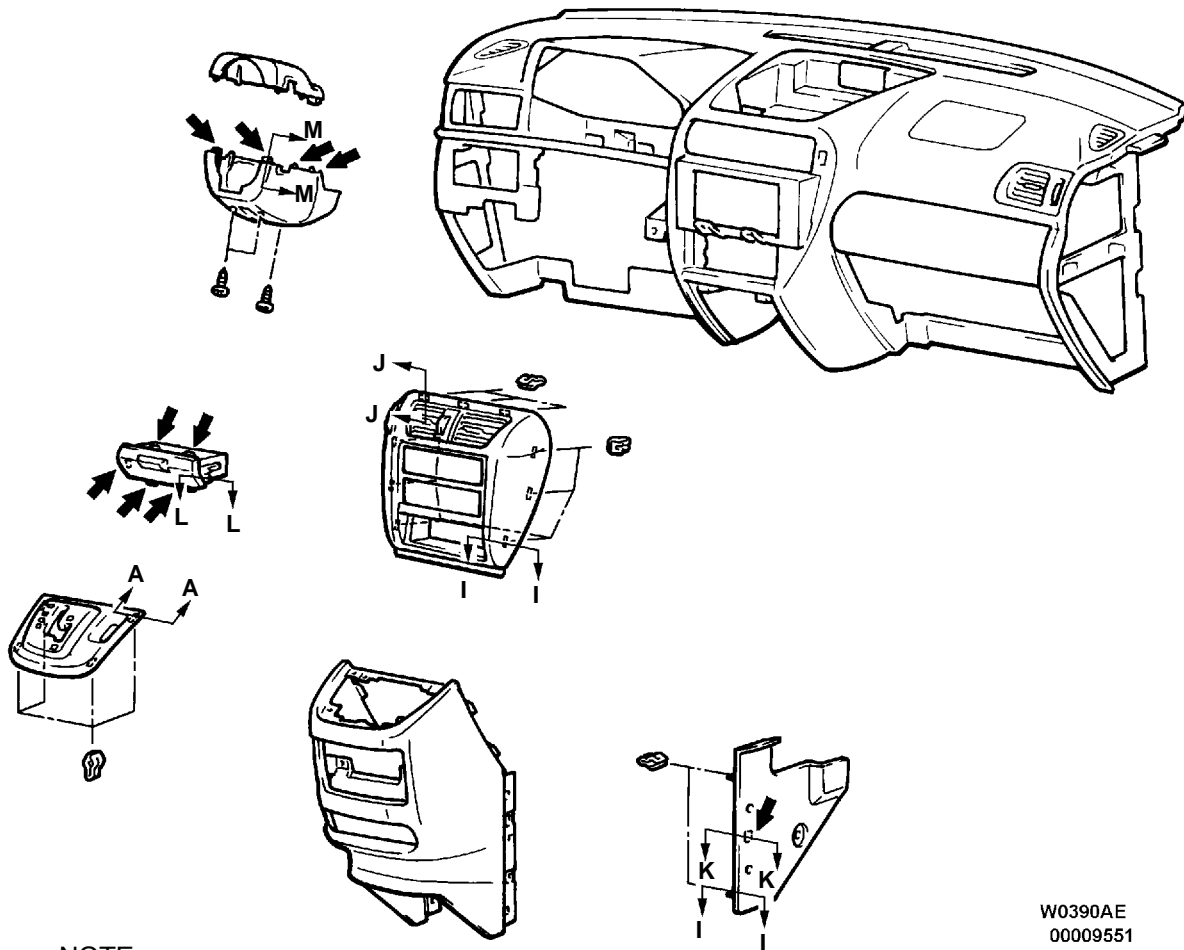


W0390AE  
00009551

NOTE  
← :Claw position

<p><b>Section A - A</b></p> <p>Clip Center console</p> <p>V0786AE</p>	<p><b>Section I - I</b></p> <p>Clip Instrument panel assembly</p> <p>V0786AE</p>	<p><b>Section J - J</b></p> <p>Instrument panel assembly Clip</p> <p>W0391AE</p>	<p><b>Section K - K</b></p> <p>Claw Center console</p> <p>W0392AE</p>
<p><b>Section L - L</b></p> <p>Claw Instrument panel assembly</p> <p>W0393AE</p>		<p><b>Section M - M</b></p> <p>Claw (Column cover upper) Column cover lower</p> <p>W0394AE</p>	

DISASSEMBLY AND REASSEMBLY

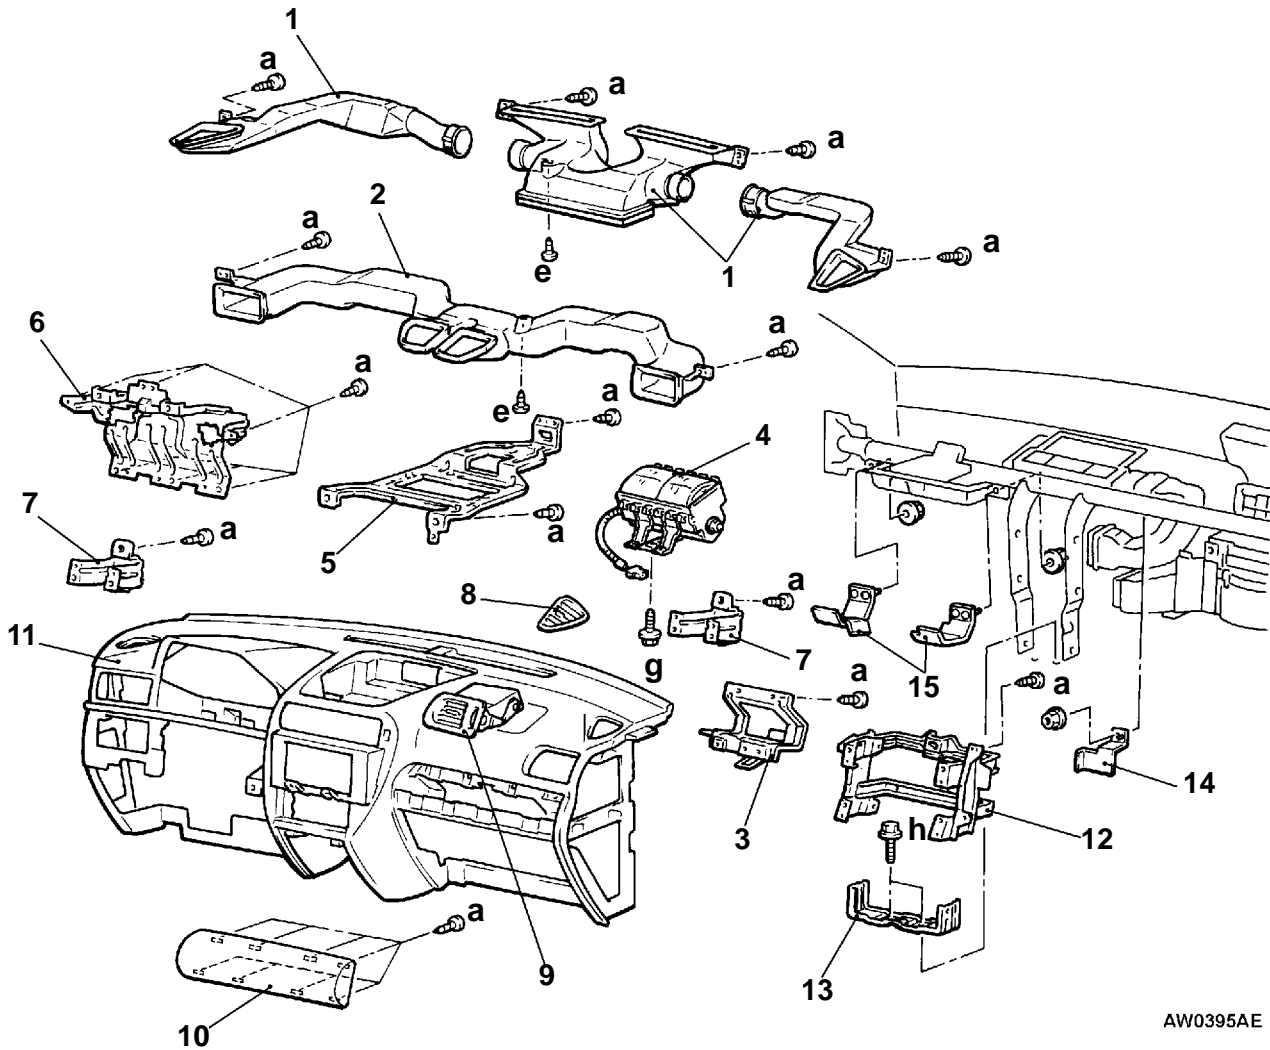

AW0395AE


**Disassembly steps**

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1. Defroster duct</li> <li>2. Center ventilation duct</li> <li>3. Glove box striker</li> <li>4. Air bag module<br/>(front passenger's side)</li> <li>5. Center upper frame</li> <li>6. Meter connector holder</li> <li>7. Instrument panel upper bracket</li> </ul> | <ul style="list-style-type: none"> <li>8. Side defroster grille</li> <li>9. Side air outlet assembly</li> <li>10. Front passenger's side upper cover</li> <li>11. Instrument panel</li> <li>12. Instrument panel bracket assembly</li> <li>13. Side cover bracket</li> <li>14. Glove box support bracket</li> <li>15. Stay</li> </ul> |
|--|---|

## TRIMS &lt;SPACE RUNNER - L.H. drive vehicles&gt;

## REMOVAL AND INSTALLATION

&lt;L.H.&gt;

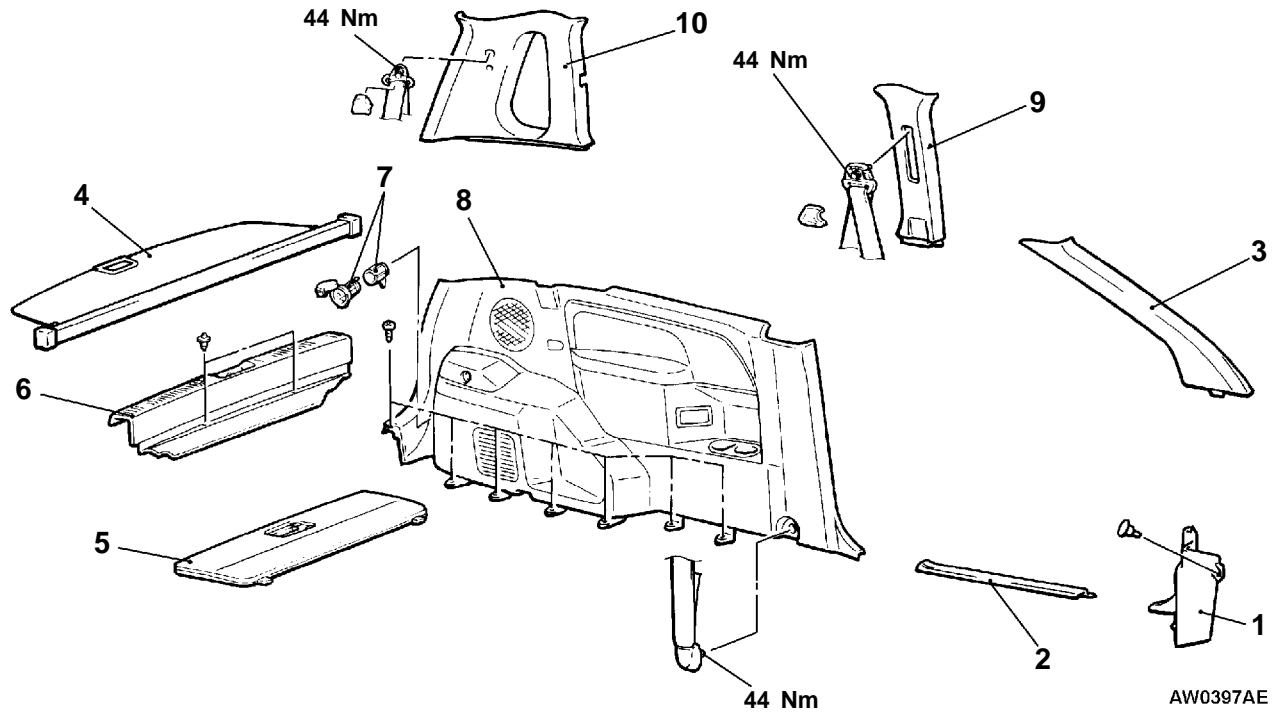

- Rear seat  
(Refer to GROUP 52A-24.)
- 1. Cowl side trim
- 2. Front scuff plate
- 3. Front pillar trim
- 4. Tonneau cover


- 5. Luggage tray lid
- 6. Rear end Trim
- 7. Accessory socket
- 8. Quarter lower trim assembly
- 9. Center pillar upper trim
- 10. Rear pillar trim

## NOTE

For the door trim, refer to GROUP 42.



<R.H.>

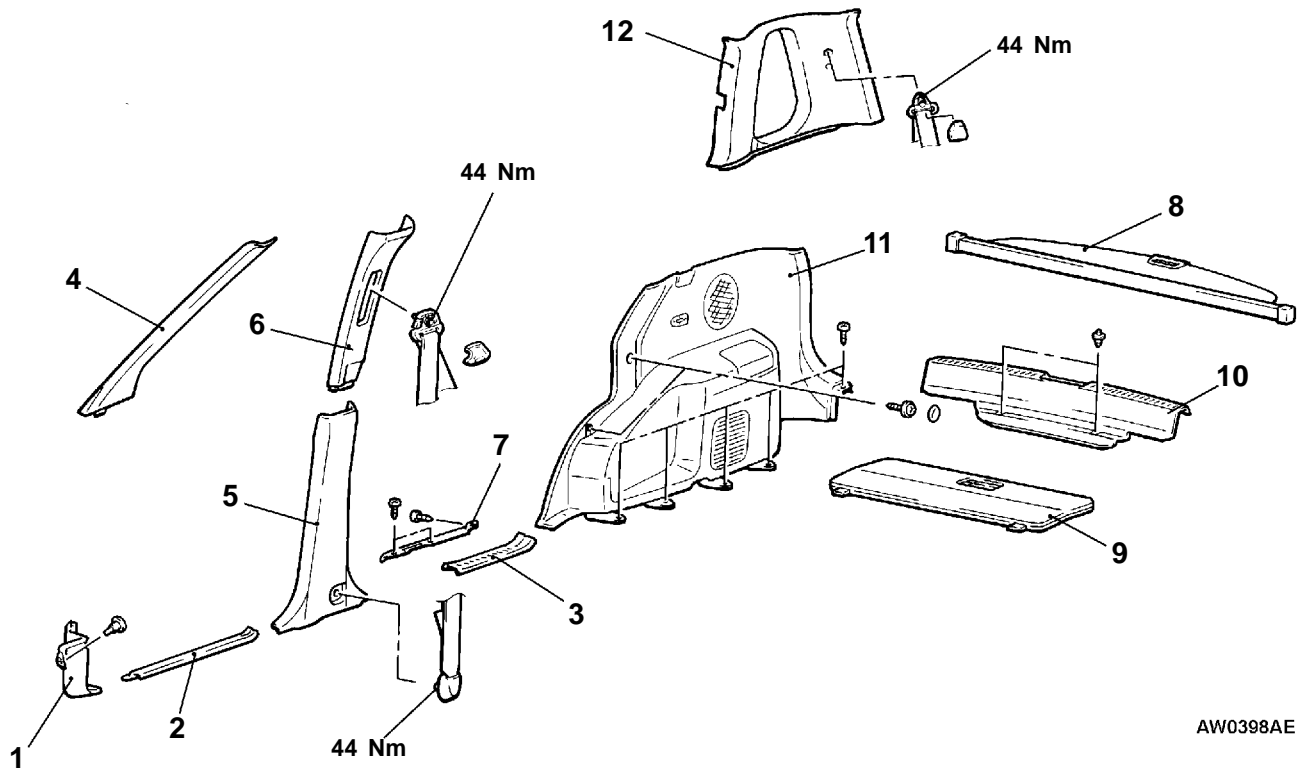

- Rear seat  
(Refer to GROUP P.52A-24.)
- 1. Cowl side trim
- 2. Front scuff plate
- 3. Rear scuff plate
- 4. Front pillar trim
- 5. Center pillar lower trim


- 6. Center pillar upper trim
- 7. Slide door rail cover
- 8. Tonneau cover
- 9. Luggage tray lid
- 10. Rear end Trim
- 11. Quarter lower trim assembly
- 12. Rear pillar trim

NOTE

For the door trim, refer to GROUP 42.

CLIP POSITIONS


<L.H.>

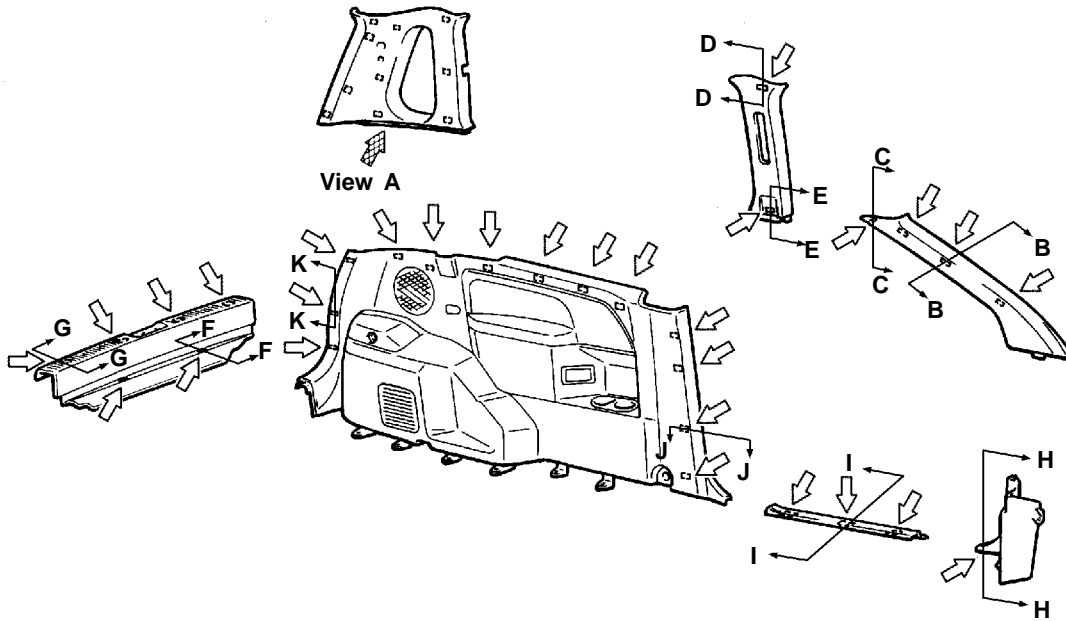

W0402AE  
00009563

<p><b>View A</b></p> <p>V1261AE</p>	<p><b>Section A - A</b></p> <p>Trim Clip</p> <p>V1260AE</p>	<p><b>Section B - B</b></p> <p>Clip Trim</p> <p>V0810AE</p>		
<p><b>Section C - C</b></p> <p>Clip Trim</p> <p>W0405AE</p>	<p><b>Section D - D</b></p> <p>Clip Trim</p> <p>V0813AE</p>	<p><b>Section E - E</b></p> <p>Clip Trim</p> <p>W0406AE</p>	<p><b>Section F - F</b></p> <p>Trim Clip</p> <p>W0407AE</p>	<p><b>Section G - G</b></p> <p>Trim Clip</p> <p>V1265AE</p>
<p><b>Section H - H</b></p> <p>Trim Clip</p> <p>W0408AE</p>	<p><b>Section I - I</b></p> <p>Scuff plate Clip</p> <p>W0409AE</p>	<p><b>Section J - J</b></p> <p>Clip Trim</p> <p>W0410AE</p>	<p><b>Section K - K</b></p> <p>Trim Clip</p> <p>W0447AE</p>	


<R.H.>

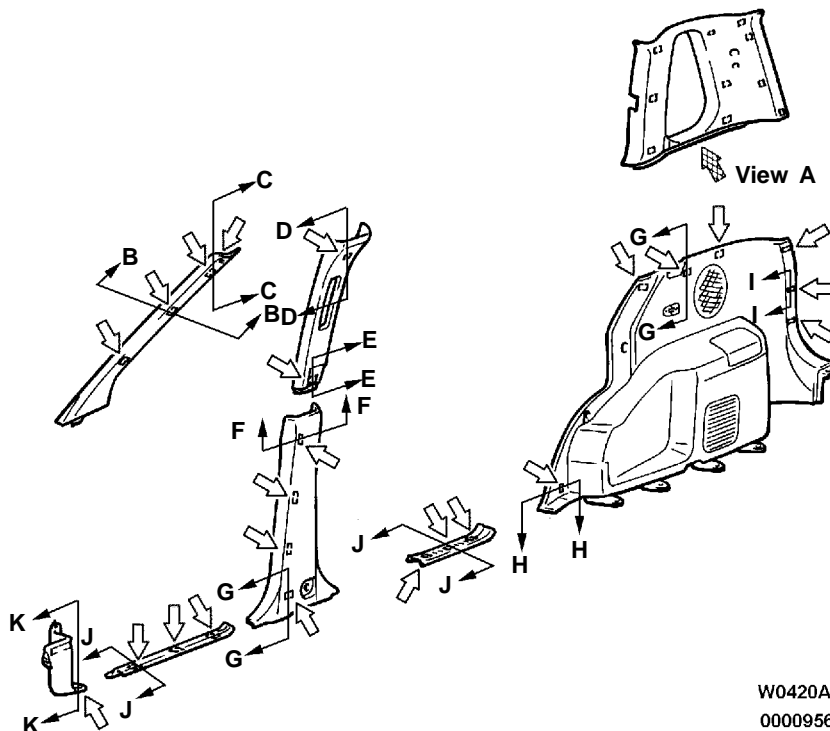

<p><b>View A</b></p> <p>V1282AE</p>	<p><b>Section A - A</b></p> <p>Trim</p> <p>Clip</p> <p>W0418AE</p>	<p><b>Section B - B</b></p> <p>Clip</p> <p>Trim</p> <p>V0810AE</p>		
<p><b>Section C - C</b></p> <p>Clip</p> <p>Trim</p> <p>W0405AE</p>	<p><b>Section D - D</b></p> <p>Clip</p> <p>Trim</p> <p>V0813AE</p>	<p><b>Section E - E</b></p> <p>Trim</p> <p>Clip</p> <p>W0406AE</p>	<p><b>Section F - F</b></p> <p>Trim</p> <p>Clip</p> <p>W0446AE</p>	
<p><b>Section G - G</b></p> <p>Trim</p> <p>Clip</p> <p>W0415AE</p>	<p><b>Section H - H</b></p> <p>Clip</p> <p>Trim</p> <p>W0448AE</p>	<p><b>Section I - I</b></p> <p>Trim</p> <p>Clip</p> <p>W0447AE</p>	<p><b>Section J - J</b></p> <p>Scuff plate</p> <p>Trim</p> <p>Clip</p> <p>W0409AE</p>	<p><b>Section K - K</b></p> <p>Trim</p> <p>Clip</p> <p>V0822AE</p>

**TRIMS <SPACE RUNNER - R.H. drive vehicles>****REMOVAL AND INSTALLATION**

&lt;R.H.&gt;

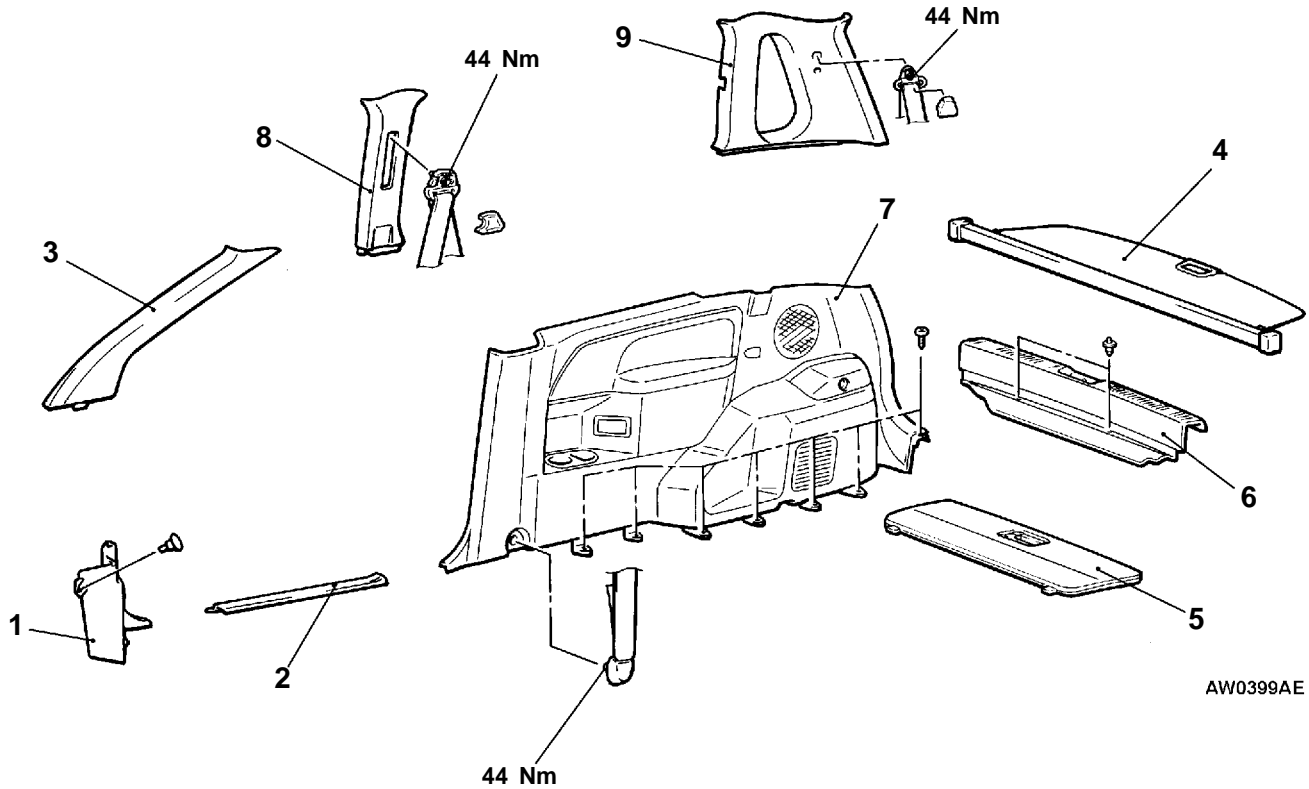


- Rear seat  
(Refer to GROUP 52A-24.)
- 1. Cowl side trim
- 2. Front scuff plate
- 3. Front pillar trim
- 4. Tonneau cover

- 5. Luggage tray lid
- 6. Rear end trim
- 7. Quarter lower trim assembly
- 8. Center pillar upper trim
- 9. Rear pillar trim

**NOTE**

For the door trim, refer to GROUP 42.

<L.H.>

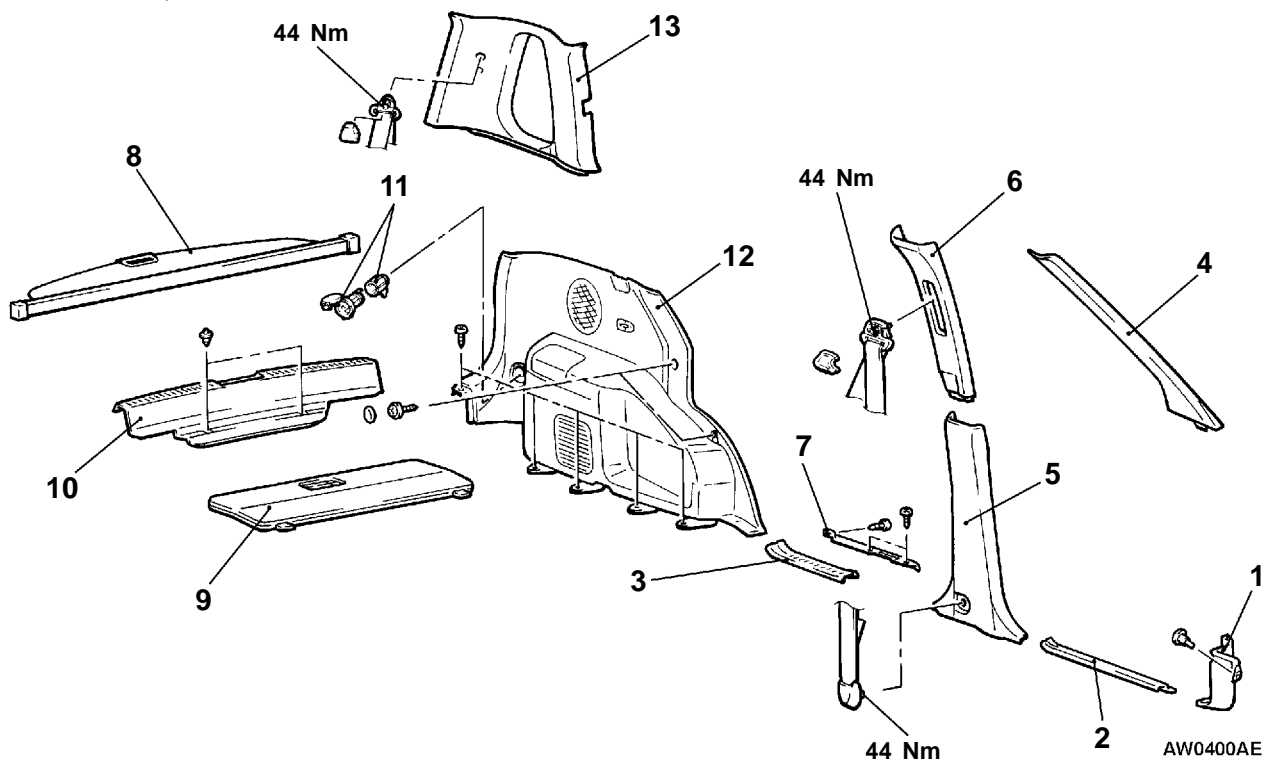


- Rear seat  
(Refer to GROUP 52A-24.)
- 1. Cowl side trim
- 2. Front scuff plate
- 3. Rear scuff plate
- 4. Front pillar trim
- 5. Center pillar lower trim
- 6. Center pillar upper trim

- 7. Slide door rail cover
- 8. Tonneau cover
- 9. Luggage tray lid
- 10. Rear end Trim
- 11. Accessory socket
- 12. Quarter lower trim assembly
- 13. Rear pillar trim

NOTE  
For the door trim, refer to GROUP 42.

CLIP POSITIONS


<R.H.>

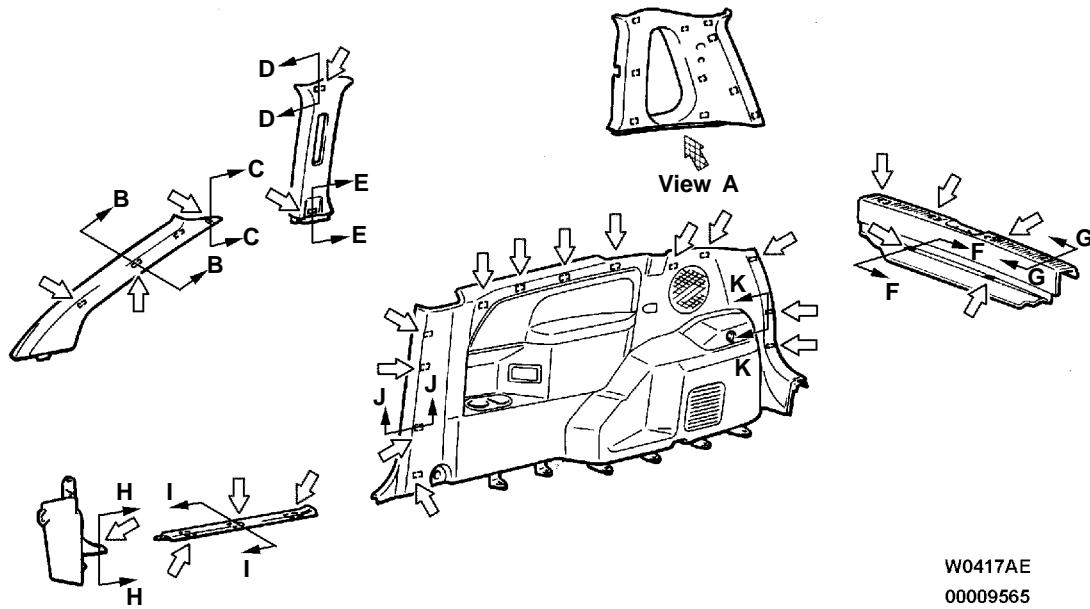

W0417AE  
00009565

<p><b>View A</b></p> <p>V1282AE</p>	<p><b>Section A - A</b></p> <p>Trim</p> <p>Clip</p> <p>W0418AE</p>	<p><b>Section B - B</b></p> <p>Clip</p> <p>Trim</p> <p>V0810AE</p>		
<p><b>Section C - C</b></p> <p>Clip</p> <p>Trim</p> <p>W0405AE</p>	<p><b>Section D - D</b></p> <p>Clip</p> <p>Trim</p> <p>V0813AE</p>	<p><b>Section E - E</b></p> <p>Clip</p> <p>Trim</p> <p>W0406AE</p>	<p><b>Section F - F</b></p> <p>Trim</p> <p>Clip</p> <p>W0407AE</p>	<p><b>Section G - G</b></p> <p>Trim</p> <p>Clip</p> <p>V1265AE</p>
<p><b>Section H - H</b></p> <p>Trim</p> <p>Clip</p> <p>W0408AE</p>	<p><b>Section I - I</b></p> <p>Scuff plate</p> <p>Clip</p> <p>W0409AE</p>	<p><b>Section J - J</b></p> <p>Trim</p> <p>Clip</p> <p>W0410AE</p>	<p><b>Section K - K</b></p> <p>Trim</p> <p>Clip</p> <p>W0447AE</p>	

<L.H.>

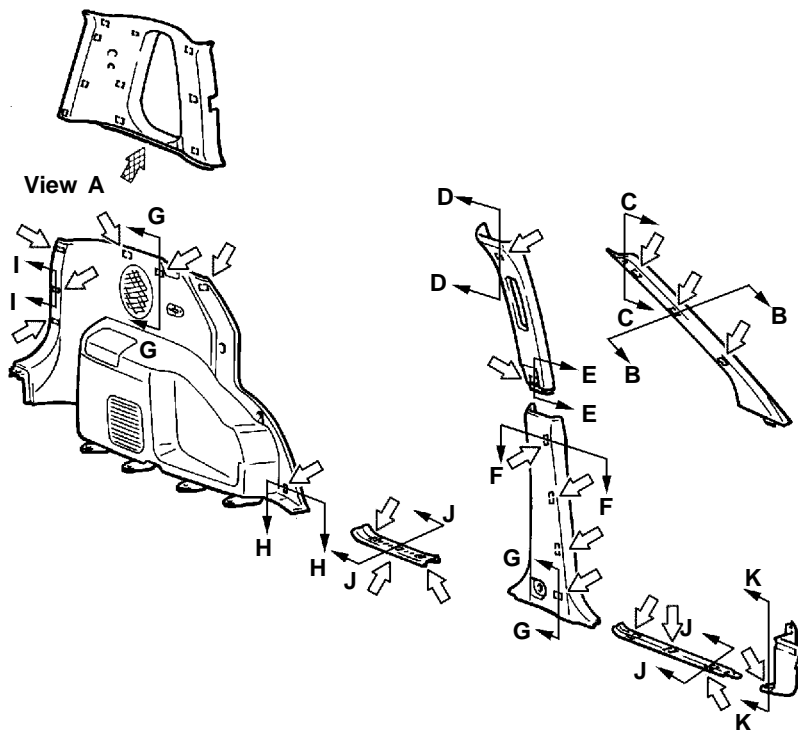


W0419AE  
00009566

<p><b>View A</b></p> <p>V1261AE</p>	<p><b>Section A - A</b></p> <p>Trim Clip</p> <p>V1260AE</p>	<p><b>Section B - B</b></p> <p>Clip Trim</p> <p>V0810AE</p>		
<p><b>Section C - C</b></p> <p>Clip Trim</p> <p>W0405AE</p>	<p><b>Section D - D</b></p> <p>Clip Trim</p> <p>V0813AE</p>	<p><b>Section E - E</b></p> <p>Trim Clip</p> <p>W0406AE</p>	<p><b>Section F - F</b></p> <p>Trim Clip</p> <p>W0446AE</p>	
<p><b>Section G - G</b></p> <p>Trim Clip</p> <p>W0415AE</p>	<p><b>Section H - H</b></p> <p>Clip Trim</p> <p>W0448AE</p>	<p><b>Section I - I</b></p> <p>Trim Clip</p> <p>W0447AE</p>	<p><b>Section J - J</b></p> <p>Scuff plate Trim Clip</p> <p>W0409AE</p>	<p><b>Section K - K</b></p> <p>Trim Clip</p> <p>V0822AE</p>

## TRIMS <SPACE WAGON>

### REMOVAL AND INSTALLATION

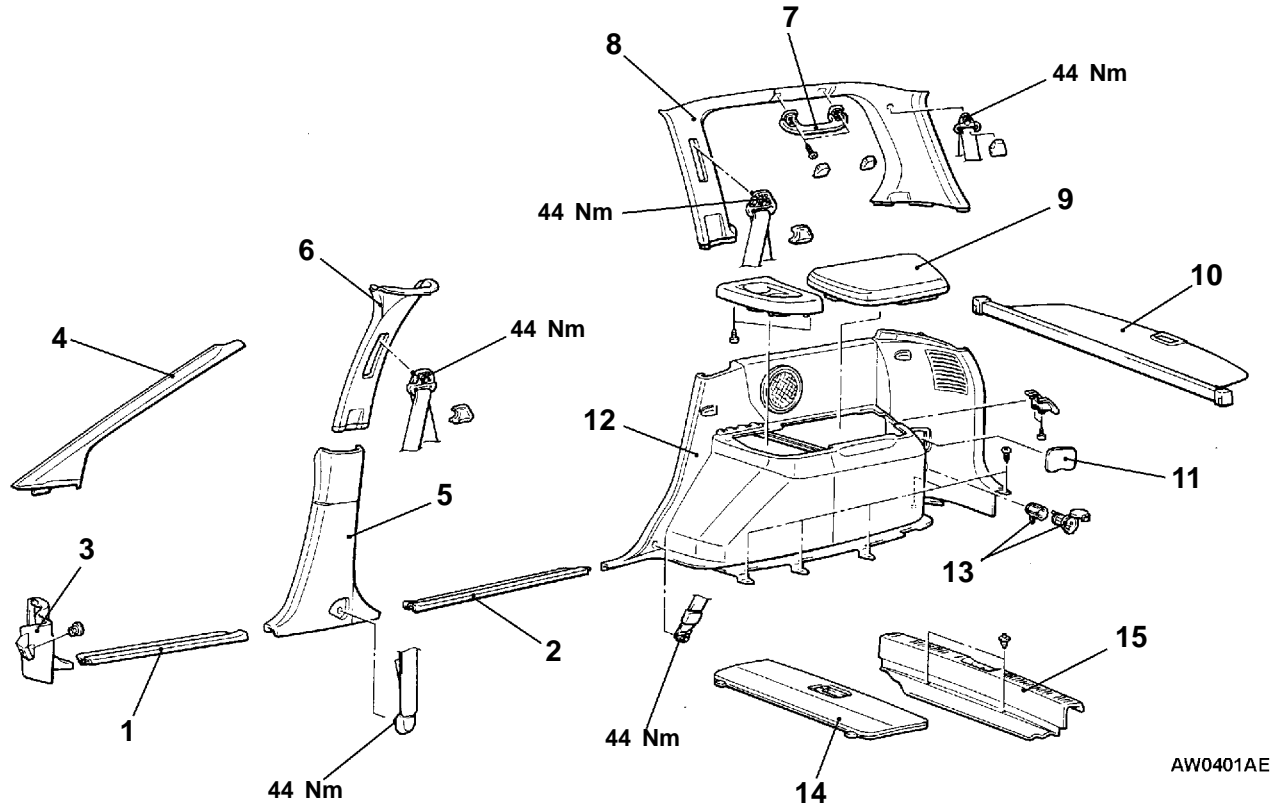

- Third seat  
(Refer to GROUP 52A-34.)
- 1. Front scuff plate
- 2. Rear scuff plate
- 3. Cowl side trim
- 4. Front pillar trim
- 5. Center pillar lower trim
- 6. Center pillar upper trim
- 7. Assist grip


- 8. Quarter upper trim
- 9. Quarter armrest assembly
- 10. Tonneau cover
- 11. Lid
- 12. Quarter lower trim assembly
- 13. Accessory socket (R.H. only)
- 14. Luggage tray lid
- 15. Rear end trim

#### NOTE

For the door trim, refer to GROUP 42.




CLIP POSITIONS

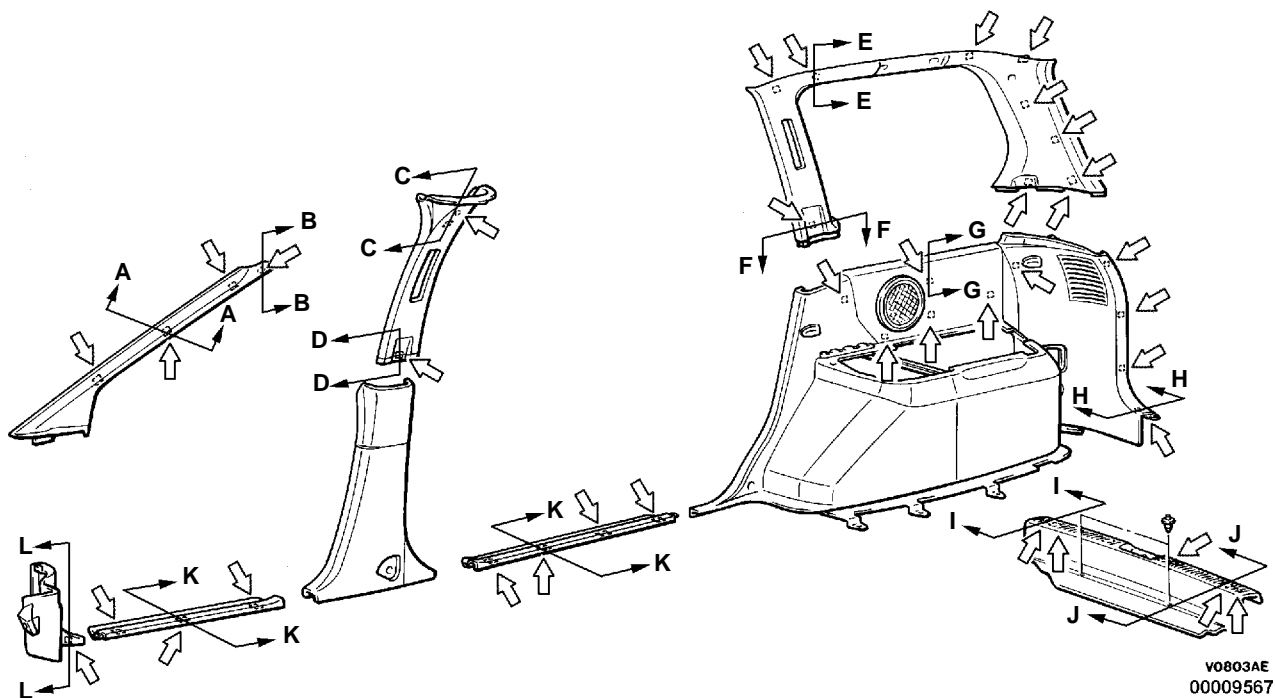

V0803AE  
00009567

<p><b>Section A - A</b></p> <p>Clip</p> <p>Trim</p> <p>V0810AE</p>	<p><b>Section B - B</b></p> <p>Clip</p> <p>Trim</p> <p>W0444AE</p>	<p><b>Section C - C</b></p> <p>Clip</p> <p>Trim</p> <p>V0813AE</p>	<p><b>Section D - D</b></p> <p>Trim</p> <p>Clip</p> <p>V0814AE</p>
<p><b>Section E - E</b></p> <p>Clip</p> <p>Trim</p> <p>V0815AE</p>	<p><b>Section F - F</b></p> <p>Clip</p> <p>Trim</p> <p>W0445AE</p>	<p><b>Section G - G</b></p> <p>Trim</p> <p>Clip</p> <p>V0817AE</p>	<p><b>Section H - H</b></p> <p>Trim</p> <p>Clip</p> <p>V0818AE</p>
<p><b>Section I - I</b></p> <p>Trim</p> <p>Clip</p> <p>V0819AE</p>	<p><b>Section J - J</b></p> <p>Trim</p> <p>Clip</p> <p>V0820AE</p>	<p><b>Section K - K</b></p> <p>Scuff plate</p> <p>Clip</p> <p>V0821AE</p>	<p><b>Section L - L</b></p> <p>Trim</p> <p>Clip</p> <p>V0822AE</p>

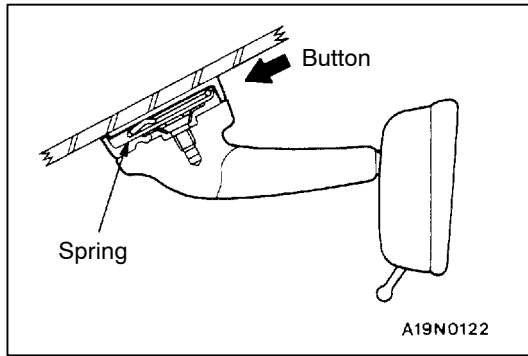

## INSIDE REAR VIEW MIRROR

### REMOVAL SERVICE POINT

Remove by pushing in the direction of the arrow in the illustration.

#### NOTE


1. The mirror spring fits firmly in the groove of the button that is attached to the glass.
2. The mirror breaking load is within 440 N.

## FRONT SEAT

### REMOVAL AND INSTALLATION

#### Caution: SRS

Before removal of the seat equipped with the side air bag module, refer to GROUP 52B - SRS Service Precautions and Air Bag Module.

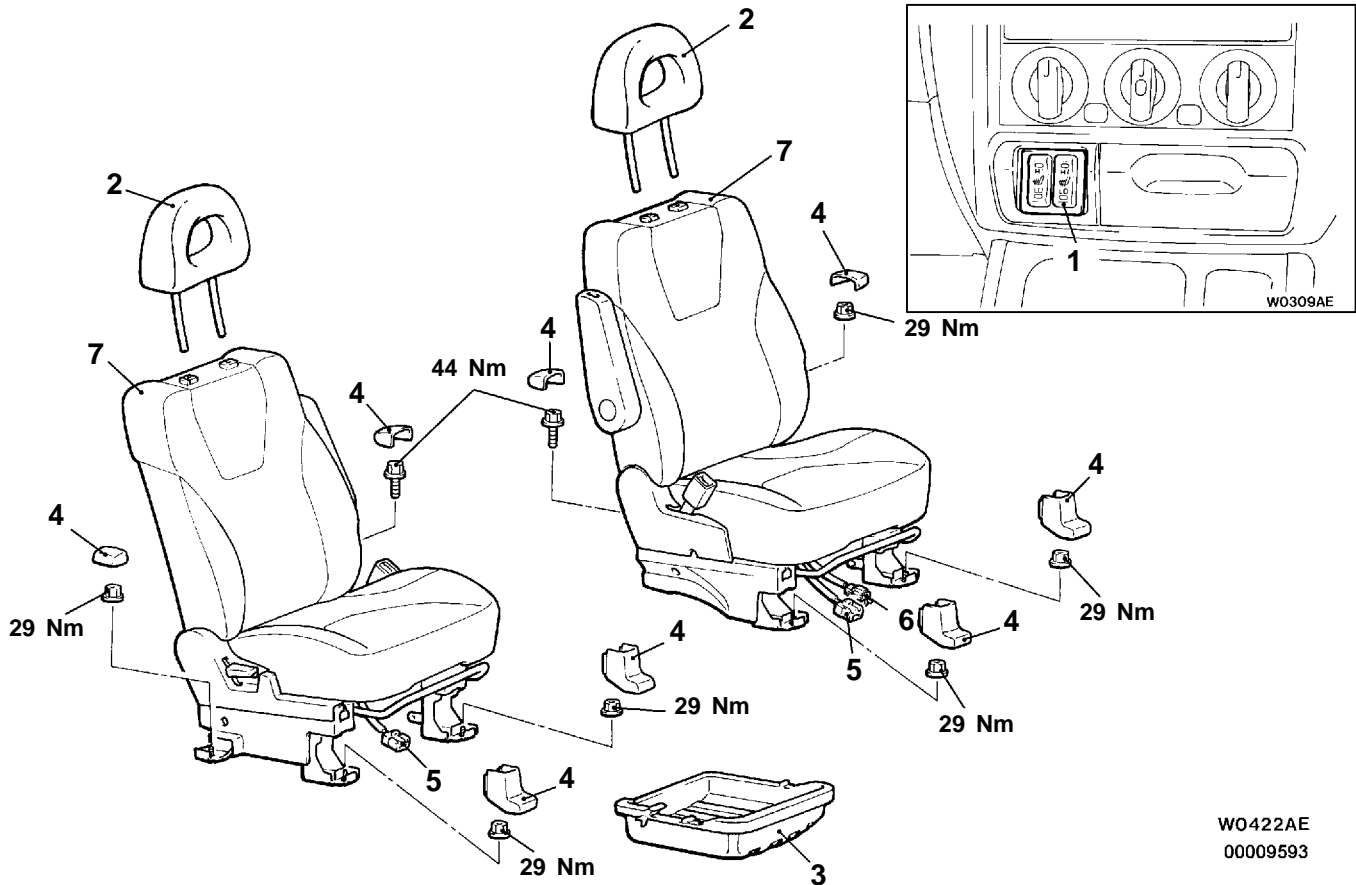

W0422AE  
00009593

1. Heated seat switch  
<Vehicles with heated seat>
2. Headrest

#### Front seat assembly removal steps

3. Front passenger's seat under tray
4. Seat anchor cover
5. Side air bag module harness connector <Vehicles with SRS side air bag>
6. Heated seat harness connector  
<Vehicles with heated seat>
7. Front seat assembly

#### NOTE



After provisionally tightening the seat assembly mounting nuts and bolts in every installation location, fully tighten them to the specified torque.

**REMOVAL SERVICE POINT**

**◀▶ SEAT ANCHOR COVER REMOVAL**


**NOTE**

Remove the seat anchor covers A and B with a bar supplied with the vehicle.

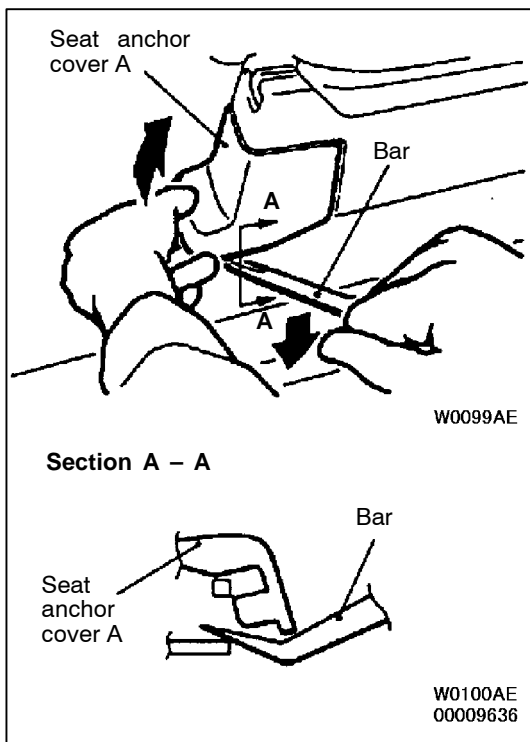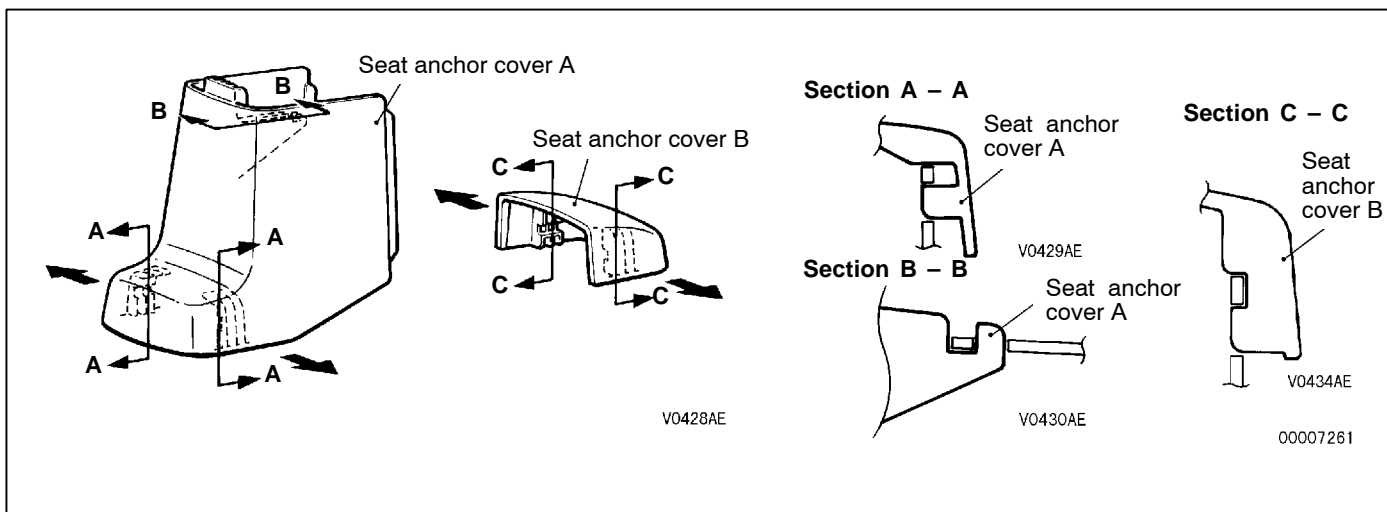


**SEAT ANCHOR COVER A**

Insert the bar at the lower part of the seat anchor cover A. Push down the bar in the direction shown to disengage the claws and raise the cover to remove it.

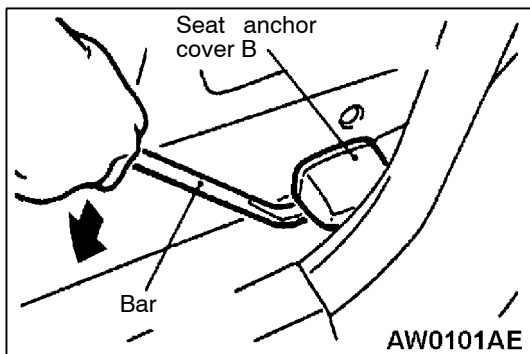

**SEAT ANCHOR COVER B**


Insert the bar at the lower part of the seat anchor cover B and push down the bar in the direction shown to remove the cover.

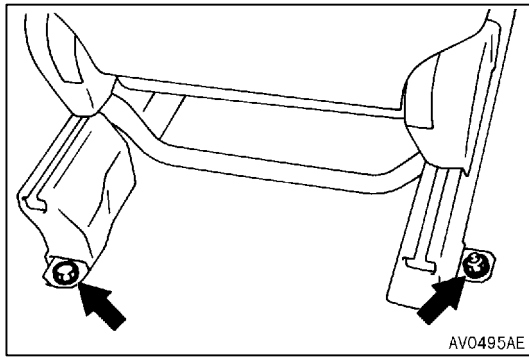

**INSTALLATION SERVICE POINT**

**▶A◀ FRONT SEAT ASSEMBLY INSTALLATION**

Tighten the nut and bolt shown in the illustration with no load on the seat cushion.

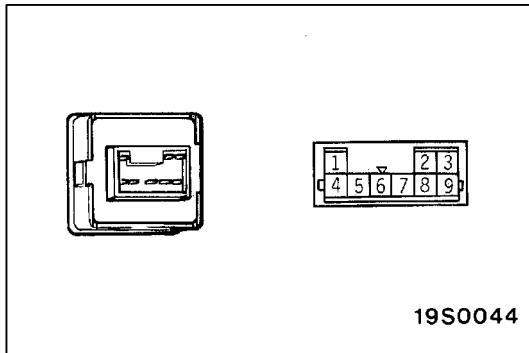


**INSPECTION**

**HEATED SEAT SWITCH CONTINUITY CHECK**

Switch position		Terminal No.													
		1	3	4	5	-	8	9	2	-	6				
Driver's seat switch	HI	○			○		○								
	LO		○		○		○					○	○		
Passenger's seat switch	HI			○	○		○	○							
	LO				○		○		○						

**NOTE**

To inspect the diode, match the polarity of the circuit tester with the (+) (-) polarities in the table.

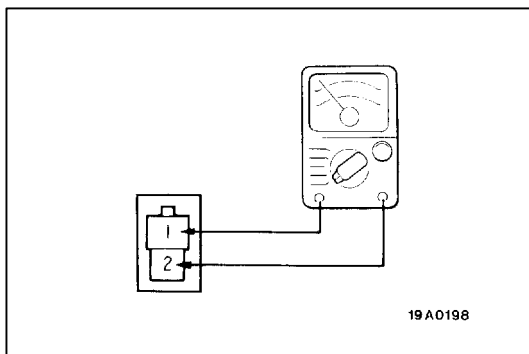


**SEAT BACK HEATER CHECK**

Measure the resistance between terminals.

**Standard value**

(When ambient temperature is 20°C): 6.84 - 7.92 Ω

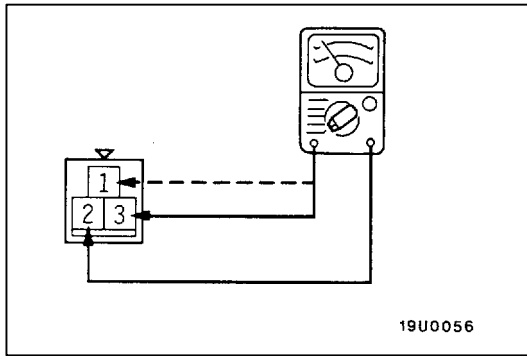**SEAT CUSHION HEATER CHECK**

Measure the resistance between terminals.

**Standard value (When ambient temperature is 20°C):**

**Between terminals 1 and 2: 0.38 - 0.44  $\Omega$**


**Between terminals 2 and 3: 6.84 - 7.92  $\Omega$**

**Between terminals 1 and 3: 6.46 - 7.48  $\Omega$**

## DISASSEMBLY AND REASSEMBLY

## Caution:

Do not disassemble the front seat back assembly with built-in side air bag module.

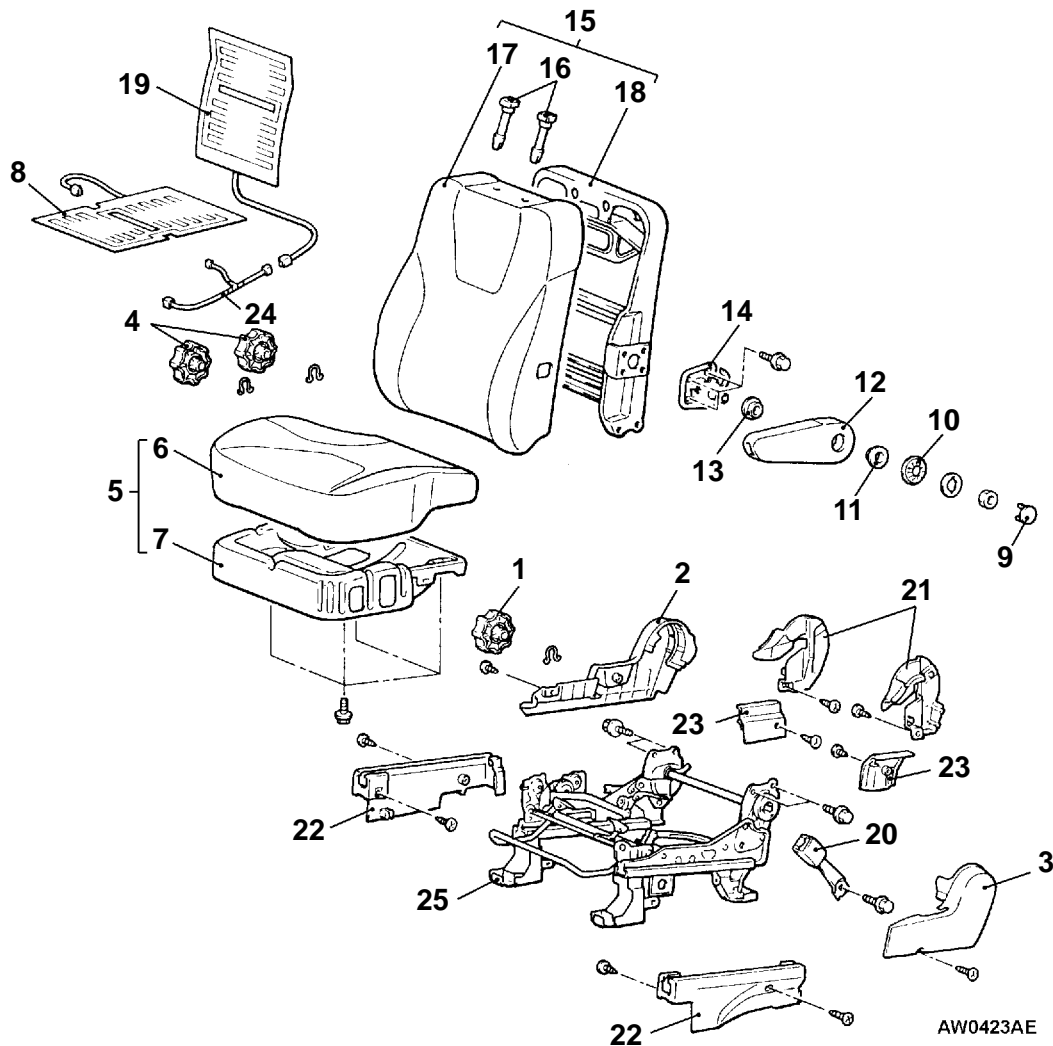

## Disassembly steps



1. Reclining adjuster knob
2. Reclining cover
3. Shield Cover
4. Height adjuster knob
5. Front seat cushion assembly
6. Front seat cushion cover and pad assembly
7. Front seat cushion frame
8. Seat heater cushion  
<Vehicles with heated seat>
9. Armrest cap
10. Spring
11. Bush
12. Armrest
13. Bush
14. Armrest bracket





15. Front seat back assembly
16. Headrest guide
17. Front seat back cover and pad assembly
18. Front seat back frame  
<Vehicles without SRS side air bag>
19. Seat heater back  
<Vehicles with heated seat>
20. Inner seat belt
21. Front seat inner cover
22. Outer leg cover
23. Inner leg cover
24. Heated seat harness  
<Vehicles with heated seat>
25. Seat adjuster assembly


**DISASSEMBLY SERVICE POINTS**

**◀▶ RECLINING COVER/SHIELD COVER REMOVAL**

For the reclining cover, disengage the claws at section A - A, and then disengage the claw at section B - B. For the shield cover, disengage the claws at section C - C, and then disengage the claw at section D - D.

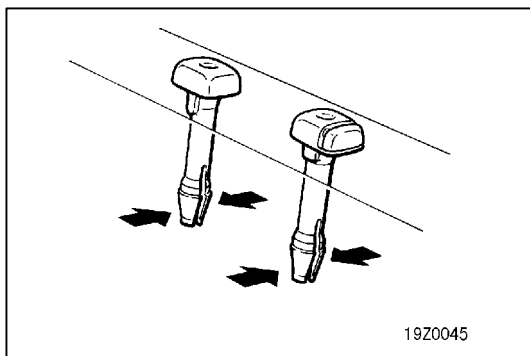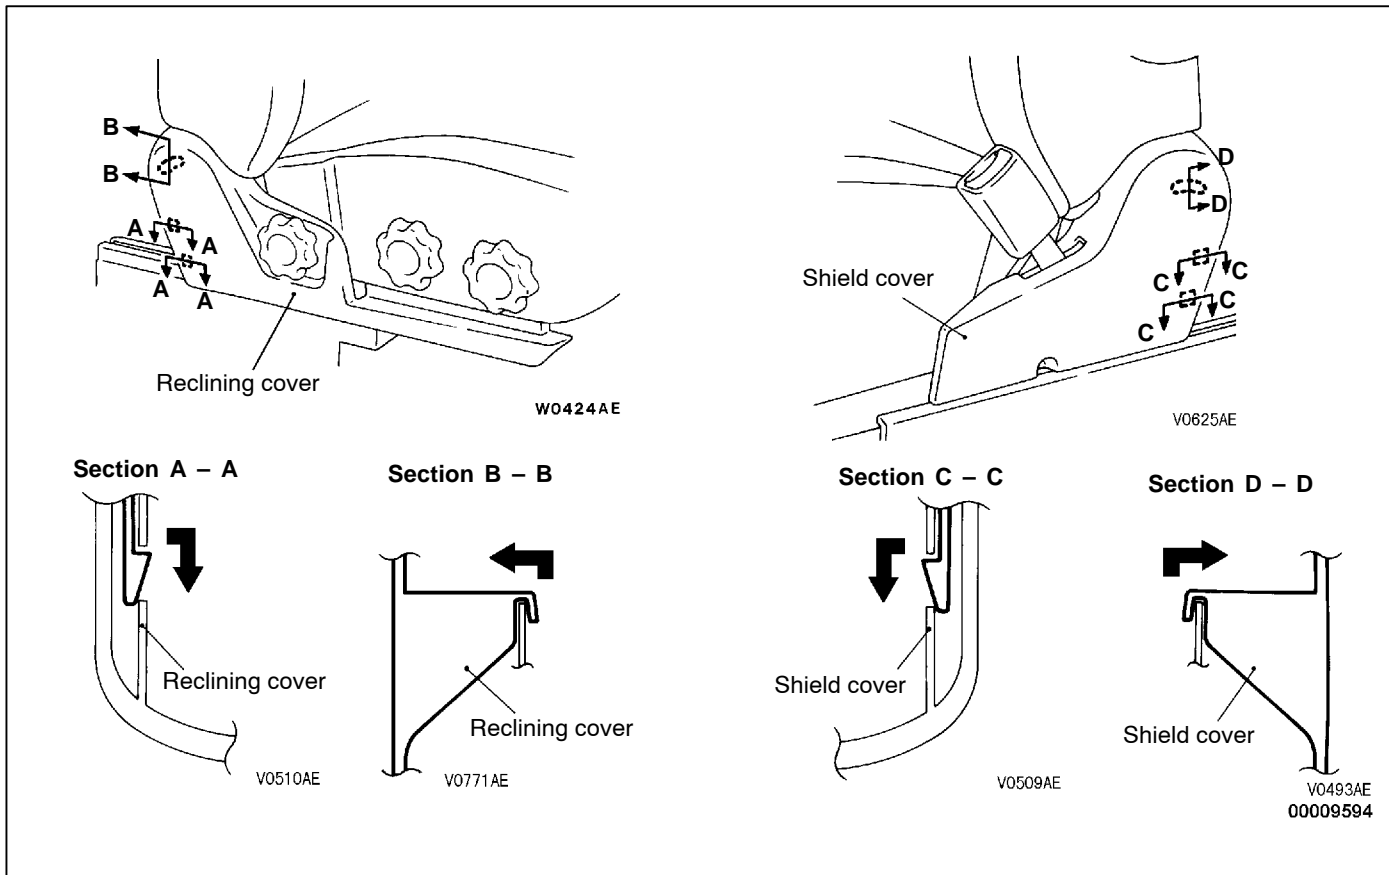


**◀▶ HEADRESTRAINT GUIDE REMOVAL**

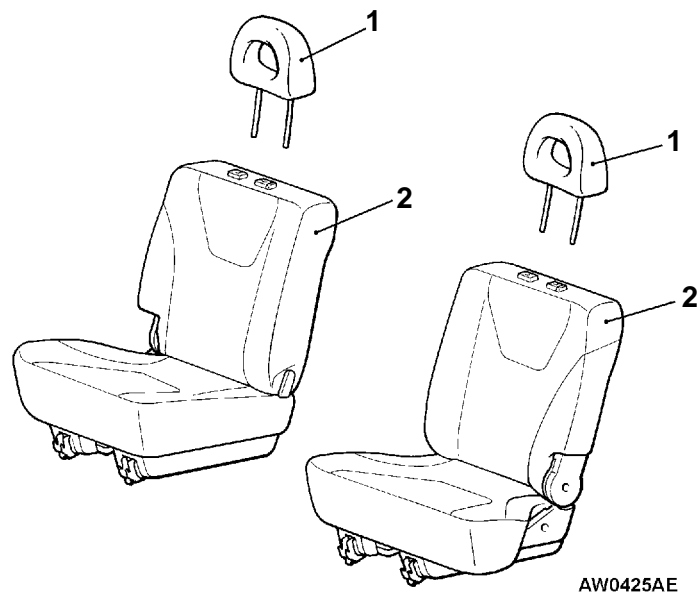**REAR SEAT <SPACE RUNNER>****REMOVAL AND INSTALLATION****Removal steps**

1. Headrest
2. Rear seat assembly



DISASSEMBLY AND REASSEMBLY

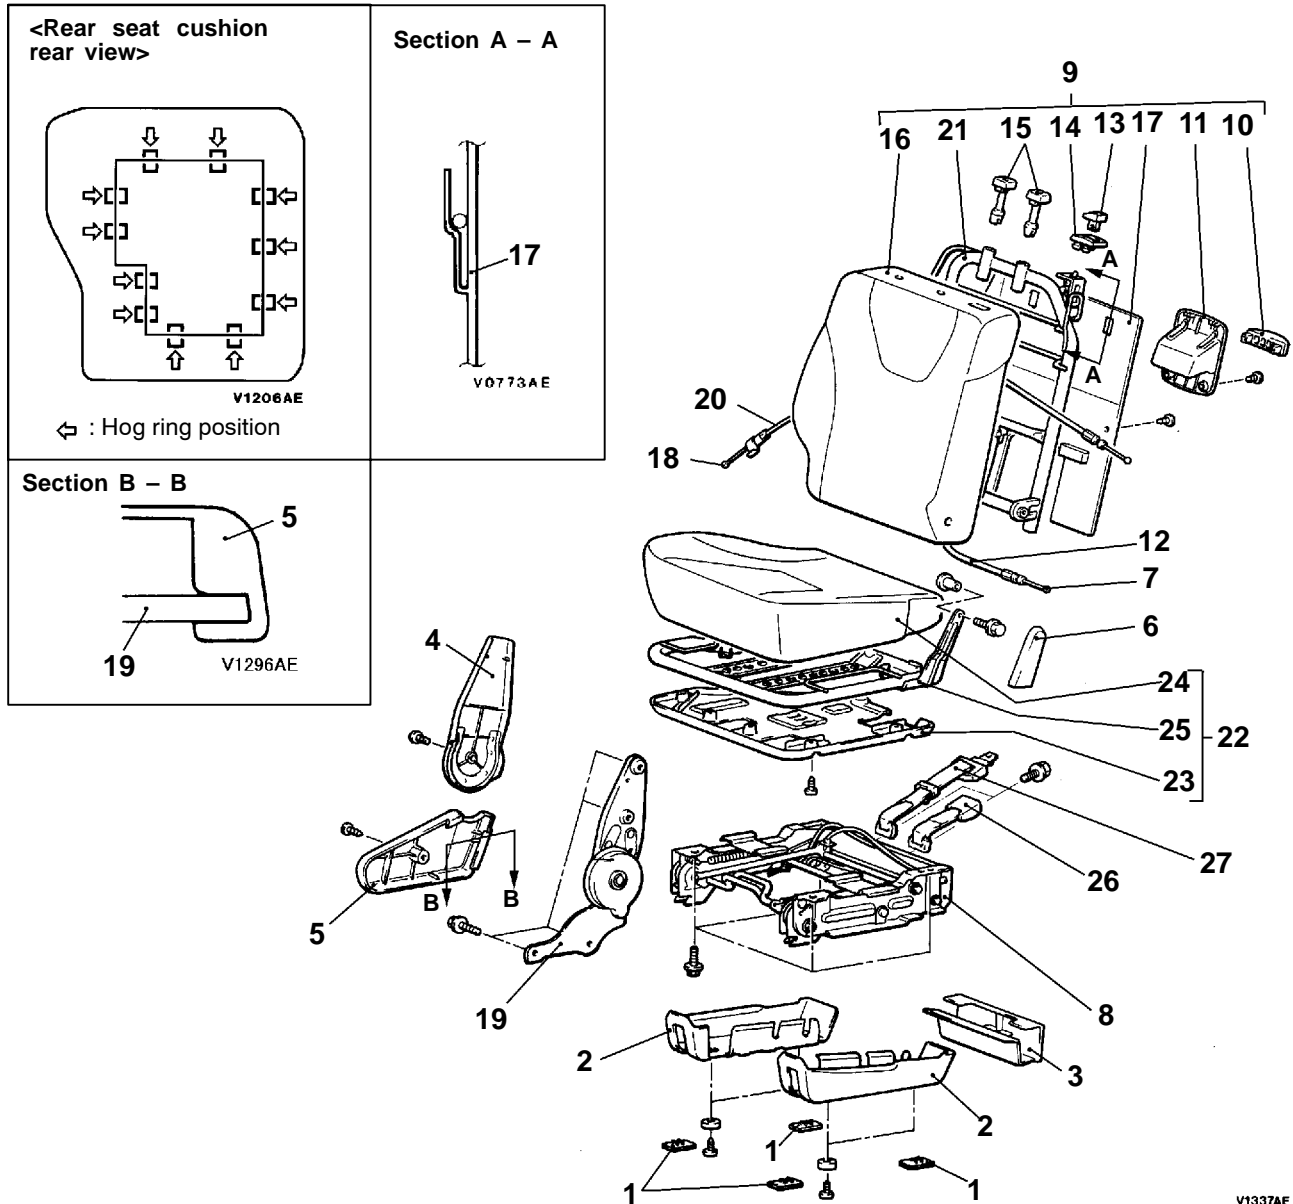




V1337AE  
00009635

**Disassembly steps**

- |                                  |  |   |
|----------------------------------|--|---|
| <p>◀A▶</p> <p>▶A▶</p> <p>◀B▶</p> | <ol style="list-style-type: none"> <li>1. Striker cover</li> <li>2. Rear seat unit cover A</li> <li>3. Rear seat unit cover B</li> <li>4. Reclining cover B</li> <li>5. Reclining cover A</li> <li>6. Hinge cover</li> <li>7. Assist grip cable connection</li> <li>8. Seat adjuster assembly</li> <li>9. Rear seat back assembly</li> <li>10. Assist grip lever</li> <li>11. Assist grip cover</li> <li>12. Assist grip cable</li> <li>13. Fall down knob</li> <li>14. Garnish</li> <li>15. Headrest guide</li> </ol> | <ol style="list-style-type: none"> <li>16. Rear seat back cover and pad assembly</li> <li>17. Rear seat back panel</li> <li>18. Fall down cable connection</li> <li>19. Reclining cover A</li> <li>20. Fall down cable</li> <li>21. Rear seat back frame</li> <li>22. Rear seat cushion assembly</li> <li>23. Rear seat cushion bottom cover</li> <li>24. Rear seat cushion cover and pad assembly</li> <li>25. Rear seat cushion frame</li> <li>26. Inner seat belt</li> <li>27. Center seat belt</li> </ol> |
|----------------------------------|--|---|

**DISASSEMBLY SERVICE POINTS****◀A▶ RECLINING COVER A REMOVAL**


1. Disengage the claws at section A - A.
2. Disengage the clip at section B - B.
3. Disengage the claw at section C - C.

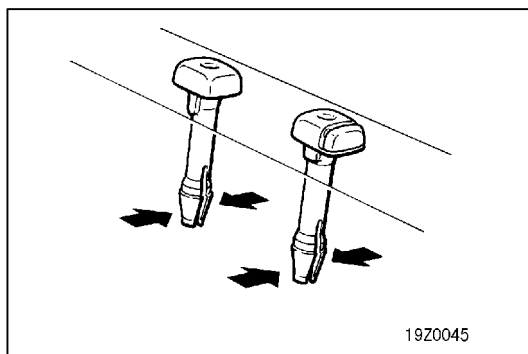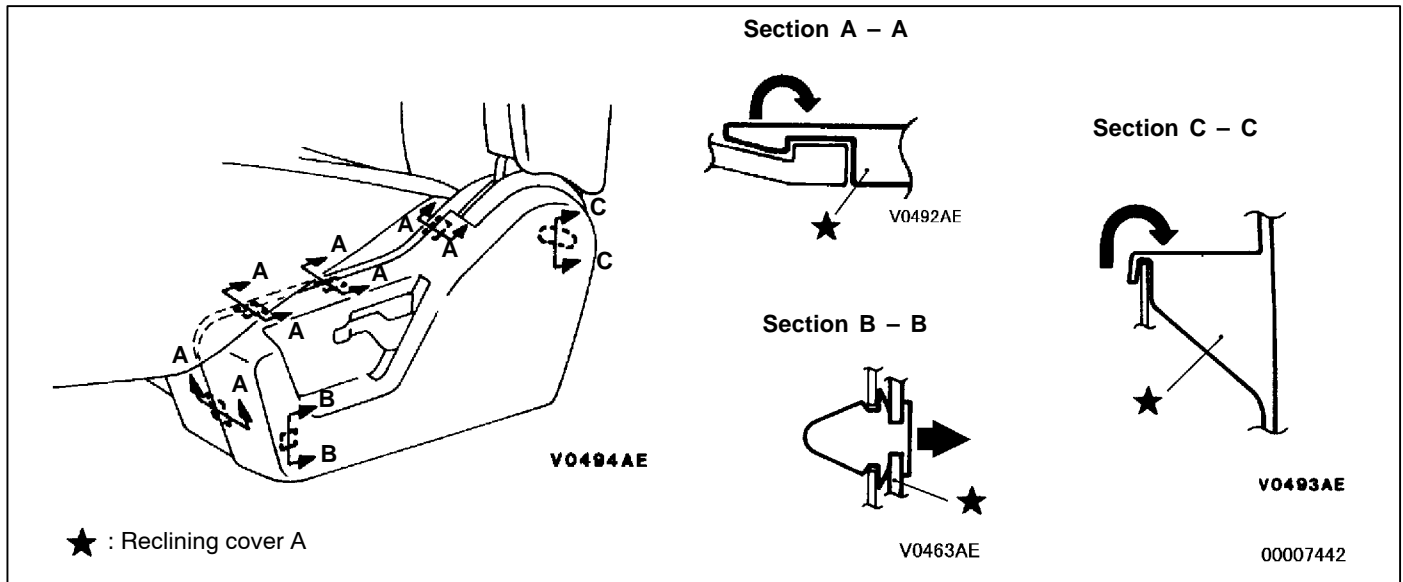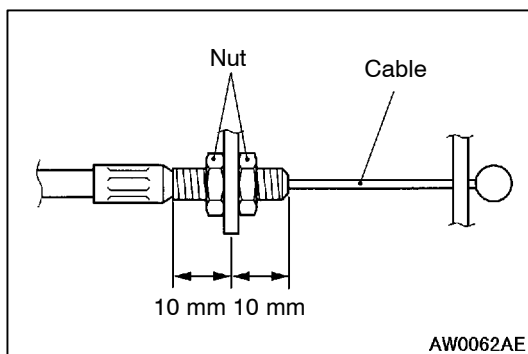**◀B▶ HEADRESTRAINT GUIDE REMOVAL****REASSEMBLY SERVICE POINT****▶A◀ ASSIST GRIP CABLE INSTALLATION**

Turn the nuts to adjust the cable as shown in the illustration.

# SECOND SEAT <SPACE WAGON>

## REMOVAL AND INSTALLATION

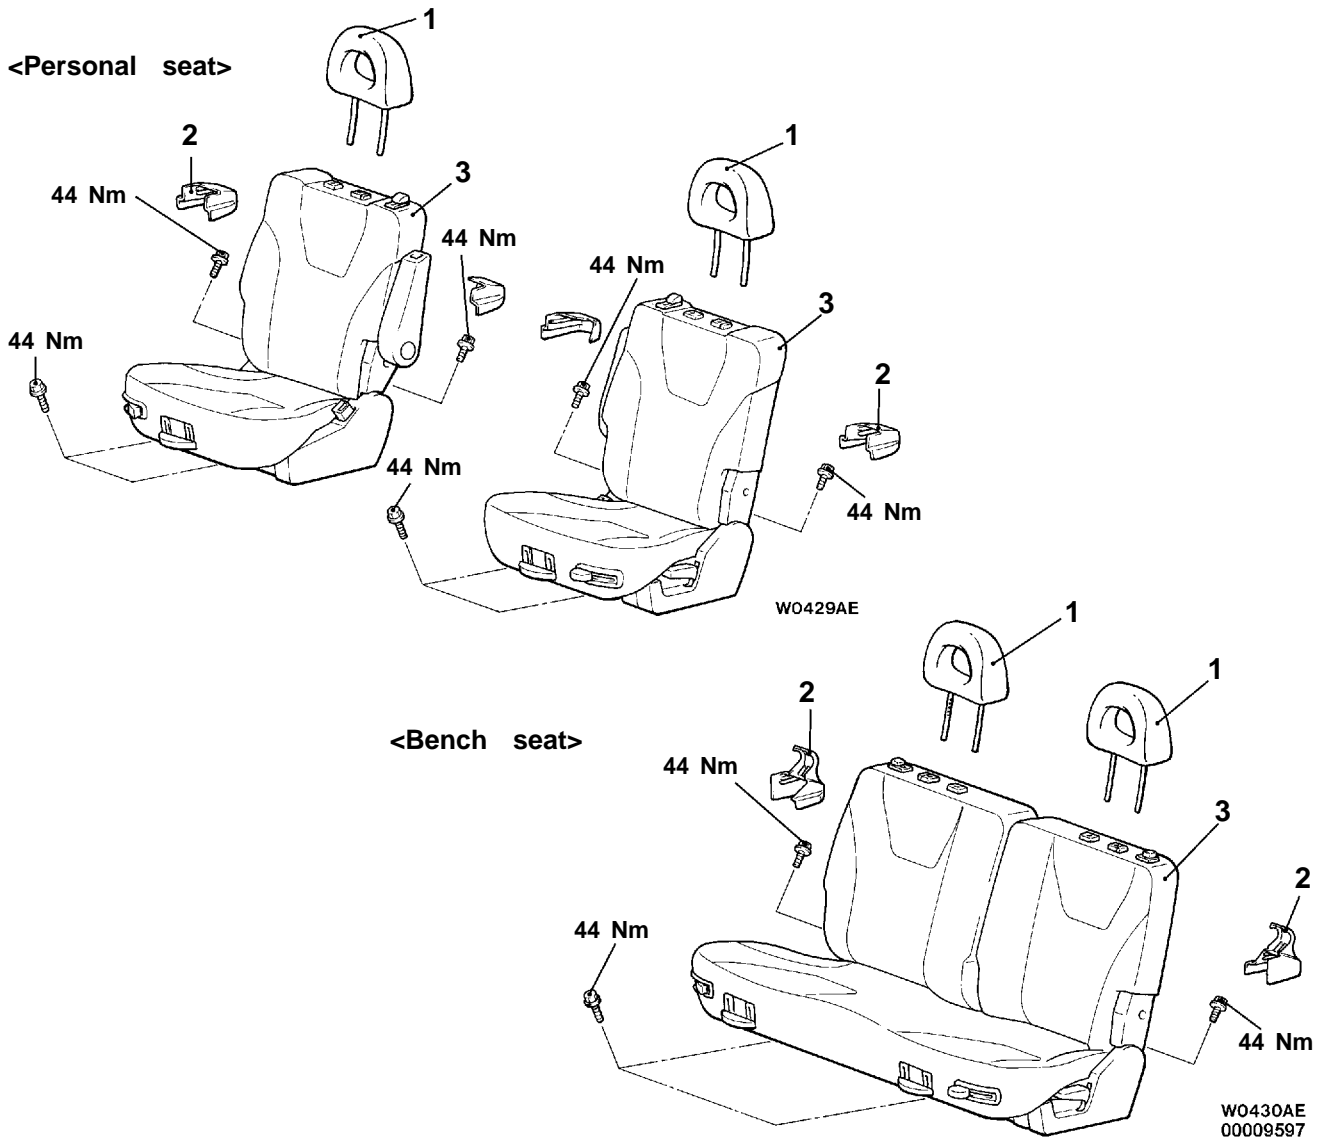


1. Headrest

### Second seat removal steps

2. Second seat anchor cover

3. Second seat assembly

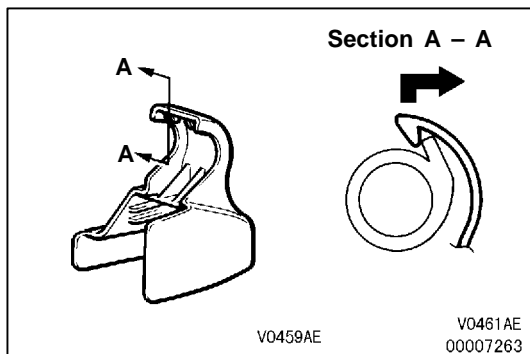


### REMOVAL SERVICE POINT

◀A▶ SECOND SEAT ANCHOR COVER REMOVAL  
<BENCH SEAT>

DISASSEMBLY AND REASSEMBLY

<Personal seat>

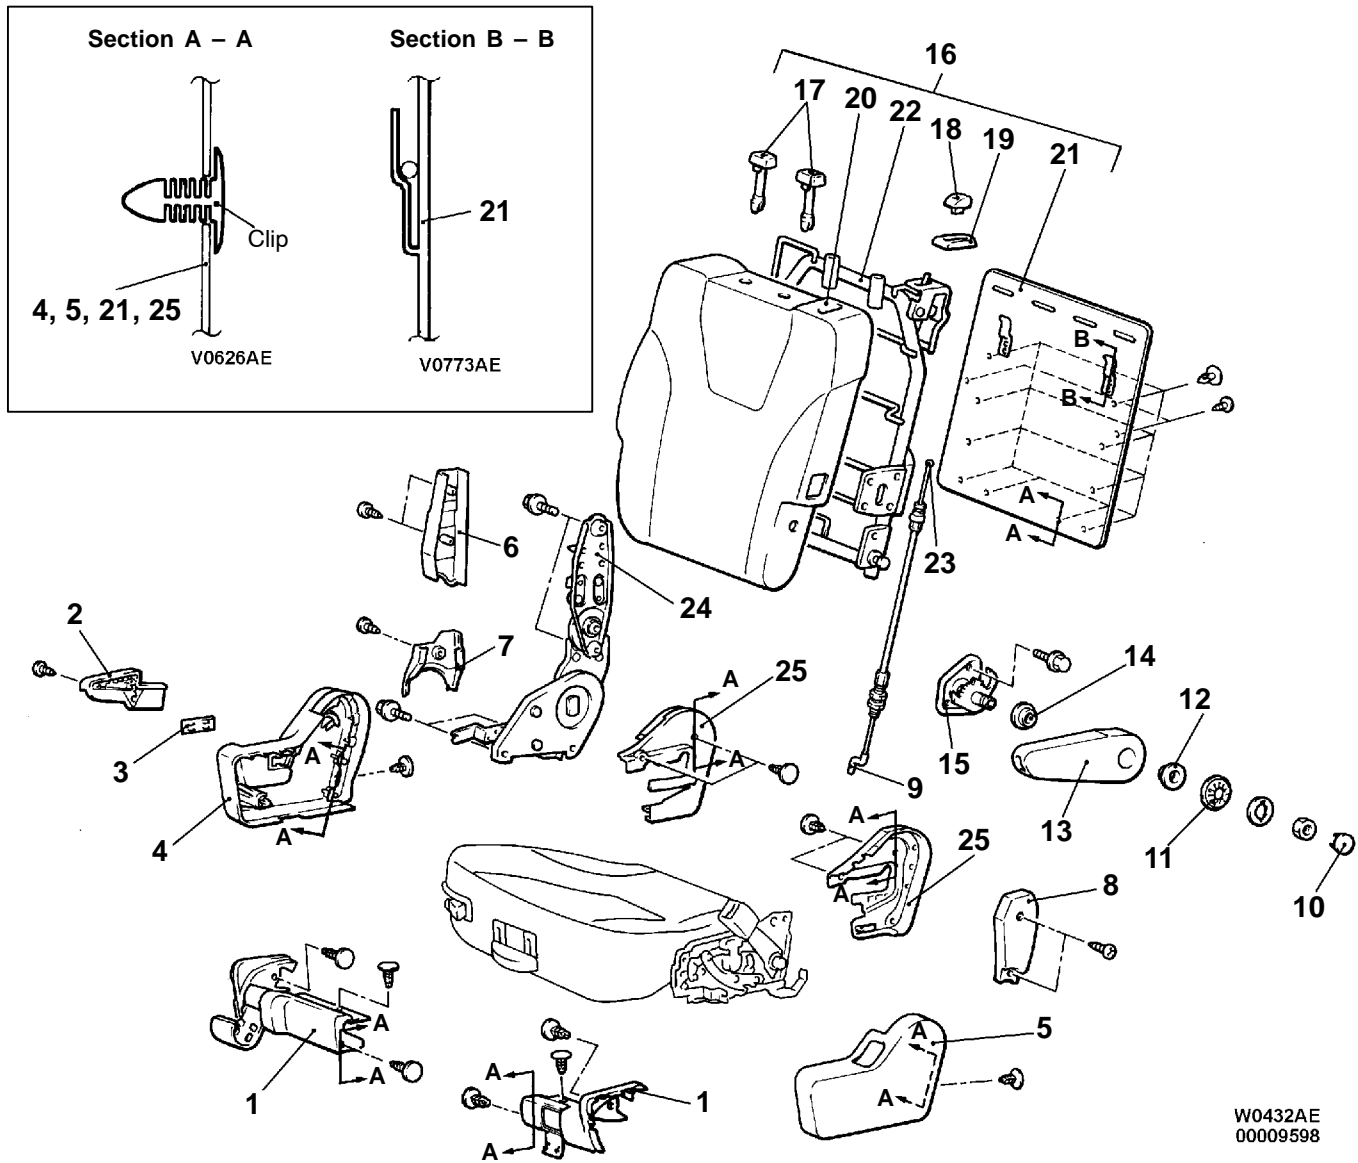



W0432AE  
00009598

Disassembly steps

1. Inner cover A
2. Reclining adjuster knob
3. Shield cap
4. Reclining cover A
5. Shield cover
6. Reclining cover B
7. Reclining cover C
8. Hinge cover
9. Fall down cable connection
10. Armrest cap
11. Spring
12. Bush
13. Armrest



14. Bush
15. Armrest bracket
16. Second seat back assembly
17. Headrest guide
18. Fall down knob
19. Garnish
20. Second seat back cover and pad assembly
21. Second seat back panel
22. Second seat back frame
23. Fall down cable
24. Reclining adjuster
25. Inner cover B

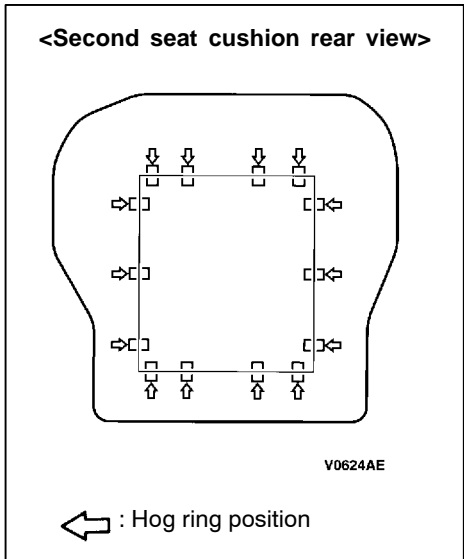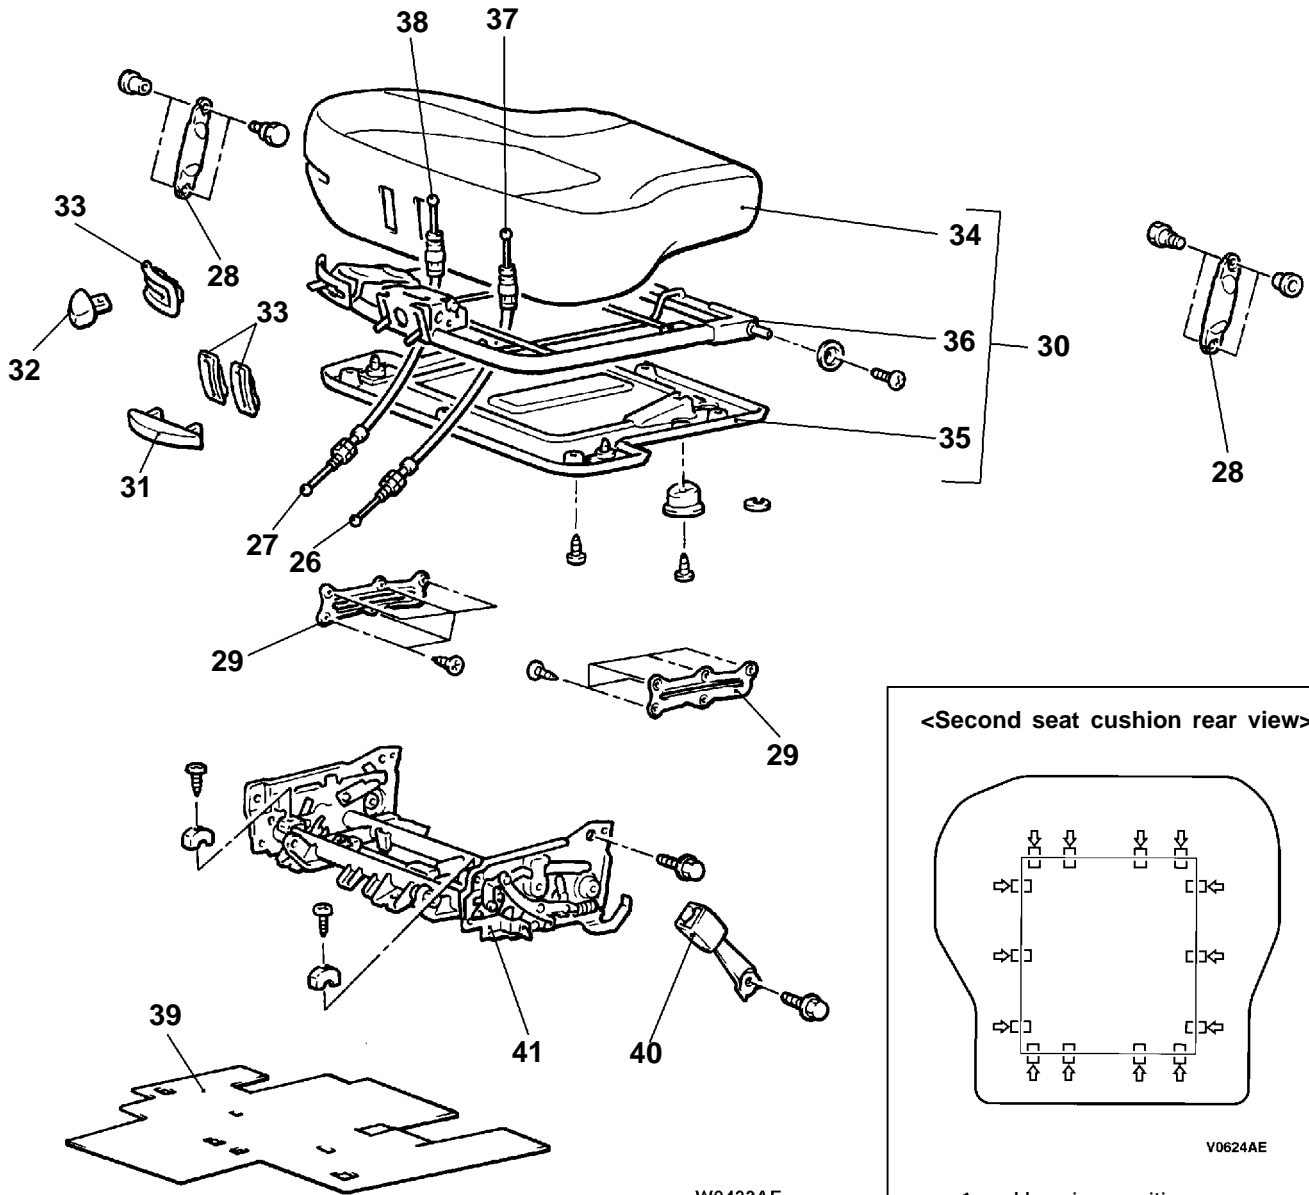


W0433AE  
00009599

- ▶▶ 26. Slide cable A connection
- ▶▶ 27. Tip up cable connection
- 28. Link
- 29. Slide lock plate
- 30. Second seat cushion assembly
- 31. Slide lever
- 32. Tip up knob
- 33. Garnish
- 34. Second seat cushion cover and pad assembly


- 35. Second seat cushion bottom cover
- 36. Second seat cushion frame
- 37. Slide cable A
- 38. Tip up cable
- 39. Upper slide cover
- 40. Inner seat belt
- 41. Seat adjuster

<Bench seat>

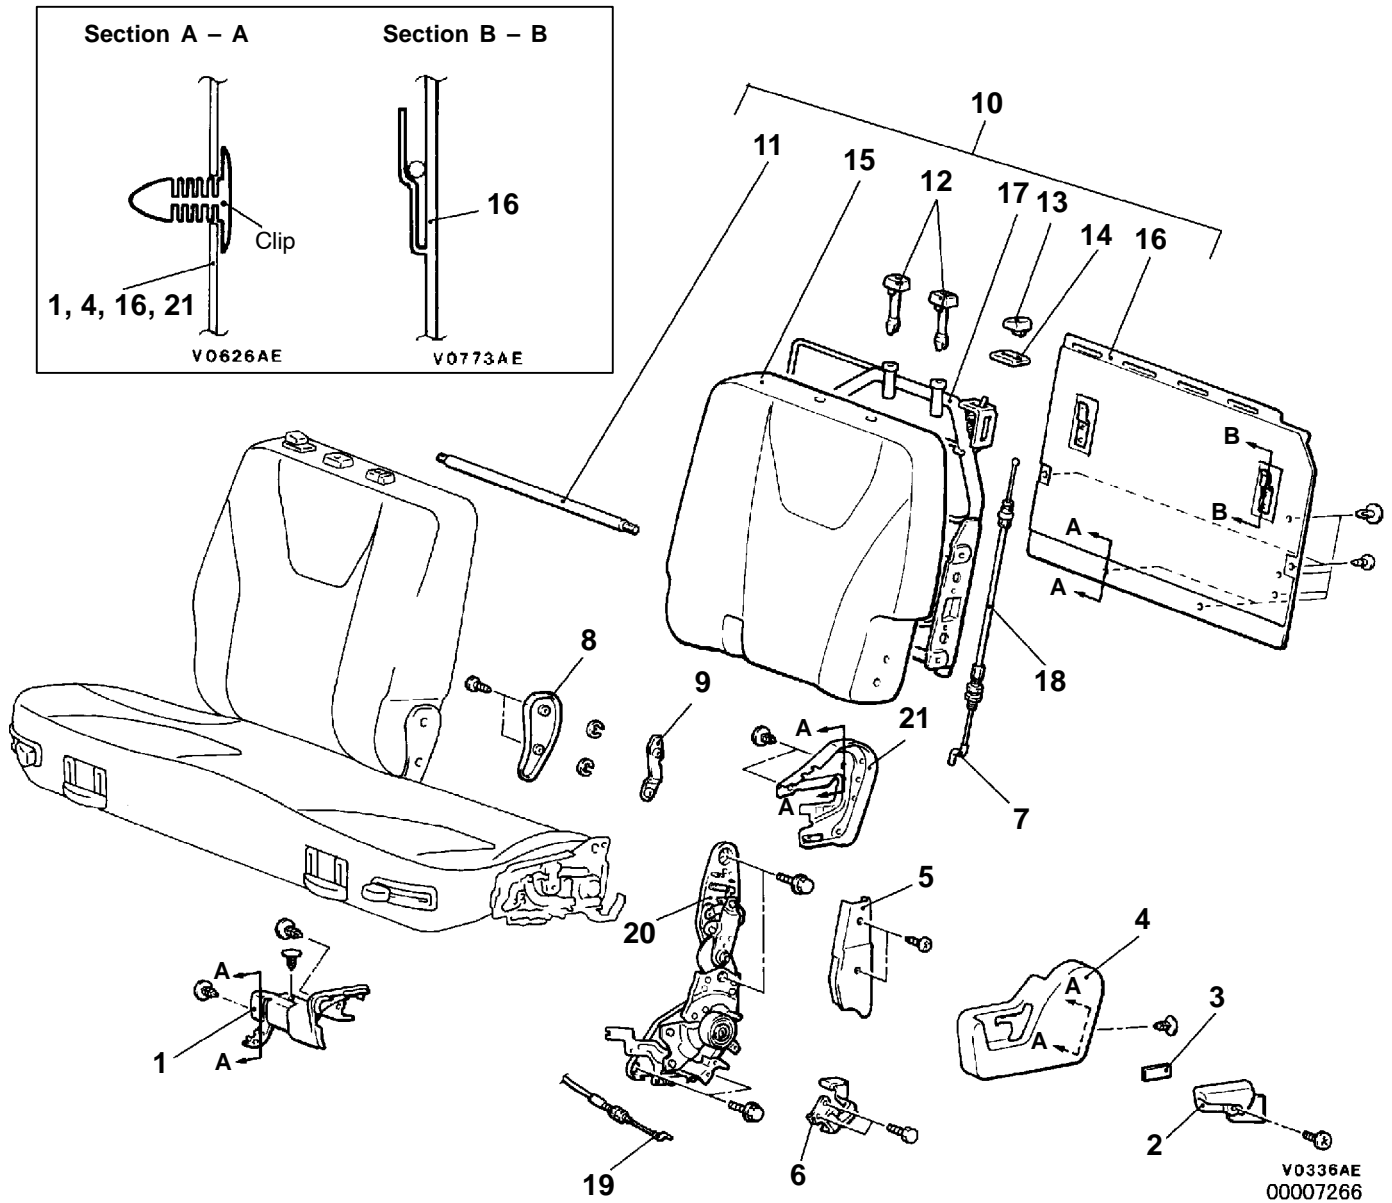


**Disassembly steps**

- |     |                               |     |   |
|-----|-------------------------------|-----|---|
| ◀B▶ | 1. Inner cover A              | ◀C▶ | 12. Headrest guide                          |
|     | 2. Reclining adjuster knob    |     | 13. Fall down knob                          |
|     | 3. Shield cap                 |     | 14. Garnish                                 |
|     | 4. Reclining cover A          |     | 15. Second seat back cover and pad assembly |
|     | 5. Reclining cover B          |     | 16. Second seat back panel                  |
| ▶C▶ | 6. Reclining lever            |     | 17. Second seat back frame                  |
|     | 7. Fall down cable connection |     | 18. Fall down cable                         |
|     | 8. Hinge cover                |     | 19. Slide cable B connection                |
|     | 9. Hinge bracket              |     | 20. Reclining adjuster                      |
|     | 10. Second seat back assembly |     | 21. Inner cover B                           |
|     | 11. Shaft                     |     |   |

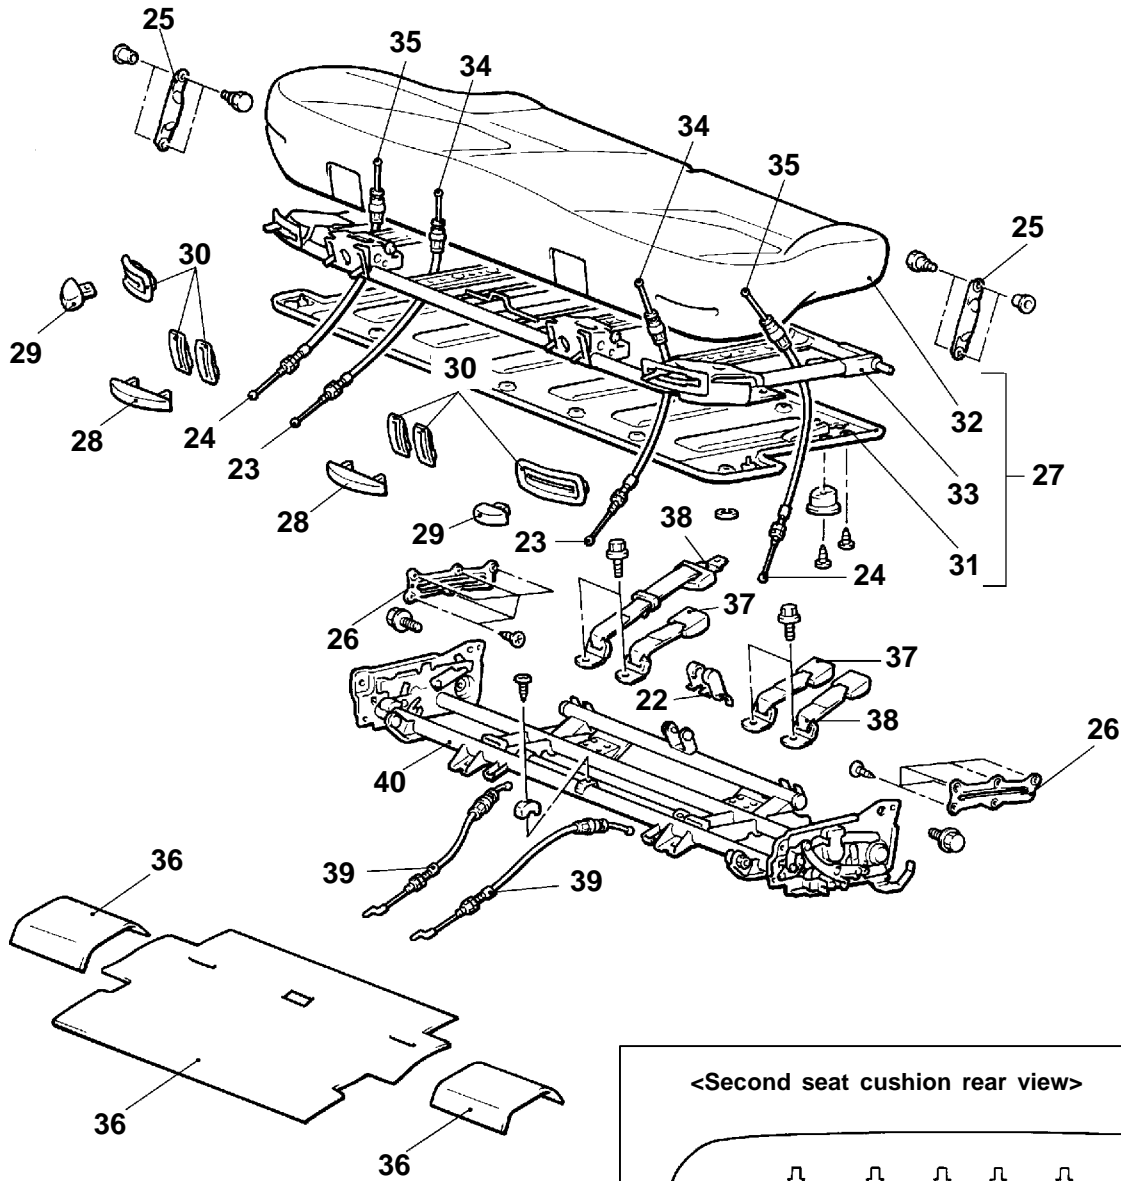

V0337AE  
00007269

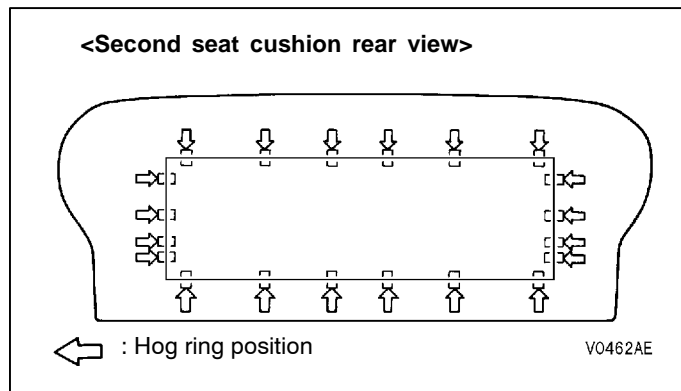


- 22. Hinge cover
- ▶B◀ 23. Slide cable A connection
- ▶B◀ 24. Tip up cable connection
- 25. Link
- 26. Slide lock plate
- 27. Second seat cushion assembly
- 28. Slide lever
- 29. Tip up knob
- 30. Garnish
- 31. Second seat cushion bottom cover
- 32. Second seat cushion cover and pad assembly

- 33. Second seat cushion frame
- 34. Slide cable
- 35. Tip up cable
- 36. Upper slide cover
- 37. Inner seat belt
- 38. Center seat belt
- ▶A◀ 39. Slide cable B
- 40. Seat adjuster

**DISASSEMBLY SERVICE POINTS**


**◀A▶ RECLINING COVER A <PERSONAL SEAT> REMOVAL**

1. Disengage the claws at section A - A.
2. Disengage the clip at section B - B.
3. Disengage the claw at section C - C.

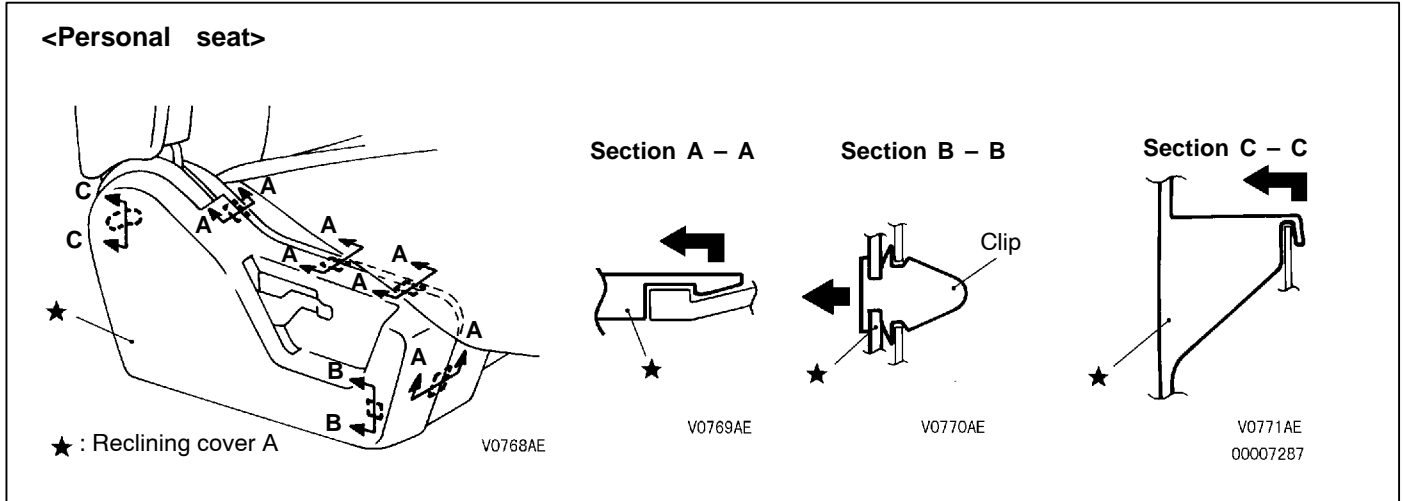


**◀B▶ SHIELD COVER <PERSONAL SEAT>/RECLINING COVER A <BENCH SEAT> REMOVAL**


1. Disengage the claws at section A - A.
2. Disengage the clip at section B - B.
3. Disengage the claws at section C - C.

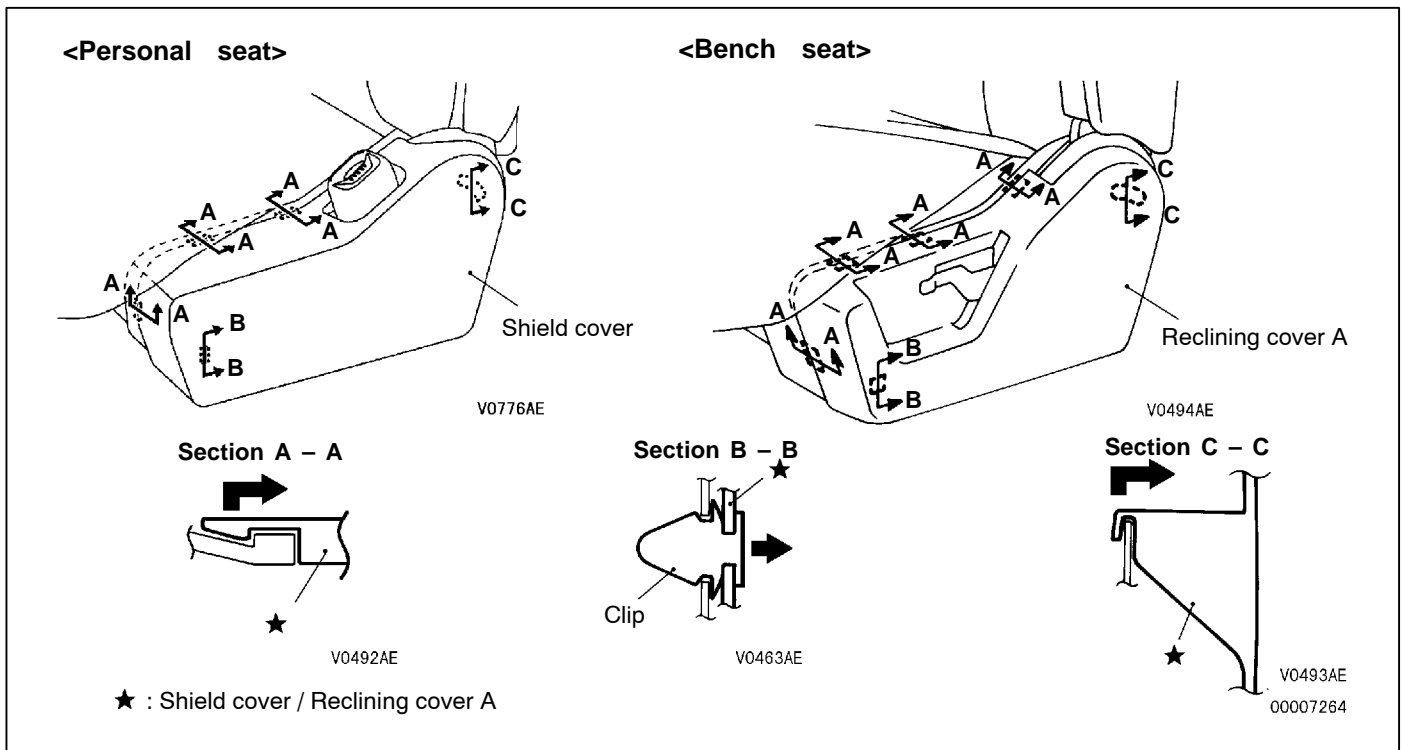



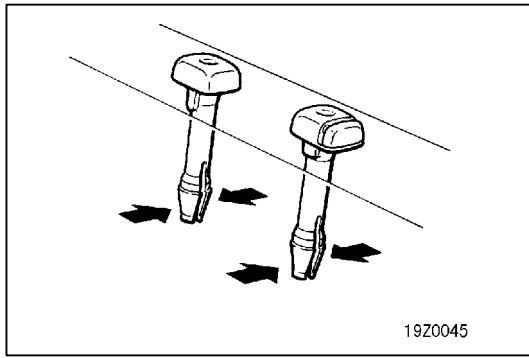


◀C▶ HEADRESTRAINT GUIDE REMOVAL

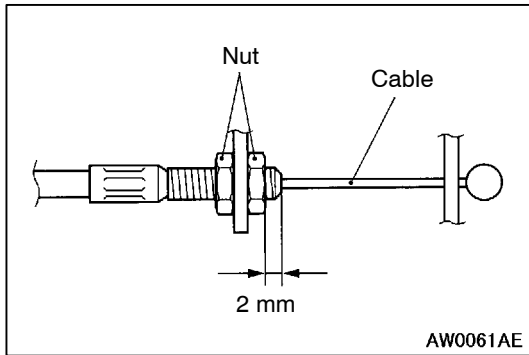

REASSEMBLY SERVICE POINTS


▶A▶ SLIDE CABLE B <BENCH SEAT> INSTALLATION

Turn the nuts to adjust the cable as shown in the illustration.

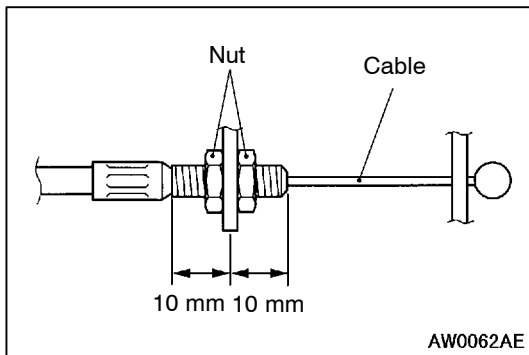


▶B▶ TIP UP CABLE/SLIDE CABLE A INSTALLATION

Turn the nuts to adjust the cable as shown in the illustration.

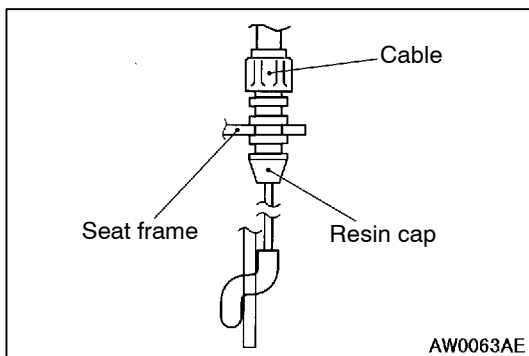



▶C▶ FALL DOWN CABLE INSTALLATION

Install the fall down cable so that the seat frame is engaged with the center groove of the resin cap fitted at the cable end.

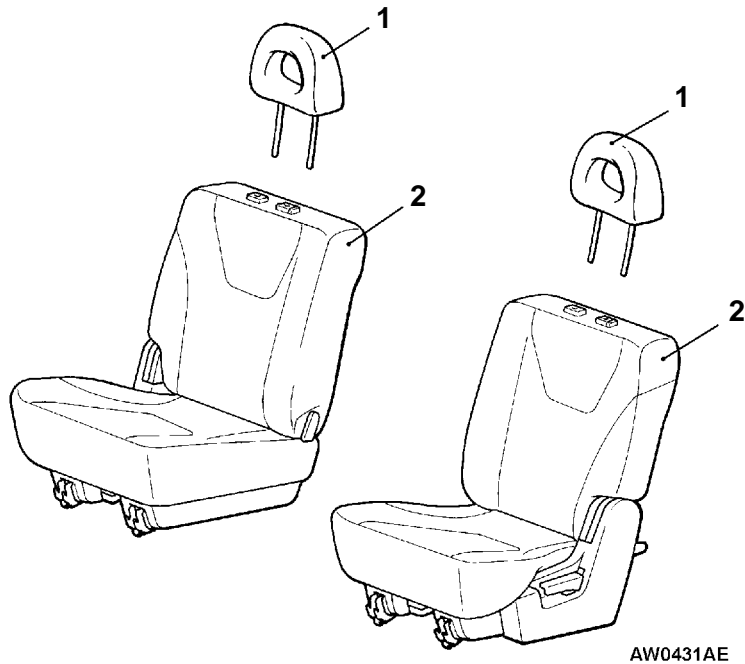**THIRD SEAT <SPACE WAGON>****REMOVAL AND INSTALLATION****Removal steps**

1. Headrest
2. Third seat assembly

DISASSEMBLY AND REASSEMBLY

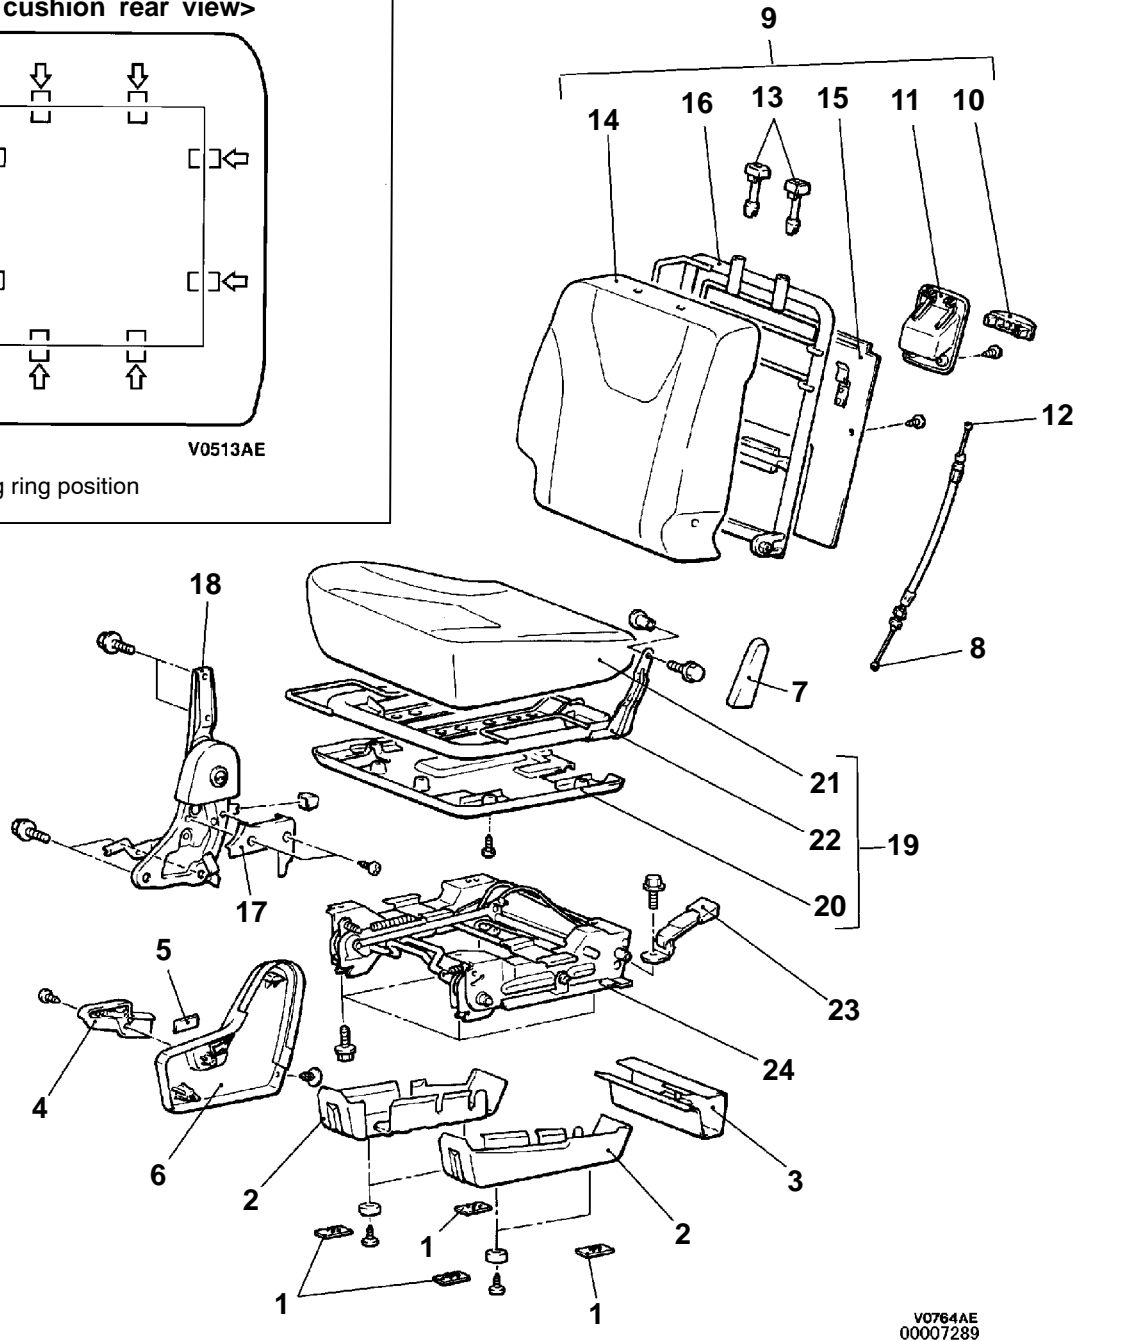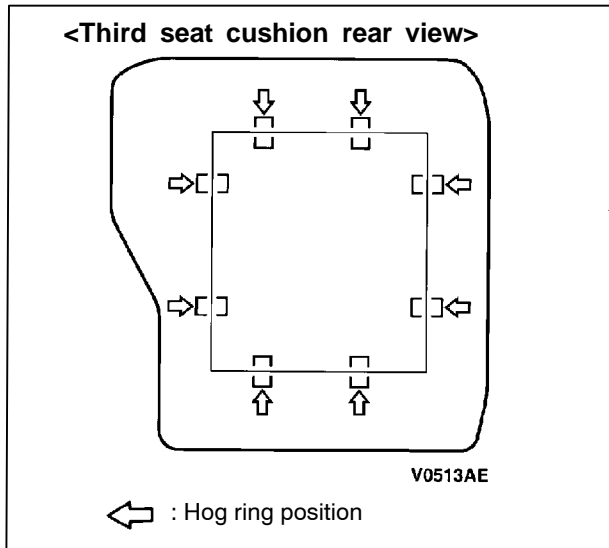

Disassembly steps



- |  |  |
|--|--|
| <p>1. Striker cover</p> <p>2. Third seat unit cover A</p> <p>3. Rear seat unit cover B</p> <p>4. Reclining adjuster knob</p> <p>5. Shield cap</p> <p>6. Reclining cover</p> <p>7. Hinge cover</p> <p>8. Assist grip cable connection</p> <p>9. Third seat back assembly</p> <p>10. Assist grip lever</p> <p>11. Assist grip cover</p> <p>12. Assist grip cable</p> <p>13. Headrest guide</p> | <p>14. Third seat back cover and pad assembly</p> <p>15. Third seat back panel</p> <p>16. Third seat back frame</p> <p>17. Reclining adjuster inner cover</p> <p>18. Reclining adjuster</p> <p>19. Third seat cushion assembly</p> <p>20. Third seat cushion bottom cover</p> <p>21. Third seat cushion cover and pad assembly</p> <p>22. Third seat cushion frame</p> <p>23. Inner seat belt</p> <p>24. Seat adjuster</p> |
|--|--|




**DISASSEMBLY SERVICE POINTS**

**◀A▶ RECLINING COVER REMOVAL**

1. Disengage the claws at section A - A.
2. Disengage the clip at section B - B.
3. Disengage the claw at section C - C.

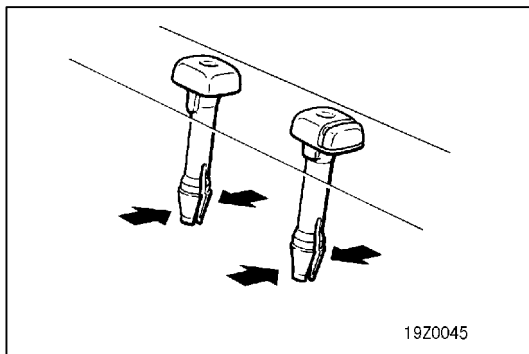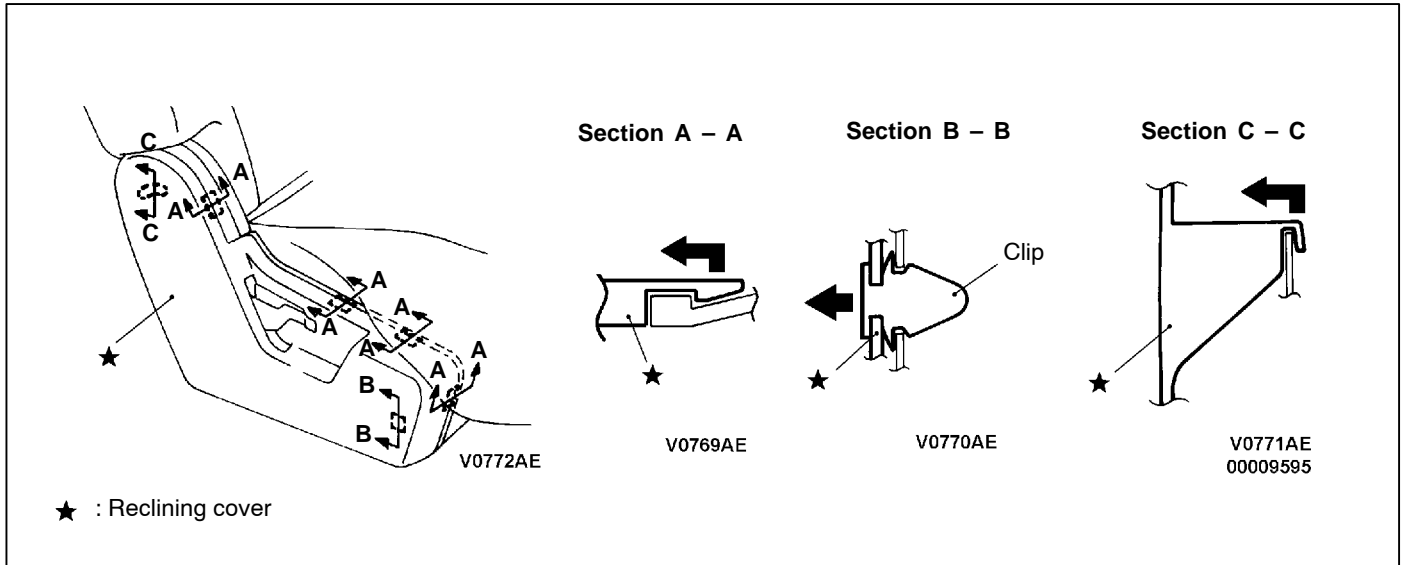

**◀B▶ HEADRESTRAINT GUIDE REMOVAL**

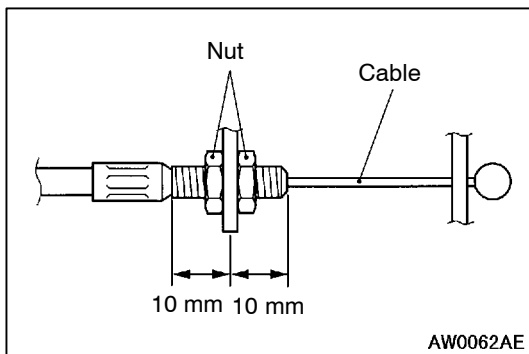

**DISASSEMBLY SERVICE POINT**

**▶A◀ ASSIST GRIP CABLE INSTALLATION**

Turn the nuts to adjust the cable as shown in the illustration.


# SEAT ADJUSTER AND STRIKER

## REMOVAL AND INSTALLATION


**Pre-removal and Post-Installation Operation**

- Rear Seat Assembly Removal and Installation <SPACE RUNNER> (Refer to P.52A-24)
- Second Seat Assembly Removal and Installation <SPACE WAGON >(Refer to P.52A-27)
- Third Seat Assembly Removal and Installation <SPACE WAGON >(Refer to P.52A-34)

**<SPACE RUNNER>**

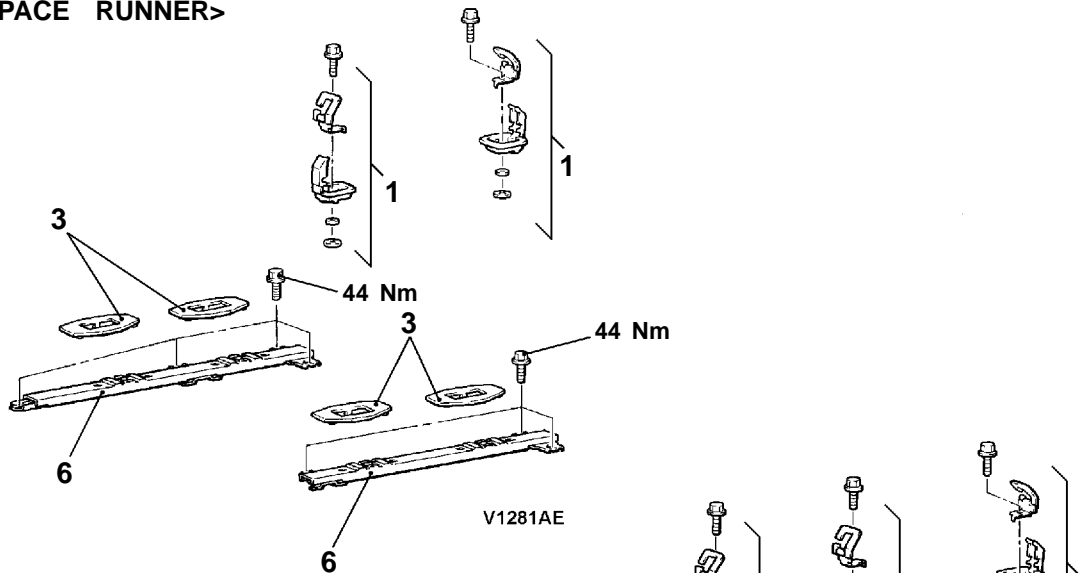

**<SPACE WAGON>**

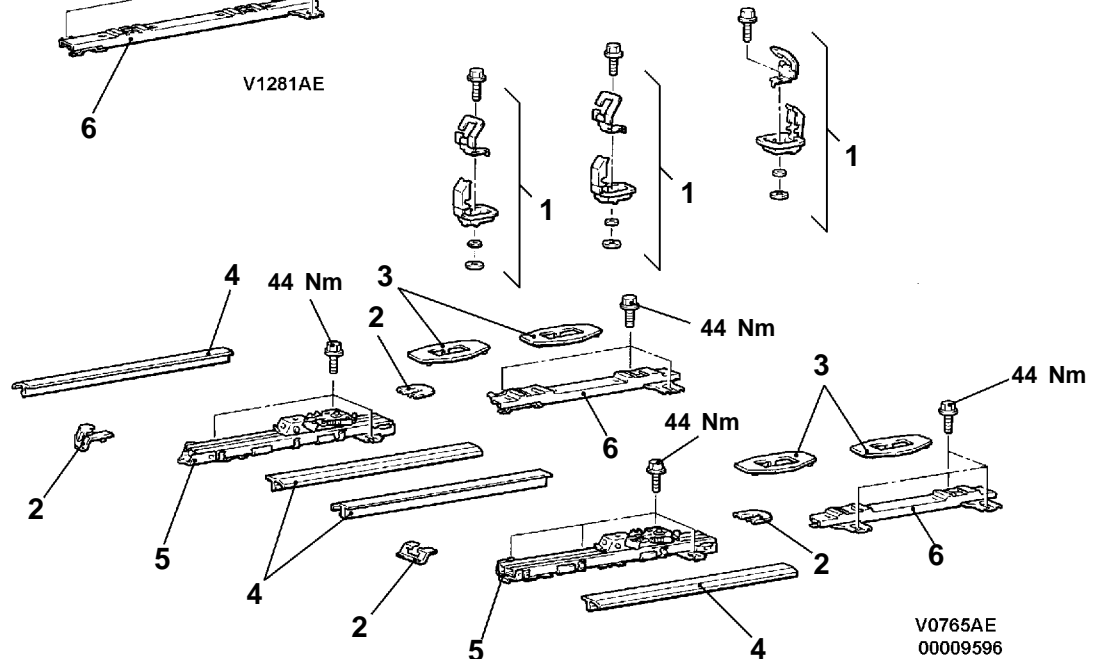

**Seat adjuster removal steps**

- Scuff plate, rear end trim (Refer to P.52A-8, 9, 12, 13, 16.)
- 1. Hook assembly
- 2. Seat adjuster end cover
- 3. Striker cover
- 4. Seat adjuster side cover
- Rear heater nozzle garnish (Refer to GROUP 55 - Ventilation.)
- Floor carpet
- Rear heater duct C (Refer to GROUP 55 - Ventilation.)

**5. Seat adjuster**


**Striker removal steps**

- Rear end trim (Refer to P.52A-8, 9, 12, 13, 16.)
- 1. Hook assembly
- 3. Striker cover
- Floor carpet
- 6. Striker




REMOVAL SERVICE POINTS

◀A▶ SEAT ADJUSTER END COVER REMOVAL

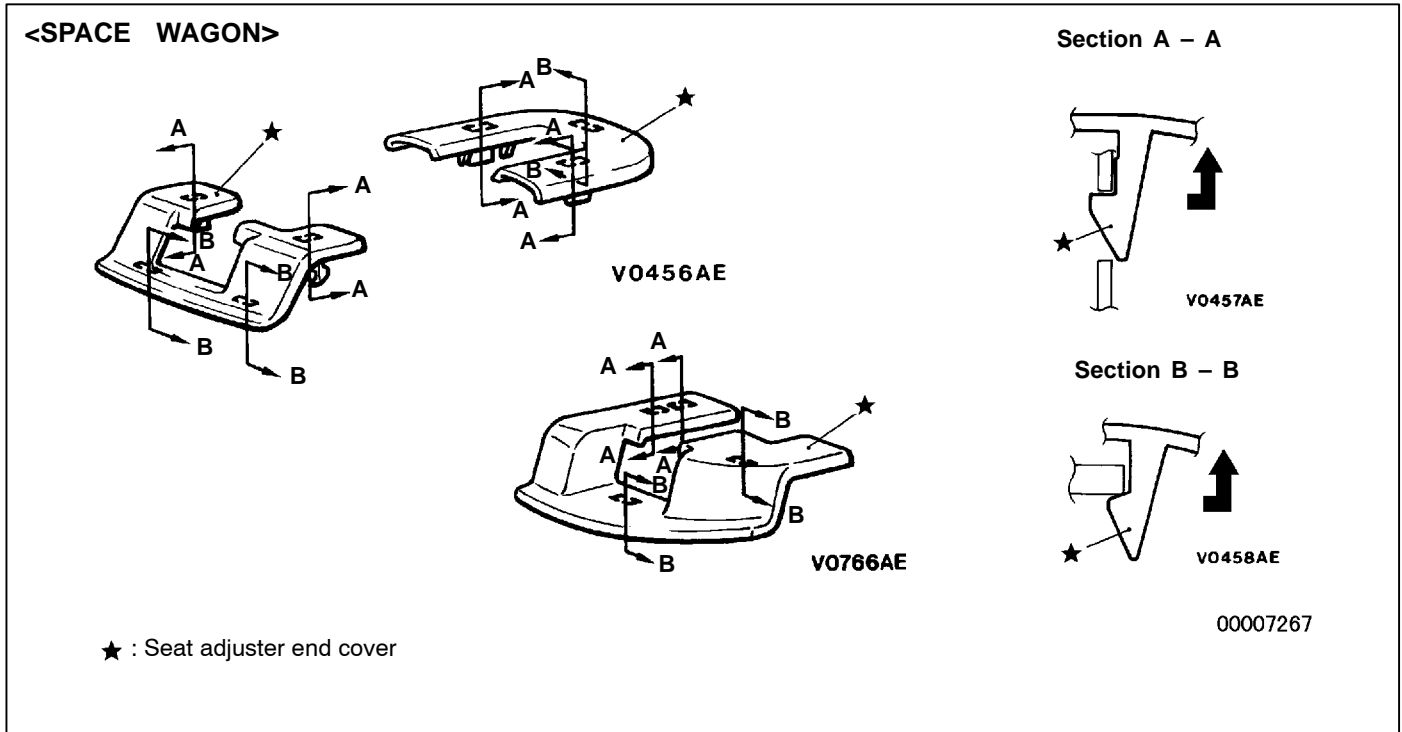

◀B▶ STRIKER COVER REMOVAL

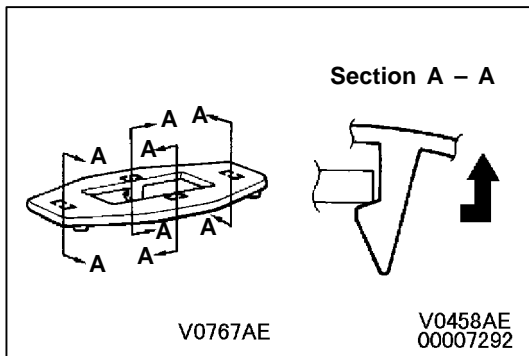


## SEAT BELT

For removal and installation procedures for the seat belt with pre-tensioner, refer to GROUP 52B – Seat Belt with Pre-tensioner

### FRONT SEAT BELT

### REMOVAL AND INSTALLATION

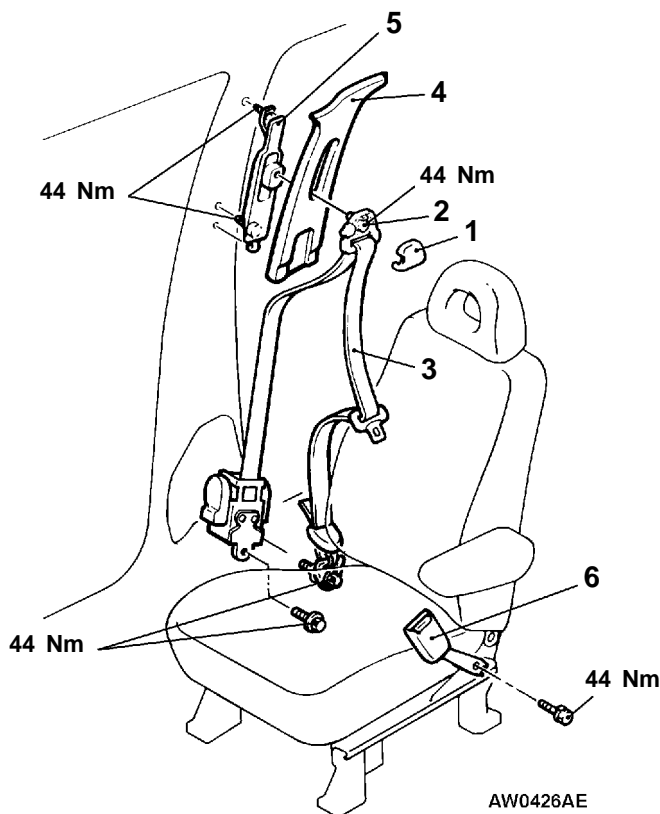

#### Outer seat belt removal steps


- Quarter lower trim assembly and center pillar lower trim <SPACE RUNNER> (Refer to P.52A-8, 9, 12, 13.)
- Front scuff plate, rear scuff plate and center pillar lower trim <SPACE WAGON> (Refer to P.52A-16.)
- 1. Sash guide cover
- 2. Sash cover
- 3. Outer seat belt
- 4. Center pillar upper trim (Refer to P.52A-8, 9, 12, 13, 16.)
- 5. Adjustable shoulder belt anchor

#### Inner seat belt removal steps

- Front seat assembly (Refer to P.52A-18)
- Shield cover (Refer to P.52A-22.)
- 6. Inner seat belt

## REAR SEAT BELT<SPACE RUNNER> REMOVAL AND INSTALLATION

**Pre-removal and Post-installation Operation**  
Quarter Lower Trim Removal and Installation  
(Refer to P.52A-8, 9, 12, 13.)

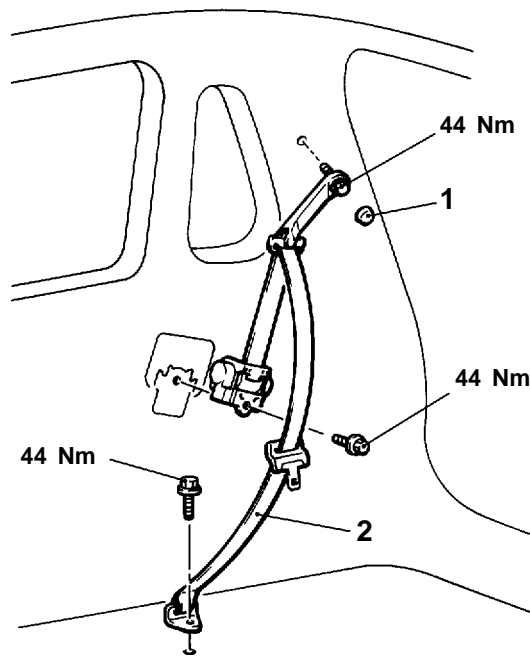

### Removal steps


1. Sash guide cover
2. Outer seat belt

### NOTE

For the inner seat belt and center seat belt, refer to P.52A-25.



**SECOND SEAT BELT AND THIRD SEAT BELT <SPACE WAGON>  
REMOVAL AND INSTALLATION**

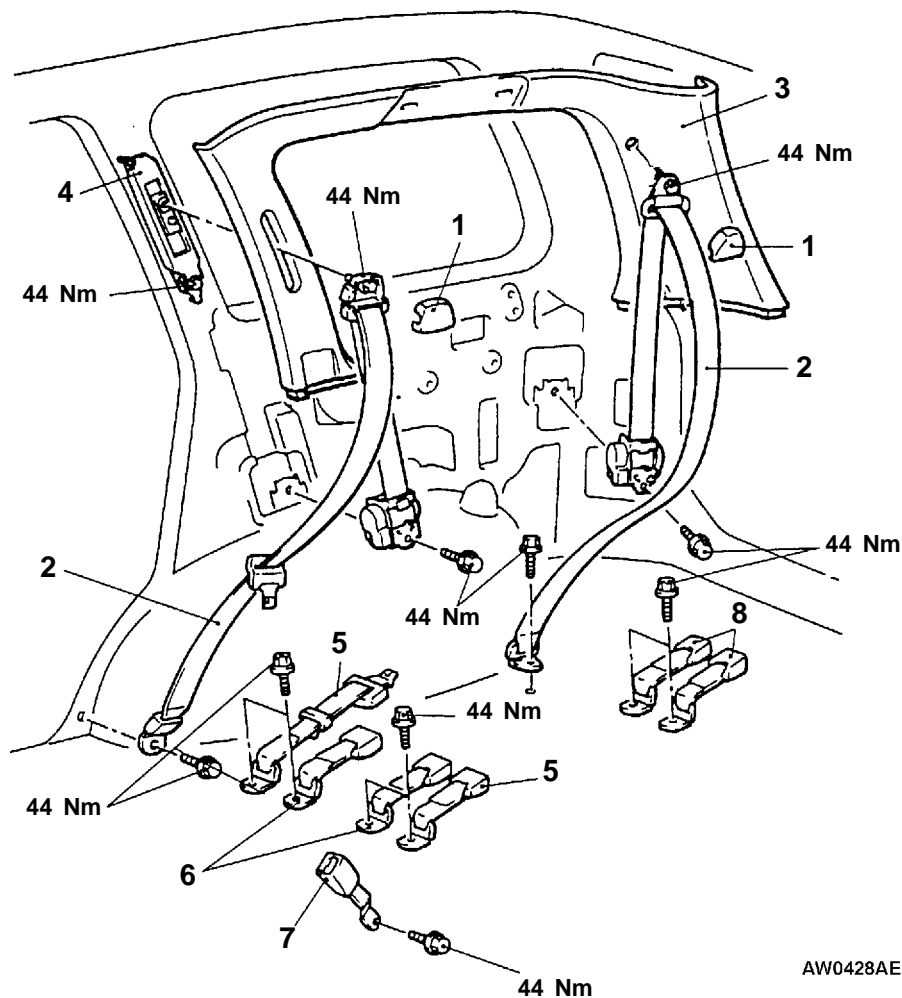

AW0428AE

**Second seat belt removal steps**

- Quarter lower trim assembly (Refer to P.52A-16.)
- 1. Sash guide cover
- 2. Outer seat belt
- 3. Quarter upper trim (Refer to P.52A-16.)
- 4. Adjustable shoulder belt anchor
- 5. Inner/outer seat belt (for center seat) <bench seat>
- 6. Inner seat belt (for side seats) <bench seat>

- Shield cover <personal seat> (Refer to P.52A-28.)
- 7. Inner seat belt <personal seat>

**Third seat belt removal steps**

- Quarter lower trim assembly (Refer to P.52A-16.)
- 1. Sash guide cover
- 2. Outer seat belt
- 3. Quarter upper trim (Refer to P.52A-16.)
- 8. Inner seat belt (Refer to P.52A-35.)

---

## NOTES

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## CONTENTS

52409000292

GENERAL INFORMATION .....	2	SRS AIR BAG CONTROL UNIT (SRS-ECU) .....	31
SRS SERVICE PRECAUTIONS .....	4	AIR BAG MODULES AND CLOCK SPRING .....	33
SPECIAL TOOLS .....	6	SIDE IMPACT SENSOR .....	41
TEST EQUIPMENT .....	7	SEAT BELT WITH PRE-TENSIONER .....	43
TROUBLESHOOTING .....	8	AIR BAG MODULE AND SEAT BELT PRE-TENSIONER DISPOSAL PROCEDURES .....	45
SRS MAINTENANCE .....	22	Undeployed Air Bag Module and Seat Belt Pre-tensioner Disposal .....	45
POST-COLLISION DIAGNOSIS .....	26	Deployed Air Bag Module or Operated Seat Belt Pre-tensioner Disposal Procedures .....	58
INDIVIDUAL COMPONENT SERVICE .....	29		
WARNING/CAUTION LABELS .....	30		

### CAUTION

- Carefully read and observe the information in the SERVICE PRECAUTIONS (P.52B-4.) prior to any service.
- For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting (P.52B-8.) section.
- If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the INDIVIDUAL COMPONENT SERVICE section (P.52B-29.) for the components involved.
- If you have any questions about the SRS, please contact your local distributor.

## GENERAL INFORMATION





52400010461

To improve safety, the SRS and seat belts with pre-tensioner are available as optional parts. These systems enhance collision safety by restraining the front passengers in case of an accident. The SRS works with the pre-tensioner simultaneously when a collision is detected.

The SRS consists of four air bag modules, SRS air bag control unit (SRS-ECU), side impact sensors, SRS warning lamp and clock spring. The air bags are located in the centre of the steering wheel, above the glove box, and built into the front seat back assemblies. Each air bag has a folded air bag and an inflator unit. The SRS-ECU under the floor console monitors the system and has a safing G sensor and an analog G sensor. The side impact sensor inside the center pillar monitors any shocks coming from the side of the vehicle. The warning lamp on the instrument panel indicates

the operational status of the SRS. The clock spring is installed in the steering column.

The SRS side air bag deploys if an impact received at the side of the vehicle is stronger than a certain set value, in order to protect the upper bodies of front seat passengers in the event of a collision. The seat belt pre-tensioner is built into the front seat belt retractor. Only authorized service personnel should do work on or around the SRS components and seat belt with pre-tensioner. Those service personnel should read this manual carefully before starting any such work. Extreme care must be used when servicing the SRS to avoid injury to the service personnel (by inadvertent deployment of the air bags or inadvertent operation of the seat belt with pre-tensioner) or the driver (by rendering the SRS or the seat belt with pre-tensioner inoperative).

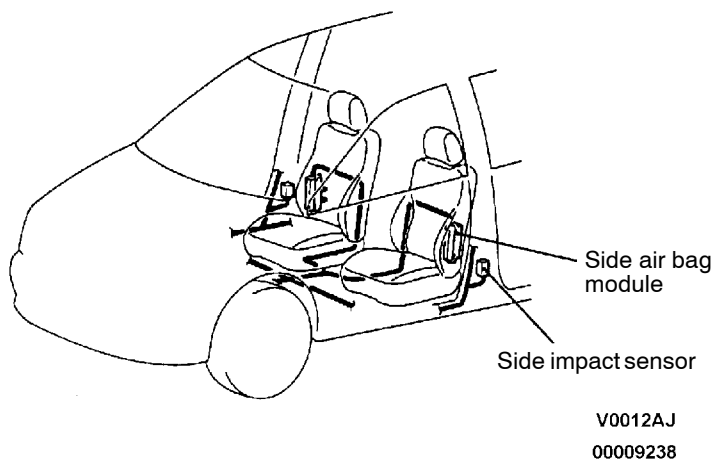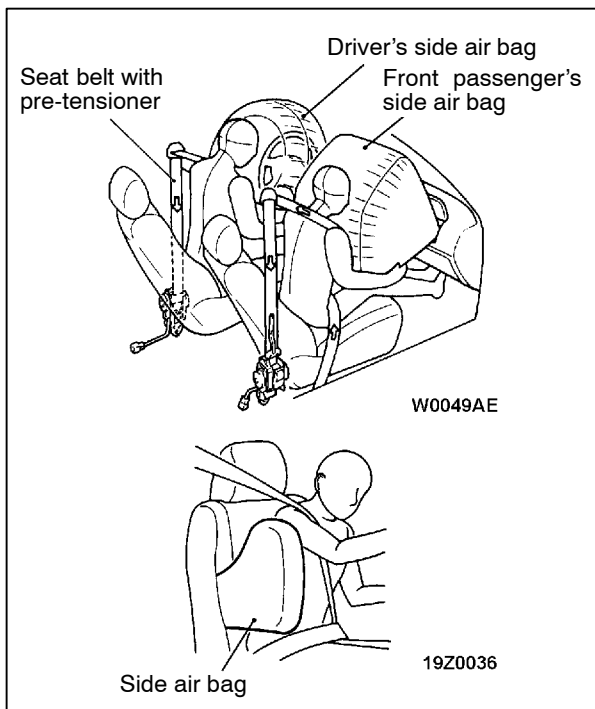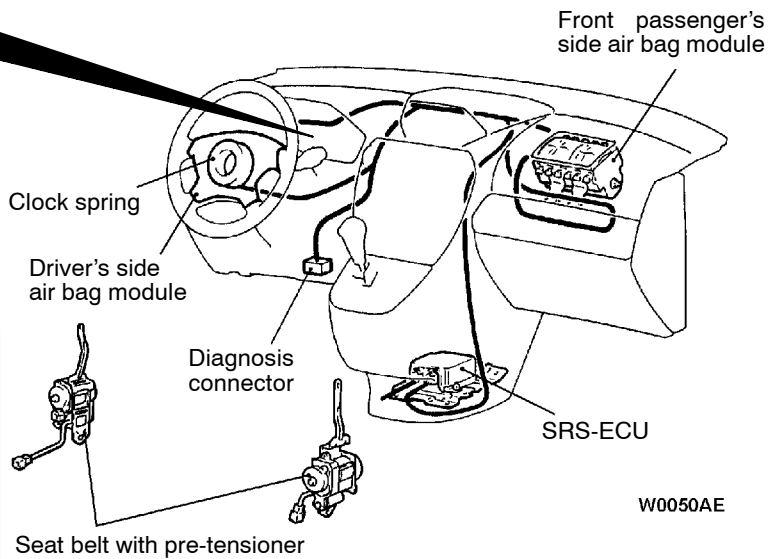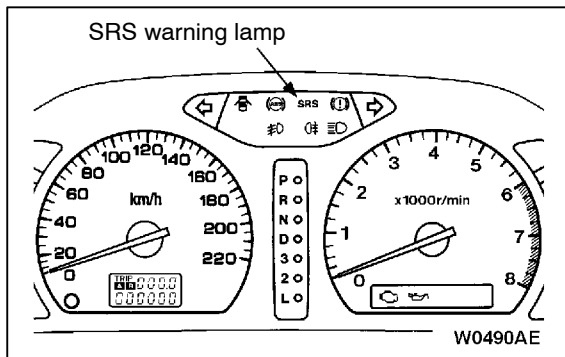

## SRS SERVICE PRECAUTIONS


52400030443

1. In order to avoid injury to yourself or others from accidental deployment of the air bag and accidental operation of the seat belt with pre-tensioner during servicing, read and carefully follow all the precautions and procedures described in this manual.
2. Do not use any electrical test equipment on or near SRS components, except those specified on P.52B-7.
3. **Never Attempt to Repair the Following Components:**
  - SRS air bag control unit (SRS-ECU)
  - Clock spring


- Front air bag module (Driver's side or front passenger's side)
- Side air bag module
- Side impact sensor
- Seat belt with pre-tensioner

### NOTE

If any of these components are diagnosed as faulty, they should only be replaced, in accordance with the **INDIVIDUAL COMPONENTS SERVICE** procedures in this manual, starting at page 52B-29.

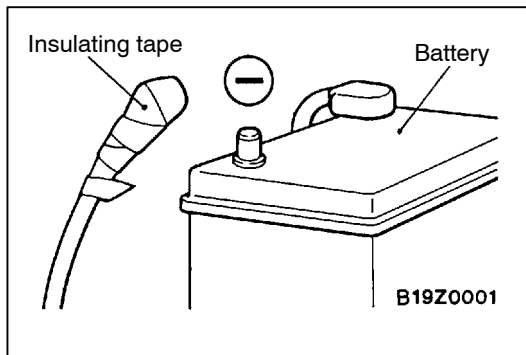

4. **After disconnecting the battery cable, wait 60 seconds or more before proceeding with the following work. The SRS system is designed to retain enough voltage to deploy the air bag for a short time even after the battery has been disconnected, so serious injury may result from unintended air bag deployment if work is done on the SRS system immediately after the battery cables are disconnected.**

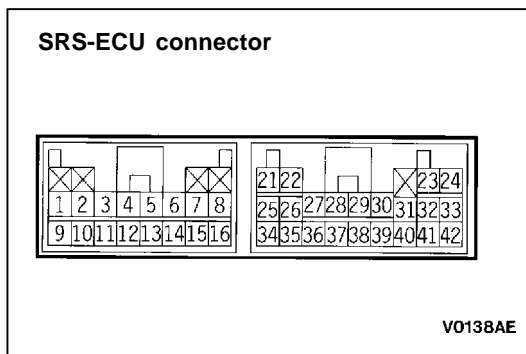


5. Do not attempt to repair the wiring harness connectors of the SRS. If any of the connectors are diagnosed as faulty, replace the wiring harness. If the wires are diagnosed as faulty, replace or repair the wiring harness according to the following table.


SRS-ECU Terminal No.	Destination of harness	Corrective action
3	Instrument panel wiring harness → Earth	Correct or replace each wiring harness.
4	Instrument panel wiring harness → Combination meter (SRS warning lamp)	
5, 6	Instrument panel wiring harness → Air bag module (Front passenger's side)	
7, 8	Instrument panel wiring harness → Clock spring	Correct or replace the dash wiring harness. Replace the clock spring.
9	Instrument panel wiring harness → Junction block (fuse No.8)	Correct or replace each wiring harness.
12	Instrument panel wiring harness → Junction block (fuse No.6)	
16	Instrument panel wiring harness → Diagnosis connector	
21, 22	Side air bag wiring harness → Side air bag module (L.H.)	
23, 24	Side air bag wiring harness → Side air bag module (R.H.)	
27, 28	Assist wiring harness → Seat belt with pre-tensioner (Front passenger's side)	
29, 30	Floor wiring harness → Seat belt with pre-tensioner (Driver's side)	
34, 36	Side air bag wiring harness → Floor wiring harness <L.H. drive vehicles>, Assist wiring harness <R.H. drive vehicles> → Side impact sensor (L.H.)	
40, 42	Side air bag wiring harness → Assist wiring harness <L.H. drive vehicles>, Floor wiring harness <R.H. drive vehicles> → Side impact sensor (R.H.)	

6. Inspection of the SRS-ECU harness connector should be carried out by the following procedure. Insert the special tool (narrow probe in the harness set) into connector from harness side (rear side), and connect the tester to this probe. If any to other than the special tool is used, it may cause damage to the harness and other components. Furthermore, measurement should not be carried out by touching the probe directly against the terminals from the front of the connector. The terminals are plated to increase their conductivity, so that if they are touched directly by the probe, the plating may break, which will cause drops in reliability.

SRS-ECU harness connector

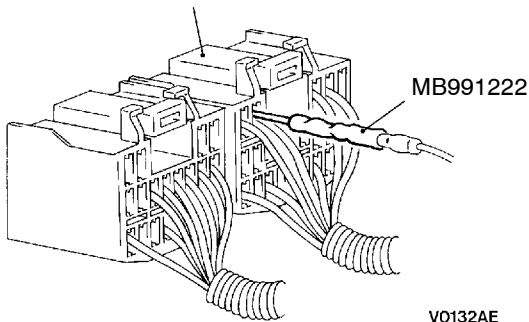

SRS-ECU harness connector (seen from the rear)

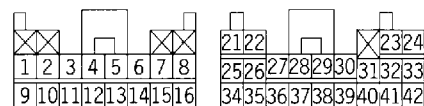

V0139AE

00007167







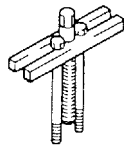
7. SRS components and seat belt with pre-tensioner should not be subjected to heat, so remove the SRS-ECU, air bag module (driver's side and front passenger's side), clock spring, side impact sensors, front seat assemblies (side air bag module), and seat belts with pre-tensioner before drying or baking the vehicle after painting.
  - SRS-ECU, air bag module, clock spring, side impact sensor: 93°C or more
  - Seat belt with pre-tensioner: 90°C or more
8. Whenever you finish servicing the SRS, check warning lamp operation to make sure that the system functions properly. (Refer to P.52B-8.)
9. Make certain that the ignition switch is OFF when the MUT-II is connected or disconnected.
10. If you have any questions about the SRS, please contact your local distributor.

**NOTE**




SERIOUS INJURY CAN RESULT FROM UNINTENDED AIR BAG DEPLOYMENT, SO USE ONLY THE PROCEDURES AND EQUIPMENT SPECIFIED IN THIS MANUAL.

**SPECIAL TOOLS**

52400070278

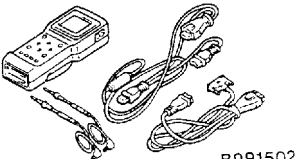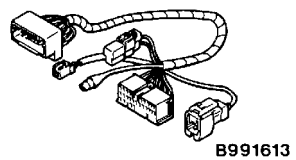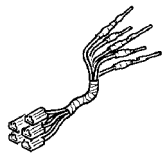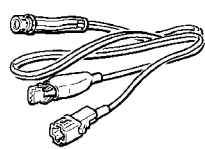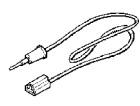
Tool	Number	Name	Use
 B991502	MB991502	MUT-II sub assembly	<ul style="list-style-type: none"> <li>● Reading diagnosis codes</li> <li>● Erasing diagnosis code</li> <li>● Reading trouble period</li> <li>● Reading erase times</li> </ul>
 B991613	MB991613	SRS check harness	Checking the SRS electrical circuitry
<p><b>A</b></p>  <p><b>B</b></p>  <p><b>C</b></p>  <p><b>D</b></p>  C991223	MB991223 A: MB991219 B: MB991220 C: MB991221 D: MB991222	Harness set A: Check harness B: LED harness C: LED harness adapter D: Probe	Checking the continuity and measuring the voltage at the SRS-ECU harness connector
 B990803	MB990803	Steering wheel puller	Steering wheel removal

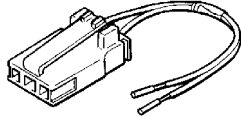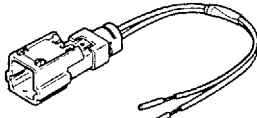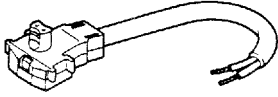

Tool	Number	Name	Use
 <p>R372530</p>	MR372530	SRS air bag adapter harness	Deployment of driver's side air bag module inside the vehicle
 <p>B686560</p>	MB686560	SRS air bag adapter harness	Deployment of front passenger's side air bag module, side air bag module and seat belt pre-tensioner inside or outside the vehicle
 <p>B628919</p>	MR203491 or MB628919	SRS air bag adapter harness	Deployment of driver's side air bag module outside the vehicle

**TEST EQUIPMENT**

52400080141

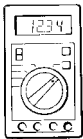Tool	Name	Use
 <p>13R0746</p>	Digital multi-meter	Checking the SRS electrical circuitry Use a multi-meter for which the maximum test current is 2 mA or less at the minimum range of resistance measurement

## TROUBLESHOOTING

52400310097

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 - How to Use Troubleshooting/Inspection Service Points.

### DIAGNOSIS FUNCTION

52400320083

#### DIAGNOSIS CODES CHECK

Connect the MUT-II to the diagnosis connector (16-pin) under the instrument under cover, then check diagnosis codes.


(Refer to GROUP 00 - How to Use Troubleshooting/Inspection Service Points.)

#### ERASING DIAGNOSIS CODE

Connect the MUT-II to the diagnosis connector and erase the diagnosis code.

#### Caution

Turn off the ignition switch before connecting or disconnecting the MUT-II.

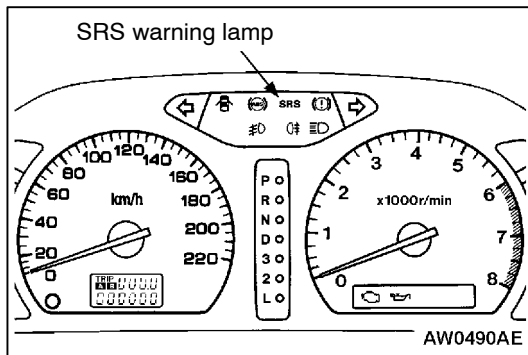

### SRS WARNING LAMP INSPECTION

52400430113

1. Check to be sure that the SRS warning lamp illuminates when the ignition switch is in the ON position.
2. Check to be sure that it illuminates for approximately 7 seconds and then switches off.
3. If the above is not the cause, inspect the diagnosis codes.

### INSPECTION CHART FOR DIAGNOSIS CODES

52400330420

Inspect according to the inspection chart that is appropriate for the malfunction code.

Code No.	Diagnosis item	Reference page
14	Analog G-sensor system in the SRS-ECU	52B-10
15,16	Front impact safing G-sensor system inside SRS-ECU	52B-10
17	Side impact safing G-sensor system inside SRS-ECU	52B-10
21, 22, 61, 62	Driver's side air bag module (squib) system	52B-11
24, 25, 64, 65	Front passenger's side air bag module (squib) system	52B-12
31, 32	SRS-ECU capacitor system	52B-10
34*	SRS-ECU capacitor system	52B-12
35	SRS-ECU (deployed air bag) system	52B-13
41*	Power circuit system (fuse No.6 circuit)	52B-13
42*	Power circuit system (fuse No.8 circuit)	52B-13

Code No.	Diagnosis item	Reference page
43	SRS warning lamp drive circuit system	Lamp does not illuminate.*
		Lamp does not switch off.
44*	SRS warning lamp drive circuit system	52B-14
45	Internal circuit system of non-volatile memory (EEPROM) inside SRS-ECU	52B-10
52	Driver's side air bag module (squib ignition drive circuit) system	52B-10
55	Front passenger's side air bag module (squib ignition drive circuit) system	52B-10
57	Driver's side pre-tensioner (squib ignition drive circuit) system	52B-10
59	Front passenger's side pre-tensioner (squib ignition drive circuit) system	52B-10
66, 67	Driver's side pre-tensioner (squib) system	52B-15
68, 69	Front passenger's side pre-tensioner (squib) system	52B-16
71, 72, 75, 76	Side air bag module (L.H.) (squib) system	52B-17
74	Side air bag module (L.H.) (squib ignition drive circuit) system	52B-10
81, 82, 85, 86	Side air bag module (R.H.) (squib) system	52B-18
84	Side air bag module (R.H.) (squib ignition drive circuit) system	52B-10
91*	Side impact sensor (L.H.) power supply circuit system	52B-19
92	Side impact sensor (L.H.) system	52B-19
93	Side impact sensor (L.H.) communication system	52B-19
94*	Side impact sensor (R.H.) power supply circuit system	52B-20
95	Side impact sensor (R.H.) system	52B-19
96	Side impact sensor (R.H.) communication system	52B-20

## NOTE

- (1) \*: If the vehicle condition returns to normal, the diagnosis code will be automatically erased, and the SRS warning lamp will return to normal.
- (2) If the vehicle has a discharged battery it will store the diagnosis codes 41 or 42. When these diagnosis codes are displayed, check the battery.

## INSPECTION PROCEDURE CLASSIFIED BY DIAGNOSIS CODE

<b>Code No.14, 15, 16, 17, 31, 32, 45, 52, 55, 57, 59, 74, 84 system inside SRS-ECU</b>	<b>Probable cause</b>
These diagnostic trouble codes are output when a fault is detected in the SRS-ECU. The defective parts and trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>• Malfunction of SRS-ECU</li> </ul>

Code No.	Defective parts	Trouble causes
14	Analog G-sensor	<ul style="list-style-type: none"> <li>• Analog G-sensor is not operating</li> <li>• Analog G-sensor characteristics are abnormal</li> <li>• Analog G-sensor output is abnormal</li> </ul>
15	Front impact safing G-sensor	• Short circuit in the safing G-sensor
16		• Open circuit in the safing G-sensor
17	Side impact safing G-sensor	<ul style="list-style-type: none"> <li>• Safing G sensor is not operating</li> <li>• Safing G sensor characteristics are abnormal</li> <li>• Safing G sensor output is abnormal</li> </ul>
31	Capacitor	• Voltage at the capacitor terminal is higher than the specified value for five seconds or more
32		• Voltage at the capacitor terminal is lower than the specified value for five seconds or more (this is not detected if diagnosis code No.41 or 42 indicating battery voltage drop has been output.)
45	Non-volatile memory (EEPROM)	• Non-volatile memory (EEPROM) is abnormal
52	Driver's side air bag module (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit
55	Front passenger's side air bag module (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit
57	Driver's side pre-tensioner (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit
59	Front passenger's side pre-tensioner (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit
74	Side air bag module (L.H.) (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit
84	Side air bag module (R.H.) (squib ignition drive circuit)	• Open circuit in the squib ignition drive circuit

Replace the SRS-ECU.


Code No.21, 22, 61 or 62 Driver's side air bag module (squib) system	Probable cause
These diagnosis codes are output if there is abnormal resistance between the input terminals of the driver's side air bag module (squib). The trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of clock spring</li> <li>● Partial disconnection due to incorrect clock spring neutral position</li> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of driver's side air bag module (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
21	<ul style="list-style-type: none"> <li>● Short in driver's side air bag module (squib) or harness short</li> <li>● Short in clock spring</li> </ul>
22	<ul style="list-style-type: none"> <li>● Open circuit in driver's side air bag module (squib) or open harness</li> <li>● Open circuit in clock spring</li> <li>● Disconnected driver's side air bag module (squib) connector</li> <li>● Partial disconnection due to incorrect clock spring neutral position</li> <li>● Malfunction of connector contact</li> </ul>
61	<ul style="list-style-type: none"> <li>● Short in driver's side air bag module (squib) harness leading to the power supply</li> </ul>
62	<ul style="list-style-type: none"> <li>● Short in driver's side air bag module (squib) harness leading to the earth</li> </ul>

Check the clock spring. (Refer to P.52B-40.)

NG → **Replace**

↓ NO

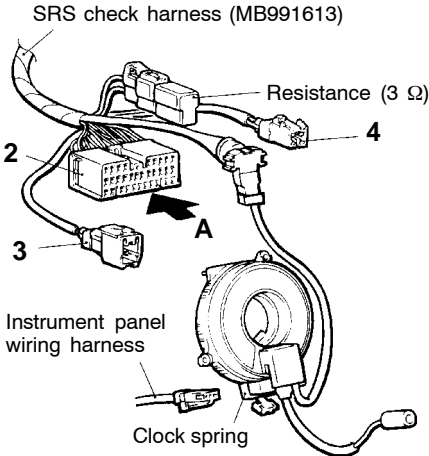

**View A**

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

AV0379AE

**MUT-II Self-diag code**

- Connect clock spring connector B-85 and harness side connector.
- Connect SRS check harness connectors Nos.3 and 4.
- Short terminals Nos. 22 and 24, 23 and 25 of SRS check harness connector No.2.
- Connect the battery (-) terminal.
- Erase diagnosis code memory.

Are code Nos.21, 22, 61 or 62 output?

↓ YES

**Check the following connectors: B-85, B-18**

OK ↓      NG ↓

Check trouble symptoms.

NG ↓      **Repair**

Check the harness wire between the clock spring and SRS-ECU.

OK ↓      NG ↓

Replace the SRS-ECU.      **Repair**

↓ NO


**Check the following connector: B-84**

OK ↓      NG ↓


Replace the driver's side air bag module.      **Repair**

Code No.24, 25, 64 or 65 Front passenger's side air bag module (squib) system	Probable cause
These diagnosis codes are output if there is abnormal resistance between the input terminals of the front passenger's side air bag module (squib). The trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of front passenger's side air bag module (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
24	<ul style="list-style-type: none"> <li>● Short in front passenger's side air bag module (squib) or harness short</li> </ul>
25	<ul style="list-style-type: none"> <li>● Open circuit in front passenger's side air bag module (squib) or open harness</li> <li>● Malfunction of connector contact</li> </ul>
64	<ul style="list-style-type: none"> <li>● Short in front passenger's side air bag module (squib) harness leading to the power supply</li> </ul>
65	<ul style="list-style-type: none"> <li>● Short in front passenger's side air bag module (squib) harness leading to the earth</li> </ul>

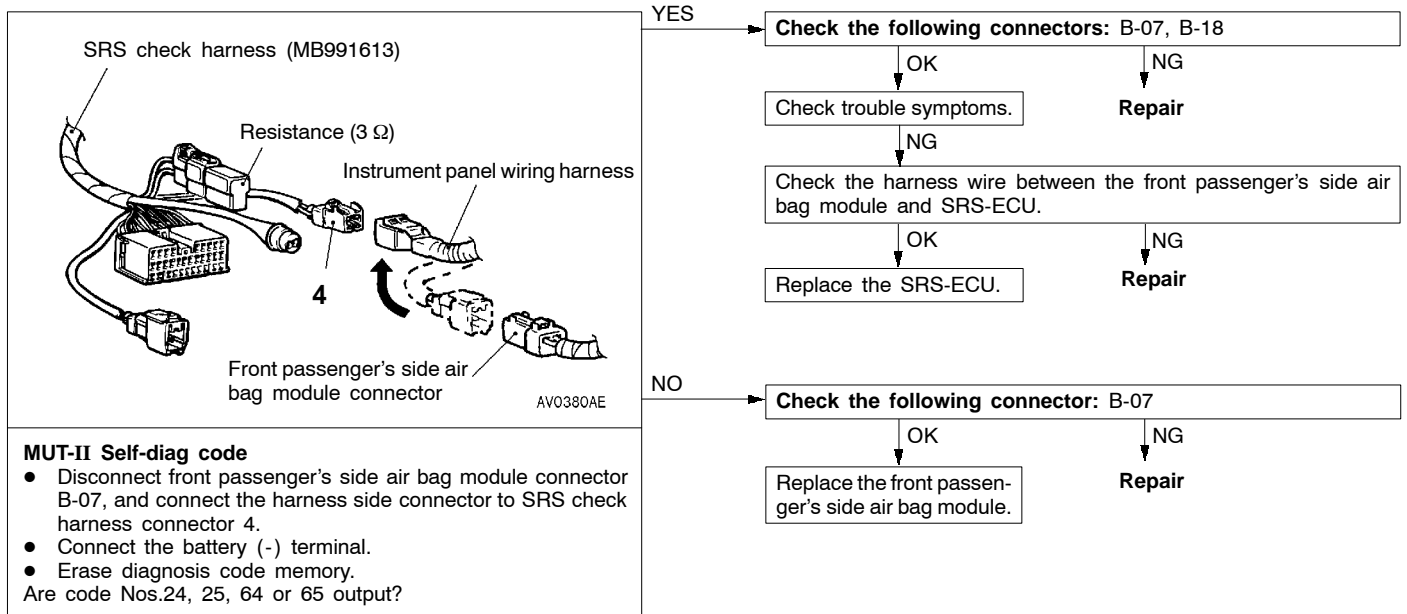


Code No.34 Connector lock system	Probable cause
This diagnosis code is output if a poor connection of the SRS-ECU is detected. However, if the vehicle condition returns to normal, diagnosis code No.34 will be automatically erased, and the SRS warning lamp will switch off.	<ul style="list-style-type: none"> <li>● Malfunction of connectors</li> <li>● Malfunction of SRS-ECU</li> </ul>

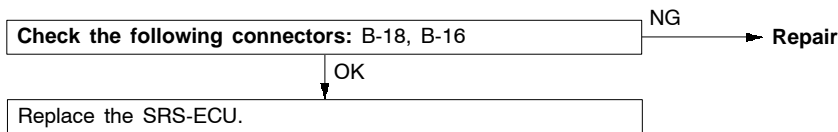


Code No.35 SRS-ECU (deployed air bag) system	Probable cause
This diagnosis code is output after the air bag deploys. If this code is output before the air bag has deployed, the cause is probably a malfunction inside the SRS-ECU.	<ul style="list-style-type: none"> <li>Malfunction of SRS-ECU</li> </ul>

Replace the SRS-ECU.


Code No.41 Power circuit system (fuse No.6 circuit)	Probable cause
Code No.42 Power circuit system (fuse No.8 circuit)	
<p>Code No.41 is output if the voltage between the IG<sub>1</sub> terminal (SRS-ECU, terminal 21) and the earth is lower than the specified value for a continuous period of 5 seconds or more.</p> <p>Code No.42 is output if the voltage between the IG<sub>1</sub> terminal (SRS-ECU, terminal 9) and the earth is lower than the specified value for a continuous period of 5 seconds or more.</p> <p>Automatically erased, and the SRS warning lamp will switch off.</p> <p>If the vehicle has a discharged battery it will store the fault codes 41 and 42. When these diagnosis codes are displayed, check the battery.</p>	<ul style="list-style-type: none"> <li>Malfunction of wiring harnesses or connectors</li> <li>Malfunction of SRS-ECU</li> </ul>

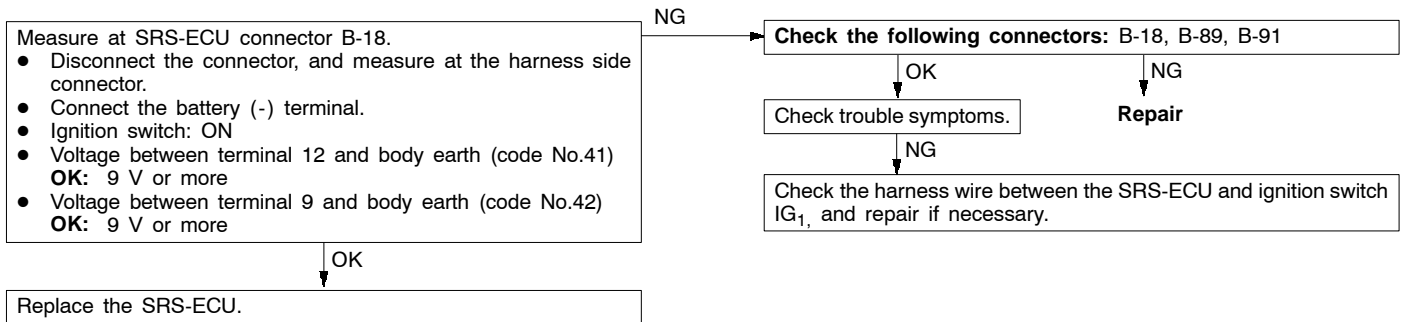


Code No.43 SRS warning lamp drive circuit system (Lamp does not illuminate.)	Probable cause
<p>This diagnosis code is output when an open circuit occurs for a continuous period of 5 seconds while the SRS-ECU in monitoring the SRS warning lamp and the lamp is OFF (transistor OFF). However, if this code is output due to an open circuit, if the vehicle condition returns to normal, this diagnosis code No.43 will be automatically erased, and the SRS warning lamp will return to normal.</p>	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Blown bulb</li> <li>● Malfunction of SRS-ECU</li> <li>● Malfunction of combination meter</li> </ul>

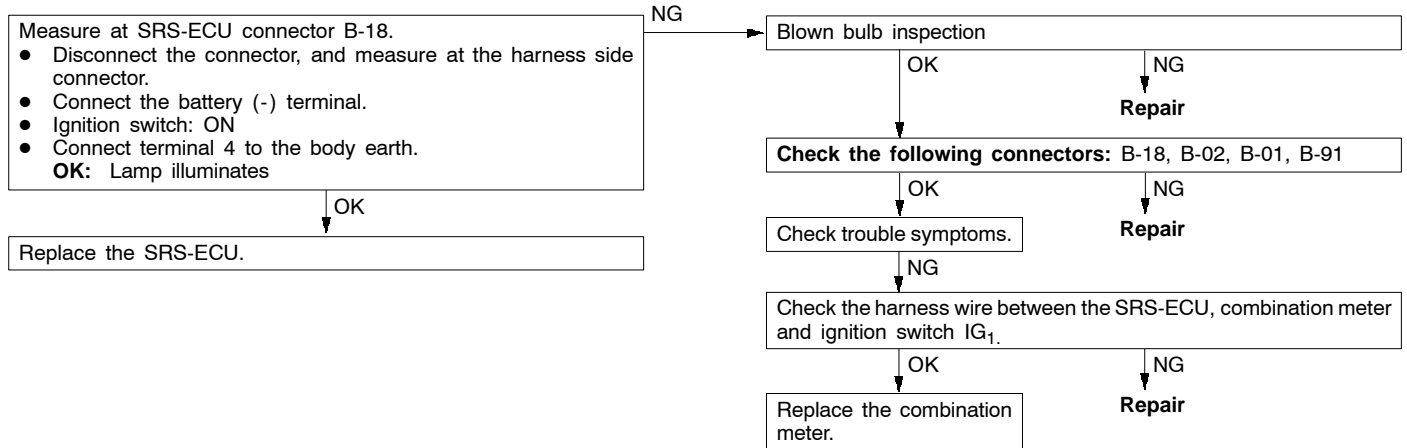

Code No.43 SRS warning lamp drive circuit system (Lamp does not switch off.)	Probable cause
<p>This diagnosis code is output when a short to earth occurs in the harness between the lamp and the SRS-ECU while SRS-ECU is monitoring the SRS warning lamp and the lamp is ON.</p>	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of SRS-ECU</li> <li>● Malfunction of combination meter</li> </ul>

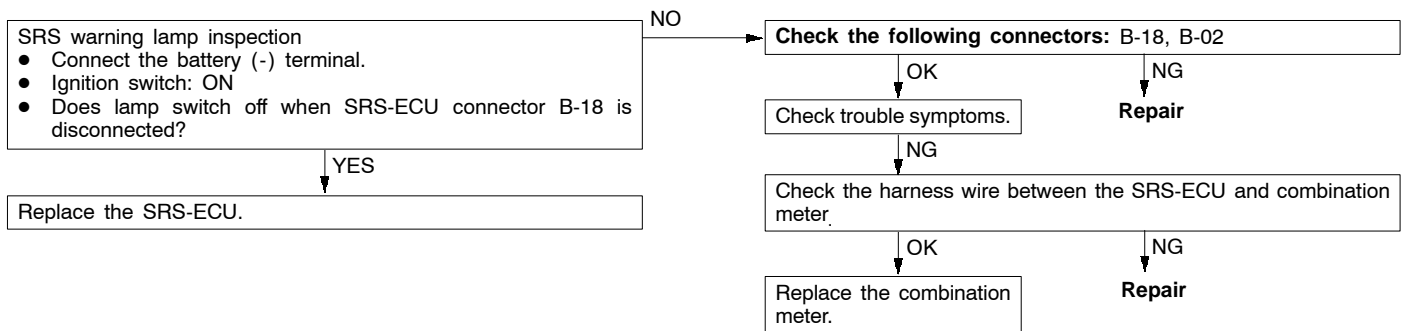


Code No.44 SRS warning lamp drive circuit system	Probable cause
<p>This diagnosis code is output when a short occurs in the lamp drive circuit or a malfunction of the output transistor inside the SRS-ECU is detected while the SRS-ECU is monitoring the SRS warning lamp drive circuit. However, if the vehicle condition returns to normal, diagnosis code No.44 will be automatically erased, and the SRS warning lamp will switch off.</p>	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of SRS-ECU</li> </ul>

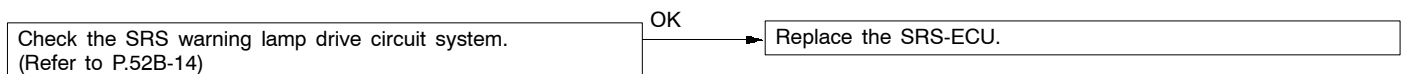



Code No.66 or 67 Driver's side pre-tensioner (squib) system	Probable cause
These diagnosis codes are output if there is abnormal resistance between the input terminals of the driver's side pre-tensioner (squib). The trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of driver's side pre-tensioner (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
66	<ul style="list-style-type: none"> <li>● Short in driver's side pre-tensioner (squib) harness leading to the power supply</li> </ul>
67	<ul style="list-style-type: none"> <li>● Short in driver's side pre-tensioner (squib) harness leading to the earth</li> </ul>

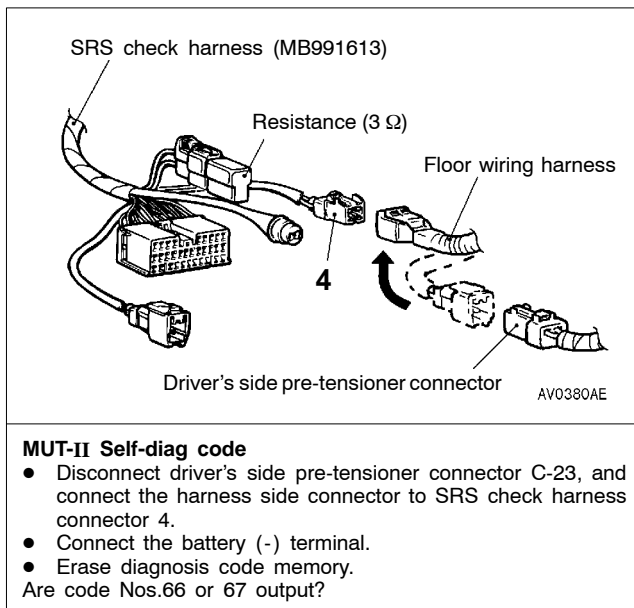


```

    graph TD
        Start[YES] --> Step1[Check the following connectors: C-23, B-16]
        Step1 -- OK --> Step2[Check trouble symptoms.]
        Step1 -- NG --> Step1R[Repair]
        Step2 -- NG --> Step3[Check the harness wire between the driver's side pre-tensioner and SRS-ECU.]
        Step2 -- OK --> Step3
        Step3 -- OK --> Step3L[Replace the SRS-ECU.]
        Step3 -- NG --> Step3R[Repair]
        
        Start -- NO --> Step4[Check the following connector: C-23]
        Step4 -- OK --> Step4L[Replace the driver's side pre-tensioner.]
        Step4 -- NG --> Step4R[Repair]
    
```

Code No.68 or 69 Front passenger's side pre-tensioner (squib) system	Probable cause
These diagnosis codes are output if there is abnormal resistance between the input terminals of the front passenger's side pre-tensioner (squib). The trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of front passenger's side pre-tensioner (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
68	<ul style="list-style-type: none"> <li>● Short in front passenger's side pre-tensioner (squib) harness leading to the power supply</li> </ul>
69	<ul style="list-style-type: none"> <li>● Short in front passenger's side pre-tensioner (squib) harness leading to the earth</li> </ul>

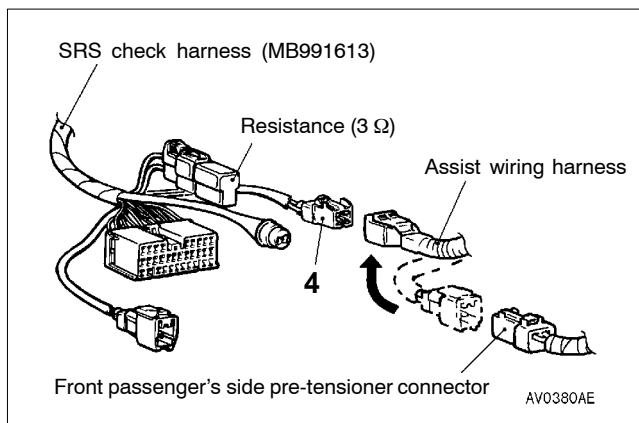

**MUT-II Self-diag code**

- Disconnect front passenger's side pre-tensioner connector C-35, and connect the harness side connector to SRS check harness connector 4.
- Connect the battery (-) terminal.
- Erase diagnosis code memory.


Are code Nos.68 or 69 output?

```

    graph TD
        Start[YES] --> Step1[Check the following connectors: C-35, B-16]
        Step1 -- OK --> Step2[Check trouble symptoms.]
        Step1 -- NG --> Repair1[Repair]
        Step2 -- NG --> Step3[Check the harness wire between the front passenger's side pre-tensioner and SRS-ECU.]
        Step2 -- OK --> Repair2[Repair]
        Step3 -- OK --> Step4[Replace the SRS-ECU.]
        Step3 -- NG --> Repair3[Repair]
        
        Start -- NO --> Step5[Check the following connector: C-35]
        Step5 -- OK --> Step6[Replace the front passenger's side pre-tensioner.]
        Step5 -- NG --> Repair4[Repair]
    
```

Code No.71, 72, 75 or 76 Side air bag module (L.H.) (squib) system	Probable cause
These diagnosis codes are output if the resistance value between the side air bag module (L.H.) (squib) input terminals of the SRS-ECU is abnormal. The problems which cause these codes to be output are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side air bag module (L.H.) (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
71	<ul style="list-style-type: none"> <li>● Short in side air bag module (L.H.) (squib) or harness short</li> </ul>
72	<ul style="list-style-type: none"> <li>● Open circuit in side air bag module (L.H.) (squib) or open harness</li> <li>● Malfunction of connector contact</li> </ul>
75	<ul style="list-style-type: none"> <li>● Short in side air bag module (L.H.) (squib) harness leading to the power supply</li> </ul>
76	<ul style="list-style-type: none"> <li>● Short in side air bag module (L.H.) (squib) harness leading to the earth</li> </ul>

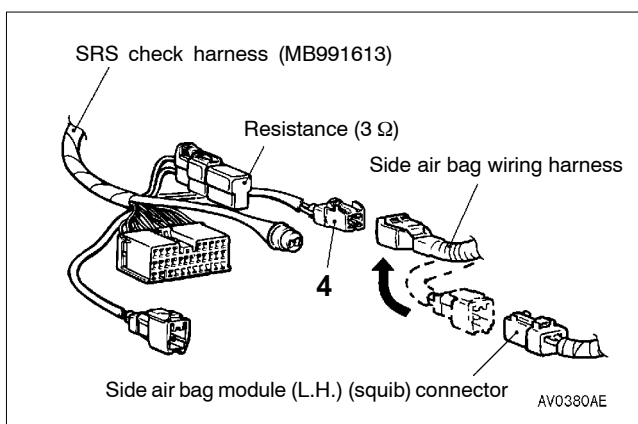


- MUT-II Self-diag code**
- Disconnect side air bag module (L.H.) (squib) connector C-26, and connect the harness side connector to SRS check harness connector 4.
  - Connect the battery (-) terminal.
  - Erase diagnosis code memory.
- Are code Nos.71, 72, 75 or 76 output?

```

    graph TD
        Start[YES] --> Step1[Check the following connectors: C-26, B-16]
        Step1 -- OK --> Step2[Check trouble symptoms.]
        Step1 -- NG --> Step1R[Repair]
        Step2 -- NG --> Step3[Check the harness wire between the side air bag module (L.H.) (squib) and SRS-ECU.]
        Step2 -- OK --> Step3
        Step3 -- OK --> Step4[Replace the SRS-ECU.]
        Step3 -- NG --> Step3R[Repair]
        
        Start -- NO --> Step5[Check the following connector: C-26]
        Step5 -- OK --> Step6[Replace the seat back assembly of the front seat (L.H.).]
        Step5 -- NG --> Step5R[Repair]
    
```

Code No.81, 82, 85 or 86 Side air bag module (R.H.) (squib) system	Probable cause
These diagnosis codes are output if the resistance value between the side air bag module (R.H.) (squib) input terminals of the SRS-ECU is abnormal. The problems which cause these codes to be output are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side air bag module (R.H.) (squib)</li> <li>● Malfunction of SRS-ECU</li> </ul>

Code No.	Trouble causes
81	<ul style="list-style-type: none"> <li>● Short in side air bag module (R.H.) (squib) or harness short</li> </ul>
82	<ul style="list-style-type: none"> <li>● Open circuit in side air bag module (R.H.) (squib) or open harness</li> <li>● Malfunction of connector contact</li> </ul>
85	<ul style="list-style-type: none"> <li>● Short in side air bag module (R.H.) (squib) harness leading to the power supply</li> </ul>
86	<ul style="list-style-type: none"> <li>● Short in side air bag module (R.H.) (squib) harness leading to the earth</li> </ul>

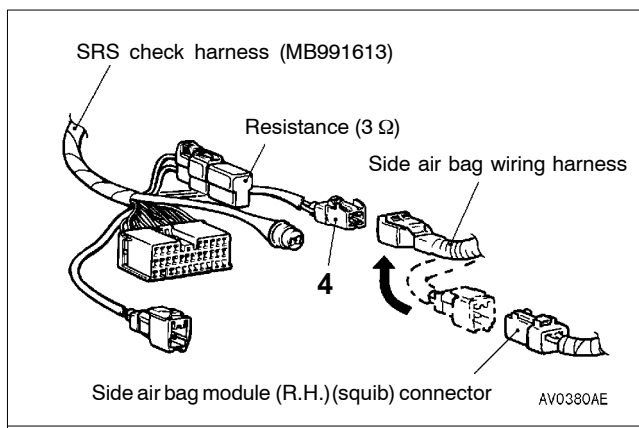

**MUT-II Self-diag code**


- Disconnect side air bag module (R.H.) (squib) connector C-31, and connect the harness side connector to SRS check harness connector 4.
- Connect the battery (-) terminal.
- Erase diagnosis code memory.

Are code Nos.81, 82, 85 or 86 output?

```

    graph TD
        Start[YES] --> Step1[Check the following connectors: C-31, B-16]
        Step1 -- OK --> Step2[Check trouble symptoms.]
        Step1 -- NG --> Step1R[Repair]
        Step2 -- NG --> Step3[Check the harness wire between the side air bag module (R.H.) (squib) and SRS-ECU.]
        Step2 -- OK --> Step3
        Step3 -- OK --> Step4[Replace the SRS-ECU.]
        Step3 -- NG --> Step3R[Repair]
        
        Start -- NO --> Step5[Check the following connector: C-31]
        Step5 -- OK --> Step6[Replace the seat back assembly of the front seat (R.H.).]
        Step5 -- NG --> Step5R[Repair]
    
```

<b>Code No.91 Side impact sensor (L.H.) power supply circuit system</b>	<b>Probable cause</b>
This diagnosis code is output if the power supply voltage of the side impact sensor (L.H.) drops below the rated value for a continuous period of 5 seconds or more. However, code No.91 will be automatically cleared and the SRS warning lamp will switch off if the condition returns normal.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side impact sensor (L.H.)</li> <li>● Malfunction of SRS-ECU</li> </ul>

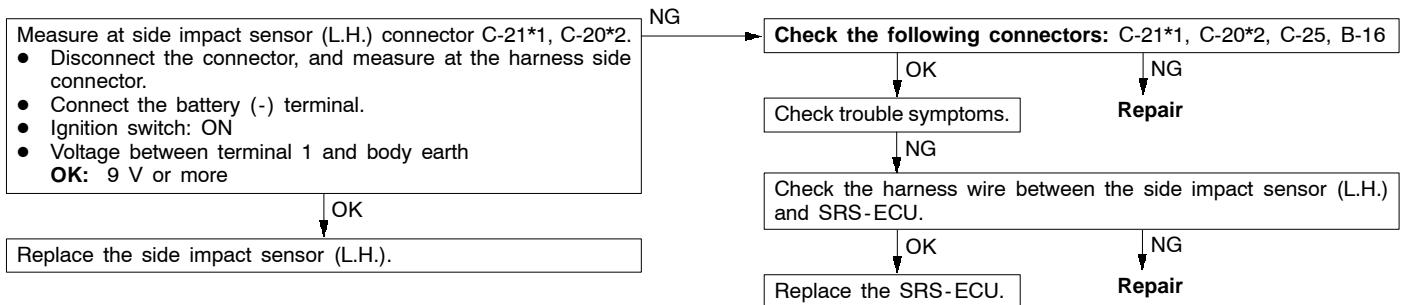


NOTE  
 \*1: L.H. drive vehicles  
 \*2: R.H. drive vehicles

<b>Code No.92, 95 Side impact sensor system</b>	<b>Probable cause</b>
Code No.92 is output when a fault is detected in the side impact sensor (L.H.). Code No.95 is output when a fault is detected in the side impact sensor (R.H.). The defective parts and trouble causes for each diagnosis code No. are as follows.	<ul style="list-style-type: none"> <li>● Malfunction of side impact sensor (L.H.) (Code No.92)</li> <li>● Malfunction of side impact sensor (R.H.) (Code No.95)</li> </ul>

Code No.	Defective parts	Trouble causes
92	Analog G-sensor	<ul style="list-style-type: none"> <li>● Analog G-sensor is not operating</li> <li>● Analog G-sensor characteristics are abnormal</li> <li>● Analog G-sensor output is abnormal</li> </ul>
95		


Replace the side impact sensor (L.H.) (code No.92).  
 Replace the side impact sensor (R.H.) (code No.95).

<b>Code No.93 Side impact sensor (L.H.) communication system</b>	<b>Probable cause</b>
This diagnosis code is output if communication between the side impact sensor (L.H.) and the SRS-ECU is abnormal	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side impact sensor (L.H.)</li> <li>● Malfunction of SRS-ECU</li> </ul>

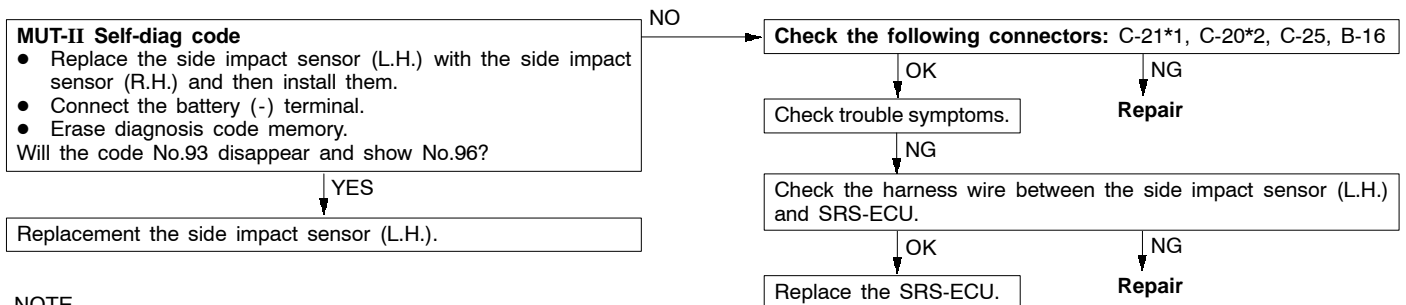

NOTE  
 \*1: L.H. drive vehicles  
 \*2: R.H. drive vehicles


Code No.94 Side impact sensor (R.H.) power supply circuit system	Probable cause
This diagnosis code is output if the power supply voltage of the side impact sensor (R.H.) drops below the rated value for a continuous period of 5 seconds or more. However, code No.94 will be automatically cleared and the SRS warning lamp will switch off if the condition returns normal.	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side impact sensor (R.H.)</li> <li>● Malfunction of SRS-ECU</li> </ul>

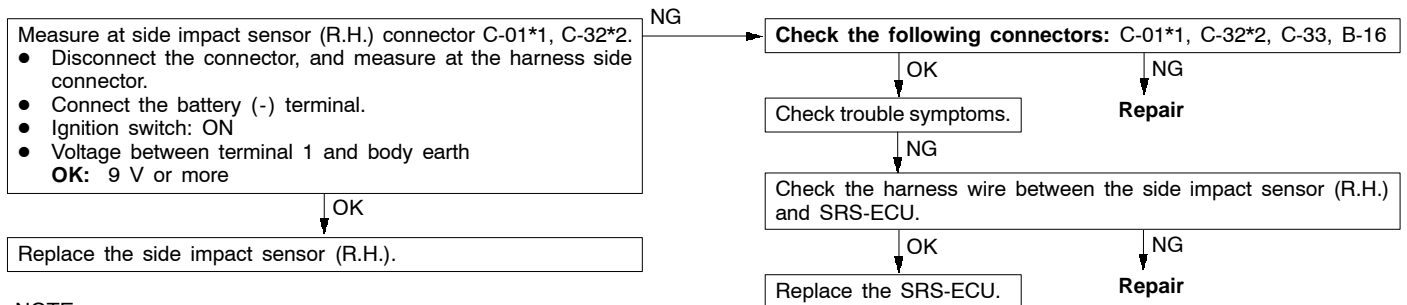

NOTE

- \*1: L.H. drive vehicles
- \*2: R.H. drive vehicles

Code No.96 Side impact sensor (R.H.) communication system	Probable cause
This diagnosis code is output if communication between the side impact sensor (R.H.) and the SRS-ECU is abnormal	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of side impact sensor (R.H.)</li> <li>● Malfunction of SRS-ECU</li> </ul>

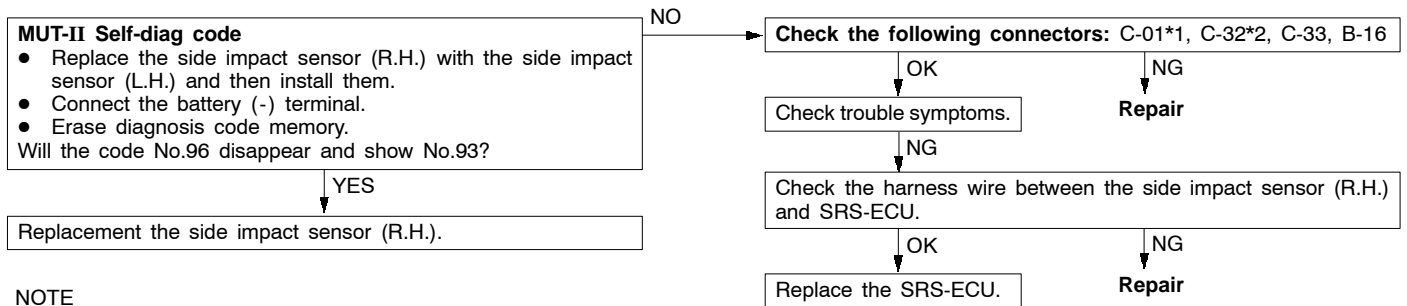

NOTE

- \*1: L.H. drive vehicles
- \*2: R.H. drive vehicles

## INSPECTION CHART FOR TROUBLE SYMPTOMS

52400340447

Get an understanding of the trouble symptoms and check according to the inspection procedure chart.

Trouble symptom	Inspection procedure No.	Reference page	
Communication with MUT-II is not possible.	Communication with all systems is not possible.	1	52B-21
	Communication is not possible with SRS only.	2	52B-21
When the ignition key is turned to "ON" (engine stopped), the SRS warning lamp does not illuminate.	Refer to diagnosis code No.43.	52B-14	
After the ignition switch is turned to ON, the SRS warning lamp is still on after approximately 7 seconds have passed.	Refer to diagnosis code No.43, 44.	52B-14	

## INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS


## Inspection Procedure 1

Communication with MUT-II is not possible. (Communication with all systems is not possible.)	Probable cause
The cause is probably a power supply system (including earth circuit) of the diagnosis line.	<ul style="list-style-type: none"> <li>● Malfunction of connectors</li> <li>● Malfunction of wiring harness</li> </ul>

Refer to GROUP 13A - Troubleshooting.

## Inspection Procedure 2


Communication with MUT-II is not possible. (Communication is not possible with SRS only.)	Probable cause
If communication is not possible with the SRS only, the cause is probably an open circuit in the diagnosis output circuit of the SRS or in the power circuit (including earth circuit).	<ul style="list-style-type: none"> <li>● Malfunction of wiring harnesses or connectors</li> <li>● Malfunction of SRS-ECU</li> </ul>

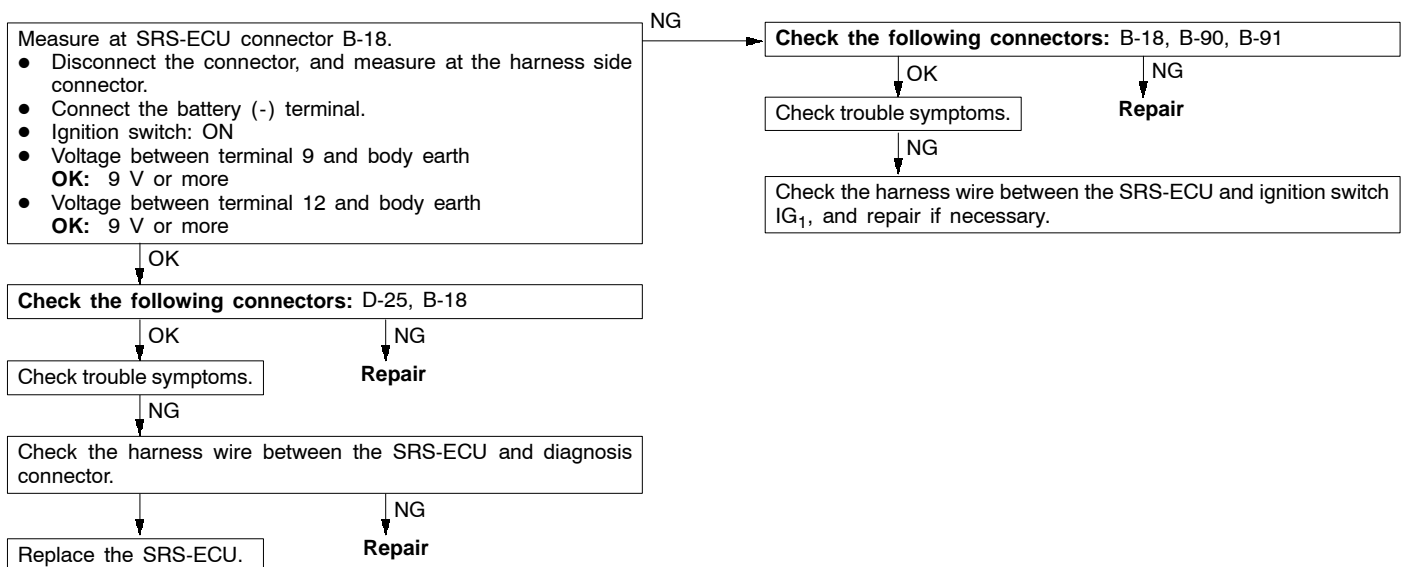

## SRS MAINTENANCE


52400390350

The SRS must be inspected by an authorized dealer 10 years after the date of vehicle registration.

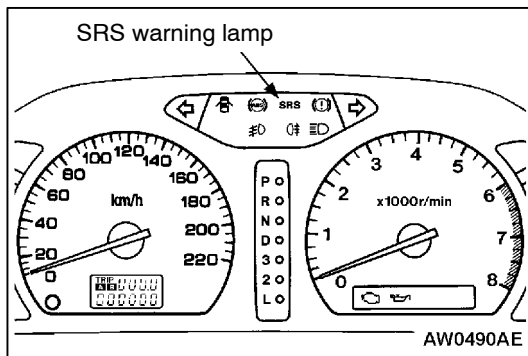

### SRS WARNING LAMP CHECK

Turn the ignition switch to the "ON" position. Does the SRS warning lamp illuminate for about 7 seconds, turn off and then remain extinguished for at least 5 seconds? If yes, SRS system is functioning properly. If no, consult page 52B-8.

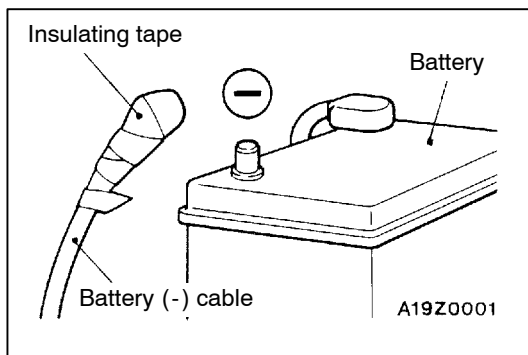


### SRS COMPONENT VISUAL CHECK

Turn the ignition switch to the "LOCK" position, disconnect the negative battery cable and tape the terminal.

#### Caution

**Wait at least 60 seconds after disconnecting the battery cable before doing any further work. (Refer to P.52B-4.)**

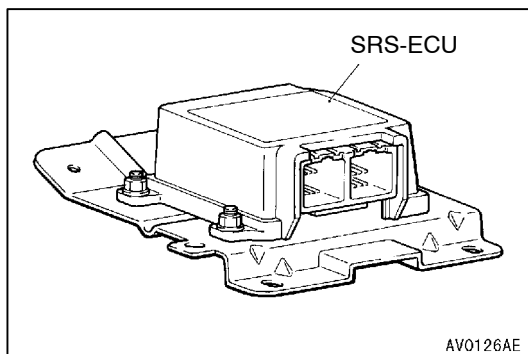

### SRS CONTROL UNIT (SRS-ECU)

1. Check SRS-ECU case and brackets for dents, cracks, deformation or rust.



#### Caution

**The SRS may not activate if the SRS-ECU is not installed properly, which could result in serious injury or death to the vehicle's driver or front passenger.**

2. Check connector for damage, and terminals for deformation or rust.

Replace SRS-ECU if it fails visual check. (Refer to P.52B-31.)



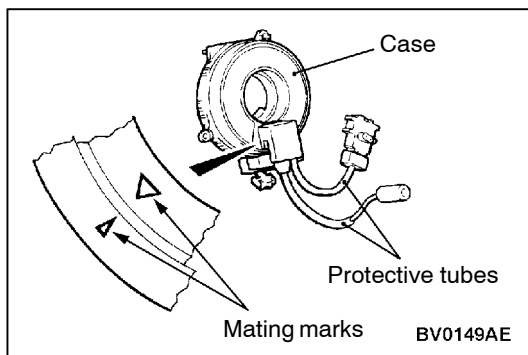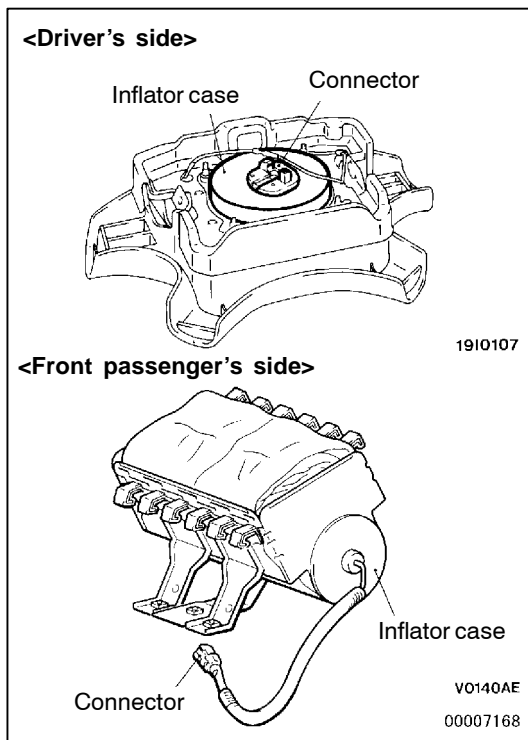

## AIR BAG MODULES, STEERING WHEEL AND CLOCK SPRING

1. Remove the air bag modules, steering wheel and clock spring. (Refer to P.52B-33.)

### Caution

The removed air bag modules should be stored in a clean, dry place with the cover face up.

2. Check cover for dents, cracks or deformation.
3. Check connector for damage, terminal deformities, and harness for binds.
4. Check air bag inflator case for dents, cracks or deformities.
5. Check harness and connectors for damage, and terminals for deformation.

6. Check clock spring connectors and protective tube for damage, and terminals for deformation.
7. Visually check the clock spring case for damage.
8. Align the mating marks of the clock spring and, after turning the vehicle's front wheels to straight-ahead position, install the clock spring to the column switch.

### Mating Mark Alignment

Turn the clock spring clockwise fully, and then turn back it approx. 3 turns counterclockwise to align the mating marks.

### Caution


If the clock spring's mating mark is not properly aligned, the steering wheel may not be completely rotational during a turn, or the flat cable within the clock spring may be severed, obstructing normal operation of the SRS and possibly leading to serious injury to the vehicle's driver or front passenger.

9. Install the steering column covers, steering wheel and the air bag module.
10. Check steering wheel for noise, binds or difficult operation.

11. Check steering wheel for excessive free play.  
REPLACE ANY VISUALLY INSPECTED PART IF IT FAILS THAT INSPECTION. (Refer to P.52B-33.)


**Caution**

The SRS may not activate if any of the above components is not installed properly, which could result in serious injury or death to the vehicle's driver or front passenger.

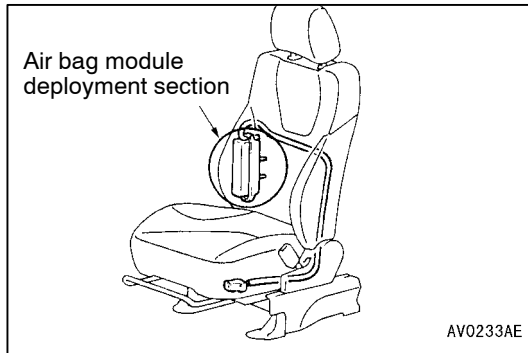

**FRONT SEAT BACK ASSEMBLY (SIDE AIR BAG MODULE)**

1. Check that there is no abnormality in the seat air bag module deployment section.
2. Check that there is no connector damage, bent terminals or clamping of the harness.

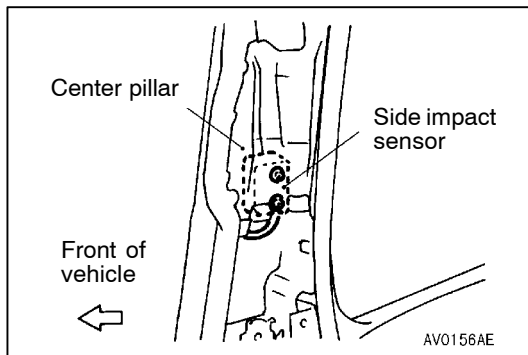

**SIDE IMPACT SENSORS**

1. Check that there is no bending or corrosion in the center pillar.
2. Check that there is no denting, breakage, bending or corrosion of the side impact sensor.
3. Check that there is no clamping of the harness, connector damage or bent terminals.


**NOTE**

The illustration at left shows the side impact sensor (R.H.). The position of the side impact sensor (L.H.) is symmetrical to this.

**Caution**

The SRS may not activate if the side impact sensors are not installed properly, which could result in serious injury or death to the vehicle's driver or front passenger.


## INSTRUMENT PANEL WIRING HARNESS/FLOOR WIRING HARNESS/ASSIST WIRING HARNESS/ASSIST WIRING HARNESS/SIDE AIR BAG WIRING HARNESS

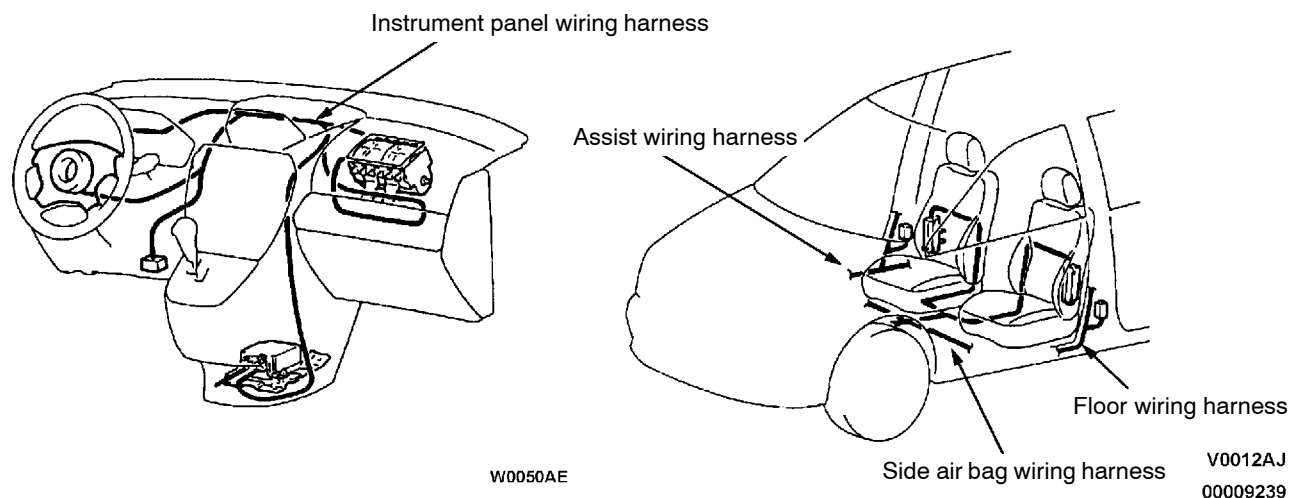

1. Check connector for poor connection.
2. Check harnesses for binds, connectors for damage, and terminals for deformation.  
REPLACE ANY CONNECTORS OR HARNESS THAT FAIL THE VISUAL INSPECTION. (Refer to P.52B-4.)

### Caution

The SRS may not activate if SRS harnesses or connectors are damaged or improperly connected, which could result in serious injury or death to the vehicle's driver or front passenger.

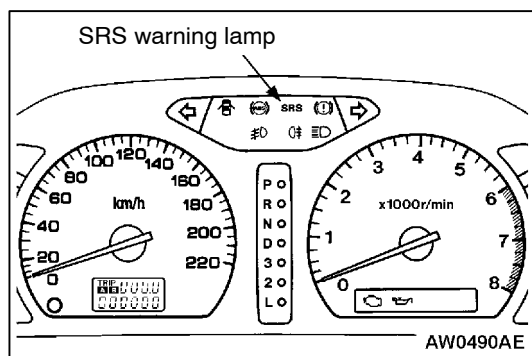

## POST-INSTALLATION INSPECTION

Reconnect the negative battery terminal. Turn the ignition switch to the "ON" position. Does the SRS warning lamp illuminate for about 7 seconds, turn off and then remain extinguished for at least 5 seconds? If yes, SRS system is functioning properly. If no, consult page 52B-8.

**POST-COLLISION DIAGNOSIS**

52400110505

To inspect and service the SRS after a collision (whether or not the air bags have deployed), perform the following steps.

**SRS-ECU MEMORY CHECK**

1. Connect the MUT-II to the diagnosis connector (16-pin).

**Caution**

**Make certain that the ignition switch is OFF when the MUT-II is connected or disconnected.**

2. Read (and write down) all displayed diagnosis codes. (Refer to P.52B-8.)

**NOTE**

If the battery power supply has been disconnected or disrupted by the collision, the MUT-II cannot communicate with the SRS-ECU. Inspect and, if necessary, repair the body wiring harness before proceeding further.

3. Read the data list (fault duration and how many times memories are erased) using the MUT-II.

**Data list**

No	Service Data Item	Applicability
91	How long a problem has lasted (How long it takes from the occurrence of the problem till the first air bag squib igniting signal or from the first air bag squib igniting signal till now.)	Maximum time to be stored: 9999 minutes (approximately 7 days)
92	Number indicating how often the memory is cleared	Maximum time to be stored: 250

4. Erase the diagnosis codes and after waiting 5 seconds or more read (and write down) all displayed diagnosis codes. (Refer to P.52B-8.)

**REPAIR PROCEDURE****WHEN AIR BAGS (DRIVER'S SIDE AND FRONT PASSENGER'S SIDE) DEPLOY OR SEAT BELT PRE-TENSIONER OPERATES IN A COLLISION.**


1. Replace the following parts with new ones.
  - SRS-ECU (Refer to P.52B-31.)
  - Driver's side air bag module (Refer to P.52B-33.)
  - Front passenger's side air bag module (Refer to P.52B-33.)
  - Seat belt with pre-tensioner (Refer to P.52B-43.)
2. Check the following parts and replace if there are any malfunctions.
  - Clock spring (Refer to P.52B-33.)
  - Steering wheel, steering column and intermediate joint
    - (1) Check wiring harness (built into steering wheel) and connectors for damage, and terminals for deformation.
    - (2) Install air bag module to check fit or alignment with steering wheel.
    - (3) Check steering wheel for noise, binds or difficult operation and excessive free play.
3. Check harnesses for binding, connectors for damage, poor connections, and terminals for deformation. (Refer to P.52B-25.)

**WHEN SIDE AIR BAG DEPLOYS OR SEAT BELT PRE-TENSIONER OPERATES IN A COLLISION.**

1. Replace the following parts with new ones.
  - SRS-ECU (Refer to P.52B-31.)
  - Side impact sensor (Refer to P.52B-41.)
  - Front seat back assembly (Refer to P.52B-33.)
  - Seat belt with pre-tensioner (Refer to P.52B-43.)
2. Check harnesses for binding, connectors for damage, poor connections, and terminals for deformation. (Refer to P.52B-25.)


**WHEN AIR BAG OR SEAT BELT PRE-TENSIONER DOES NOT DEPLOY IN LOW-SPEED COLLISION.**

Check the SRS components and seat belt with pre-tensioner. If the SRS components and seat belt with pre-tensioner are showing any visible damage such as dents, cracks, or deformation, replace them with new ones. Concerning parts removed for inspection, replacement with new parts and cautionary points for working, refer to appropriate INDIVIDUAL COMPONENT SERVICE, P. 52B-29.

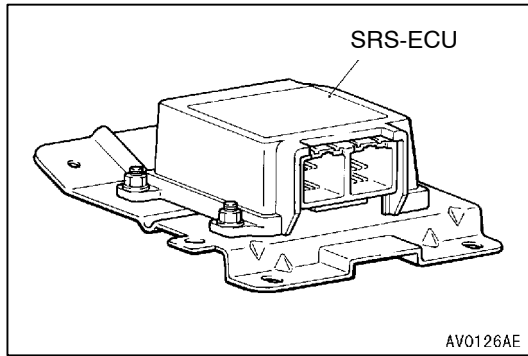


### SRS-ECU

1. Check SRS-ECU case and brackets for dents, cracks or deformation.
2. Check connector for damage, and terminals for deformation.

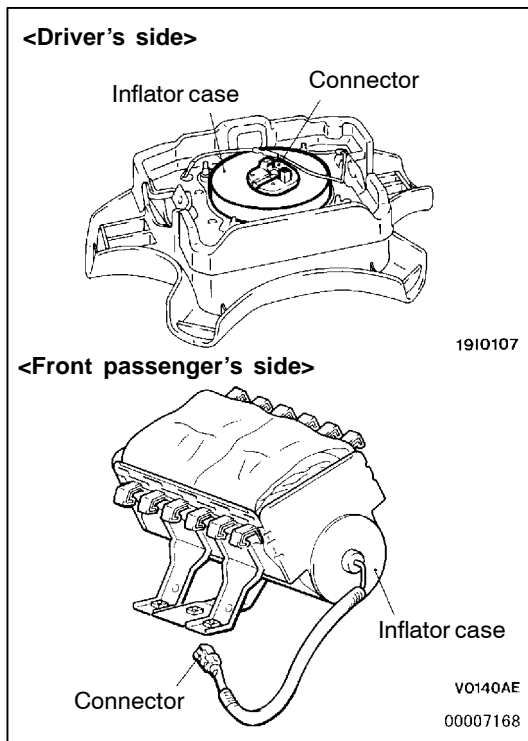


### Air bag modules

1. Check cover for dents, cracks or deformation.
2. Check connector for damage, terminals deformities, and harness for binds.
3. Check air bag inflator case for dents, cracks or deformities.
4. Install air bag module to steering wheel to check fit or alignment with the wheel.

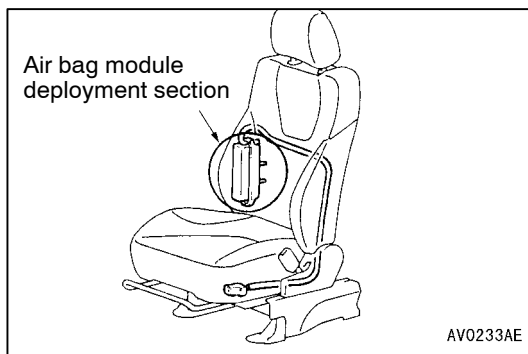

### Front seat back assembly (Side air bag module)

1. Check that there is no abnormality in the seat air bag module deployment section.
2. Check that there is no connector damage, bent terminals or clamping of the harness.

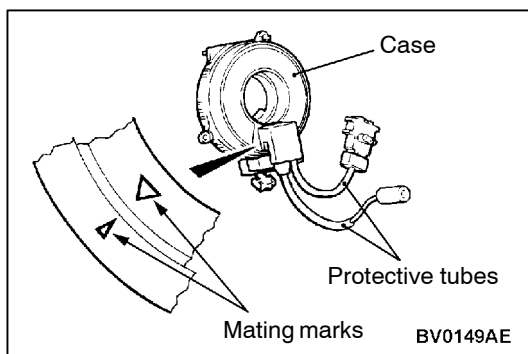


### Clock spring

1. Check clock spring connectors and protective tubes for damage, and terminals for deformation.
2. Visually check the case for damage.

**Steering wheel, steering column and intermediate joint**

1. Check wiring harness (built into steering wheel) and connectors for damage, and terminals for deformation.
2. Install air bag module to check fit or alignment with steering wheel.
3. Check steering wheel for noise, binds or difficult operation and excessive free play.

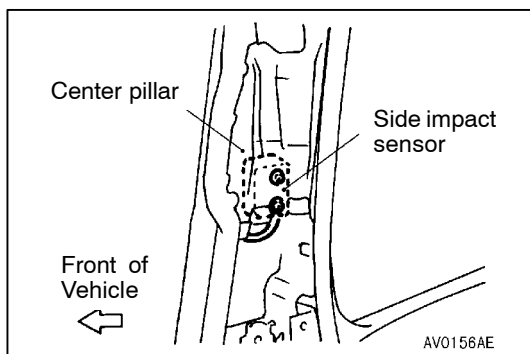**Side impact sensor**

1. Check that there is no bending or corrosion in the center pillar.
2. Check that there is no denting, breakage, bending or corrosion of the side impact sensor.
3. Check that there is no clamping of the harness, connector damage or bent terminals.

**NOTE**

The illustration at left shows the side impact sensor (R.H.). The position of the side impact sensor (L.H.) is symmetrical to this.

**Harness connector**

**(Instrument panel wiring harness, Side air bag wiring harness, Floor wiring harness, Assist wiring harness)**

Check harnesses for binding, connectors for damage, poor connection, and terminals for deformation. (Refer to P.52B-25.)

**Seat belt with pre-tensioner**

1. Check the seat belt for damage or deformation.
2. Check the pre-tensioner for cracks or deformation.
3. Check that the unit is installed correctly to the vehicle body.

**INDIVIDUAL COMPONENT SERVICE**

52400290445

If the SRS components and seat belt with pre-tensioner are to be removed or replaced as a result of maintenance, troubleshooting, etc., follow each procedure (P.52B-31 - P.52B-45.)

**Caution**

1. **SRS components and seat belt with pre-tensioner should not be subjected to heat, so remove the SRS-ECU, air bag modules (driver's side and front passenger's side), front seat assemblies (side air bag module), clock spring, side impact sensors and seat belts with pre-tensioner before drying or baking the vehicle after painting.**
  - SRS-ECU, Air bag module, clock spring, side impact sensor: 93°C or more
  - Seat belt with pre-tensioner: 90°C or more


Recheck SRS system operability after re-installing them.
2. **If the SRS components and seat belts with pre-tensioner are removed for the purpose of check, sheet metal repair, painting, etc., they should be stored in a clean, dry place until they are reinstalled.**

# WARNING/CAUTION LABELS

A number of caution labels relating to the SRS and seat belt with pre-tensioner are found in the vehicle, as shown in the following illustration. Follow


label instructions when servicing SRS and seat belt pre-tensioner. If labels are dirty or damaged, replace them with new ones.

Steering wheel

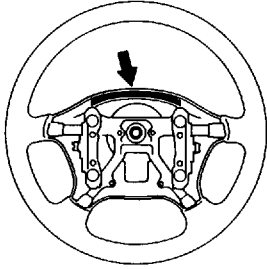


19I0042

Driver's side air bag module

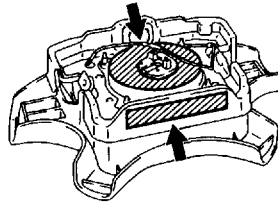


19I0034

Clock spring

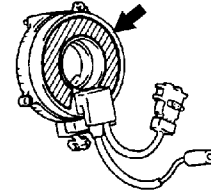


V0147AE

Sun visor

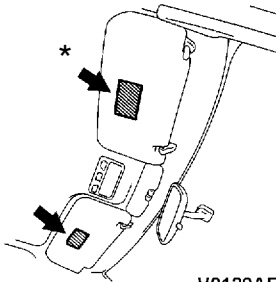


V0129AE

SRS-ECU

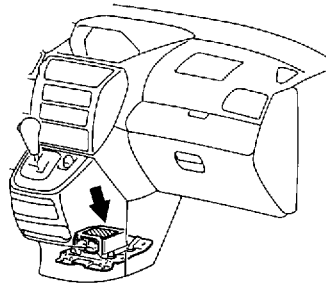


V0127AE

Glove box

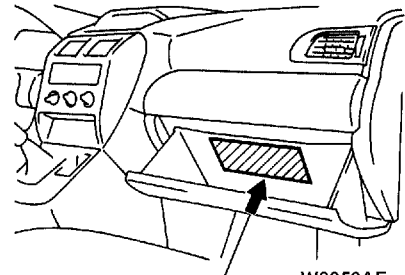


W0056AE

Front passenger's side air bag module

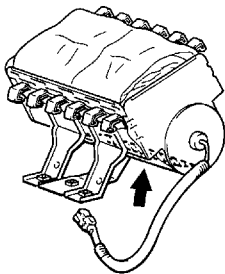


V0141AE

Steering gear box

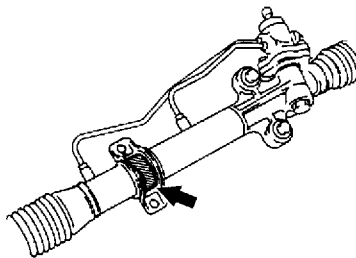


W0240AE

Seat belt with pre-tensioner

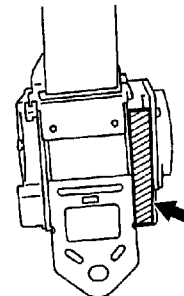


W0058AE  
00009240

Side air bag module (driver's and front passenger's seat)

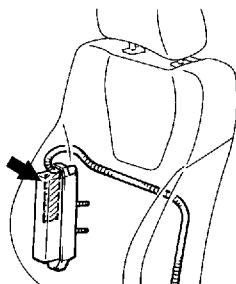

V0234AE

Side impact sensor

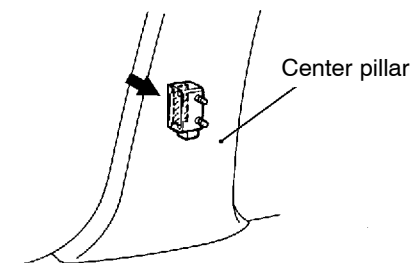

V0154AE

**NOTE**

\*: Vehicles with front passenger's air bag or SRS side air bags



## SRS AIR BAG CONTROL UNIT (SRS-ECU)

52400210359


### Caution

1. Disconnect the battery (-) terminal and wait for 60 seconds or more before starting work. Furthermore, the disconnected battery terminal should be covered with tape to insulate it. (Refer to P.52B-4.)
2. Never attempt to disassemble or repair the SRS-ECU. If faulty, replace it.
3. Do not drop or subject the SRS-ECU to impact or vibration. If denting, cracking, deformation, or rust are discovered in the SRS-ECU, replace it with a new SRS-ECU. Discard the old one.
4. After deployment of an air bag, replace the SRS-ECU with a new one.
5. Never use an ohmmeter on or near the SRS-ECU, and use only the special test equipment described on P.52B-7.

## REMOVAL AND INSTALLATION

### Pre-removal Operation

Turn the ignition key to the "LOCK" position.

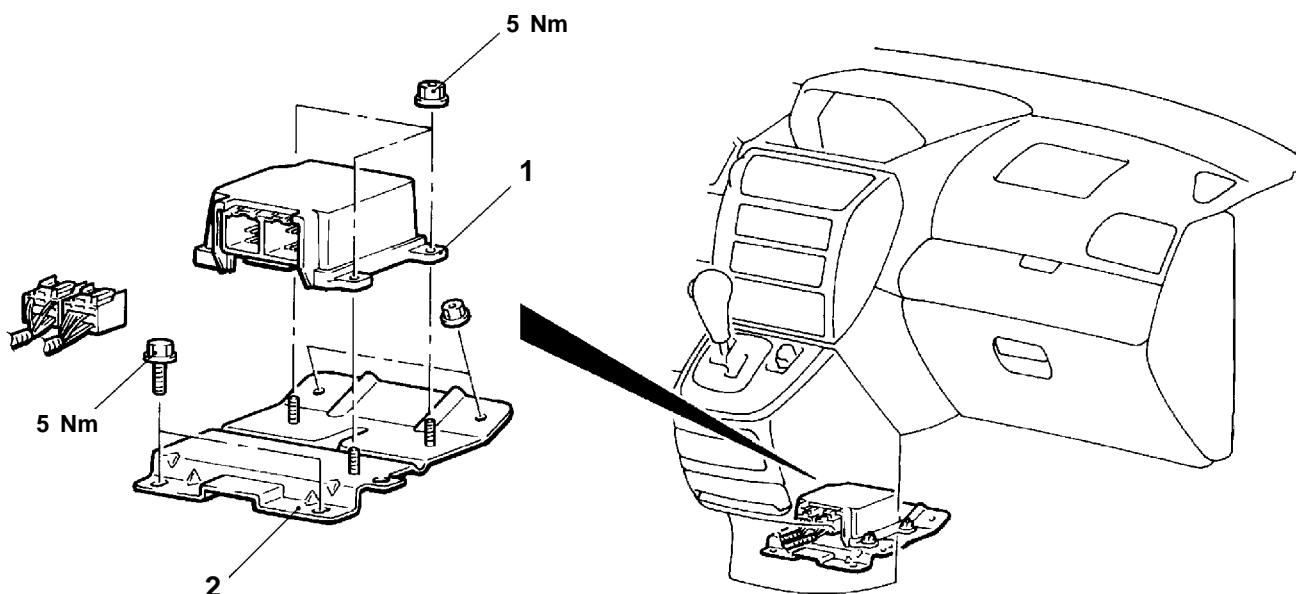

AW0129AE


### Removal steps

- ▶B◀
- Post-installation inspection
  - Negative (-) battery cable connection
  - Side console cover (Refer to GROUP 52A - Instrument panel.)

- ▶A◀
1. SRS-ECU
  2. SRS-ECU bracket

**INSTALLATION SERVICE POINTS****►A◀ SRS-ECU INSTALLATION****Caution**

The SRS may not activate if SRS-ECU is not installed properly, which could result in serious injury or death to the vehicle's driver or front passenger.

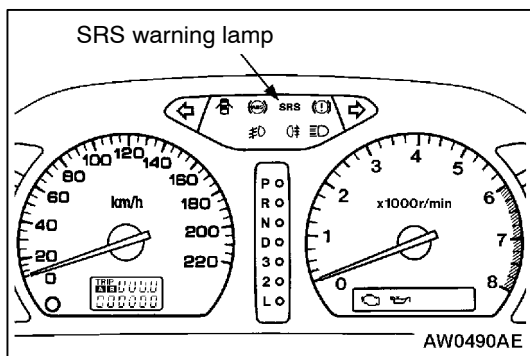**►B◀ POST-INSTALLATION INSPECTION**

1. Reconnect the negative battery terminal.
2. Turn the ignition switch to the "ON" position.
3. Does the "SRS" warning lamp illuminate for about 7 seconds, and then remain extinguished for at least 5 seconds after turning OFF?
4. If yes, SRS system is functioning properly.  
If no, consult page 52B-8.

**INSPECTION**

52400220253

- Check the SRS-ECU and brackets for dents, cracks or deformation.
- Check connector for damage, and terminals for deformation.

**Caution**

If a dent, crack, deformation or rust is discovered, replace the SRS-ECU with a new one.

**NOTE**

For checking of the SRS-ECU other than described above, refer to the section concerning troubleshooting. (Refer to P.52B-8.)

## AIR BAG MODULES AND CLOCK SPRING

52400240457

### Caution


1. Disconnect the battery (-) terminal and wait for 60 seconds or more before starting work. Furthermore, the disconnected battery terminal should be covered with tape to insulate it. (Refer to P.52B-4.)
2. Never attempt to disassemble or repair the air bag modules or clock spring. If faulty, replace it.
3. Do not drop the air bag modules or clock spring or allow contact with water, grease or oil. Replace it if a dent, crack, deformation or rust is detected.
4. The air bag modules should be stored on a flat surface and placed so that the pad surface is facing upward. Do not place anything on top of it.
5. Do not expose the air bag modules to temperatures over 93°C.
6. When the driver's side and front passenger's side air bags have been deployed, the air bag modules (driver's side and front passenger's side) should be replaced with new modules. When a side air bag has been deployed, the front seat back assembly (driver's seat or passenger's seat) should be replaced with a new assembly.
7. Wear gloves and safety glasses when handling air bags that have already deployed.
8. An undeployed air bag module should only be disposed of in accordance with the procedures (Refer to P.52B-45.)

**REMOVAL AND INSTALLATION**


**<Driver's side Air bag module, clock spring>**

**Pre-removal Operation**  
 After setting the steering wheel and the front wheels to the straight ahead position, remove the ignition key.

**<SPACE RUNNER>**

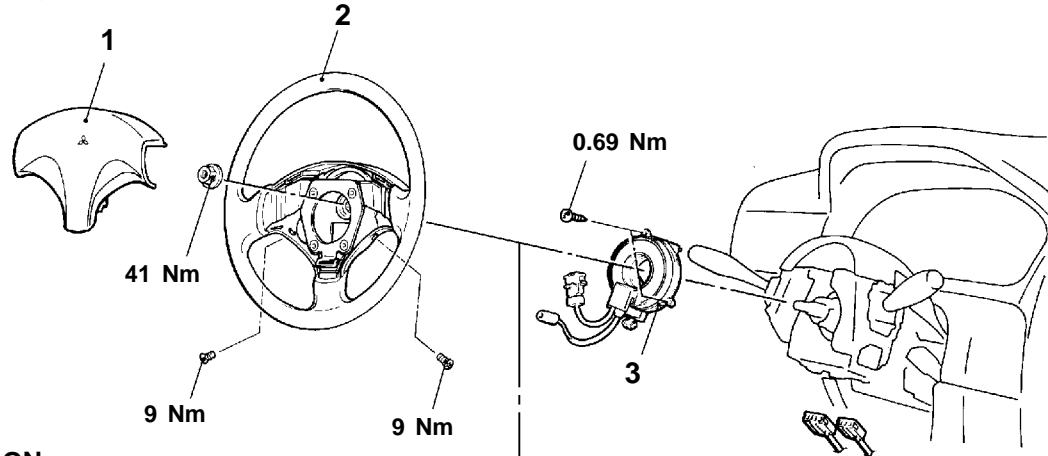

**<SPACE WAGON>**

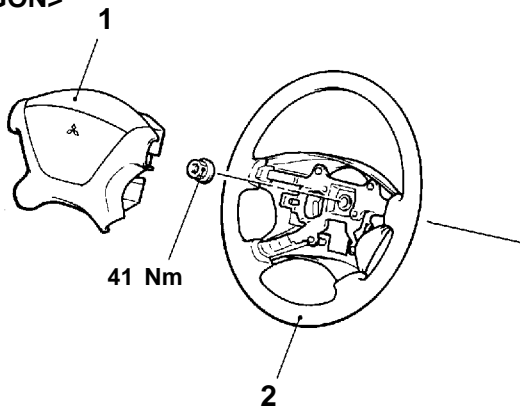

AW0130AE


**Air bag module removal steps**

- ▶E◀ ● Post-installation inspection
- ▶D◀ ● Negative (-) battery cable connection
- ◀A▶ ▶D◀ 1. Driver's side air bag module
- ▶A◀ ● Pre-installation inspection

**Clock spring removal steps**

- ▶E◀ ● Post-installation inspection
- ▶D◀ ● Negative (-) battery cable connection
- ◀A▶ ▶D◀ 1. Driver's side air bag module
- ◀B▶ ▶C◀ 2. Steering wheel
- Column cover (Refer to GROUP 52A - Instrument Panel.)
- ◀C▶ ▶B◀ 3. Clock spring
- ▶A◀ ● Pre-installation inspection

<Front passenger's side air bag module, front seat back assembly with side air bag module>

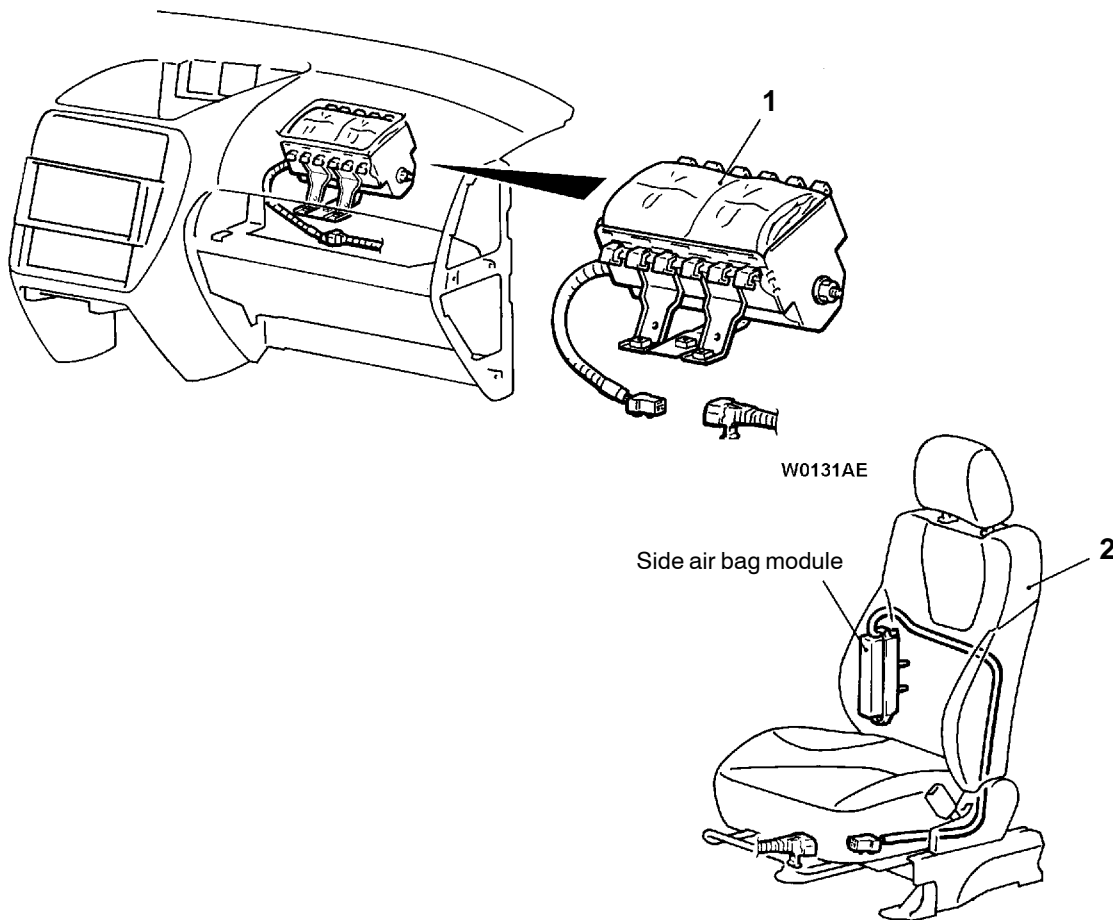





V0383AE  
00009241

**Front passenger's side air bag module removal steps**

- ▶E◀ ● Post-installation inspection
- Negative (-) battery cable connection
- Glove box striker (Refer to GROUP 52A - Instrument Panel.)
- ◀D▶ 1. Front passenger's side air bag module
- ▶A◀ ● Pre-installation inspection

**Front seat back assembly with side air bag module removal steps**

- ▶E◀ ● Post-installation inspection
- Negative (-) battery cable connection
- ◀E▶ 2. Front seat back assembly
- ▶A◀ ● Pre-installation inspection

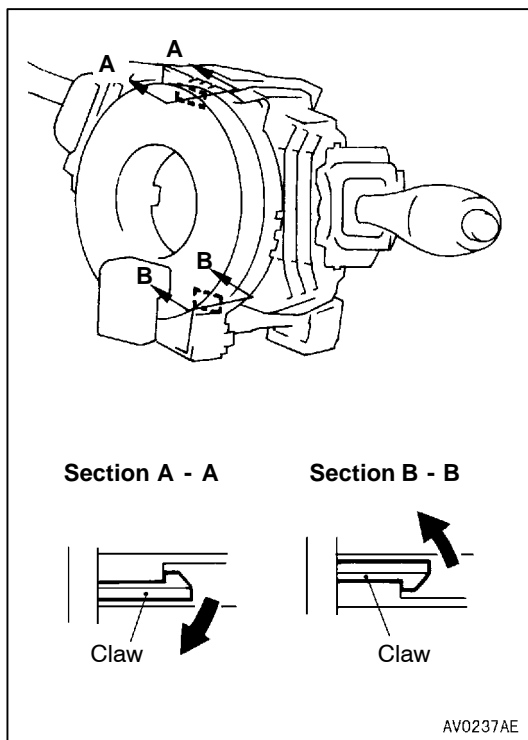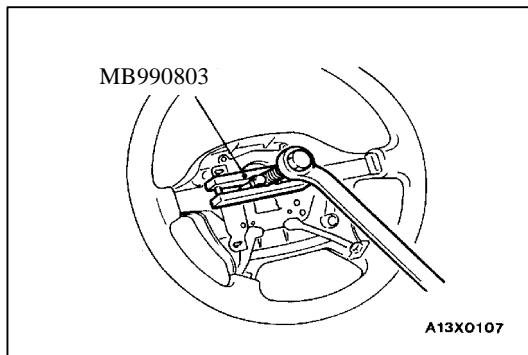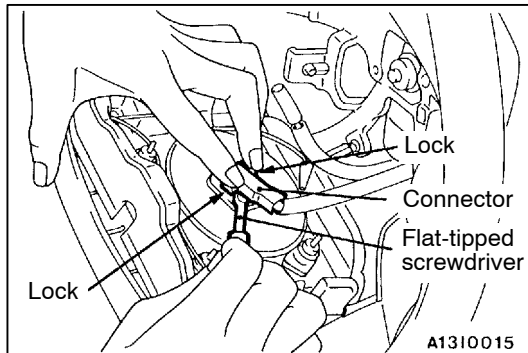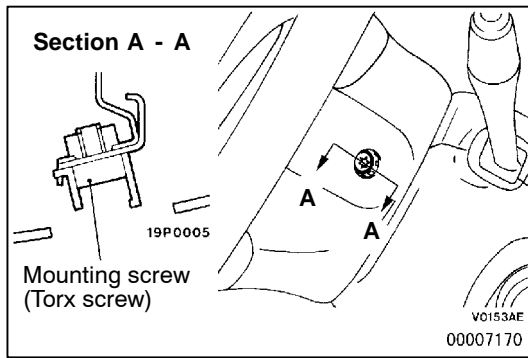

## REMOVAL SERVICE POINTS

### ◀A▶ DRIVER'S SIDE AIR BAG MODULE REMOVAL

1. Remove the air bag module mounting screws (torx screws) at the sides of the steering wheel. <SPACE WAGON>

#### NOTE

Do not remove the screws from the holders.  
<SPACE WAGON>

2. When disconnecting the connector of the clock spring from the air bag module, press the air bag's lock towards the outer side to spread it open. Use a flat-tipped screwdriver, as shown in the figure at the left, to pry so as to remove the connector gently.

#### Caution

- (1) When disconnect the air bag module clock spring connector, take care not to apply excessive force to it.
- (2) The removed air bag module should be stored in a clean, dry place with the pad cover face up.

### ◀B▶ STEERING WHEEL REMOVAL


#### Caution

Do not hammer on the steering wheel. Doing so may damage the collapsible column mechanism.

### ◀C▶ CLOCK SPRING REMOVAL

#### Caution

The removed clock spring should be stored in a clean, dry place.

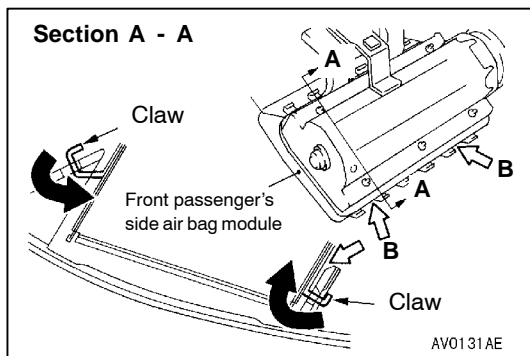

### ◀D▶ FRONT PASSENGER'S SIDE AIR BAG MODULE REMOVAL

Pry out B shown with a flat-tipped screwdriver to disengage the 12 claws.

#### Caution

The removed air bag module should be stored in a clean, dry place with the pad cover face up.

### ◀E▶ FRONT SEAT BACK ASSEMBLY REMOVAL

Refer to GROUP 52A - Seat.

#### Caution

1. The side air bag module only can not be replaced. Replace the front seat back assembly.
2. Store the removed front seat back assembly in a clean, dry place with its back contacting the ground.

## INSTALLATION SERVICE POINTS

### ▶A▶ PRE-INSTALLATION INSPECTION

1. Even if new air bag module, clock spring and front seat back assembly are installed, it is necessary to check before installation. (Refer to P.52B-39.)

#### Caution

Deploy the air bags in the specified procedures when the air bag modules or front seat back assembly are discarded. (Refer to P.52B-45.)

2. Connect the battery (-) terminal.
3. Connect the MUT-II to the diagnosis connector.

#### Caution

Make certain that the ignition switch is OFF when the MUT-II is connected or disconnected.


4. Turn the ignition switch to the "ON" position.
5. Conduct self-diagnosis using the MUT-II to ensure entire SRS operates properly, except open circuit of air bag modules.
6. Turn the ignition switch to the "LOCK" position, disconnect the negative battery cable and tape the terminal.

#### Caution

Wait at least 60 seconds after disconnecting the battery cable before doing any further work. (Refer to P.52B-4.)

**►B◄ CLOCK SPRING INSTALLATION**

Align the mating marks of the clock spring and, after turning the front wheels to the straight-ahead position, install the clock spring to the column switch.

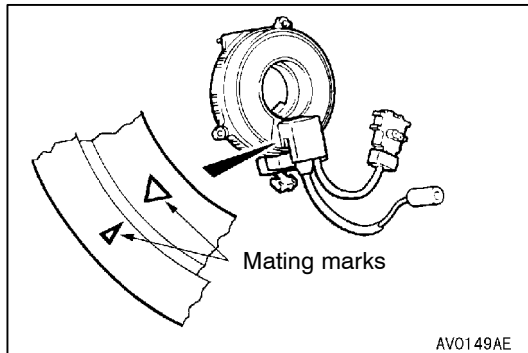**Mating Mark Alignment**

Turn the clock spring clockwise fully, and then turn back it approx. 3 turns counterclockwise to align the mating marks.

**Caution**

If the clock spring's mating marks are not properly aligned, the steering wheel may not be completely rotational during a turn, or the flat cable within the clock spring may be severed, obstructing normal operation of the SRS and possibly leading to serious injury to the vehicle's driver.


**►C◄ STEERING WHEEL INSTALLATION**

1. Before installation of the steering wheel, be sure to first turn the vehicle's front wheels to the straight-ahead position and align the mating marks of the clock spring.

**Caution**



Be sure when installing the steering wheel, that the harness of the clock spring does not become caught or tangled.

2. After clamping, turn the steering wheel all the way in both directions to confirm that steering is normal.

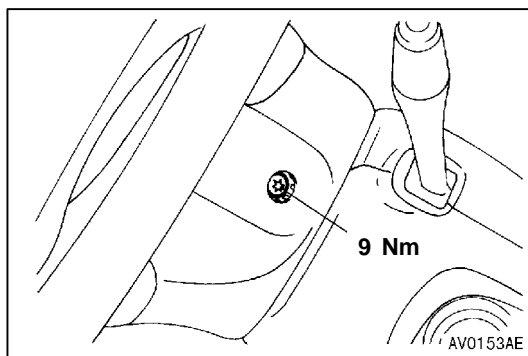**►D◄ DRIVER'S SIDE AIR BAG MODULE INSTALLATION<SPACEWAGON>**

1. Connect the air bag module connector securely.
2. Tighten the air bag module mounting screws.



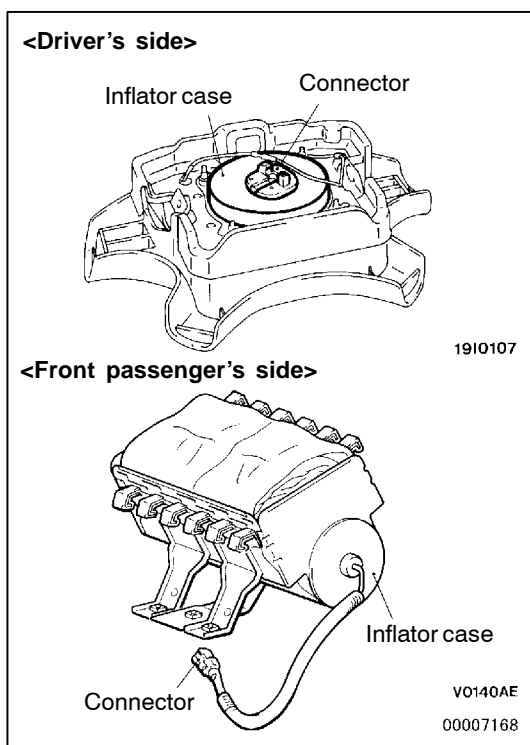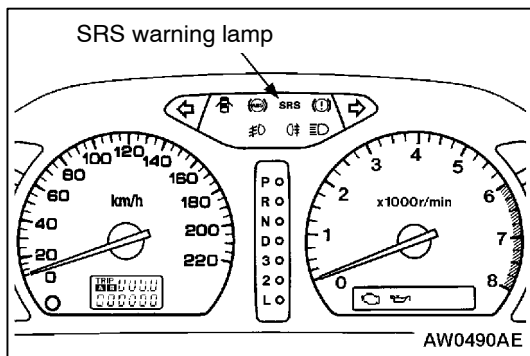

### ►E◄ POST-INSTALLATION INSPECTION

1. Turn the steering wheel right and left lightly to see its smooth operation, being free from abnormal noise. (Driver's side air bag module, clock spring)
2. Reconnect the negative battery terminal.
3. Turn the ignition switch to the "ON" position.
4. Does the "SRS" warning lamp illuminate for about 7 seconds, and then remain extinguished for at least 5 seconds after turning OFF?
5. If yes, SRS system is functioning properly. If no, consult page 52B-8.

### INSPECTION

52400250412

#### DRIVER'S SIDE AIR BAG MODULE/Front PASSENGER'S SIDE AIR BAG MODULE CHECK

If any improper part is found during the following inspection, replace the air bag module with a new one. Dispose the old one according to the specified procedure. (Refer to P.52B-45.)


#### Caution

**Never attempt to measure the circuit resistance of the air bag modules (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental air bags deployment will result in serious personal injury.**

1. Check cover for dents, cracks or deformation.
2. Check connectors for damage, terminals for deformation, and harness for binds.
3. Check air bag inflator case for dents, cracks or deformation.
4. Install the air bag module (driver's side) to steering wheel to check fit or alignment with the wheel.
5. Install the air bag module (front passenger's side) to the instrument panel and crossmember and check fit and alignment.

#### Caution



**If dents, cracks, deformation, or rust are discovered in the air bag module, replace it with a new one. Dispose of the old one according to the specified procedure. (Refer to P.52B-45.)**

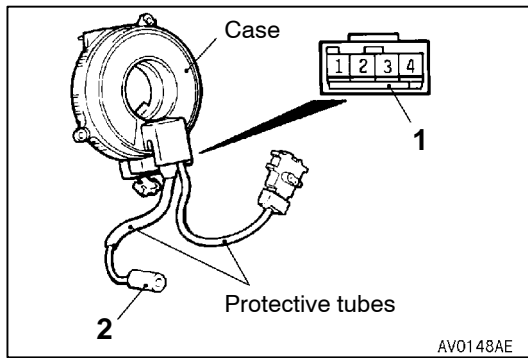

### CLOCK SPRING CHECK

If, as result of following checks, even one abnormal point is discovered, replace the clock spring with a new one.

1. Check connectors and protective tubes for damage, and terminals for deformation.
2. Visually check the case for damage.
3. Check that there is continuity between connector No.2 and terminal No.4 of connector No.1 of the clock spring.
4. Align the paint mark of the SRS check harness connector No.1 with the notch in clock spring connector No.3 to connect the connectors Nos.1 and 3.
5. Check continuity between the terminals 22 and 23 of the SRS check harness connector No.2.

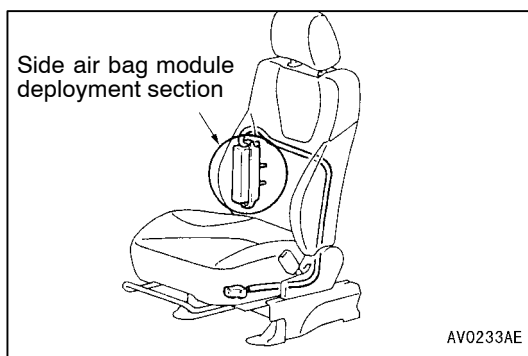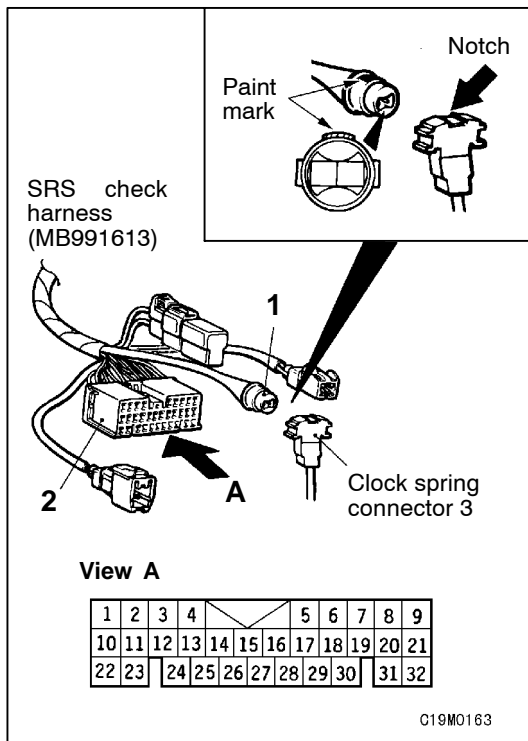

### Front seat back assembly with side air bag module

Replace the front seat back assembly if any one malfunction is found in the following inspections.

Discard the removed front seat back assembly after deploying the side air bag in the specified procedure.

(Refer to P.52B-45.)

### Caution

**Never measure circuit resistance of the side air bag module (squib) even with a specified tester.**

**Measuring the circuit resistance with a tester causes current or static electricity to flow to the squib, resulting in serious personal injury.**

1. Dents or deformation of side air bag module
2. Damaged harnesses or connectors and deformed terminals

## SIDE IMPACT SENSOR

52400460068


### Caution

1. Disconnect the battery (-) terminal and wait for 60 seconds or more before starting work. Furthermore, the disconnected battery terminal should be covered with tape to insulate it. (Refer to P.52B-4.)
2. Never attempt to disassemble or repair the side impact sensor. If faulty, replace it.
3. Do not drop or subject the side impact sensor to impact or vibration. If denting, cracking, deformation, or rust are discovered in the side impact sensor, replace it with a new side impact sensor. Discard the old one.
4. After deployment of an air bag, replace the side impact sensor with a new one.

## REMOVAL AND INSTALLATION

### Pre-removal Operation

Turn the ignition key to the "LOCK" position.

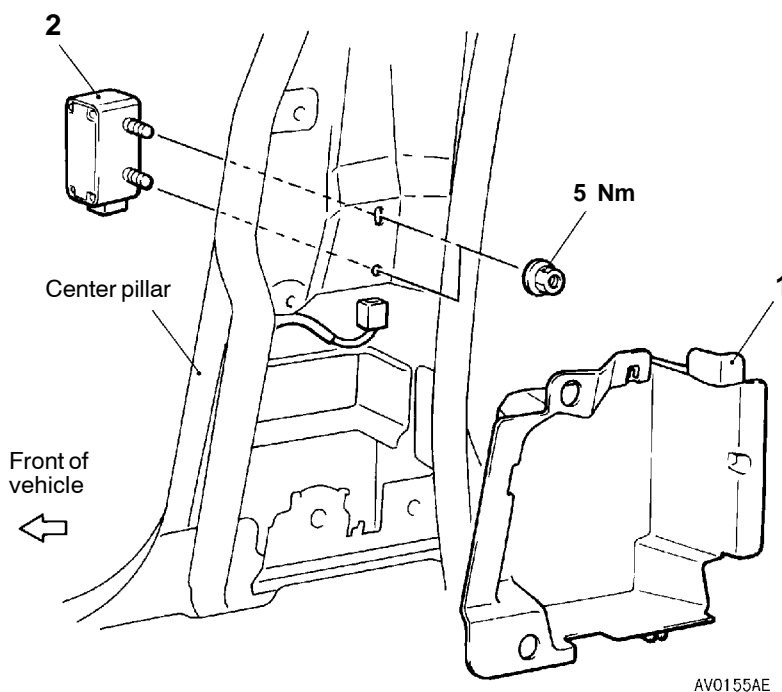

### Removal steps

- C◄
- Post-installation inspection
  - Negative (-) battery cable connection
  - Seat belt with pre-tensioner (Refer to P.52B-43.)
- B◄
1. Front seat belt cover
  2. Side impact sensor


- A◄
- Pre-installation inspection

### NOTE

The illustration above shows the side impact sensor (R.H.). The position of the side impact sensor (L.H.) is symmetrical to this.

**INSTALLATION SERVICE POINTS****►A◀ PRE-INSTALLATION INSPECTION**


Even if new side impact sensors are installed, it is necessary to check before installation. (Refer to INSPECTION.K)

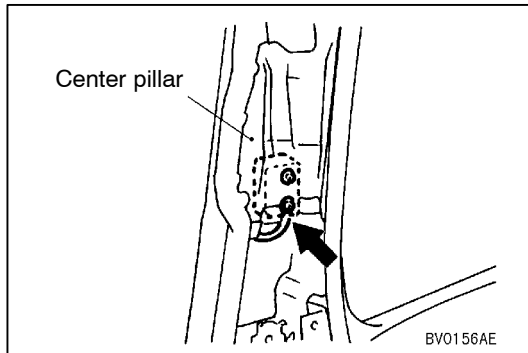**►B◀ SIDE IMPACT SENSOR INSTALLATION**

Securely connect the connector.

**Caution**

If the side impact sensor is not installed securely and correctly, the side air bag may not operate normally.

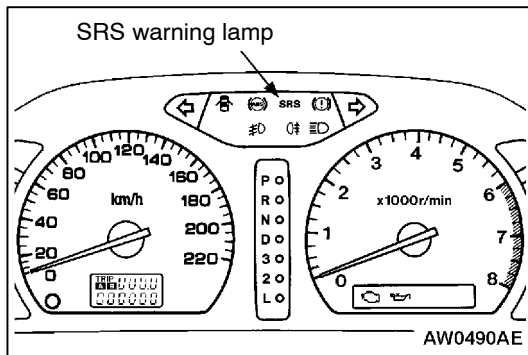**►C◀ POST-INSTALLATION INSPECTION**

1. Reconnect the negative battery terminal.
2. Turn the ignition switch to the "ON" position.
3. Does the "SRS" warning lamp illuminate for about 7 seconds, and then remain extinguished for at least 5 seconds after turning OFF?
4. If yes, SRS system is functioning properly. If no, consult page 52B-8.

**INSPECTION**

52400470054

**SIDE IMPACT SENSOR CHECK**

1. Check the side impact sensor and bracket for dents, cracks or deformation.
2. Check connector for damage, and terminals for deformation.
3. Check that there is no bending or corrosion in the center pillar.

**Caution**

If a dent, crack, deformation or rust is discovered, replace the side impact sensor with a new one.

**NOTE**

For checking of the side impact sensor other than described above, refer to the section concerning troubleshooting. (Refer to P.52B-8.)

## SEAT BELT WITH PRE-TENSIONER


52400410070

### Caution

1. Never attempt to disassemble or repair the seat belt with pre-tensioner. If faulty, replace it.
2. Be extremely careful when handling the seat belt with pre-tensioner. Do not subject it to shocks, drop it, bring it close to strong magnets or allow contact with water, grease or oil. Always replace it with a new part if any dents, cracks or deformation is found.
3. Do not place anything on top of the seat belt pre-tensioner.
4. Do not expose the seat belt with pre-tensioner to temperatures over 90°C.
5. After operating the seat belt pre-tensioner, replace the seat belt pre-tensioner with a new part.
6. Gloves and protective goggles should be worn when handling a pre-tensioner once it has been used.
7. If disposing of a seat belt with pre-tensioner which has not yet been used, its pre-tensioner should be operated first before disposal. (Refer to P.52B-45.)

## REMOVAL AND INSTALLATION

**Pre-removal and Post-installation Operation**  
Center Pillar Lower Trim Removal and Installation (Refer to GROUP 52A.)

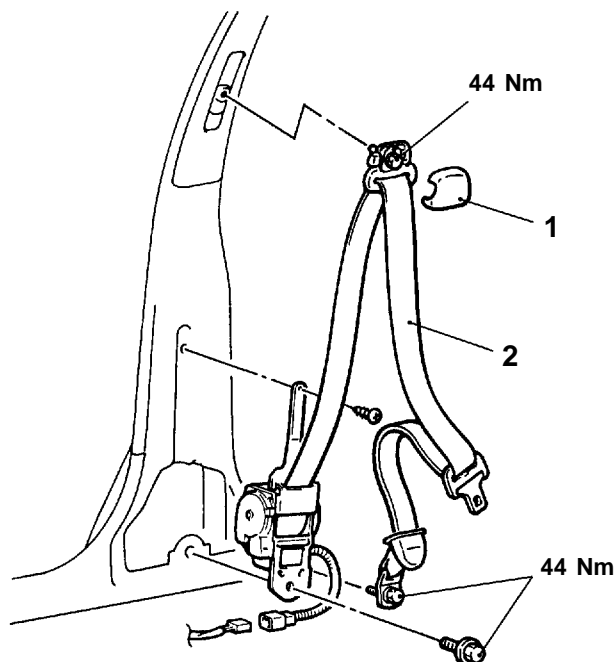

AW0225AE

### Removal steps

- B◄
- Post-installation inspection
  - Negative (-) battery cable connection
1. Sash guide cover

- A◄
- Pre-installation inspection
2. Seat belt with pre-tensioner

**INSTALLATION SERVICE POINTS****►A◄ PRE-INSTALLATION INSPECTION**

1. When installing a new seat belt with pre-tensioner refer to "INSPECTION".

**Caution**

**Disposal of the pre-tensioner must be carried out as stated in the procedure. (Refer to P.52B-42.)**

2. Connect the battery (-) terminal.
3. Connect the MUT-II to the diagnosis connector.


**Caution**

**Make certain that the ignition switch is OFF when the MUT-II is connected or disconnected.**

4. Turn the ignition switch to the "ON" position.
5. Conduct self-diagnosis using the MUT-II to ensure entire SRS operates properly, except open circuit of seat belt with pre-tensioner.
6. Turn the ignition switch to the "LOCK" position, disconnect the negative battery cable and tape the terminal.

**Caution**

**Wait at least 60 seconds after disconnecting the battery cable before doing any further work. (Refer to P52B-4.)**

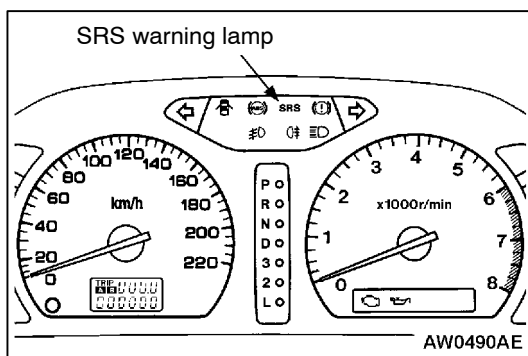**►B◄ POST-INSTALLATION INSPECTION**

1. Reconnect the negative battery terminal.
2. Turn the ignition switch to the "ON" position.
3. Does the "SRS" warning lamp illuminate for about 7 seconds, and then remain extinguished for at least 5 seconds after turning OFF?
4. If yes, SRS system is functioning properly. If no, consult page 52B-8.

**INSPECTION**

52400420073

**SEAT BELT WITH PRE-TENSIONER CHECK**

If any part is found to be faulty during the inspection, it must be replaced with a new one.

Dispose of the old one according to the specified procedure.

**Caution**

**Never attempt to measure the circuit resistance of the seat belt pre-tensioner even if you are using the specified tester. If the circuit resistance is measured with a tester, the seat belt pre-tensioner may accidentally operate, which could result in serious personal injury.**

1. Check seat belt pre-tensioner for dents, cracks or deformation.
2. Check connectors for damage, and terminals for deformation, and harness for binds.

**AIR BAG MODULE AND SEAT BELT PRE-TENSIONER DISPOSAL PROCEDURES**

52400120461

Before disposing of a vehicle which is equipped with air bags or seat belts with pre-tensioner, or when disposing of the air bags or seat belt

pre-tensioner themselves, the following procedures must be used to deploy the air bags or operate the seat belt pre-tensioners before disposal.

**UNDEPLOYED AIR BAG MODULE AND SEAT BELT PRE-TENSIONER DISPOSAL****Caution**

1. If the vehicle is to be scrapped or otherwise disposed of, deploy the air bags and operate the seat belt pre-tensioners inside the vehicle. If the vehicle will continue to be operated and only the air bag modules and seat belt pre-tensioner are to be disposed of, deploy the air bags and operate the seat belt pre-tensioners outside the vehicle.
2. Since a large amount of smoke is produced when the air bag are deployed or the seat belt pre-tensioner is operated, avoid residential areas whenever possible.
3. Since there is a loud noise when the air bags are deployed and when the seat belt pre-tensioners are operated, avoid residential areas whenever possible. If anyone is nearby, give warning of the impending noise.

4. Suitable ear protection should be worn by personnel performing these procedures or by people in the immediate area.




#### DEPLOYMENT INSIDE THE VEHICLE

1. Move the vehicle to an isolated spot.
2. Disconnect the negative (-) and positive (+) battery cables from the battery terminals, and then remove the battery from the vehicle.

#### Caution

**Wait at least 60 seconds after disconnecting the battery cables before doing any further work. (Refer to P.52B-4.)**

3. Deploy each air bag module and seat belt pre-tensioner in the following procedures.

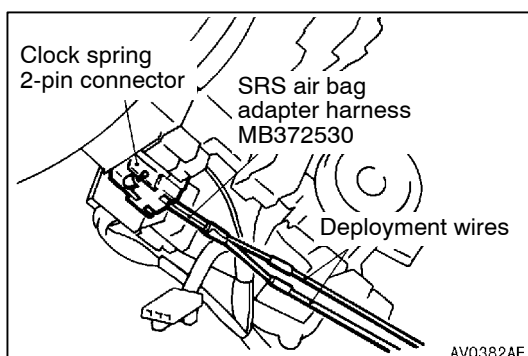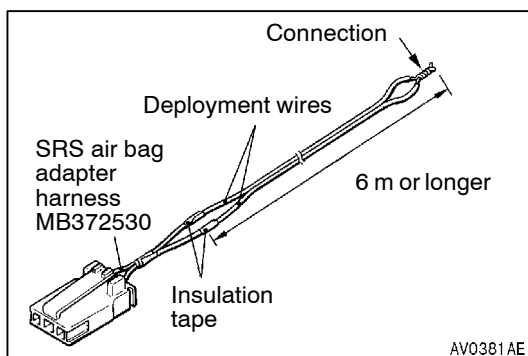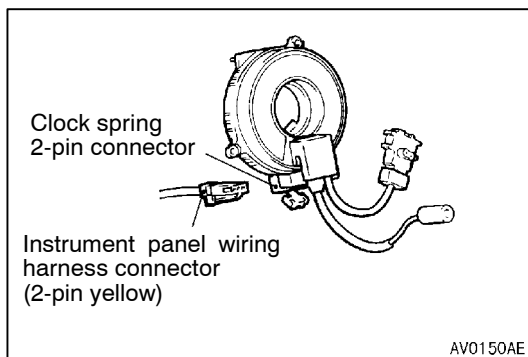

#### Driver's side air bag module

- (1) Remove the steering column cover lower.
- (2) Remove the connection between the clock spring 2-pin connector (red) and the instrument panel wiring harness connector (2-pin yellow).


#### NOTE

If the clock spring connector is disconnected from the instrument panel wiring harness, both electrodes of the clock spring connector will be automatically shorted to prevent unintended deployment of the driver's side air bag due to static electricity, etc.

- (3) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the driver's side air bag.

- (4) Connect the SRS air bag adapter harness to the clock spring 2-pin connector and pull the deployment wires out of the vehicle.



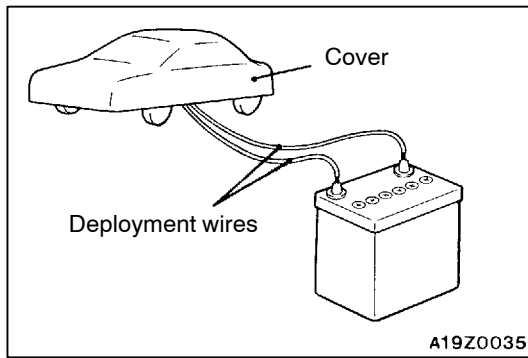

- (5) Fully close all door windows, close the doors and place a cover over the vehicle to minimize the amount of noise.

**Caution**


**If the glass is damaged, it may break, so the car must be covered.**

- (6) Disconnect the deployment wires as far from the vehicle as possible and connect the wires to the terminals of the battery removed from the vehicle. Deploy the driver's side air bag module.

**Caution**

- 1) **Before deploying the air bag in this manner, first check to be sure that there is no one in or near the vehicle. Wear safety glasses.**
- 2) **The deployment of the driver's side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.**
- 3) **If the air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.**

- (7) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)



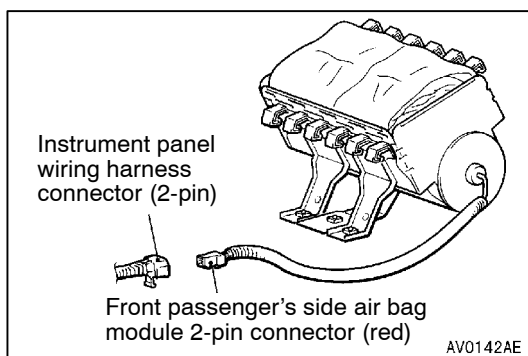


**Front passenger's side air bag module**

- (1) Remove the glove box. (Refer to GROUP 52A - Instrument panel.)
- (2) Remove the connection between the front passenger's side air bag module 2-pin connector (red) and the instrument panel wiring harness connector (2-pin).

**NOTE**

If the front passenger's side air bag module connector is disconnected from the instrument panel wiring harness, both electrodes of the front passenger's side air bag module connector will be automatically shorted to prevent unintended deployment of the front passenger's side air bag due to static electricity, etc.

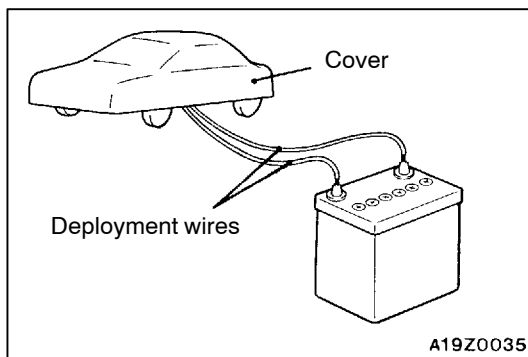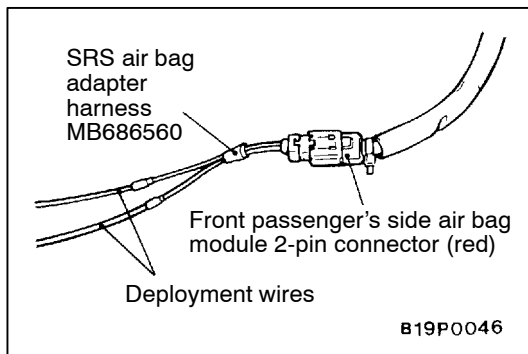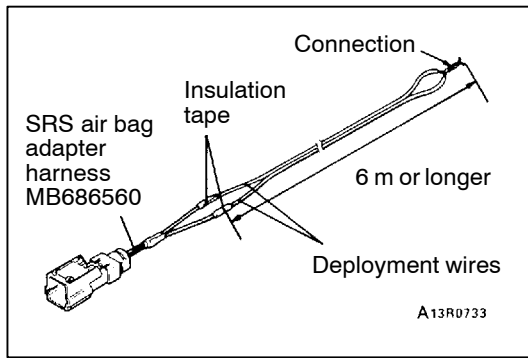

- (3) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the front passenger's side air bag.

- (4) Connect the SRS air bag adapter harness to the front passenger's side air bag module 2-pin connector (red) and pull the deployment wires out of the vehicle.

- (5) Fully close all door windows, close the doors and place a cover over the vehicle to minimize the amount of noise.


#### Caution

**If the glass is damaged, it may break, so the car must be covered.**

- (6) Disconnect the deployment wires as far from the vehicle as possible and connect the wires to the terminals of the battery removed from the vehicle. Deploy the front passenger's side air bag module.

#### Caution

- 1) **Before deploying the air bag in this manner, first check to be sure that there is no one in or near the vehicle. Wear safety glasses.**
  - 2) **The deployment of the front passenger's side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.**
  - 3) **If the air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.**
- (7) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

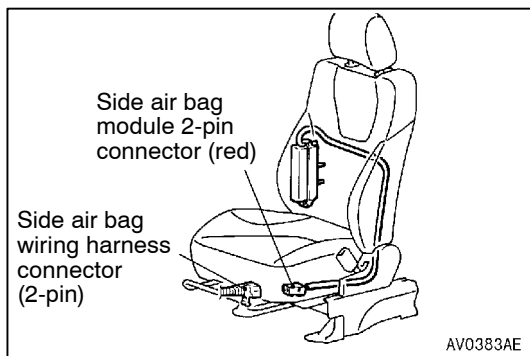

### Side air bag module


- (1) Remove the connection between the side air bag module 2-pin connector (red) and the side air bag wiring harness connector (2-pin).

#### Caution


**The side air bag modules for both the driver's side and passenger's side should be deployed.**

#### NOTE


If the side air bag module connector is disconnected from the body wiring harness, both electrodes of the side air bag module connector will be automatically shorted to prevent unintended deployment of the side air bag due to static electricity, etc.

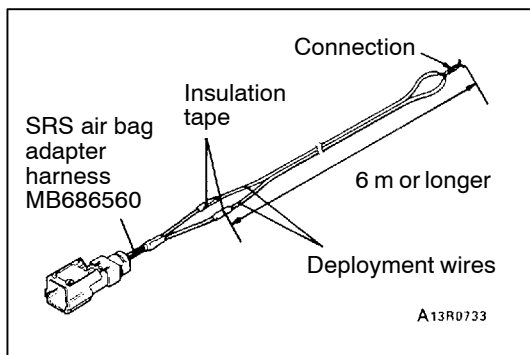

- (2) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the side air bag.

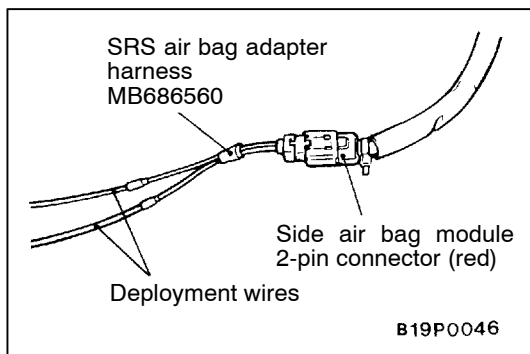

- (3) Connect the side air bag module 2-pin connector (red) to SRS air bag adapter harness and pass the deployment wires out of the vehicle.

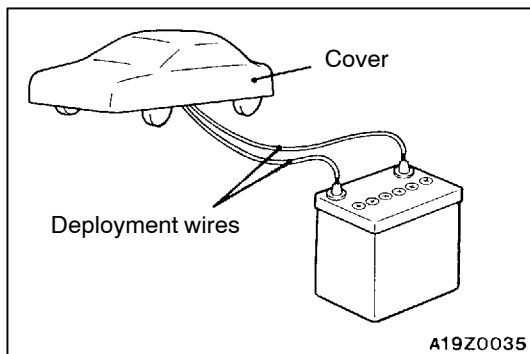

- (4) Fully close all door windows, close the doors and place a cover over the vehicle to minimize the amount of noise.


#### Caution

**If the glass is damaged, it may break, so the car must be covered.**

- (5) Disconnect the deployment wires as far from the vehicle as possible and connect the wires to the terminals of the battery removed from the vehicle. Deploy the side air bag module.

#### Caution

- 1) Before deploying the air bag in this manner, first check to be sure that there is no one in or near the vehicle. Wear safety glasses.
  - 2) The deployment of the side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.
  - 3) If the air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.
- (6) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

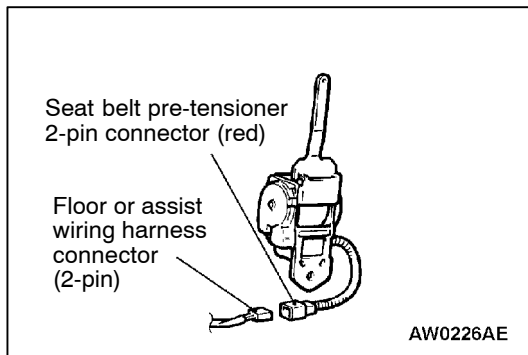


#### Seat belt pre-tensioner



- (1) Remove the center pillar lower trim. (Refer to GROUP 52A)
- (2) <Driver's side>  
Remove the connection between the seat belt pre-tensioner 2-pin connector (red) and the floor wiring harness connector (2-pin).  
<Front passenger's side>  
Remove the connection between the seat belt pre-tensioner 2-pin connector (red) and the assist wiring harness connector (2-pin).

#### NOTE

If the seat belt pre-tensioner connector is disconnected from the floor or assist wiring harness, both electrodes of the seat belt pre-tensioner connector will be automatically shorted to prevent unintended deployment of the seat belt pre-tensioner due to static electricity, etc.

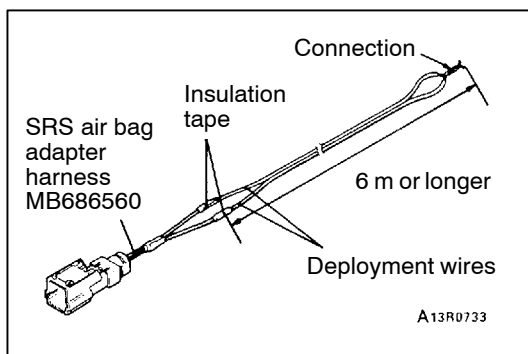

- (3) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the seat belt pre-tensioner.

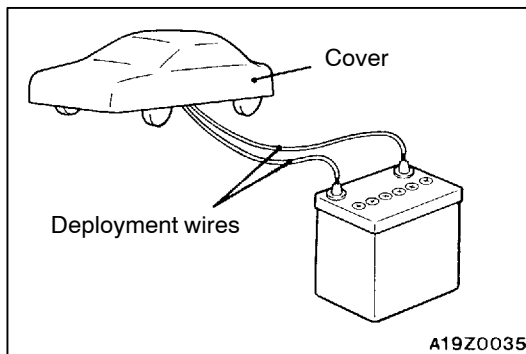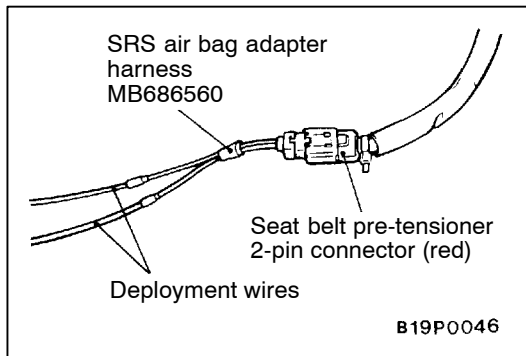

- (4) Connect the seat belt 2-pin connector (red) to SRS air bag adapter harness and pass the deployment wires out of the vehicle.

- (5) Fully close all door windows, close the doors and place a cover over the vehicle to minimize the amount of noise.

**Caution**

**If the glass is damaged, it may break, so the car must be covered.**

- (6) Disconnect the deployment wires as far from the vehicle as possible and connect the wires to the terminals of the battery removed from the vehicle. Deploy the seat belt pre-tensioner.

**Caution**

- 1) **Before deploying the seat belt pre-tensioner in this manner, first check to be sure that there is no one in or near the vehicle. Wear safety glasses.**
  - 2) **The deployment of the seat belt pre-tensioner makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.**
  - 3) **If the seat belt pre-tensioner fails to deploy when the procedures above are followed, do not go near the seat belt pre-tensioner. Contact your local distributor.**
- (7) After deployment, dispose of seat belt pre-tensioner according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

**DEPLOYMENT OUTSIDE THE VEHICLE****Caution**

1. This should be carried out in a wide, flat area at least 6 m away from obstacles and other people.
  2. Do not deploy outside if wind is high. Even in a soft wind, ignite to windward of the air bag modules, front seat back assembly with side air bag module or seat belt pre-tensioner.
1. Disconnect the negative (-) and positive (+) battery cables from the battery terminals, and then remove the battery from the vehicle.

**Caution**

**Wait at least 60 seconds after disconnecting the battery cables before doing any further work. (Refer to P.52B-4.)**


2. Deploy each air bag module, seat belt pre-tensioner in the following procedures.

**Driver's side air bag module**

- (1) Remove the driver's side air bag module from the vehicle. (Refer to P.52B-33.)


**Caution**

**The driver's side air bag module should be stored on a flat surface and placed so that the air bag deployment surfaces are facing upward. Do not place anything on top of them.**

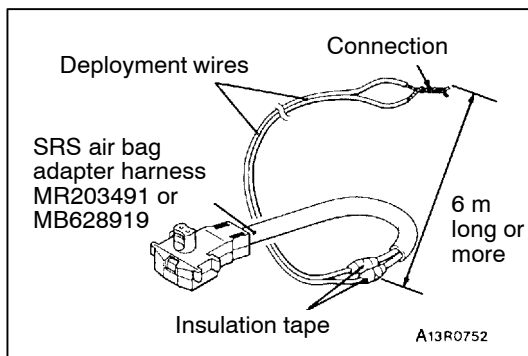

- (2) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the driver's side air bag.


- (3) Install a nut to the bolt behind the driver's side air bag module and tie thick wire for securing to the wheel.

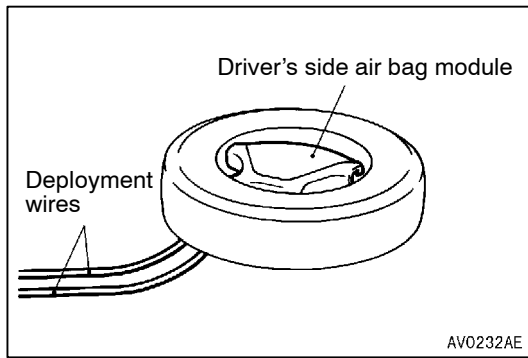


- (4) Take the SRS air bag adapter harness that is connected to the wires, pass it beneath the old tyre wheel assembly, and connect it to the driver's side air bag module.
- (5) With the driver's side air bag module upwards, place it in the wheel of old tyre and secure with the wire tied to the bolt.

#### Caution

**Slack the deployment wires below the wheel. If deployment wires are tight, the reaction when the air bag deploys could damage the adaptor harness.**

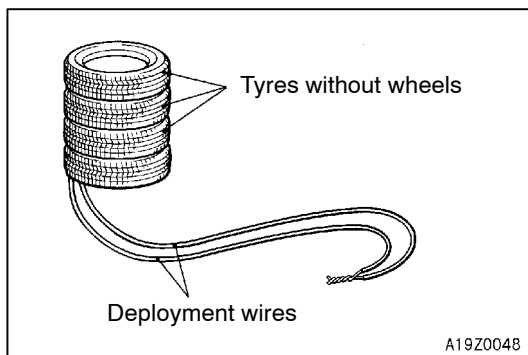

- (6) Place three old tyres without wheels on top of the tyre secured to the driver's side air bag module.

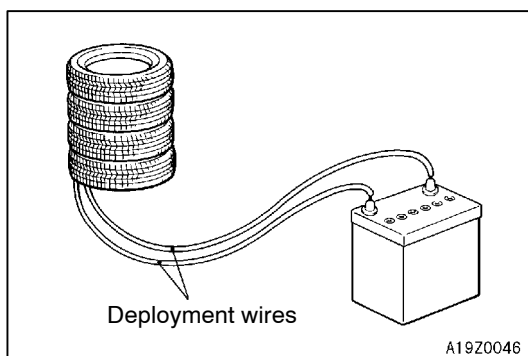

- (7) Disconnect the deployment wires as far from the driver's side air bag module as possible and connect the wires to the terminals of the battery removed from the vehicle. Then deploy.

#### Caution

- 1) Before the deployment, be sure that no one is near the driver's side air bag module.
- 2) The deployment of the driver's side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.
- 3) If the driver's side air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.



- (8) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

### Front passenger's side air bag module

- (1) Remove the front passenger's side air bag module from the vehicle. (Refer to P.52B-33.)

#### Caution


**The front passenger's side air bag module should be stored on a flat surface and placed so that the air bag deployment surfaces are facing upward. Do not place anything on top of them.**

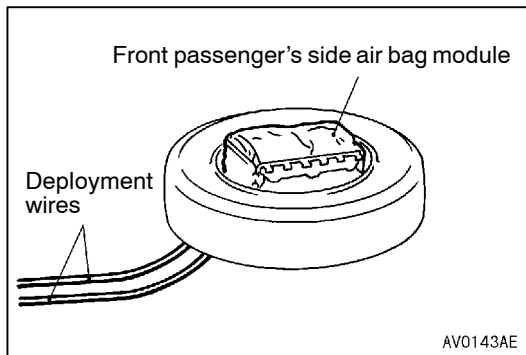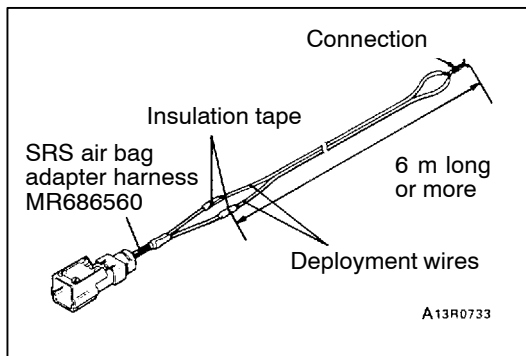

- (2) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the front passenger's side air bag.
- (3) Take the SRS air bag adapter harness that is connected to the wires, pass it beneath the old tyre wheel assembly, and connect it to the front passenger's side air bag module.
- (4) Pass thick wire through the holes in the front passenger's side air bag module bracket. With the deployment side upwards, secure the front passenger's side air bag module to the wheel of the old tyre.


#### Caution

- 1) **Slack the deployment wires below the wheel. If deployment wires are tight, the reaction when the air bag deploys could damage the adaptor harness.**
- 2) **The connector of the SRS air bag adapter harness should be placed so that it is not clamped by the tyres during deployment or operation.**

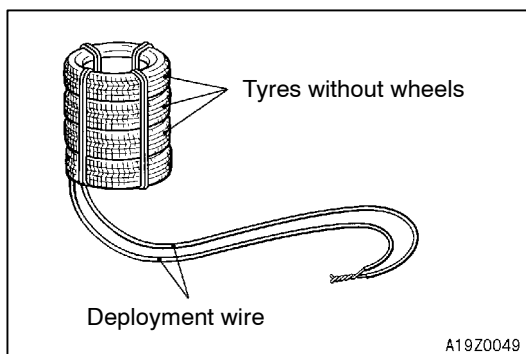

- (5) Place three old tyres, without wheels, on top of the tyre secured to the front passenger's side air bag module, and secure all tyres with ropes (4 locations).



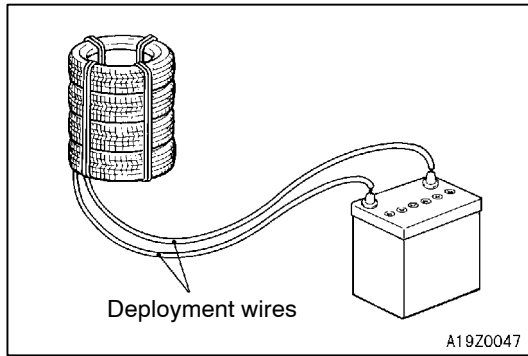

- (6) Disconnect the deployment wires as far from the front passenger's side air bag module as possible and connect the wires to the battery removed from the vehicle.

#### Caution


- 1) Before the deployment, be sure that no one is near the front passenger's side air bag module.
  - 2) The deployment of the front passenger's side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.
  - 3) If the front passenger's side air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.
- (7) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

#### Side air bag module


- (1) Remove the front seat back assembly with the side air bag from the vehicle. (Refer to P.52B-33.)

#### Caution


The side air bag module should be stored on a flat surface and placed so that the air bag deployment surfaces are facing upward. Do not place anything on top of them.

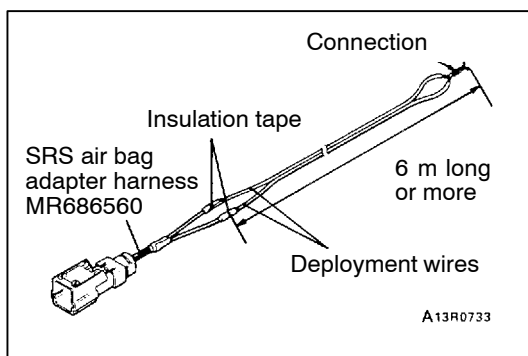

- (2) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the side air bag.

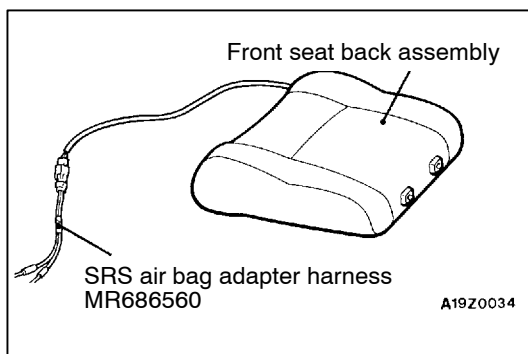

- (3) Place the front seat back assembly so that its back contacts the ground.
- (4) Connect the SRS air bag adapter harness connected with the deployment wires to the side air bag module connector.

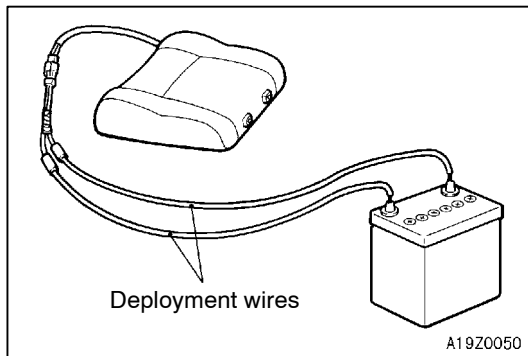

- (5) Disconnect the deployment wires as far from the front seat back assembly as possible and connect the wires to the terminals of the battery removed from the vehicle. Then deploy.

#### Caution


- 1) Before the deployment, be sure that no one is near the front seat back assembly.
  - 2) The deployment of the side air bag makes the inflator very hot. Before handling the inflator, wait more than 30 minutes for cooling.
  - 3) If the side air bag module fails to deploy when the procedures above are followed, do not go near the module. Contact your local distributor.
- (6) After deployment, dispose of air bag module according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)

#### Seat belt pre-tensioner


- (1) Remove the seat belt pre-tensioner from the vehicle. (Refer to P.52B-43.)

#### Caution


The seat belt pre-tensioner should be stored on a flat surface and placed so that the air bag deployment surfaces are facing upward. Do not place anything on top of them.

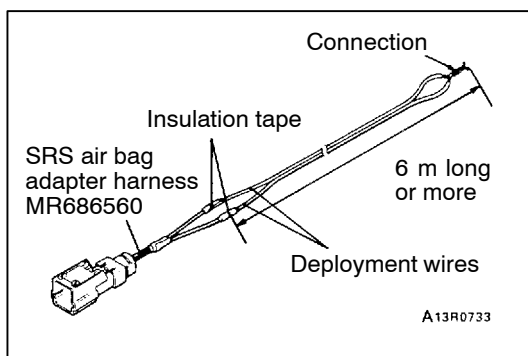

- (2) Connect two wires, each six meters or longer, to the two leads of SRS air bag adapter harness and cover the connections with insulation tape. The other ends of the two wires should be connected to each other (short-circuited), to prevent sudden unexpected deployment of the seat belt pre-tensioner.

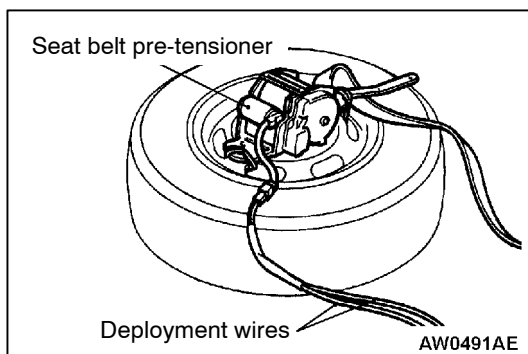


- (3) Take the SRS air bag adapter harness that is connected to the wires, pass it beneath the old tyre wheel assembly, and connect it to the seat belt pre-tensioner.
- (4) Pass the wires through the hole on the seat belt retractor bracket and secure them to the front (raised part) of the wheel on two places.

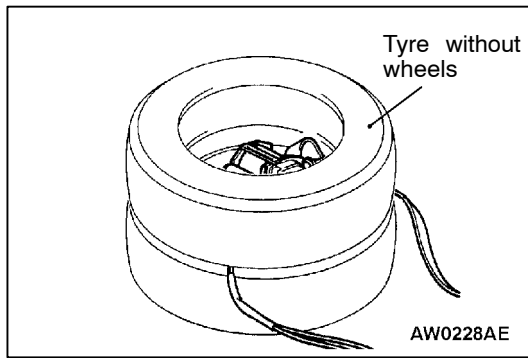


### Caution

- 1) Slack the deployment wires below the wheel. If deployment wires are tight, the reaction when the seat belt pre-tensioner deploys could damage the adaptor harness.
- 2) The connector of the SRS air bag adapter harness should be placed so that it is not clamped by the tyres during deployment or operation.
- 3) Pull the seat belt out the outside of the tyre, and then place one tyre without a wheel on top of the existing tyre.

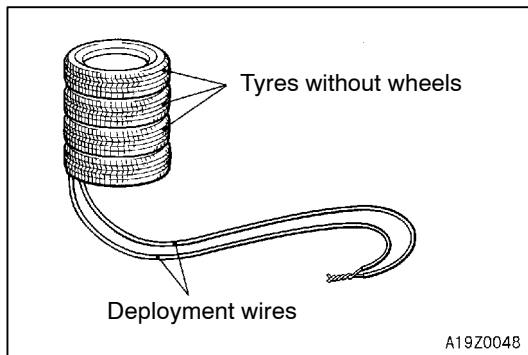

- (5) Place three old tyres without wheels on top of the tyre secured to the seat belt pre-tensioner.

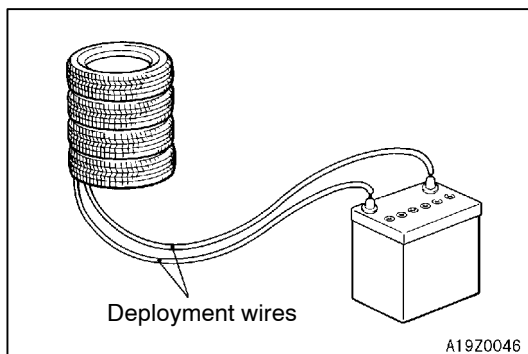

- (6) Disconnect the deployment wires as far from the seat belt pre-tensioner as possible and connect the wires to the terminals of the battery removed from the vehicle, and deploy.

### Caution

- 1) Before the deployment, be sure that no one is near the seat belt pre-tensioner.
  - 2) The deployment of the seat belt pre-tensioner makes itself very hot. Before handling the seat belt pre-tensioner, wait more than 30 minutes for cooling.
  - 3) If the seat belt pre-tensioner fails to deploy when the procedures above are followed, do not go near the seat belt pre-tensioner. Contact your local distributor.
- (7) After deployment, dispose of seat belt pre-tensioner according to the Deployed Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures. (Refer to P.52B-58.)


## DEPLOYED AIR BAG MODULE OR OPERATED SEAT BELT PRE-TENSIONER DISPOSAL PROCEDURES

After deployment or operation, the air bag module and the seat belt pre-tensioner should be disposed of in the same manner as any other scrap parts, adhering to local laws and/or legislation that may be in force except that the following points should be carefully noted during disposal.

1. The inflator will be quite hot immediately following deployment, so wait at least 30 minutes to allow it cool before attempting to handle it.
2. Do not put water or oil on the air bag after deployment or on the seat belt pre-tensioner after operation.
3. There may be, adhered to the deployed air bag module or the operated seat belt pre-tensioner, material that could irritate the eye and/or skin, so wear gloves and safety glasses when handling a deployed air bag module or a operated seat belt pre-tensioner.

### Caution

**If after following these precautions, any material does get into the eyes or on the skin, immediately rinse the affected area with a large amount of clean water. If any irritation develops, seek medical attention.**

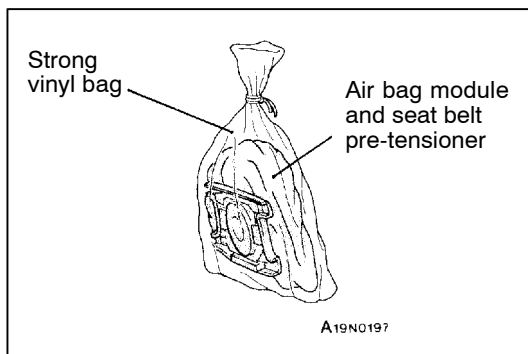

4. Tightly seal the air bag module and seat belt pre-tensioner in a strong vinyl bag for disposal.
5. Be sure to always wash your hands after completing this operation.