



13) Install V-belt covers.

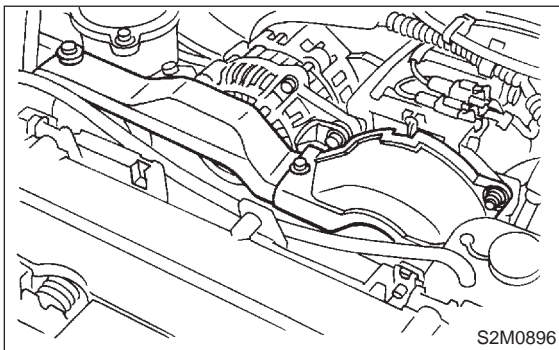

14) Connect battery ground cable.

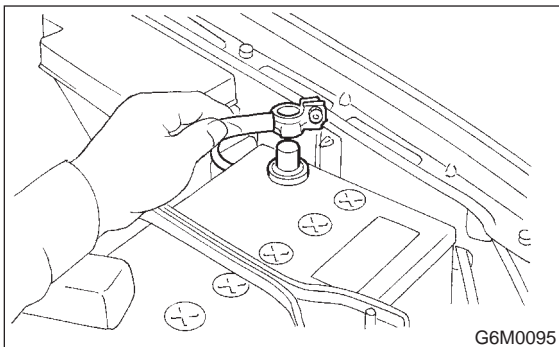


15) Fill coolant. <Ref. to 2-2 [W9B0].>

## 4. Radiator Cap

### A: INSPECTION

1) Attach radiator cap to tester.

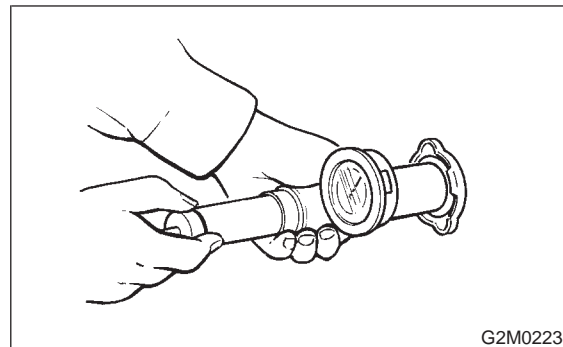

2) Increase pressure until tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for five to six seconds.

**Standard pressure:**

**93 — 123 kPa (0.95 — 1.25 kg/cm<sup>2</sup>, 14 — 18 psi)**

**Service limit pressure:**

**83 kPa (0.85 kg/cm<sup>2</sup>, 12 psi)**

**CAUTION:**

Be sure to remove foreign matter and rust from the cap in advance; otherwise, results of pressure test will be incorrect.