


Tumble Generator Valve Actuator

FUEL INJECTION (FUEL SYSTEMS)

17. Tumble Generator Valve Actuator


A: REMOVAL

1) Disconnect the ground cable from battery.

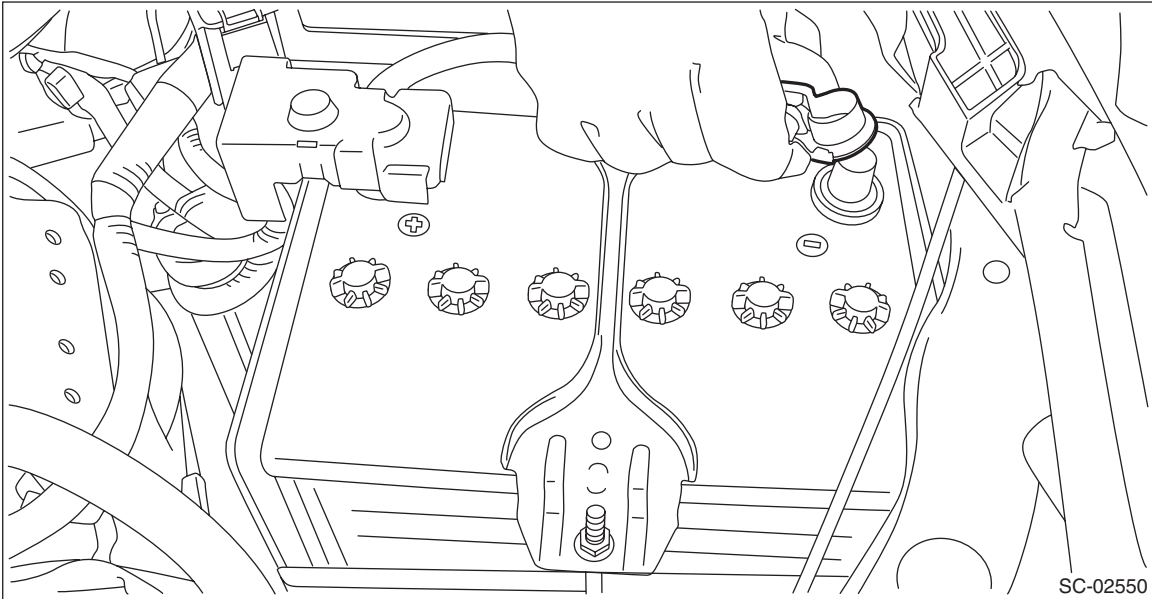

2) Disconnect the connector (A) from tumble generator valve assembly, and remove the tumble generator valve actuator.


- LH side

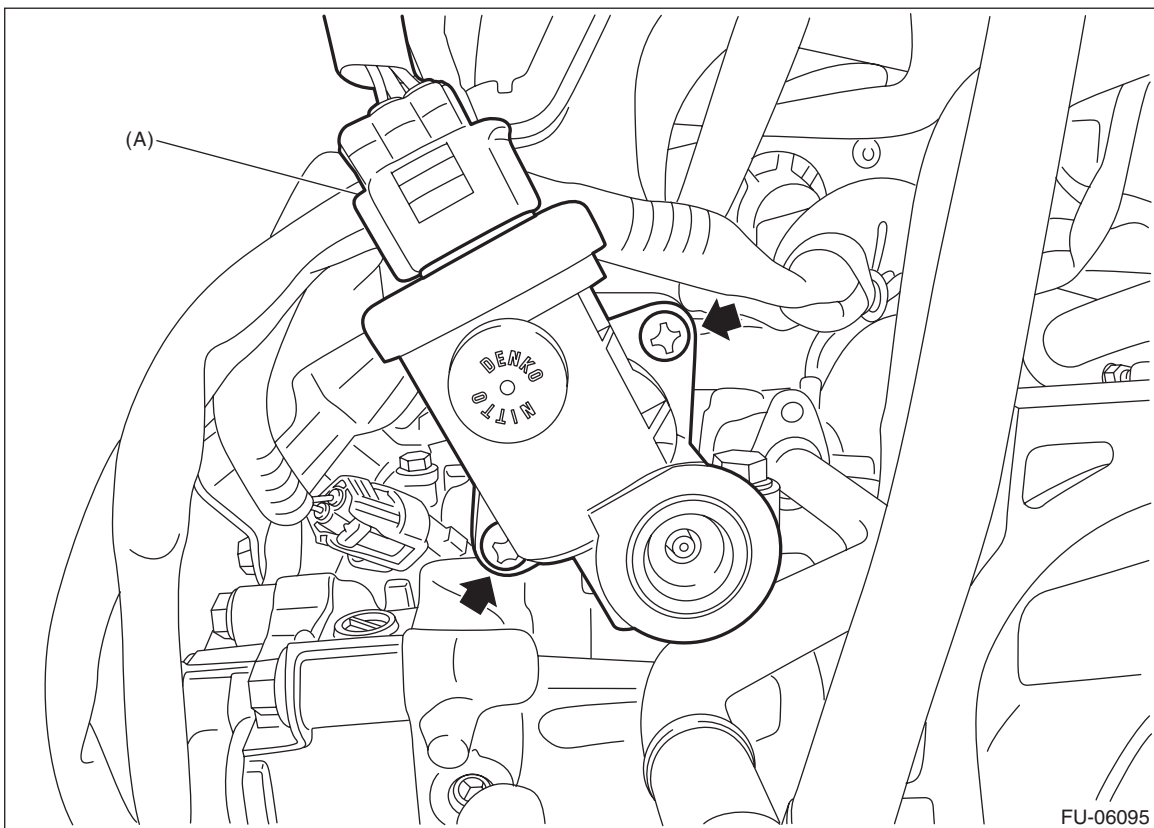

Tumble Generator Valve Actuator

FUEL INJECTION (FUEL SYSTEMS)

- RH side

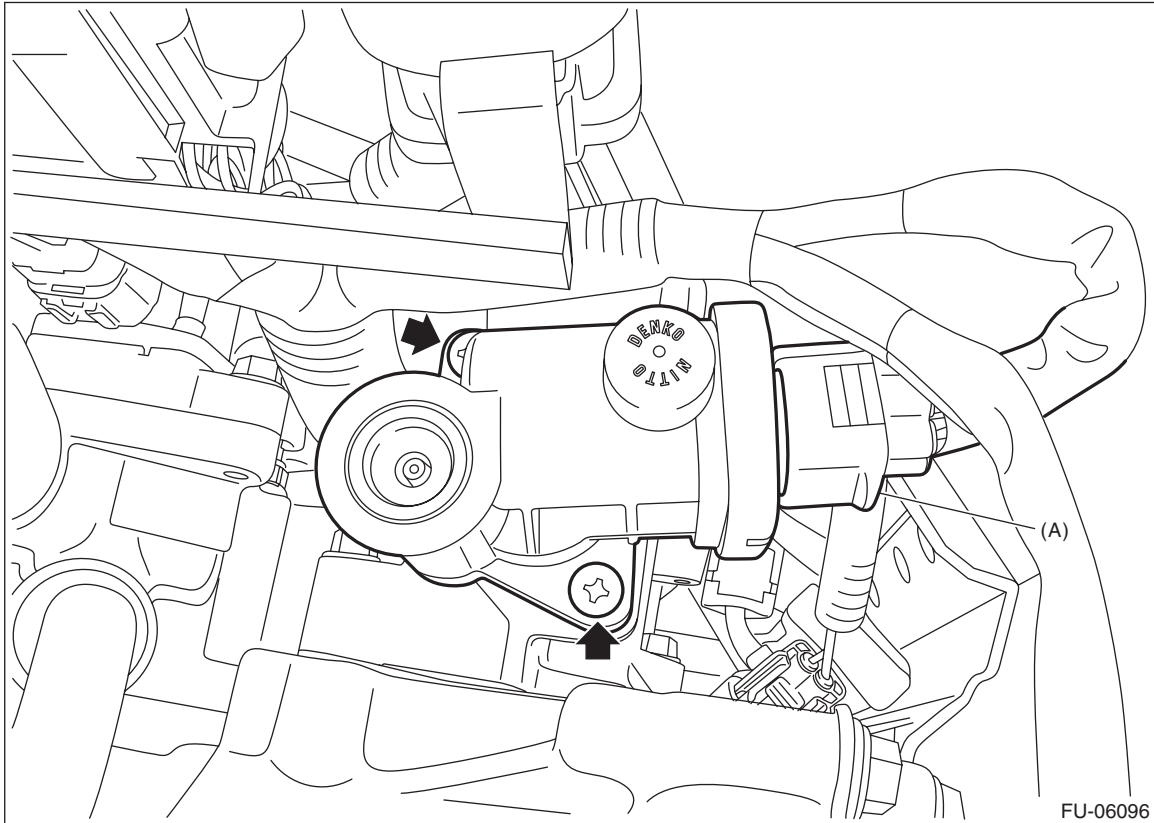

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

6 N·m (0.6 kgf·m, 4.4 ft·lb)

C: INSPECTION

- 1) Check that the tumble generator valve actuator has no deformation, cracks or other damages.
- 2) Check tumble generator valve actuator for contamination or clogging.