


## 8. Radiator Cap S176064

### A: INSPECTION S176064A10

- 1) Attach radiator cap to tester.

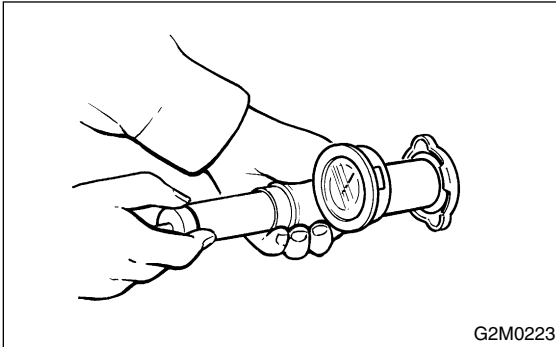

- 2) Increase pressure until tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for five to six seconds.

**Standard pressure:**

**93 — 123 kPa (0.95 — 1.25 kg/cm<sup>2</sup>, 14 — 18 psi)**

**Service limit pressure:**

**83 kPa (0.85 kg/cm<sup>2</sup>, 12 psi)**

**CAUTION:**

**Be sure to remove foreign matter and rust from the cap in advance. Otherwise, results of pressure test will be incorrect.**