

3. General Description

A: CAUTION

1. SUPPLEMENTAL RESTRAINT SYSTEM “AIRBAG”

Airbag system wiring harness is routed near the body integrated unit and body control circuits.

CAUTION:

- Do not use the electrical test equipment on all airbag system wiring harnesses and connectors.
- Be careful not to damage the airbag system wiring harness, when servicing the body control system.

B: INSPECTION

Before performing diagnosis, check the following items which might affect body control system problems.

1) Measure the battery voltage and check electrolyte.

Standard voltage: 12 V or more

Specific gravity: 1.260 or more

2) Check the fuse condition.

Make sure that ampere of the fuse is setting value, and it is not blown out.

3) Check the connecting condition of harness and harness connector.

4) Confirm settings of body integrated unit are corresponded to vehicle equipment. <Ref. to BC(diag)-22, OPERATION, Registration Body Integrated Unit.>

5) Make sure that the User Customizing of the body integrated unit matches the vehicle equipment. <Ref. to BC(diag)-20, OPERATION, User Customizing.>

6) Confirm “Factory or Market setting” of body integrated unit registrations is “Market”.

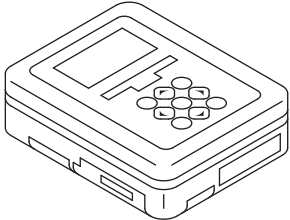
7) Confirm key illumination does not blink with ignition switch turned to ON.

General Description

BODY CONTROL SYSTEM (DIAGNOSTICS)

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.