


Lubrication Points

For details of lubrication points and types of lubricants to be applied, refer to the illustrated index and various work procedures (such as Assembly/Reassembly, Replacement, Overhaul, Installation, etc.) contained in each section.

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SF or SG grade detergent oil only SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SF or SG grade motor oil SAE Viscosity: 10 W-30 or 10 W-40 Honda Premium Formula Automatic Transmission Fluid or an equivalent DEXRON® II Automatic transmission fluid
3	Brake Line	Brake fluid DOT3 or DOT4
4	Clutch Line	Brake fluid DOT3 or DOT4
5	Power steering gearbox	Steering grease P/N 08733-B070E
6	Shift lever pivots (Manual transmission)	Grease with molybdenum disulfide
7 8 9 10 11 12 13 14 15 16 17 18 19 20	Steering ball joints Suspension ball joints Steering boots Rear brake shoe linkage Select lever (Automatic transmission) Pedal linkage Intermediate shaft Brake master cylinder pushrod Trunk hinges or Tailgate hinges Door hinges upper and lower Door opening detents Fuel filler lid Engin hood hinges Engine hood latch	Multi-purpose grease
21	Caliper Piston seal Dust seal Caliper pin Piston	Silicone grease
22	Power steering system	Honda Power steering fluid
23	Air conditioner compressor oil	ND-OIL 6

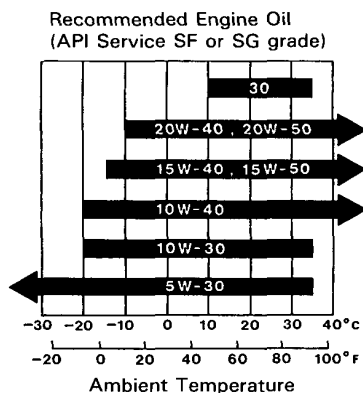

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

