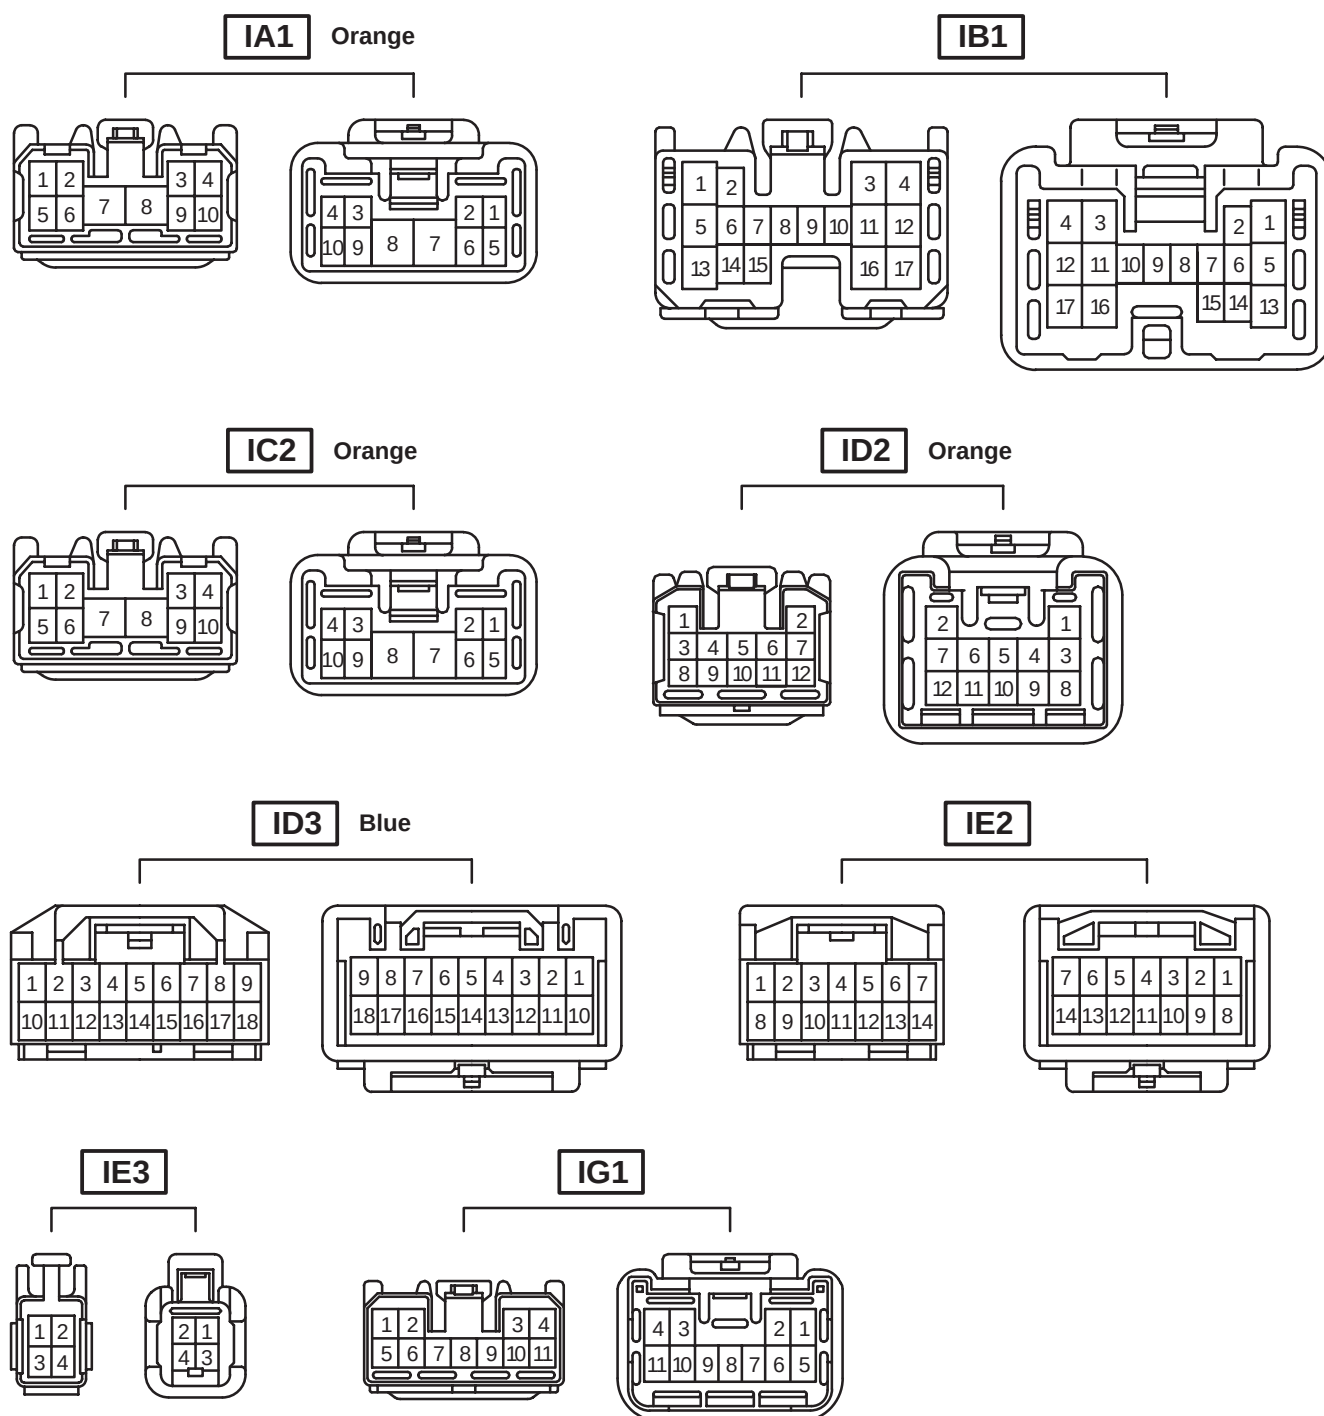
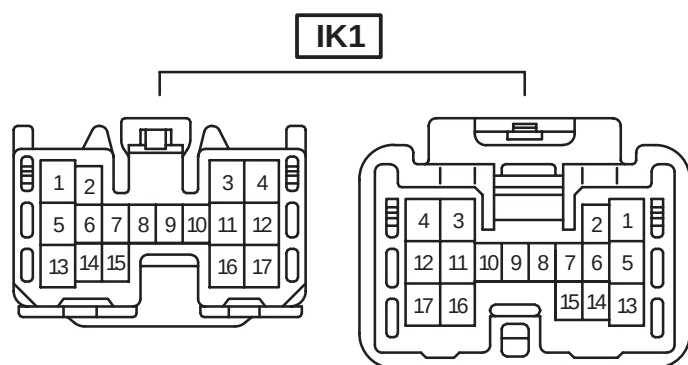
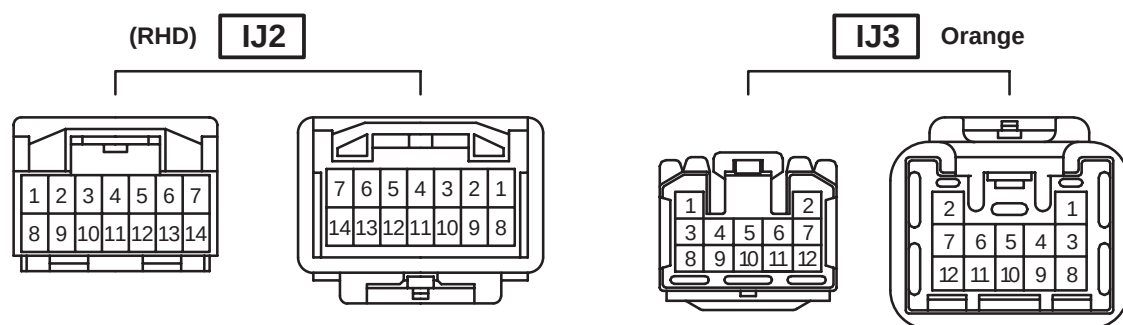
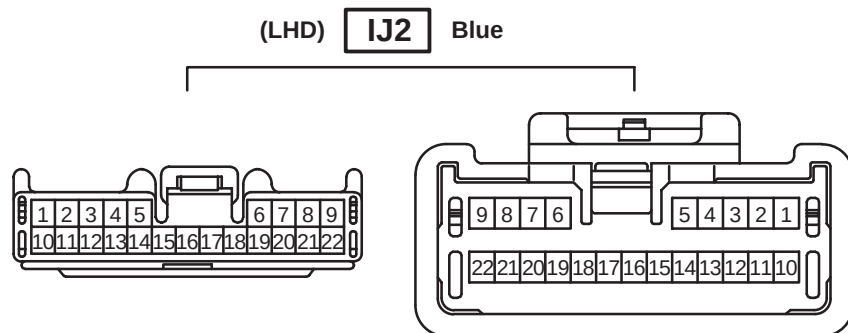
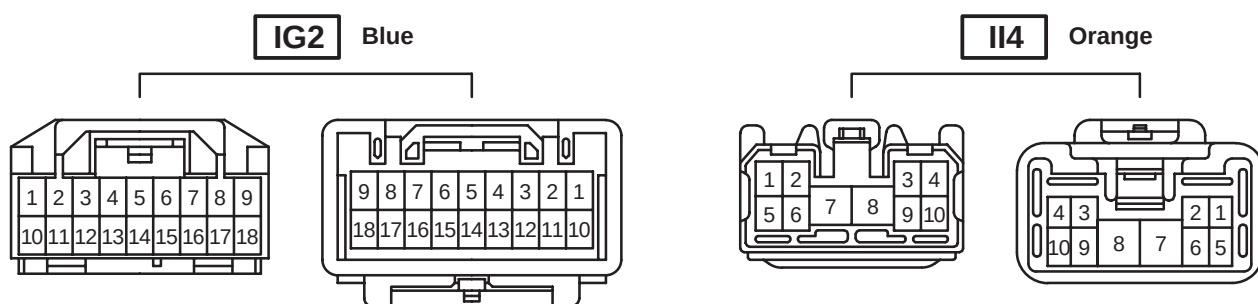


CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS




Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC2	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
ID2	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
ID3	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE2	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE3	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IG1	Instrument Panel Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS




Code	Joining Wire Harness and Wire Harness (Connector Location)
IG2	Instrument Panel Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)
II4	Engine Room Main Wire and Cowl Wire (Near the Passenger Side J/B)
IJ2 (LHD)	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IJ2 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Steering Column)
IJ3	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IK1	Front Door RH Wire and Cowl Wire (Right Kick Panel)

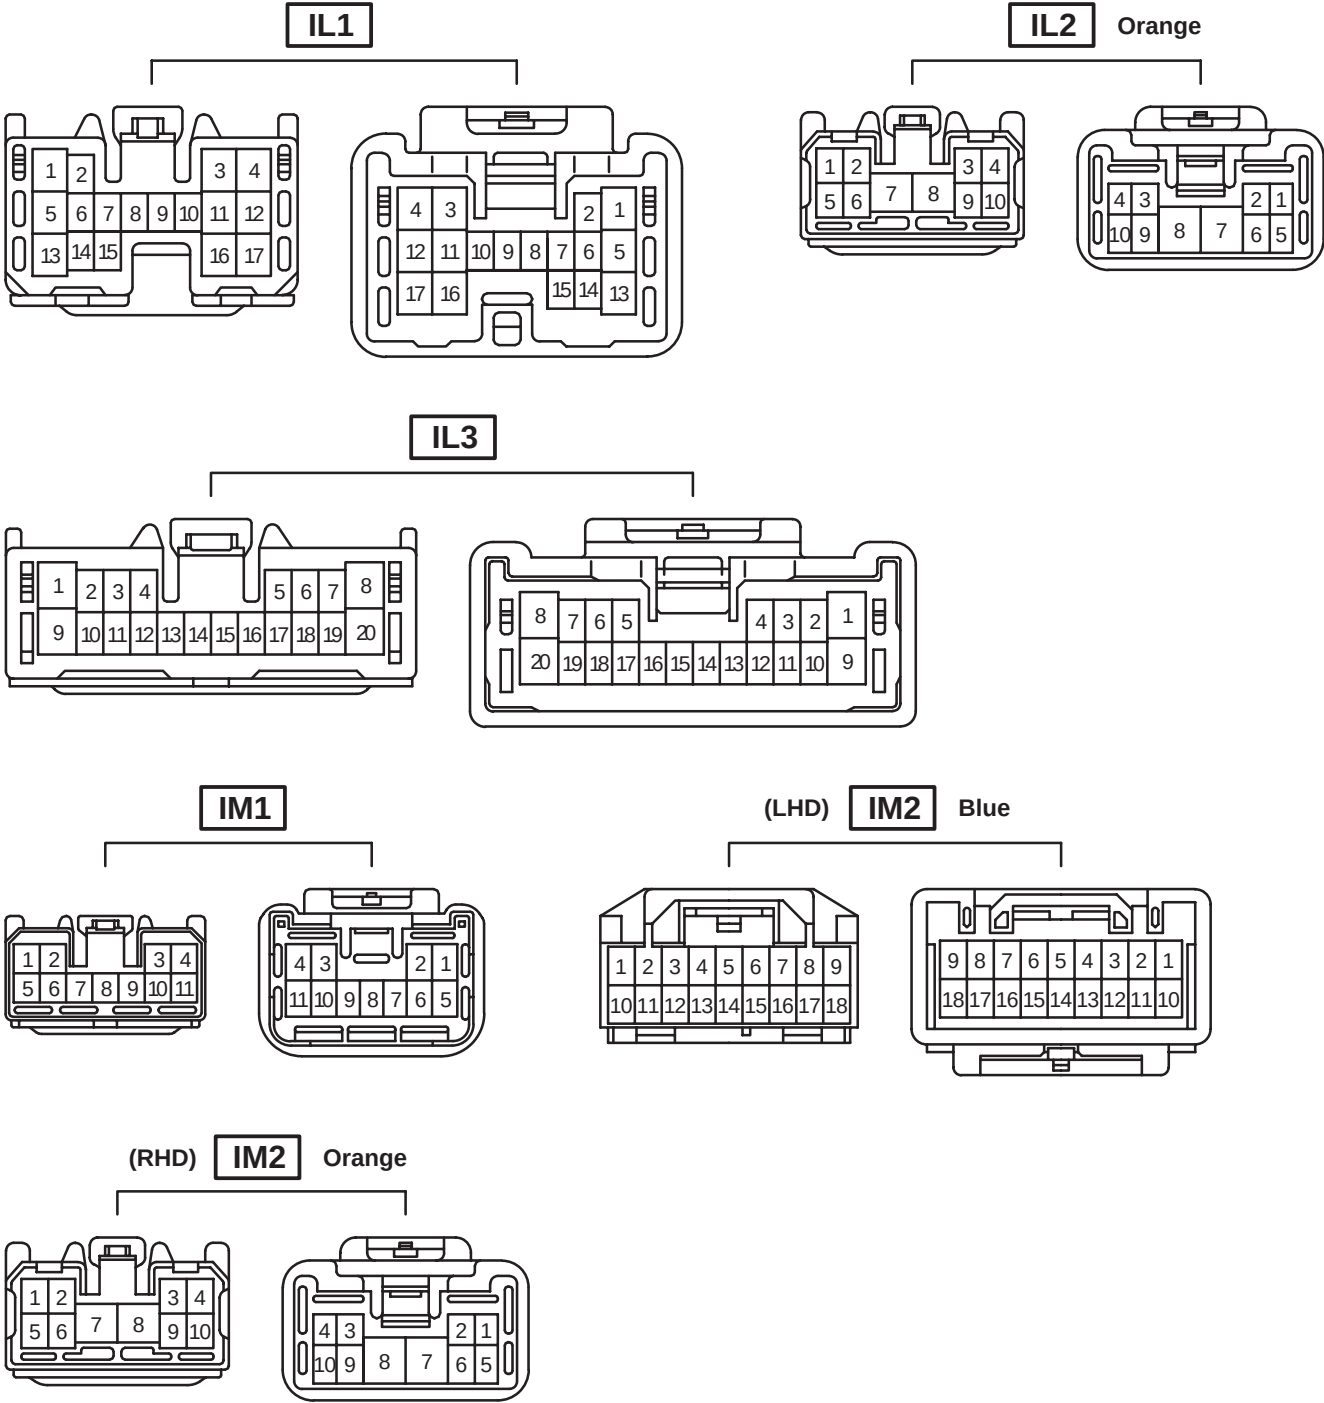CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS
























Code	Joining Wire Harness and Wire Harness (Connector Location)
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL2	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL3	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM1	Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever)
IM2 (LHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM2 (RHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)

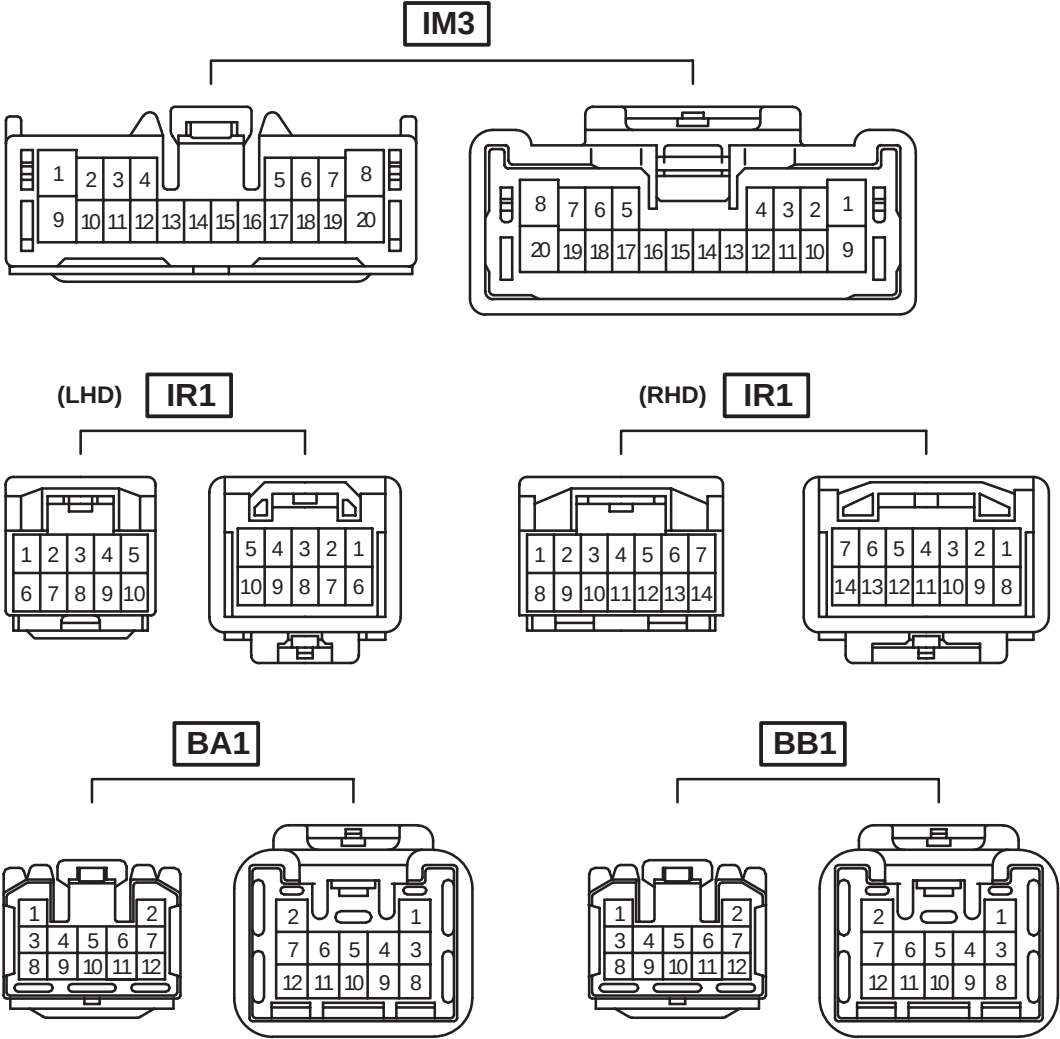CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS




Code	Joining Wire Harness and Wire Harness (Connector Location)
IM3	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IR1	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)

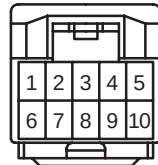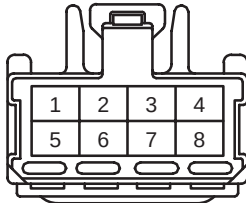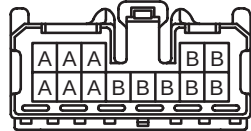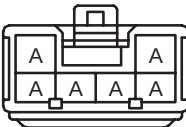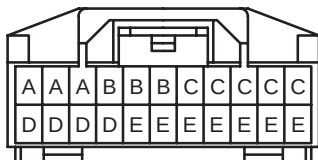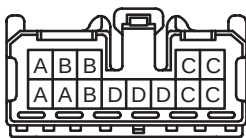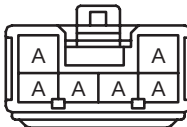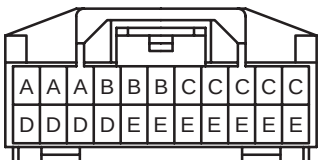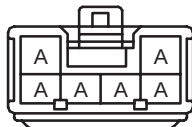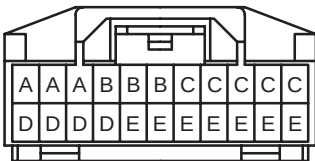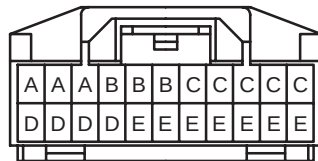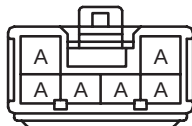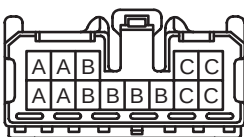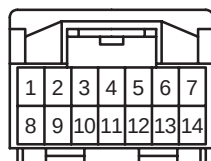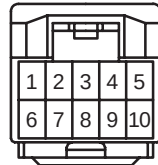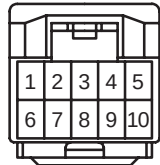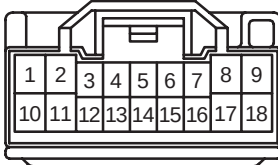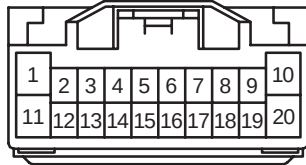CONNECTOR LIST

C 5 	C23 	F 9 	F10 	I12 
J 7 GR 	J 8 	J10 Orange 	J13 	
J18 	J19 Blue 	J22 	J31 	
J32 	J38 	J40 GR 	J41 	
J45 	J50 Black 	J51 	M 2 	M 3 
M 6 	N 3 	N 4 	R 2 	

CONNECTOR LIST

R 3



R15



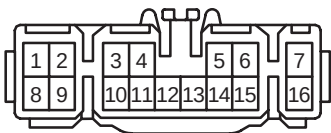
R16




S 5




S22




S23

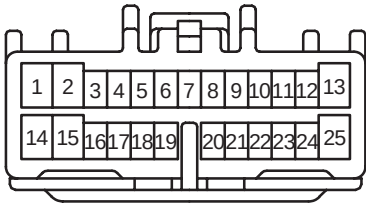


S24




T 8

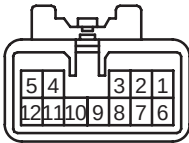

T 9



U 1



W 7

