


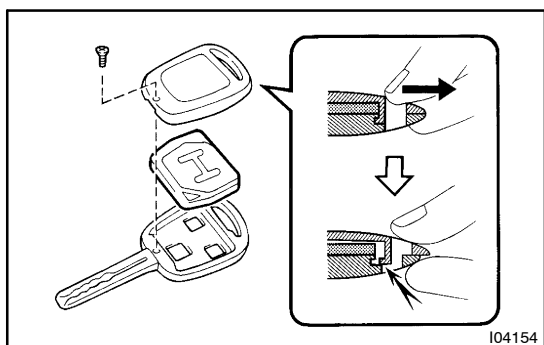

## REPLACEMENT

### 1. REPLACE TRANSMITTER (LITHIUM) BATTERY

#### NOTICE:

Special caution should be taken for handling each component as they are precision electronic components.

(a) Using a screwdriver, remove the screw and cover.


#### NOTICE:

**Do not pry out the cover forcibly.**

#### HINT:

Push the cover with a finger as shown in the illustration, so that there becomes clearance, then pry out the cover from that clearance.

(b) Remove the transmitter.

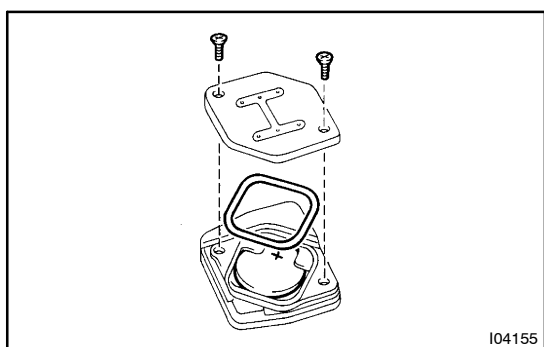


(c) Using a screwdriver, remove the 2 screws and cover.

(d) Remove the battery (lithium battery).

#### NOTICE:

- **Do not push the terminals with a finger.**
- **If prying up the battery (lithium battery) forcibly to remove, the terminals are deformed.**

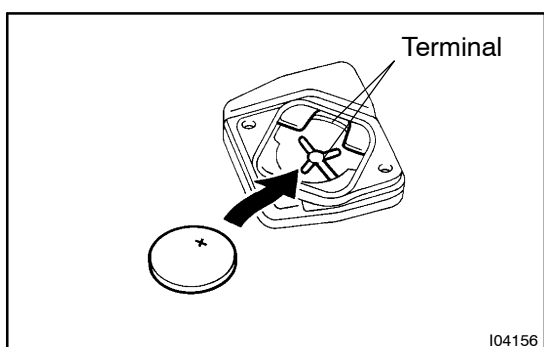

(e) Install a battery (lithium battery) as shown in the illustration.

#### NOTICE:

**Face the battery upward. Take care not to deform the terminals.**

(f) Check that O-ring is not distorted or slipped off, and install the cover.

(g) Using a screwdriver, tighten the 2 screws.

#### NOTICE:

**When the shrews are tightened loosely, it might cause faulty contact of battery (lithium battery) and terminals.**

(h) Assemble the transmitter to the key plate and the cover.

(i) Using a screwdriver, tighten the screw.

## 2. REPLACE DOOR CONTROL RECEIVER AND TRANSMITTER

### NOTICE:

**When replacing the door control receiver and transmitter, registration of recognition code is necessary because they are provided as single components.**

- (a) Select which operation mode should be performed from the following modes.
- Add mode
  - Rewrite mode
  - Prohibition mode
  - Confirmation mode

### HINT:

- The add mode is used to retain codes already registered while you register new recognition codes. This mode is used when adding a transmitter. However, if the number of registered codes exceeds 4 codes, previously registered codes are correspondingly erased in order, starting from the first registered code.
  - The rewrite mode is used to erase all previously registered codes and register only new recognition codes. This mode is used before replacing new transmitter or wireless door lock ECU.
  - The prohibition mode is used to erase all registered codes and cancels the wireless door lock function. Use this mode when the transmitter is lost.
  - The confirmation mode is for confirming how many recognition codes are already registered before you register additional recognition codes.
- (b) Follow the chart on the following pages to register the transmitter recognition code at the wireless door lock control receiver.

### HINT:

- When procedure is out of the specified, the operation returns to normal operation.
- Maximum 4 recognition codes can be registered.

