


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light light up while the brake fluid is insufficient and the accumulator is abnormally low.

WIRING DIAGRAM

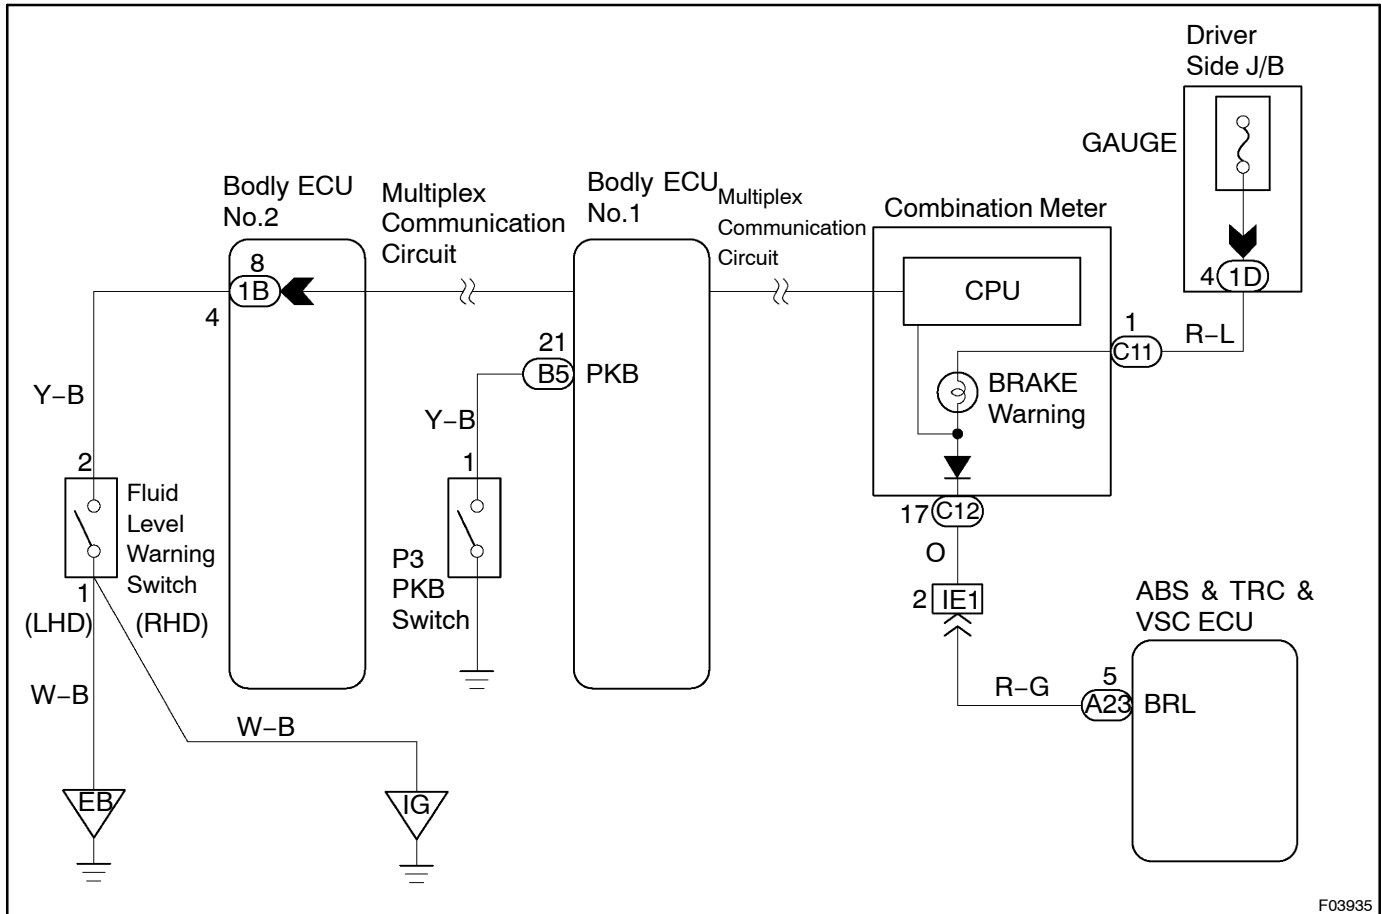

F03935

INSPECTION PROCEDURE

- 1 Check parking brake switch circuit (See page DI-632).

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit ([See page DI-671](#)).

NG

Repair or replace brake fluid level warning switch circuit.

OK

3 Is DTC output for ABS ?

Yes

Repair circuit indicated by the output code.

No

4 Check BRAKE warning light.

See combination meter troubleshooting on [page BE-3](#).

NG

Repair or replace combination meter.

OK

5 Check multiplex communication system ([See page DI-803](#)).

NG

Repair or replace multiplex communication circuit.

OK

Check and replace ABS & TRC & VSC ECU.