


Luggage compartment door lock and unlock switch circuit

CIRCUIT DESCRIPTION

The luggage compartment door lock and unlock switch goes on when the luggage compartment door key cylinder is turned to the unlock side with the key.

WIRING DIAGRAM

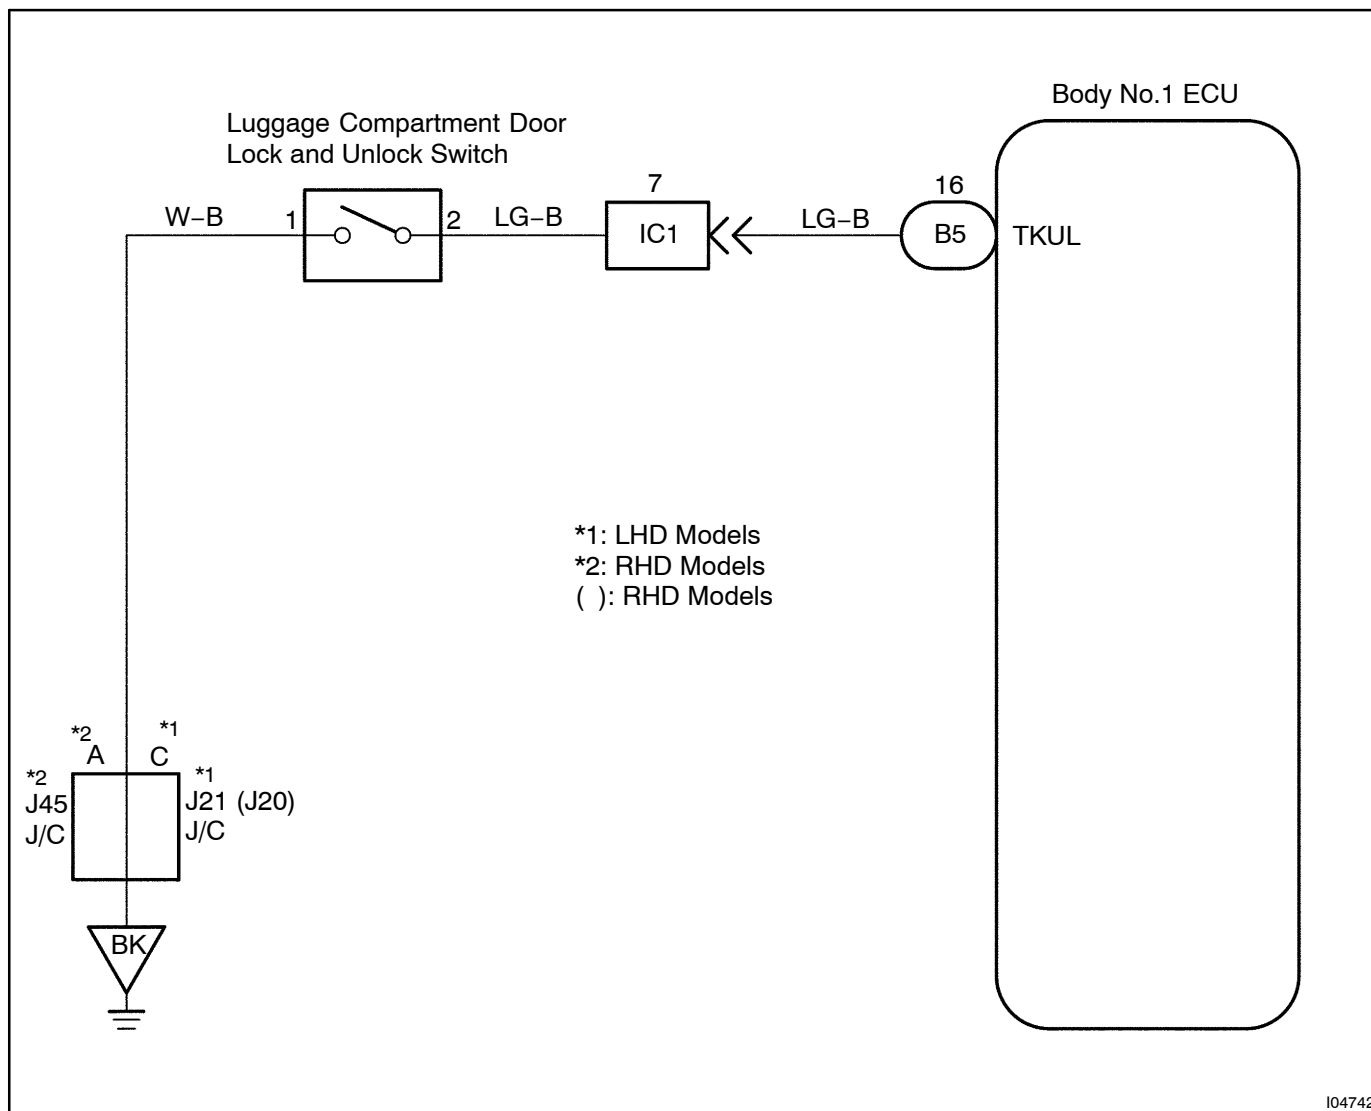

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

- | | |
|---|--|
| 1 | Check luggage compartment door lock and unlock switch using LEXUS hand-held tester. |
|---|--|

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the luggage compartment door lock and unlock switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-616](#)).

NG

- | | |
|---|---|
| 2 | Check luggage compartment door lock and unlock switch (See page BE-164). |
|---|---|

NG

Replace the luggage compartment door lock and unlock switch.

OK

- | | |
|---|---|
| 3 | Check wireharness and connector between luggage compartment door lock and unlock switch and body No.1 ECU. |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-616](#))